PHILIPS 36PW9308

MODEL

SERVICE MANUAL

Colour Television **Chassis**

EM5.1E

AA

Service
Service
Service

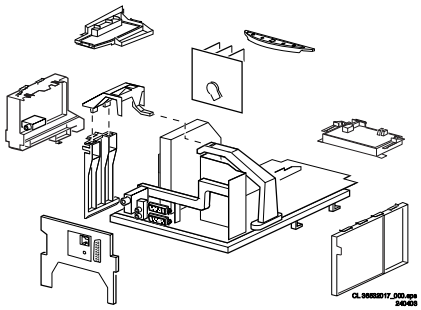

Service Manual

Contents		Page	
1. Technical Specifications, Connections and Chassis Overview		2	
2. Safety & Maintenance Instructions, Warnings and Notes		5	
3. Directions for Use		6	
4. Mechanical Instructions		17	
5. Service Modes, Error Codes and Faultfinding		21	
6. *Block Diagram, Testpoints, and Overviews*			
Wiring Diagram		33	
Block Diagram Supply and Deflection		34	
Block Diagram Video		35	
Block Diagram Audio 1 (Excl Wireless Audio)		36	
I^2C-IC Overview		37	
Supply Lines Overview		38	
Testpoint Overview LSP & CRT/Auto SCAVEM		39	
Testpoint Overview SSB		40	
7. *Electrical Diagrams and PWB's*		*Diagram*	*PWB*
Main Supply	(Diagram A1)	41	50-56
Stand-by Supply	(Diagram A2)	42	50-56
Line Deflection	(Diagram A3)	43	50-56
Frame Deflection & E/W Drive	(Diagram A4)	44	50-56
Rotation Circuitry	(Diagram A5)	45	50-56
Audio Amplifier	(Diagram A6)	46	50-56
Tuner SIMM connector (Female)	(Diagram A8)	47	50-56
Receiver	(Diagram A9)	48	50-56
Front	(Diagram A10)	48	50-56
Inputs/Outputs	(Diagram A11)	49	50-56
SIMM connector (Male)	(Diagram B1)	57	68-73
IF, I/O Videoprocessing	(Diagram B2)	58	68-73
PICNIC	(Diagram B3A)	59	68-73
Diversity Tables SSB (Not Applicable Yet)		60	68-73
Falconic	(Diagram B3B)	61	68-73
Eagle	(Diagram B3C)	62	68-73
HOP	(Diagram B4)	63	68-73
OTC	(Diagram B5)	64	68-73
Audio Demodulator	(Diagram B6)	65	68-73
Anti Moiré	(Diagram B9)	66	68-73
Headphone Amplifier	(Diagram B10)	67	68-73
DW Panel: Multi PIP Controller	(Diagram C1)	74	78
DW Panel: Tuner	(Diagram C2)	75	78
DW Panel: I/O Processing	(Diagram C3)	76	78
DW Panel: IF Video Sync	(Diagram C4)	77	78
Mains Switch Panel (FL11 Styling)	(Diagram E)	79	80
Mains Switch Panel (PV2 Styling)	(Diagram E)	81	82
CRT (FL11 Styling)	(Diagram F1)	83	85-86
CRT/Auto Scavem (FL11 Styling)	(Diagram F2)	84	85-86
CRT (PV2 Styling)	(Diagram F)	87	88-89
DC Shift Panel	(Diagram G)	90	90
I/O 3rd SCART Panel	(Diagram H)	91	92
VDAF + 2nd Orders Panel	(Diagram I)	93	94
Side I/O Panel (FL11 Styling)	(Diagram O)	95	96
Side I/O Panel (PV2 Styling)	(Diagram O)	97	98
Top Control (FL11 Styling)	(Diagram P)	99	99
Top Control (PV2 Styling)	(Diagram P)	100	100
Auto SCAVEM	(Diagram SC1)	101	102
8. Alignments		103	
9. Circuit Description		112	
Abbreviation List		116	
IC Data Sheets		119	
10 Spare Parts List		120	
11 Revision List		134	

©Copyright 2003 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by WO 0364 Service PaCE Printed in the Netherlands Subject to modification EN 3122 785 13420

PHILIPS

1. Technical Specifications, Connections and Chassis Overview

1.1 Technical Specifications

1.1.1 Vision

Display type	:	CRT, Real Flat WS
Screen size	:	28" (70 cm)
	:	32" (82 cm)
	:	36" (92 cm)
Tuning system	:	PLL
Colour systems	:	PAL B/G, D/K, I
	:	SECAM B/G, D/K, L/L'
	:	NTSC playback only
Channel selections	:	100 presets
	:	UVSH
Aerial input	:	75 ohm, IEC-type

1.1.2 Sound

Sound systems	:	FM-mono
	:	AM-mono
	:	FM-stereo B/G, Czech
	:	NICAM B/G, D/K, I, L
Maximum power	:	4 x 15 W rms (int.)

1.1.3 Miscellaneous

Mains voltage	:	220 - 240 V
Mains frequency	:	50 / 60 Hz
Ambient temperature	:	+5 to +45 deg. C
Maximum humidity	:	90 % R.H.
Power consumption	:	?
- Normal operation	:	≈ 130 W
- Standby	:	< 1 W

1.2 Connections

1.2.1 Front View / Side Connections

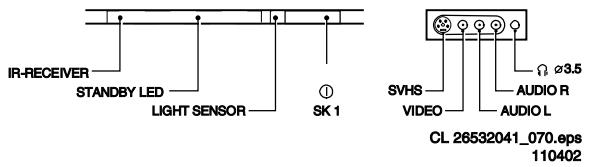

Figure 1-1 Front View and Side I/O

Hosiden: SVHS - In

1 - Y	Ground	
2 - C	Ground	
3 - Y	1 Vpp / 75 ohm	
4 - C	0.3 Vpp / 75 ohm	

Cinch: In

1 - CVBS	1 Vpp / 75 ohm	
2 - Audio - L	0.5 Vrms / 10 kohm	
3 - Audio - R	0.5 Vrms / 10 kohm	

Mini Jack: Headphone - Out

- Headphone	32 - 600 ohm / 10 mW	

1.2.2 Rear Connections

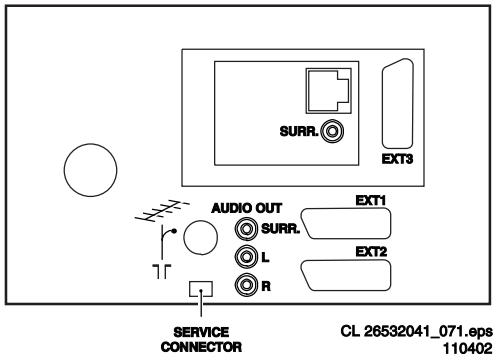

Figure 1-2 Rear View

Aerial - In

- IEC-type	Coax, 75 ohm	

Cinch: Audio - Out

- Audio - R	0.5 Vrms / 1 kohm	
- Audio - L	0.5 Vrms / 1 kohm	

External 1: RGB/YUV and CVBS - In/Out

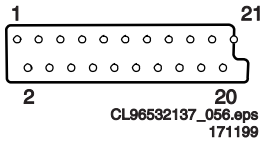

Figure 1-3 SCART connector

1 - Audio - R	0.5 Vrms / 1 kohm	
2 - Audio - R	0.5 Vrms / 10 kohm	
3 - Audio - L	0.5 Vrms / 1 kohm	
4 - Audio	Ground	
5 - Audio	Ground	
6 - Audio - L	0.5 Vrms / 10 kohm	
7 - Blue / U	0.7 Vpp / 75 ohm	
8 - CVBS-status	0 - 1.3 V: INT	
	4.5 - 7 V: EXT 16:9	
	9.5 - 12 V: EXT 4:3	
9 - Video	Ground	
10 - n.c.		
11 - Green / Y	0.7 Vpp / 75 ohm	
12 - n.c.		
13 - Video	Ground	
14 - Video	Ground	
15 - Red / V	0.7 Vpp / 75 ohm	
16 - Status / FBL	0 - 0.4 V: INT	
	1 - 3 V: EXT / 75 ohm	
17 - Video	Ground	
18 - Video	Ground	
19 - CVBS-out	1 Vpp / 75 ohm	
20 - CVBS-in	1 Vpp / 75 ohm	
21 - Shielding	Ground	

External 2: CVBS and SVHS - In (for VCR)

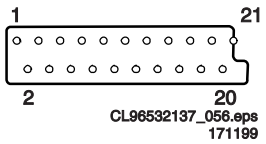

Figure 1-4 SCART connector

1 - Audio - R	0.5 Vrms / 1 kohm	
2 - Audio - R	0.5 Vrms / 10 kohm	
3 - Audio - L	0.5 Vrms / 1 kohm	
4 - Audio	Ground	
5 - Audio	Ground	
6 - Audio - L	0.5 Vrms / 10 kohm	
7 - C-out	0.7 Vpp / 75 ohm	
8 - CVBS-status	0 - 1.3 V: INT	
	4.5 - 7 V: EXT 16:9	
	9.5 - 12 V: EXT 4:3	
9 - Video	Ground	
10 - Easylink	(P50)	
11 - n.c.		
12 - n.c.		
13 - Video	Ground	
14 - Video	Ground	
15 - C-in	0.7 Vpp / 75 ohm	
16 - n.c.		
17 - Video	Ground	
18 - Video	Ground	
19 - CVBS-out	1 Vpp / 75 ohm	
20 - Y / CVBS-in	1 Vpp / 75 ohm	
21 - Shielding	Ground	

External 3: RGB and CVBS - In

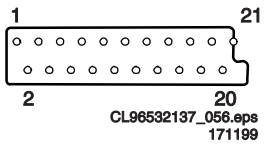

Figure 1-5 SCART connector

1 - n.c.		
2 - Audio - R	0.5 Vrms / 10 kohm	
3 - n.c.		
4 - Audio	Ground	
5 - Audio	Ground	
6 - Audio - L	0.5 Vrms / 10 kohm	
7 - Blue-in	0.7 Vpp / 75 ohm	
8 - CVBS-status	0 - 1.3 V: INT	
	4.5 - 7 V: EXT 16:9	
	9.5 - 12 V: EXT 4:3	
9 - Video	Ground	
10 - n.c.		
11 - Green-in	0.7 Vpp / 75 ohm	
12 - n.c.		
13 - Video	Ground	
14 - Video	Ground	
15 - Red-in	0.7 Vpp / 75 ohm	
16 - Status / FBL	0 - 0.4 V: INT	
	1 - 3 V: EXT / 75 ohm	
17 - Video	Ground	
18 - Video	Ground	
19 - n.c.		
20 - CVBS-in	1 Vpp / 75 ohm	
21 - Shielding	Ground	

RJ45: Wireless Surround Transmitter - Out

1 - SDA2_TM	Signal	
2 - SCL2_TM	Signal	
3 - GND	Ground	
4 - I2C_MUTE	Signal	
5 - 15V	Supply	
6 - AUDIO_ SL_S_TM	Signal	
7 - GND_AUD	Ground	
8 - PILOT_MUTE	Signal	

Jack: Surround - Out

1 - Audio	0.2 - 2 Vrms / 10 kohm	

1.3 Chassis Overview

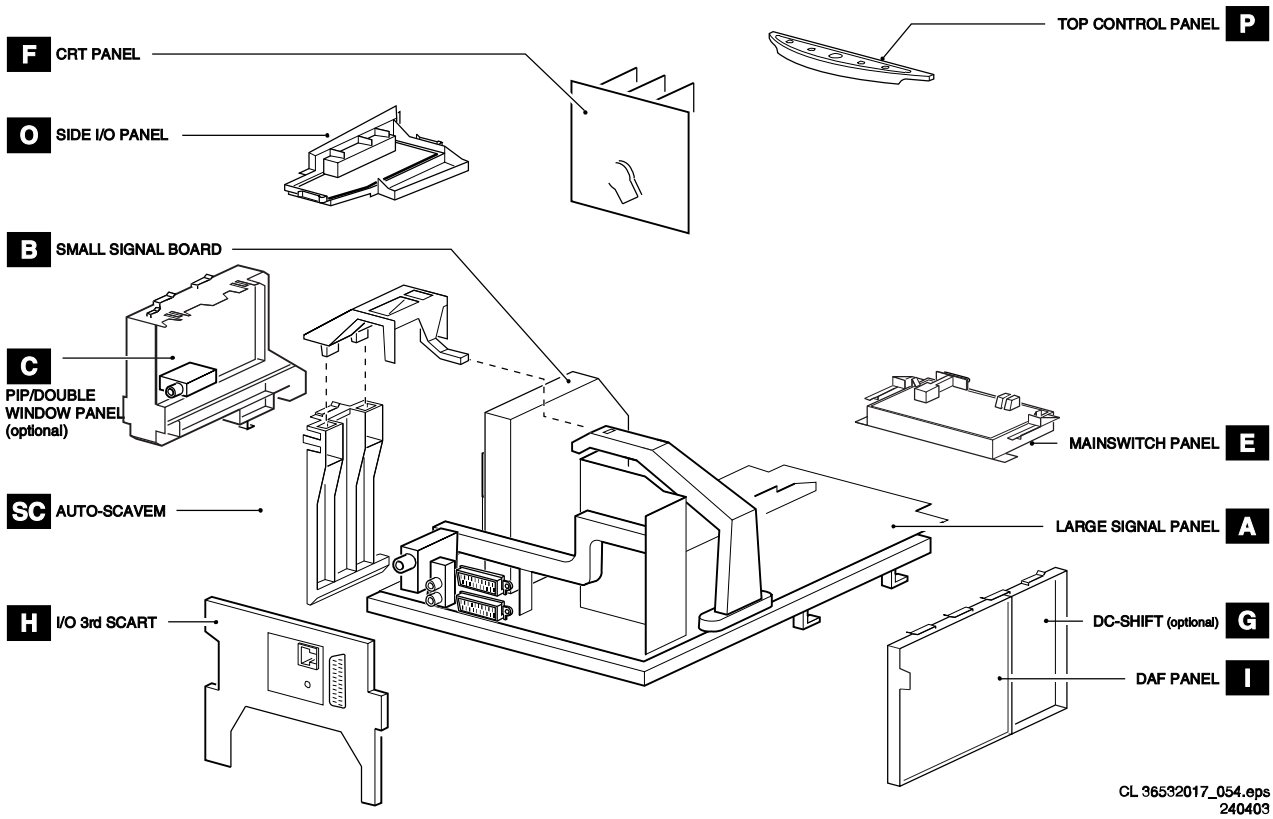

Figure 1-6 PWB location

2. Safety Instructions, Warnings, and Notes

2.1 Safety Instructions

Safety regulations require that **during** a repair:
- Connect the Receiver box to the Mains via an isolation transformer.
- When you use the Receiver box in combination with a plasma monitor, do not operate the monitor without the front glass plate. One function of this glass plate is to absorb IR radiation. Without this glass plate, the level of radiation could damage your eyes.
- Safety components, indicated by the symbol ⚠, must be replaced with original components.

Safety regulations require that **after** a repair, you must return the set in its original condition. Pay particular attention to the following points:
- Route the wire trees in their original positions and fix them in place with the mounted cable clamps.
- Check the insulation of the Mains cord for external damage.
- Check the electrical DC resistance between the Mains plug and the secondary side (only for sets which have a Mains isolated power supply):
  - Unplug the Mains cord and connect a wire between the two pins of the Mains plug;
  - Set the Mains switch to the "on" position (keep the Mains cord unplugged!).
  - Measure the resistance value between the pins of the Mains plug and the metal shielding of the tuner or the aerial connection on the set. The reading should be between 4.5 Mohm and 12 Mohm.
  - Set the Mains switch to the "off" position, and remove the wire between the two pins of the Mains plug.
- Check the cabinet for defects, to prevent the customer from touching any inner parts of the television set.

2.2 Warnings

- All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD symbol ⚠). Careless handling during repair can reduce life drastically. Make sure that, during repair, you are connected with the same electrical potential as the set by a wristband with resistance. Keep components and tools at this same potential. Available ESD protection equipment:
  - Complete ESD3 kit (small tablemat, wristband, connection box, extension cable and earth cable): 4822 310 10671.
  - Wristband tester: 4822 344 13999.
- Be careful while taking measurements in the live voltage section.
- Never replace modules, or other components, with the television set "ON."
- Use plastic tools, instead of metal tools, when performing alignments on the television set. This will help prevent short circuits and reduce the danger of a circuit becoming unstable.

2.3 Notes

2.3.1 General

- Measure the direct voltages and oscillograms with regard to the chassis ground (symbol ⏚), or hot ground (symbol ⏚).
- The direct voltages and oscillograms shown in the diagrams are indicative. Measure them in the Service Default Mode (see chapter 5) with a colour bar signal and stereo sound (L: 3 kHz, R: 1 kHz unless stated otherwise) and picture carrier at 61.25 MHz (NTSC).
- Where necessary, measure the oscillograms and direct voltages with (symbol ⊓) and without (symbol ⊼) aerial signal. Measure the voltages in the power supply section both in normal operation (symbol ⏻) and in standby (symbol ⏻). These values are indicated by means of the appropriate symbols.
- The semiconductors indicated in the circuit diagram and in the parts lists, are interchangeable position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.

2.3.2 Schematic Notes

- All resistor values are in ohms and the value multiplier is often used to indicate the decimal point location (e.g. 2K2 indicates 2.2 kohm).
- Resistor values with no multiplier may be indicated with either an 'E' or an 'R' (e.g. 220E or 220R indicates 220 ohm).
- All Capacitor values are expressed in Micro-Farads ($\mu = x10^{-6}$), Nano-Farads ($n = x10^{-9}$), or Pico-Farads ($p = x10^{-12}$).
- Capacitor values may also use the value multiplier as the decimal point indication (e.g. 2p2 indicates 2.2 pF).
- An 'asterisk' (*) indicates component usage varies. Refer to the diversity tables for the correct values.
- The correct component values are listed in the Electrical Replacement Parts List. Therefore, always check this list when there is any doubt.

2.3.3 Practical Service Precautions

- **It makes sense to avoid exposure to electrical shock.** While some sources are expected to have a possible dangerous impact, others of quite high potential are of limited current and are sometimes held in less regard.
- **Always respect voltages.** While some may not be dangerous in themselves, they can cause unexpected reactions - reactions that are best avoided. Before reaching into a powered TV set, it is best to test the high voltage insulation. It is easy to do, and is a good service precaution.
- **Before powering up the TV set with the rear cover off** (or on a test fixture), attach a clip lead to the CRT DAG ground and to a screwdriver blade that has a well insulated handle. After the TV is powered on and high voltage has developed, probe the anode lead with the blade, starting at the case of the High Voltage Transformer (flyback - IFT). Move the blade to within two inches of the connector of the CRT. **If there is an arc, you found it the easy way, without getting a shock!** If there is an arc to the screwdriver blade, replace the part that is causing the problem: the High Voltage Transformer or the lead (if it is removable).

3. Directions for Use

Preparation

❶ Place the TV on a solid surface.
! 28PW9528: 41 kg; 32PW9528: 59 kg; 36PW9528: 79 kg !

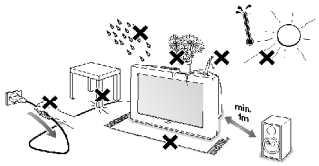

For ventilation, leave at least 5 cm free all around the TV. Do not place the TV on a carpet. To prevent any unsafe situations, do not place any objects on top of the TV. Avoid heat, direct sunlight and exposure to rain or water.

❷ Insert the aerial plug firmly into the aerial socket at the back of the TV. For best picture quality use the suppressor-aerial cable supplied.

❸ Insert the mains plug of the TV in the wall socket having a mains voltage of 220V-240V.

❹ **Remote control**: Insert the 2 batteries supplied (Type R6-1,5V).



The batteries supplied do not contain the heavy metals mercury and cadmium. Please check on how to dispose of exhausted batteries according to local regulations.

❺ **Switch the TV on** : Press the power switch ⏻ on the front of your TV.
An indicator on the front of the TV lights up and the screen comes on.
If the TV is in standby mode (red indicator), press the **-P+** keys on the remote control.

Keys on top of the TV

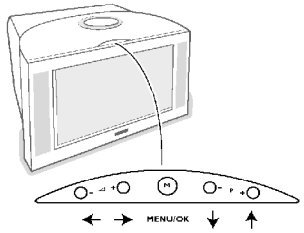

Should your remote be lost or broken you can still change some of the basic settings with the keys on top of your TV.

Press:
- the ◿ - or + key to adjust the volume;
- the **-P+** keys to select the TV channels or sources.

The **M** key can be used to summon the main menu without the remote control.

Use:
- the ◿ - and + keys and the **P-** and **P+** keys to select menu items in the directions as shown;
- the **M** key to confirm your selection.

Note:
*When activated via the **M** key on top of the TV, only **Exit** lets you dismiss the menu.*
*Navigate to **Exit** and press the **M** key.*

Use of the remote control RC4301

Note: for most keys pressing a key once will activate the function. Pressing a second time will de-activate it.
When a key enables multiple options, a small list will be shown. Press repeatedly to select the next item in the list.
*The list will be removed automatically after 4 seconds or press **OK** to remove immediately.*

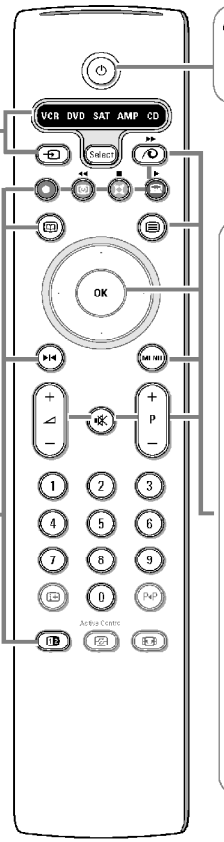

VCR DVD SAT AMP CD
Audio- and Video equipment keys, (p. 22)

Select peripherals (p. 21)

● ◀◀ ■ ▶ ▶▶
Audio- and Video equipment keys (p. 22)

● **Instant record**
See Record with your recorder with EasyLink, p. 22.

Time display
The time is displayed on the screen.

Surround mode
Press this key repeatedly to select another available surround mode.

Cinema Go
See separate Cinema Link booklet supplied.

NEXTVIEW on/off p. 16
Press 1 2 to show NEXTVIEW/ Teletext Guide on the right half of the screen.

Freeze/Replay/Photo finish
To freeze the picture.
See also p. 9.

Standby
Press to switch the TV on or off. When switched off, a red indicator on the TV lights up.

Pixel Plus demo on/off
In the right part Pixel Plus and Digital Natural Motion are switched on.

Teletext on/off see p. 18
Press the 1 2 key to show teletext on the right half of the screen.

OK Press this key
- to activate your choice, when in the menus.
- to display the programme list.

MENU Main menu on/off see p. 5

◿ To adjust the volume.

Interrupt the sound or restore it.

P Programme selection
To browse through the TV channels and sources stored in the favourite list.

0/9 Digit keys
To select a TV channel.
For a two digit programme number, enter the second digit before the dash disappears. To switch immediately to a selected one digit TV channel, keep the digit key pressed a bit longer.

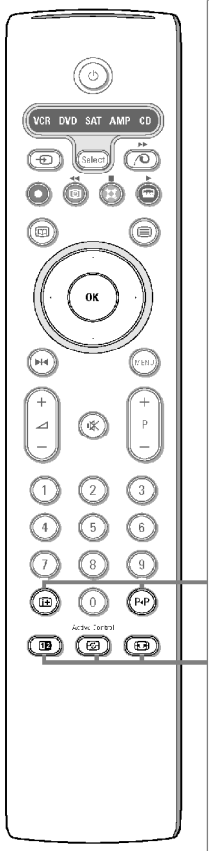

On Screen information

Press to display information about the selected TV channel and programme.

Menu/Remote control info

When a menu is on screen, press to display info on the selected menu item. For information on the remote control functions, while the menu info is displayed, press any key on the remote control.
The normal function of the key is not executed.

Smart surf / NEXTVIEW themes

With this key you can easily switch between 2 up to 9 different TV channels or sources or quickly select TV programmes if NEXTVIEW with defined themes is broadcast. See General, Smart surf, p. 9.
Press the **OK** key or wait for the time out to dismiss the Smart surf display.

Dual screen / PIP / Multipip

See p. 9 and p. 14.

Active control see p. 11.

Picture format

Press this key repeatedly or press the cursor up/down to select another picture format: Auto format, Super zoom, 4:3, Movie Expand 14:9, Movie Expand 16:9, Subtitle zoom or Wide screen.

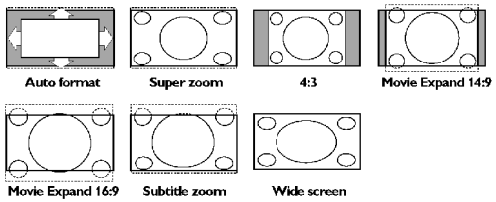

Auto format makes the picture fill the screen as much as possible.
In case of subtitles in the bottom black bar, Auto format makes the subtitles visible. If subtitles are only partly visible, press cursor up.
In case of a broadcaster logo in the corner of the top black bar, the logo disappears from the screen.

Super zoom removes the black bars on the sides of 4:3 programs with minimal distortion.

When in Movie Expand 14:9, 16:9, Super zoom or Subtitle zoom picture format, you can make subtitles visible with the cursor up/down.

To use the menus

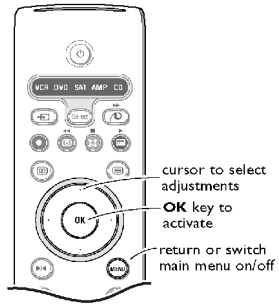

1. Press the **MENU** key on the remote control to summon the main menu. At any moment you can exit the menu by pressing the menu key again.
Note: If you have connected equipment with Cinema Link, more menu items are present.



2. Use the cursor in the up/down direction to select the **TV**, **Setup**, **Demo** or **Install** menu.
Use the cursor left/right to select **Picture**, **Sound** or **Features**.
Note: Sometimes not all the menu items are visible on the screen (indicated by a cluster of blue balls). Use the cursor down or right to reveal all items.
3. Use the cursor in the left/right direction to select the menu item.
4. Use the cursor up/down again to select the control you want to select or to adjust.

Note: Items temporary not available or not relevant are displayed in a light grey colour and cannot be selected.

Installation

The installation menu contains the following items:



EasyLink

If your video recorder has an EasyLink function, during installation, the language, country and available channels are automatically transmitted to the video recorder.

Select the menu language and country

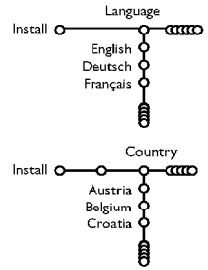

1. Press the **MENU** key on the remote control.
2. Use the cursor down to select **Install**.
3. Use the cursor right to select **Language**.
Follow the instructions on screen.
4. Use the cursor up/down to select your preferred language and press the **OK** key to confirm your selection.
5. Use the cursor right to select **Country**.
6. Select the country where you are now located and press the **OK** key.
Select **Other** when none of the countries applies.
7. Proceed with the Install menu.

Store TV channels

After language and country are set correctly, you can now search for and store the TV channels in two different ways: using Automatic Installation or Manual Installation (tuning-in channel by channel).
Select your choice with the cursor right.

Automatic installation



1. Select **Automatic install** in the Install menu.
   Note: All channels must be unlocked in order to autoprogram. If requested, enter your code to unlock all channels. (See TV, Features menu, Childlock, p. 13)
2. Press the cursor down.
   The autoprogramming option label **Start** appears.
3. Press the cursor right.
4. The message **Searching** appears and the progress of autoprogramming is displayed.

If a cable system or a TV channel which broadcasts ACI (Automatic Channel Installation) is detected, a programme list appears. Without ACI broadcast, the channels are numbered according your language and country selection. You can use Reshuffle to renumber them. See p. 7.

It is possible that the cable company or the TV channel displays a broadcast selection menu. Layout and items are defined by the cable company or the TV channel. Make your choice with the cursor and press the **OK** *key.*

Manual installation

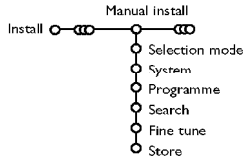

Searching for and storing TV channels is done channel by channel. You must go through every step of the Manual Installation menu.

1. Select **Manual install** in the Install menu.
2. Press the cursor down.
   Follow the instructions on screen.

   Note: Search or direct selection of a TV channel.
   If you know the frequency, the C or S channel number, enter the 3 or 2 digits of the frequency or the channel number directly with the digit keys 0 to 9 (e.g. 048). Press the cursor down to proceed.

   Repeat to search for another TV channel.

Give name

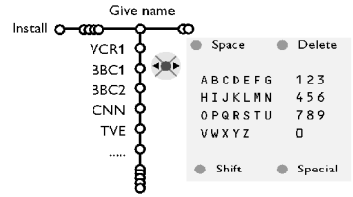

It is possible to change the name stored in the memory or to assign a name to a TV channel for which a name has not yet been entered. A name with up to 5 letters or numbers can be given to the programme numbers 0 to 99.

1. Select **Give Name** in the Install menu and press the cursor down.
2. Select the programme number.
   Note: keep the cursor up/down pressed to scroll through the programme list quickly.
3. Press the cursor right.
   A keyboard appears on the screen.
   Press the cursor right to enter the keyboard.
   Press the cursor up/down, left/right to select the first character and press **OK**. Repeat for every character you want to enter.
   Select **Space** to enter a space; **Delete** to erase the highlighted character in the name entered; **Shift** to display upper- or lowercase characters on the keyboard; **Special** to display special characters on the keyboard. Press **OK** to confirm.
4. Press the cursor left repeatedly when you have finished the name giving.
5. Select another programme number and repeat steps 3 to 4.

Reshuffle the programme list

You can change the order of the stored TV channels.

1. Select **Reshuffle** in the Installation menu.
2. Follow the instructions on screen.

Select Favourite TV channels

1. Select **Favourite programmes** in the Install menu.
2. Select your programme number with the cursor up/down.
3. Select **Yes** or **No** with the cursor right.
4. Repeat 2 and 3 for every TV channel or external you want to make a favourite or a non-favourite TV channel or external.

TV Setup

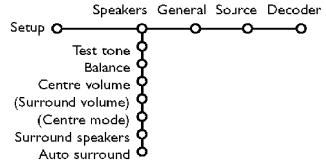

The Setup menu contains items that control the settings of the TV's functions, features, services and peripherals you may have connected.

The **Speakers** menu reflects the speaker-related controls.
The **General** menu allows you to change settings that will typically be accessed only occasionally.
The **Source** menu allows you to select a source.
The **Decoder** menu allows you to define one or more programme numbers as decoder programme numbers.

Speakers

Your TV is equipped with integrated front left, right and centre loudspeakers, capable of reproducing Stereo, Dolby 3 stereo and 3D Surround modes.
For full Dolby Pro Logic Surround sound you should use two amplified rear surround speakers connected to the back of the TV.
See Extra loudspeakers/Amplifier, p. 21.

Depending on the output and Surround mode (see Main menu, TV, Sound, Sound moces, p. 12) selected, some menu items may be greyed out and are not selectable.

Test tone controls

The menu item Test tone enables you to balance the volume levels of the speakers.

1. Select **Test tone** and press the cursor right.
2. Once turned on, the Test Tone will circulate through the left, centre, right speakers and both rear surround speakers (if present).
3. Press the cursor up/down to select the desired speaker for individual volume level adjustment.
4. Press the cursor left/right to adjust the volume level.

Centre Mode

To enhance the sound reproduction of your TV you may connect two extra front loudspeakers via an external amplifier. See Connect extra loudspeakers/Amplifier, p. 21.
If no External Front Speakers are connected, do not change the predefined factory settings which is **Centre mode Off**. Only if an external amplifier with Front Speakers is connected, select **Centre mode On**.
In this setting, the centre channel in surround mode is directed to all three internal TV speakers (left, centre and right).

Surround Speakers

See Connect Peripheral Equipment, Connect extra loudspeakers/amplifier, p. 21.
If no Surround Speakers are connected do not change the predefined factory settings which is **Off**. If Surrounc Speakers are connected select **On**.
(Dolby Pro Logic and Hall are not available if Off is selected.)

Auto Surround

Sometimes the broadcaster transmits special signals for Surround Sound encoded programmes.
The TV automatically switches to the best surround sound mode when **Auto Surround** is switched **On**.
However it is possible to overwrite this setting.

General

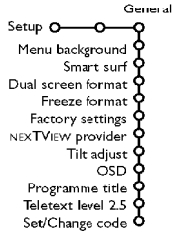

This menu allows you to change various settings that are presumably adjusted less frequently than most other settings.

Press the i+ key on the remote control to get information about the selected menu item.

Smart surf

1. Select **Smart surf**.
2. With the cursor left/right, select
   - **2 programmes** if you want the P•P key to toggle between the current and the previously selected channel,
   - **9 programmes** if you want the P•P key to summon a list of up to 9 channels which can be selected,
   - **Themes** if you want the P•P key to quickly select TV programmes if NEXTVIEW with defined themes is broadcast.

To add/remove a channel or source:

Tune to the channel or source you wish to add or remove. Press the P•P key and press the cursor right to add or remove.
Note: if there are already 9 channels/sources in the list, the one at the bottom of the list will be removed.

Dual screen format

This menu allows you to select the preferred format which can then be displayed toggling the 12 key on and off.
See Dual screen/PIP/ Multipip, p. 14.

Select **Dual screen**, **PIP**, **PIP 3** or **PIP 12** with the cursor down.
When Dual screen mode is activated with the remote control 12 key, and when:
- **Dual screen** is selected, the TV splits the screen into two equally sized screens.
- **PIP** is selected, the TV shows a full screen of video with a pip window of video on top if it;
- **PIP3** or **12** is selected, the TV will display 3 or 12 pip screens.

Freeze format

Freeze format allows you to select among three options: Freeze, Replay or Photo finish, to be activated when you press the ⏭ key on the remote control. See p. 3.
Note: Continuing to hold the ⏭ key down will also cycle the TV through the various formats. Changing the format this way does not store the selected format.

Factory settings

This resets the picture and sound settings to their predefined factory values, but maintains the channel installation settings.

NEXTVIEW provider

Select a TV broadcaster that provides NEXTVIEW data. How to make use of NEXTVIEW, see p. 15.

OSD (On Screen Display)

See Use of the remote control, p. 4, i+ On screen information.

1. Select **OSD**.
2. Select **Normal** to activate the continuous display of the programme number. Also TV channel and programme information are extended. **Minimum** will display reduced channel information.
   Note: When subtitles is switched on, see Features, p.13, continuous display of the programme number is not possible.

Teletext level 2.5

Some broadcasters offer the opportunity to see more colours, other background colours and nicer pictures in the teletext pages.

1. Select **Teletext level 2.5**.
2. Press the cursor right to select **Teletext level 2.5 On** to take advantage of this feature.
3. Press the cursor right again to select **Teletext level 2.5 Off** if you like the more neutral teletext layout.
   The selection made is valid for all channels which broadcast teletext level 2.5.
   Note: It may take a few seconds before teletext broadcast switches over to Teletext level 2.5.

Set/Change code

The Child lock feature (see TV, Features, p. 13) allows you to lock channels to prevent others from watching certain programmes. To watch locked channels, a 4-digit code must be entered. The Set/Change code menu item allows you to create or change a Personal Identification Number (PIN).

1. Select **Set/Change code**.
2. If no code exists yet, the menu item is set to Set code.

If a code has previously been entered, the menu item is set to **Change code**. Follow the instructions on screen.

Important: You have forgotten your code !

1. Select **Change code** in the General menu and press **OK**.
2. Press the cursor right and enter the overriding code 8-8-8-8.
3. Press the cursor again and enter a new personal 4-digit code. The previous code is erased and the new code is stored.

Source

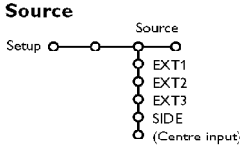

This menu allows you to indicate the peripheral you connected to one of the external inputs.

1. Press the cursor right to enter the list of types of peripherals attached to the selected input.
2. Select the peripheral device with the cursor up/down.

Once you have selected the source type, e.g. DVD, this source will automatically be selected when your remote control is in DVD mode, see p. 3, and when you press the key on the remote control.

Centre input

When you have connected a Philips Cinema Link surround receiver to the TV (See separate Cinema Link instruction manual supplied) and you have selected one of the external inputs as centre input, the loudspeakers of the TV will act as centre speaker, making a separate centre speaker unnecessary.

Decoder



If a decoder or a descrambler is connected, see p. 20, you can define one or more programme numbers as decoder programme numbers.

1. Select **Decoder** with the cursor right.
2. Select **Programme**.
3. Select the programme number under which you have stored the programme coming from your decoder.
4. Select **Status**.
   - Select the input used to connect your decoder: **None, EXT1** or **EXT2**.
   - Select **None** if you do not want the selected programme number being activated as a decoder programme number.

*Note: Select **EXT2** when the decoder is connected to your Easylink video recorder.*

Demo

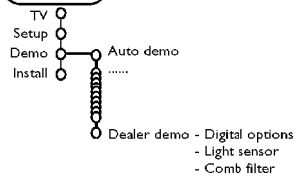

The Demo menu allows to demonstrate the TV features separately or in a continuous loop.

If **Auto demo** has been selected the demo will automatically present the features sequentially in a loop. Press one of the cursor keys to stop the Auto demo.
If one of the features has been selected, this particular feature demo will run only once, and the Demo menu will reappear.

Note: The Dealer demo is not part of the automatic sequence and can only be activated separately.

TV menu

Press the **MENU** key on the remote control to summon the main menu.

Press the key on the remote control to get information about the selected menu item.

Picture

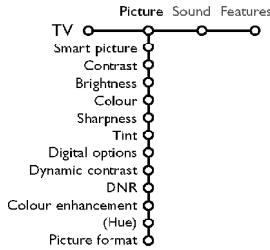

1. Press the cursor right to select **Picture**.
2. Select the menu items in the Picture menu with the cursor up/down.
3. Adjust the settings with the cursor left/right or enter the list of submenu items with the cursor right. Select a submenu item with the cursor up/down.
   Note: To remove the menu background before adjusting the picture settings, see Select TV setup, General, p. 9.

Smart picture

Select **Smart picture** to display a list of predefined picture settings, each corresponding with specific factory settings. Personal refers to the personal preference settings of picture in the picture menu.

Digital options

Pixel Plus is the most ideal setting, doubles the horizontal resolution and increases the number of lines with 33%. You may consider to select Movie Plus in case a halo effect should disturb you. Dependent on your own preference, select Double lines, or 100 Hz Digital Scan.

Note: When 60 Hz NTSC material is used, the options are changed to Pixel Plus, Movie Plus or Progressive, progressive scan without motion compensation.

Active Control

The TV continuously measures and corrects all incoming signals in order to provide the best picture possible.

1. Press the key on the remote control.
2. The Active Control menu appears.
3. Press the cursor up/down to select the Active Control values **Off, Minimum, Medium** (recommended) or **Maximum**.
   The picture settings are being optimised continuously and automatically which is displayed by bars. The menu items can not be selected.
4. Press the cursor right to select **Smart picture**.
5. Press the cursor up/down to select one of the predefined picture settings.
6. Press the cursor right to select **Active Display**.
7. Press the cursor up/down to select **Bars**, one of the Dual screen demos or **Off**.
   When you select Dynamic contrast, Pixel Plus, Digital Noise Reduction or Digital Natural Motion, the TV screen is divided into two parts: in the left part the selected picture quality setting is switched off; in the right part it is switched on.
8. Press the key again to switch off the Active Control menu.

Sound

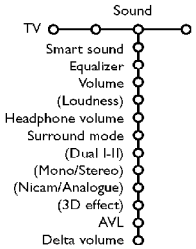

❶ Press the cursor right to select **Sound**.

❷ Select the menu items in the Sound menu with the cursor up/down and adjust the settings with the cursor left/right. Remember, control settings are at normal mid-range levels when the bar scale is centred.

Smart sound

Select **Smart sound** to display a list of predefined sound settings, each corresponding with specific factory settings of Treble and Bass. **Personal** refers to the personal preference settings of sound in the sound menu.

Notes:

- *Some menu items are only available in case of a Cinema Link configuration and when the Cinema Link is activated. Others are steered by the audio receiver instead of by the TV. See the separate Cinema Link booklet supplied.*
- *Dual I-II is only available with dual sound transmission.*
- *Mono/Stereo is only selectable in case of analogue stereo transmission.*
  Nicam/Analogue is only selectable in case of Nicam transmission.

Surround Modes

Dependent on your personal preference and the sound signal broadcasted, select one of the Surround modes. Only the speakers indicated in the drawings can reproduce sound.

Stereo

This mode reproduces only the left and right front sound signals.

Dolby 3 Stereo
(optimal with Dolby Surround broadcasting)

The Dolby Pro Logic* sounds are distributed over the front left, the front right and the centre TV loudspeakers.

3D Surround
(optimal with Dolby Surround broadcasting)

3D Surround enables you to experience the 3D effect of Dolby Surround Pro Logic* without the need of having rear speakers connected or activated.
The graphical representation of the rear loudspeakers is replaced by the symbol))) ((.
Select the level of 3D effect with the cursor left/right.

Hall



The sound signal is distributed over the rear loudspeakers which creates a hall effect from the rear.
The centre loudspeaker does not reproduce any signal.

Dolby Pro Logic
(optimal with Dolby Surround broadcasting)



All front and rear loudspeakers reproduce the Dolby Surround Pro Logic sounds.
This sound is always present in the movie or programme marked with ◻◻ Dolby Surround.

Note:

- *Normal stereo broadcast is not always encoded to produce a rear surround sound effect.*
- *In case of a Cinema Link receiver configuration connected, only the surround modes of the external receiver can be selected.*
- *Pro Logic and Hall can only be reproduced if Surround speakers is set to Yes in the Setup, Speakers menu, p. 8, and rear speakers are connected.*
- *When a headphone is connected, only the Surround mode **Stereo-headphone** is available.*

DOLBY SURROUND PRO • LOGIC

* Dolby' 'Pro Logic' and the double-D symbol ◻◻ are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories Licensing Corporation.

Features menu

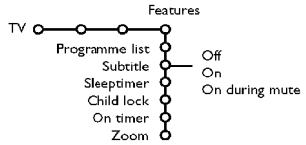

Press the cursor right to select Features.
Select the menu items with the cursor up/down and adjust the settings with the cursor left/right.

Use the on-screen Menu-Info (i+) for more information about the menu items.

Programme list

Press the **OK** key to switch over to the selected TV channel or external.

Select subtitles

The subtitle page must be stored for each TV channel:
Switch or teletext and select the proper subtitle page from the index. Switch off teletext.
Subtitle On will automatically display them on the selected TV channels if subtitles are in the transmission. A symbol will indicate that the mode is on.
Select **On during mute** when you want to have the subtitles automatically displayed only when the sound has been muted with the 🔇 key on the remote control.

On timer

❶ Select **On timer** with the cursor down.

❷ Select **On** with the cursor right.

❸ Press the cursor right again to enter the programme list.

❹ Select the TV channel or external you want your TV to switch to on a selected time and day.

❺ Press the cursor right again to select a day of the week or to select **Daily**.

❻ Press the cursor right once again to enter the time with the digit keys or with the cursor up/down and press the **OK** key to activate.

❼ Press the **MENU** key to turn off the menu.
Note: To check your timer settings, press the (i+) key.

Child lock

❶ Select **Child lock**.



❷ Press the cursor right to enter the Child lock menu. You're summoned to enter your code.
Note: You have to re enter your code each time you enter the child lock menu.

Important: You have forgotten your code ! See p. 10.

❸ Select one of the menu items of the child lock menu:

- **Lock** if you want to lock all channels and externals.
- **Custom lock** and press the cursor right.
  The items Age lock and Category lock are only available when NEXTVIEW broadcast is available.
  Select:
  - **Age lock** if you want to lock programmes related to a certain age: off, 2, 4 ... 18;
  - **Lock after** if you want to lock all programmes from a certain time onwards. Press the cursor right and enter the time with the cursor up/down and right. Press the **OK** key to validate.
  - **Programme lock** if you want to lock a certain TV channel or external;
  - **Category lock** if you want to lock programmes related to a certain theme: Movies, Sports, Shows.... See NEXTVIEW, p. 15.
- Select **Unlock** to disable all locks you have set.

Zoom

❶ Select **Zoom** with the cursor down and press the **OK** key.

❷ Press the **OK** key to select one of the zoom magnifications (x1, x4, x9, x16).

❸ Additionally you can shift the selected zoom window over the screen with the cursor keys up/down, left/right.

❹ Press the **MENU** key to switch off the zoom function.

Dual screen / PIP / Multipip

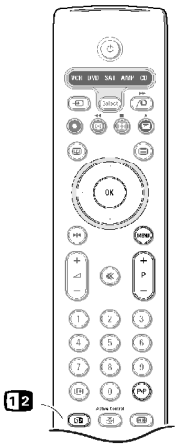

Remark: Normally only pictures from external equipment connected can be displayed in the auxiliary screen.
Full functionality is only available when having connected and activated an EasyLink recorder (of the generation P50.2 or successive). PIP3 or PIP 12 is not available without an EasyLink recorder connected.

Press the 12 key to switch on Dual screen or one of the PIP modes.
Press the 12 key again. The screen that has a yellow border will become the full main screen picture.

Notes:
- *Continuing to hold the 12 key down will cycle the TV through the various formats launching a new format after each second the key is held down. After standby of the TV, the preference as set in the Setup, General menu is used.*
- *When Dual screen mode is selected, two picture formats are supported: Full screen or 4:3 letterbox picture format (vertical squeeze).*
- *Audio from the right screen or the PIP plays to the headphones.*

Display options

- **With external equipment (non EasyLink) connected and activated:**

Dual screen PIP



No PIP 3 or PIP 12 available

Press the cursor right to highlight the right screen.
Press the cursor down to highlight the single PIP screen.

- **With an EasyLink recorder connected and activated:**

Dual screen PIP PIP 3 PIP 12



The tuner of the recorder is usec for the right screen or for one of the PIP modes.
For PIP 3 or PIP 12: press the cursor right to enter the Multipip screen and then use the cursor keys to navigate through the PIP screens and to highlight a PIP screen.

Changing TV channels or external sources in left, right, PIP or Multipip screen

- Press the **-P+** key or the P•P key in order to change the TV channels or external sources in the highlighted screen.
- Press the **OK** key to swap the left and the right screen or the highlighted pip screen.

Scan PIP3 or PIP 12

Navigate to the lowest PIP and press the cursor down to display a following series of PIP screens.

On-Screen information

The highlighted On-Screen information,which appears when changing channels, always refers to the active screen.

Define the position and the size of the single PIP screen

1. Select a Dual screen mode with a single PIP screen.
2. Press the cursor down to highlight the PIP screen. A PIP menu appears with which you can define the position and the size of the PIP screen.



Note: When the PIP menu times out, press the ok key to make it reappear.

3. Press the cursor down again to select **Position** or **Size**.
4. Press the **OK** key or the cursor right to activate.
5. Use the cursor keys to define the position of the PIP screen. Use the cursor left/right to define the size of the PIP screen.
6. Press the **OK** key. The PIP menu reappears.
7. Press the cursor up to the top of the menu to highlight the main screen again.
8. Press the **OK** key to switch off the menu or wait until it is timed out.

NEXTVIEW / Teletext guide

NEXTVIEW is an electronic guide that allows you to look up programmes as you would in a newspaper or a TV magazine. You can sort the programmes by subject (films, sport...), obtain detailed information and programme your video recorder if it comes with the NEXTVIEWLink function.

*Important note: **The NEXTVIEW service is only available on certain programmes and in certain countries**. When no NEXTVIEW information is broadcast, the teletext programme guide appears in its place. This is based on teletext programme information (if available) and offers most functions of NEXTVIEW.*
Note: The broadcaster is responsible for the content of the information.

Call NEXTVIEW / Teletext guide

Press the 0 key on the remote control to call the NEXTVIEW/Teletext guide.
A menu appears with the message **One moment please.** After a while you obtain:
- a NEXTVIEW page, if the selected channel broadcasts this service (the NEXTVIEW logo is displayed),
- a teletext page, if the selected channel does not broadcast NEXTVIEW,
- **No information available** is displayed if neither NEXTVIEW nor teletext are transmitted. In this case, select another channel.

Select TV channels by theme

If NEXTVIEW with defined themes is broadcast, it is possible to quickly select TV programmes with the P•P key. See Setup, General menu, Smart surf, p. 9.

Display of a NEXTVIEW page

The information is set by the channel that transmits the NEXTVIEW service. See also Setup menu, General, NEXTVIEW provider, p. 9.

Picture/NEXTVIEW - Teletext Guide

1. Press the key. Press the key to show NEXTVIEW-Teletext Guide on the right of the screen.
2. Use the cursor keys to select a TV channel or to move the puck to the blue ball in the left screen.
3. Press the key to switch off dual screen.

NEXTVIEW guides

1. Use the cursor key left/right to select **Time**, **Channel**, **Theme**, the **Date** guide.
   The **Time guide** provides an overview of all programme titles active in the selected time block. The **Channel guide** provides an overview of all programmes that are broadcast by a single channel during one day. With the **Date guide** you can choose a specific date. The **Theme guide** displays a list of all programmes at the selected date, that matches with the selected category.
   Going through the menu guide, the TV is collecting the sorting criteria to finally display a list of programme events.
2. Press the **OK** key to select the guide type.
3. Move the puck down and to the right to select the programmes.
   If available a summary or commentary on the programme is displayed at the bottom of the screen.
4. Use the cursor up/down to scroll through the programmes.

Teletext Guide

1. Enter with the digit keys, the teletext page number that contains the programme information for the current channel.
2. Press the cursor right to move the puck over the selection ball.
3. Use the cursor up/down to scroll through the different programmes.

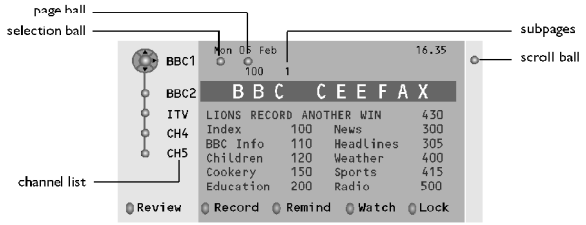

- If the selected programme contains a page number with an optional subcode referring to a page with more info about the programme, press the **OK** key to display the information. Press the **OK** key again to return to the programme guide page.
- If the selected programme guide page satisfies the VPT requirements,
  - it will be possible to record, remind, watch or lock programmes:
  - the TV will remember the last selected teletext page number of that channel that contains programme guide information and indicates which programme starts at what time. Every time you press the key, the teletext programme guide page of the selected TV channel will be available.
- When necessary you can select the subpage number by moving the cursor to the pageball and pressing right.

Note: You must enter the teletext pagenumber for each channel. You can change the channels also by moving the cursor up/down in the list in the left of the page.

Basic functions

Press one of the grey /, red ●, green , yellow or blue keys to activate a NEXTVIEW or Teletext Guide function. The keys appear in grey if the function is not available.

Review: this menu provides a list of programmes that are marked as reminders, those that have to be recorded and those that are locked. This menu can be used to change or remove marked programmes.

Record: to programme the recording of the video recorder (if it has a NEXTVIEWLink function and is connected to **EXT. 2**).

Remind: automatically switch on the TV if it is in standby or by displaying a message if the TV is on.

Lock: to lock certain programmes to prevent recording or watching.
For the functions Record, Remind or Lock, a small menu pops up in which you can choose the interval: once, daily or weekly, or clear an earlier made record, remind or lock setting. The default interval is set to **Once**. To confirm the frequency, press the **OK** key.

Watch: to watch the selected and currently broadcast programme.

Acquisition and updating of NEXTVIEW information

Acquisition and updating of NEXTVIEW is done when you are watching the TV channel of the selected NEXTVIEW provider, see Setup menu, p. 9, or when the TV is switched to standby;
Acquisition of fresh data will happen once during the night.
Note: it may be necessary to put the TV in standby mode when all NEXTVIEW information is outdated, e.g. when returning from holiday.

Teletext

Most TV channels broadcast information via teletext. This TV has a 1200 pages memory that will store most broadcasted pages and subpages to reduce waiting time. After each programme change, the memory is refreshed.

Switch Teletext on and off

Press ☰ to switch the teletext on.

102 «03 04 05 06 07 08 09 10 11 12»
BBC CEEFAX 102 Mon 05 Feb 16.35.22
BBC CEEFAX
LIONS RECORD ANOTHER WIN 43D
Index 100 News 300
BBC Info 110 Headlines 305
Children 120 Weather 400
Cookery 150 Sports 415
Education 200 Radio 500
Lottery 230 Travel 550
Finance 240 Subtitling 888
Music 280 TV Listings 600
Red Green Yellow Blue

Select a Teletext page

- Enter the desired page number with the digit keys, the cursor keys up/down, left/right or with the **-P+** key.
- Select the options at the bottom of the screen with the colour keys.

Previously selected teletext page

(Only possbie in case there is no list of favourite teletext pages available. See p. 19.)
Press the P-P key.

Select the index teletext page

Press the grey colour key ▶▶ to display the main index (usually p.100).

Only for T.O.P teletext broadcasts :

Press ⊞. A T.O.P. overview of the teletext subjects available is displayed.
Select with the cursor up/down, left/right the desired subject and press the **OK** key.
Not all TV channels broadcast T.O.P. teletext.

Select subpages

When a selected teletext page consists of different subpages. a list of available subpages appears on the screen.
Press the cursor left or right to select the next or previous subpage.

Enlarge a Teletext page

Press ⊞ repeatedly to display the upper teletext part, the lower teletext part and then to return to the normal teletext page size.
When the teletext page is enlarged, you can scroll the text, ine by line using the cursor up/down.

Active screen selection

When in dual screen picture/teletext, enter the desired page number with the **-P+** key, then press the **MENU** key, then select the left screen (with the blue ball at the top).
You can now select a compressed or full screen view of picture/teletext with the ⊞ key.

Hypertext

With hypertext you can quickly jump to a pagenumber or search for a specific word shown on the current teletext page.

1. Press the **OK** key to highlight the first word or a number on the page.
2. Use the cursor up/down, left/right to select any other word or number you want to search for.
3. Press the **OK** key to confirm. The search starts. A message appears at the bottom of the screen to indicate the searching, or that the word or page is not found.
4. Use the cursor up to exit hypertext.

Teletext menu

(only available in full screen teletext mode)

1. Press the **MENU** key to activate the menu.
2. Press the cursor up/down to select the menu items.
3. Press the cursor right to activate.

Reveal

Reveals/conceals hidden information on a page, such as solutions to riddles and puzzles.
Press the cursor right to activate.

Favourite

This list contains up to eight favourite teletext pages. Only the pages of the current channel can be selected.

1. Press the cursor right to enter the list.
2. Press the cursor right again to add the current page or to select one of the favourite pages to the list.
3. Press the **MENU** key to watch the page.
4. Use the P-P key to browse through the list of favourite pages.

Search

Selecting a word

On the keyboard on screen you can type in a random word you want to search for in the teletext pages. Whether upper- or lowercase is used has no influence.

1. Press the cursor right to enter the keyboard.
2. Press the cursor left/right, up/down to select the characters, words or functions.
3. Press the **OK** key to confirm each character selected.
4. Select **Cancel** to cancel the word; **Space** to enter a space; **Delete** to delete the last character selected; **Shift** to switch between lowercase or capital characters; **Special** to display special characters on the keyboard and press the **OK** key.
5. Press the cursor left repeatedly to return to the Teletext menu again.

Searching a word

1. Type in the word on screen or select a word from the history list on the right and press **OK**.
2. Select **Accept** and press **OK** again. The message Searching appears.
3. To cancel the searching or to search for a new word, select **Keyboard** and press **OK**.
4. When a word is not found, a message appears. When the word is found, it is highlighted in the teletext page. To continue the search press the **OK** key.

Cycle subpages *(if available)*

Makes the subpages cycle automatically.
Press the cursor right to activate and to de-activate again.

Timed page

To display a specific page from a selected TV channel at a certain time.

1. Press the cursor right and select **Yes** or **No**.
2. Enter the time and pagenumber with the cursor keys or the digit keys.
   Note: Teletext does not have to remain switched on, but you should watch the TV channel you have selected the specific page from.
3. Press the cursor left to return to the TV menu again.

Language

If the displayed characters on screen do not correspond with the characters used by the teletext broadcaster, you can change the language group here.
Select **Group 1** or **Group 2** with the cursor right.

Press the **MENU** key to leave the Teletext menu.

Connect Peripheral Equipment

There is a wide range of audio and video equipment that can be connected to your TV.
The following connection diagrams show you how to connect them.

*Note: **EXT. 1** can handle CVBS and RGB, **EXT. 2** CVBS and Y/C, **EXT. 3** CVBS and RGB. It is preferred to connect peripherals with RGB output to **EXT. 1** or **3** as RGB provides a better picture quality.*
*If your recorder is provided with the EasyLink function, it should be connected to **EXT. 2** to benefit from the EasyLink functionality.*

Recorder (VCR-DVD+RW)

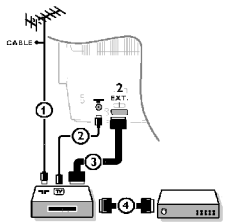

Connect the aerial cables ①, ② and, to obtain the optimum picture quality, eurocable ③ as shown.
If your recorder does not have a euroconnector, the only possible connection is via the aerial cable. You will therefore need to tune in your recorder's test signal and assign it programme number 0 or store the test signal under a programme number between 90 and 99, see Manual installation, p. 6.
See the handbook of your recorder.

Decoder and Recorder

Connect a eurocable ④ to your decoder and to the special euroconnector of your recorder. See also the recorder handbook.
See Decoder, p. 9 You can also connect your decoder directly to **EXT. 1** or **2** with a eurocable.

Other equipment (satellite receiver, decoder, DVD, games, etc.)

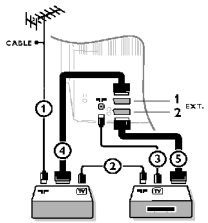

1. Connect the aerial cables ①, ② and ③ as shown (only if your peripheral has TV aerial in-/output).
   Connect your equipment with a eurocable ④ or ⑤ to one of the euroconnectors **EXT.1**, **2** or **3** to obtain a better picture quality.
2. Look for the test signal of your peripheral in the same way as you do for a recorder.
3. Make a selection in the Setup, Source menu, p. 10.

Side connections

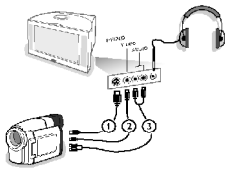

Camera or Camcorder

1. Connect your camera or camcorder as shown.
2. Connect to **VIDEO** ② and **AUDIO L** ③ for mono equipment. For stereo equipment also connect **AUDIO R** ③. S-VHS quality with an S-VHS camcorder is obtained by connecting the S-VHS cables with the S-video input ① and audio inputs ③.
   Do not connect cable ① and ② at the same time. This may cause picture distortion !

Headphone

1. Insert the plug into the headphone socket 🎧 as shown.
2. Press 🔇 on the remote control to switch off the internal loudspeakers of the TV.
   The headphone impedance must be between 8 and 4000 Ohm. The headphone socket has a 3.5 mm jack.
   In the Sound menu select **Headphone volume** to adjust the headphone volume.

Connect extra loudspeakers/amplifier

REAR multimedia loudspeakers

1. Select **Surround speakers On** in the Setup menu, see p. 8.
2. Connect the audio cables to the rear loudspeakers and to the Dolby Surround output **S** at the back of your TV. There is only one output for both speakers.
3. Adjust the volume of the rear loudspeakers. Use the Test tone function in the Speakers menu, see p. 8.
   Note: Once you have adjusted the volume of the rear loudspeakers, do not change it while watching TV as the whole configuration operates with the volume adjustment of your TV.

Stereo amplifier and 2 extra front speakers

1. Select **Centre mode On** in the Setup, Speakers menu, see p. 8.
2. Connect the audio cables to the audio input of your amplifier and to **AUDIO L** and **R** at the back of your TV.
3. Adjust the volume of the audio amplifier. Use the Test tone function in the Setup, Speakers menu. p. 8.
   Note: Once you have adjusted the volume of the external amplifier, do not change it while watching TV as the whole configuration operates with the volume adjustment of your TV.

To select connected equipment

Press the ⊡ key on the remote control repeatedly to select **EXT1**, **EXT2**, **EXT3** or **SIDE** according to where you connected your equipment at the back or the right side of your TV.

Remark : Most equipment (decoder, recorder) carries out the switching itself when it is switched on.

Cinema Link surround receiver

See the separate supplied Cinema Link instruction manual.

Attention: the sound info on screen will not correspond with the actual sound reproduction.

Recorder or DVD with EasyLink

The recorder (VCR or DVD+RW) or DVD can be operated with the remote control via the **Recorder** or **DVD** menu on screen.

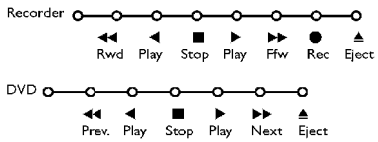

1. Press the **MENU** key on the remote control.
2. Select the **Recorder** or **DVD** menu with the cursor up/down.
3. Press the cursor left/right, up/down to select one of the recorder or DVD functions.

The key ● for recording can be operated in the TV mode.
If your Easylink recorder has the system standby function, when you press the ⏻ key for 3 seconds, both TV and the recorder are switched to standby.

Audio- and video equipment keys

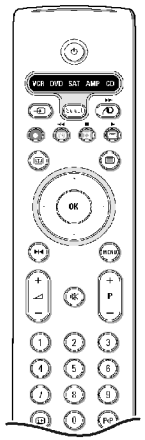

Most of the audio and video equipment from the Philips range of products can be operated with the remote control of your TV.

Press the **Select** key to operate any of the equipment indicated in the display. Another device can be selected by pressing Select repeatedly within 2 seconds. The led will blink slowly to indicate the device.
Press one of the keys on the remote control to operate the peripheral equipment.
To return to TV mode press Select while the led is blinking.
When no action is taken within 60 seconds, the remote goes back to TV mode.

*Note: When the **Select** key is pressed and hold for more than 2 seconds, the RC5/RC6 system select command is transmitted.*

- ⏻ to switch to standby
- ⏯ for pause (**VCR, DVD, CD**)
- ● for record
- ◀◀ for rewind (**VCR, CD**), search down (**DVD, AMP**)
- ■ for stop
- ▶ for play
- ▶▶ for fast forward (**VCR, CD**); search up (**DVD/AMP**)
- to select your choice of subtitle language (**DVD**); RDS news/TA (**AMP**); to shuffle play (**CD**)
- to select a **DVD** title; RDS display (**AMP**); info on screen (**CD**)
- display information

- **MENU** to switch the menu on or off
- **- P +** for chapter, channel, track selection
- 0 to 9 digit entry
- P◊P tape index (**VCR**), select a DVD chapter, select a frequency (**AMP**)
- VCR timer
- surround on/off (**AMP, CD**)
- cursor up/down to select the next or the previous disc (**CD**)
- cursor left/right to select the previous or following track (**CD**) search up/down (**AMP**)

Selecting submodes for DVD+RW, SAT, CDR

❶ The remote control should be in TV mode.

❷ Press the **OK** key together with

- digit 1: **DVD** mode is selected
- digit 2: **DVD+RW** mode is selected
- digit 3: **SAT (RC5)** mode is selected
- digit 4: **SAT (RC6)** mode is selected
- digit 5: **CD** mode is selected
- digit 6: **CD-R** mode is selected.

Record with your recorder with EasyLink

In TV mode, it is possible to start a direct recording of the programme which is being displayed on the TV screen.
Continue to press the ● record key on the remote control for more than 2 seconds.

Note:
Switching programme numbers on your TV does not disturb recording!
*When recording a programme from a peripheral connected to **EXT. 1**, **3** or **SIDE**, you can not select another TV programme on the screen.*

Tips

Care of the screen	Clean the TV with a slightly damp soft cloth. Do not use abrasive solvent as it can damage the TV screen.
Poor Picture	• Have you selected the correct TV system in the manual installation menu? • Is your TV or house aerial located too close to loudspeakers, non-earthed audio equipment or neon lights, etc.? • Mountains or high buildings can cause double pictures or ghost images. Sometimes you can improve the picture quality by changing the direction of the aerial. • Is the picture or teletext unrecognisable? Check if you have entered the correct frequency. See Installation, p. 6. • Are brightness, sharpness and contrast out of adjustment? Select Factory settings in the Setup, General menu, p. 9. • Sometimes poor picture quality is possible when having activated an S-VHS camera or camcorder connected to the right side of your TV and another peripheral is connected to one of the externals at the same time. In this case switch off one of the other peripherals.
Digital distortion	The low quality of some digital picture material may be the cause of digital image distortion. In this case select the Soft setting using the Picture menu, Smart Picture, without changing the picture settings manually.
No picture	• Is the aerial connected properly? • Are the plugs tightly connected in the aerial socket? • Is the aerial cable in good condition and does it have suitable plugs?
No sound	• No sound on any channel? Check the volume isn't at minimum. • Is the sound interrupted with the mute key 🔇? Check if your speaker configuration corresponds with the selections made in the Setup menu, Speakers, p. 8.
No Surround sound	• Perhaps the channel is not broadcasting good quality surround sound. • No sound from the rear speakers or the centre speakers? Select an appropriate surround mode, according to the broadcasted sound signal or adjust the volume. See Surround Modes, p. 12.
No solution found for your picture or sound problem ?	Switch your TV off and then on again once. Never attempt to repair a defective TV yourself. Check with your dealer or call a TV technician.
Menu	Have you selected the wrong menu? Press the **MENU** key again to exit from the menu.
NEXTVIEW	**No NEXTVIEW info:** See Acquisition and updating of NEXTVIEW information, p. 17. **Displayed time is wrong:** The broadcaster on programme number one does not transmit the correct local date and time. Use Reshuffle in the installation menu to place another broadcaster on programme number one.
Remote control	• If your TV no longer responds to the remote control, the batteries may be dead. • Check if the remote control is in the correct mode. • You can still use the **M** key and the -/+ keys at the top of your TV.
Standby	Your TV consumes energy in the standby mode. Energy consumption contributes to air and water pollution. Power consumption: 1 W

4. Mechanical Instructions

Index of this chapter:
1. Service Connector
2. Set Disassembly
3. Service Positions
4. Assy / Board Removal
5. Set Reassembly

Note: Figures below can deviate slightly from the actual situation, due to the different set executions.

4.1 Service Connector (for ComPair)

For service diagnostics with ComPair, it is not necessary to disassemble the set. You only have to connect the ComPair interface box, via the appropriate cable, to the service connector (on the rear of the set, see figure below), and start the program.

4.2 Set Disassembly

Follow the disassemble instructions in described order.

4.2.1 Wireless Surround Transmitter Removal (if attached)

1. Remove the cable of the Wireless Surround Transmitter box (at the side of this RJ45 plug you can find the release-hook of the lock-mechanism).
2. Pull the Wireless Surround Transmitter box backwards. It is clicked to the rear cover via three clamps.

4.2.2 Rear Cover Removal

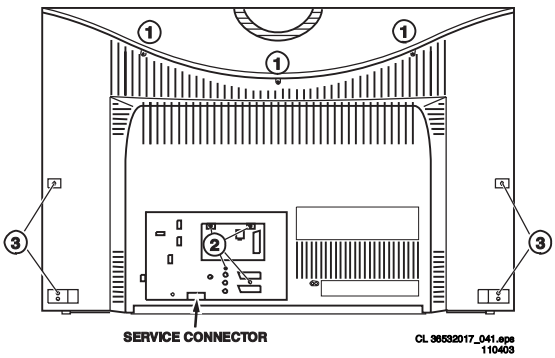

Figure 4-1 Rear view

Warning: disconnect the mains power cord before you remove the rear cover.

First, remove the top cover (= plate with 'saucer'):
1. Remove the fixation screw(s) [1] that hold the cover plate.
2. Pull the cover (horizontally) backwards.

To be able to access the electronics of the set, you must remove the rear cover:
1. Remove the fixation screws [2] of the rear I/O cover plate.
2. Remove the remaining fixation screws [3] at the two sides, and at the top of the rear cover.
3. Release at bottom side the rear cover securing clips and remove the rear cover. Make sure that wires and cables will not be damaged during the cover remove action.

4.2.3 Sub-woofer Removal

Caution: Do not disconnect the loudspeaker cable from the subwoofer box when the set is operative, because the class-D amplifier cannot handle a change in load during operation. It is no problem when the subwoofer is disconnected **before operation**, but a change from connected to disconnected **during operation** can damage the amplifier.

1. Disconnect the loudspeaker cable connectors at the top of the sub-woofer box.
2. Unlock he subwoofer bracket and at the same time pull the unit backwards.
3. Take out the sub-woofer unit including the bracket.

4.3 Service Positions

This chassis has several predefined service positions, for better accessibility. They are explained below in more detail.

4.3.1 Solder Side '3rd SCART' panel

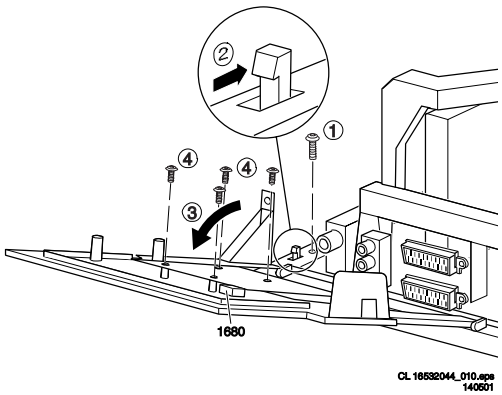

Figure 4-2 Service position 1

To remove or access the '3rd SCART' panel, do the following:
1. Remove fixation screw [1].
2. To release the fixation peg, push it towards the CRT [2].
3. At the same time, pull the complete module away from the LSP [3]. It hinges in the LSP-bracket. It is also possible to uncouple both hinges.
4. To remove the panel, disconnect the flat-cable from connector 1680 and remove the four panel screws [4].

4.3.2 Double Window PIP panel (if present)

1. Release the securing clamps and take out of the PWB to service the Double window PWB.

4.3.3 Component Side LSP

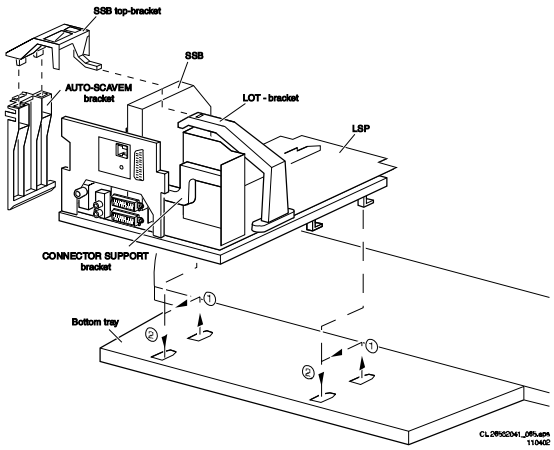

Figure 4-3 Service position 2

For better accessibility of the LSP, do the following (see figure above):

1. Remove the LSP-bracket from the bottom tray by pulling it backwards.
2. Hook the bracket in the first row of fixation holes of the bottom tray. In other words, reposition the bracket from [1] to [2].

4.3.4 Solder Side LSP

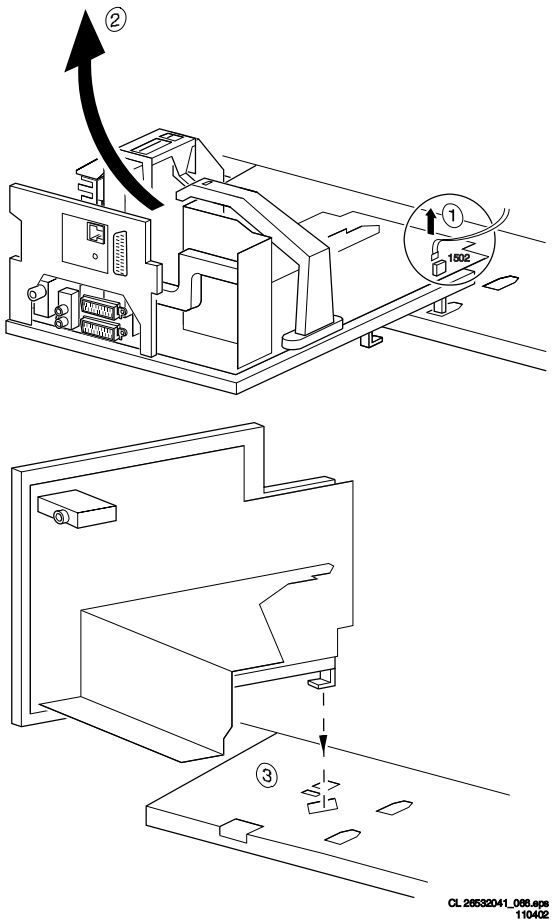

Figure 4-4 Service position 3

To get access to the bottom side (solder side) of the LSP, do the following (see figure above):

1. Unlock the DAF-module bracket (see paragraph 'DAF Assy/Panel' further down).
2. Unlock the Double Window, PIP module (if present), release the locking clip and pull the bracket out of the locking holes in the bottom plate.
3. Disconnect the degaussing coil connector 1502 [1] from the LSP.
4. Release the high voltage cable out of its guiding clamp.
5. Release the wiring from their fixation clamps, in order to position the LSP in the service position.
6. Some cables should be led underneath the CRT panel instead of above this panel.
7. Move the LSP to the left, at the same time rotate the panel 90 degrees clockwise [2] and next, place it upright at the left side of the bottom tray [3].
8. Put the panel with the right sided locking hook in the oblique accessed mounting hole in the bottom plate and pull it backwards to lock the panel in this position.

4.3.5 Small Signal Board (SSB)

Caution:
Always switch the set completely 'OFF' (disconnect the mains cord) before you remove or replace the SBB.
As the 5V2 standby voltage is always present (while the set is switched 'On', in 'Standby' or in 'Protection' mode) on the SIMM connector, it is very risky to remove the SSB in this situation, because the risk of short circuiting is very great.

In fact, there is no predefined service position for the SSB. Most test points are located on the A-side (side that is facing the tuner). If you have to replace ICs, you must take the complete SSB module out of the SIMM-connector.
Note: For good access to the A-side, it is necessary to remove the Auto-Scavem assy (at the left side of the SSB). See description in paragraph 'Assy/Panel removal' to remove the Auto-Scavem panel/bracket.

To get access to the SSB test points, do the following:

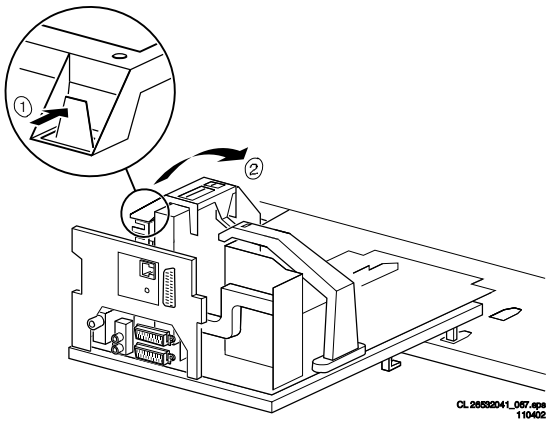

Figure 4-5 SSB removal (part 1)

1. Put the LSP in service position 2 (as described above).
2. Release the two clamps at the top of the SSB bracket [2] and pull the bracket upward (it hinges in the bracket at the LOT side).
3. Now you can remove the complete SSB bracket.

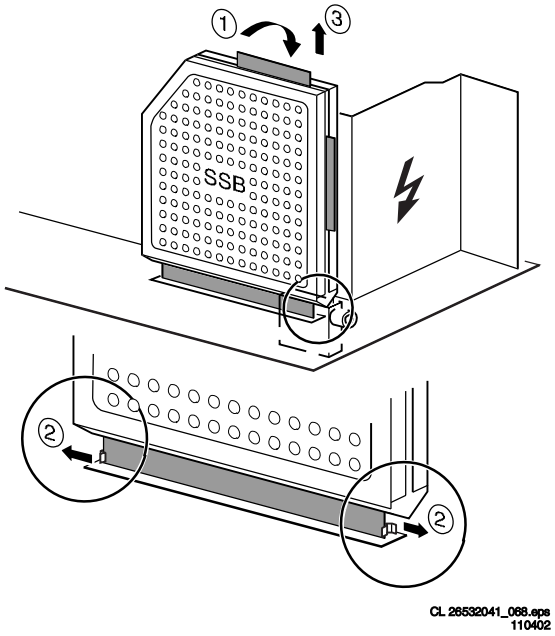

Figure 4-6 SSB removal (part 2)

1. Push the top of the SSB towards the LOT [1].
2. Due to the pressure, the two metal clamps at both sides of the SIMM-connector will release [2].
3. Take the complete SSB out [3].

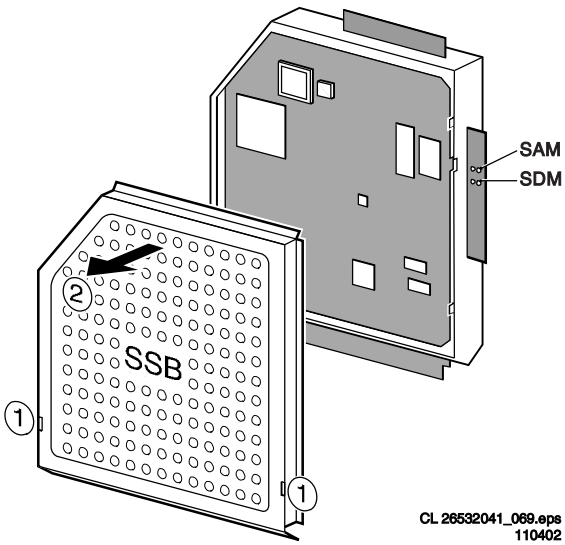

Figure 4-7 SSB removal (part 3)

1. Once you have taken out the SSB, remove the shieldings [2]. Sometimes it is necessary to unsolder some solder-tags first [1].
2. Now re-place the SSB module in the SIMM-connector in reverse order.

Notes:
For better access to the SSB, it is possible to order an 'extension tool' with cables. You can use this service extension tool to connect a Small Signal Board (SSB) of an A10 or EMG (EMx) chassis, via 2 "IDE" cables to the SIMM connector in the set. In this way, you can service the SSB more easily outside the TV set. You can order this tool under 12nc: 9965 000 14526.

4.4 Assy / Board Removal

Sometimes, it can be necessary to swap a complete assy or Printed Wiring Board (PWB). How that can be done is explained below.

4.4.1 Top Control Assy/Panel

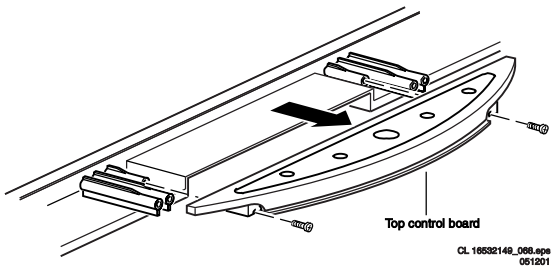

Figure 4-8 Top control assy

1. Release both fixation screws about 5 full turns.
2. Pull the complete assy back- and upwards (it hinges in the cabinet front).
3. Flip the assy, and you can access the board by releasing (carefully) the four fixation clamps.

4.4.2 Side-I/O Assy and Panel

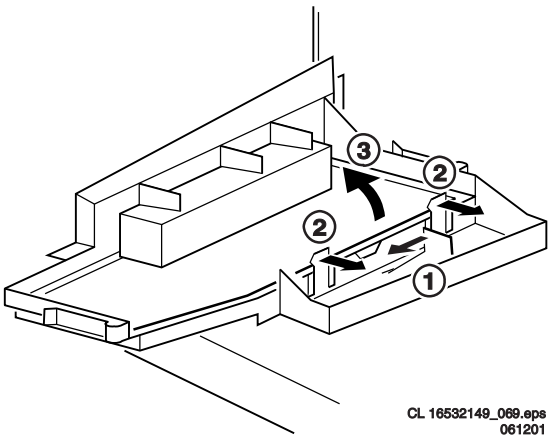

Figure 4-9 Side I/O assy

1. Release the snap-hook [1] with your finger.
2. At the same time, pull the assy backwards [2].
3. Release the two fixation clamps on the right side of the bracket (the I/O board hinges at the left side).
4. Remove the board from the bracket.

4.4.3 Mains Switch Assy/Panel

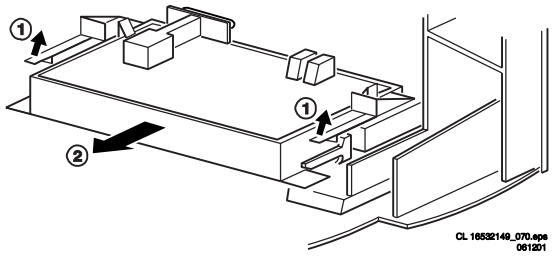

Figure 4-10 Mains Switch Assy

1. Release the two fixation clamps (rather difficult to reach), by pushing them upwards [1]. At the same time, pull the complete assy backwards [2].
   Note: be aware that the degaussing coil can hamper this.
2. Release the two fixation clamps on the two sides of the bracket (the board hinges at the connector side).
3. Remove the board from the bracket.
4. When the light guide (sitting in the cabinet, in front of the LEDs) is defective, you can replace it by pushing it forwards at the left side (it hinges at the right side, seen from the rear).

4.4.4 DAF Assy/Panel

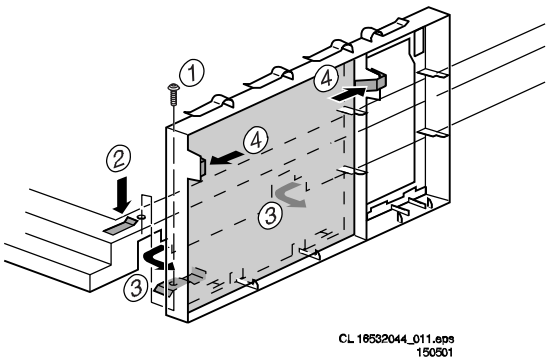

Figure 4-11 DAF-module

1. Remove the fixation screw [1] (if present).
2. Push down the fixation clamp [2], and pull the complete bracket at the same time away from the CRT [3]. The module is now free from the LSP-bracket.
3. Release the fixation clamps [4], in order to remove the print from its bracket.

4.4.5 Double window, PIP panel (If present)

1. It is not necessary to remove the Double window bracket.
2. To remove he Double window PWB, release both upper clamps and take out the PWB.

4.4.6 Auto-SCAVEM Assy/Panel

This panel is placed on the left side of the SSB (See figure 'Service Position 2'). Because most of its components are placed on the bottom side, you must lift the panel from its bracket before you can measure it.

1. Therefore, release the two fixation clamps at the top side.
2. Lift the panel from the bracket (it hinges at the bottom).

To remove the bracket:

1. First, remove the panel from the bracket, as described above.
2. Then, remove the two fixation screws at the bottom.
3. Lift the Auto-Scavem bracket slightly up, and at the same time bend the top a little away from the tuner.
4. Now, push the bracket into the direction of the CRT, and lift it out of the LSP-bracket.

4.4.7 Small Signal Board (SSB)

See paragraph 'Small Signal Board (SSB)' above.

4.4.8 Large Signal Panel (LSP)

1. Remove the SSB (see paragraph 'Small Signal Board,SSB' above).
2. Remove the Auto-Scavem assy (see paragraph 'Auto Scavem Assy/Panel' above).
3. Disconnect the necessary cables.
4. Release the fixation clamps on the left of the LSP-bracket (the board hinges at the right side).
5. Remove the board from the bracket.

4.5 Set Re-assembly

To reassemble the whole set, do all processes in reverse order.

Be sure that, before the rear cover is mounted:

- The mains cord is mounted correctly in its guiding brackets.
- All wires/cables are returned in their original positions. This is very important due to the large 'hot' area of the set

5. Service Modes, Error Codes, and Fault Finding

Index of this chapter:
1. Test points
2. Service Modes
3. Problems and solving tips (related to CSM)
4. ComPair
5. Error Codes
6. The blinking LED procedure
7. Protections
8. Repair tips

5.1 Test Points

The chassis is equipped with test points printed on the circuit board assemblies. They refer to the diagram letters.

Perform measurements under the following conditions:
- Service Default Mode.
- Video: colour bar signal.
- Audio: 3 kHz left, 1 kHz right.

5.2 Service Modes

Service Default Mode (SDM) and Service Alignment Mode (SAM) offer several features for the service technician, while the Customer Service Mode (CSM) is used for communication between a Philips Customer Care Centre (P3C) and a customer.

There is also the option of using ComPair, a hardware interface between a computer (see requirements below) and the TV chassis. It offers the ability of structured troubleshooting, test pattern generation, error code reading, software version readout, and software upgrading.
Minimum requirements: a Pentium processor, Windows 95/ 98, and a CD-ROM drive (see also paragraph "ComPair").

Note: In this chassis, two LED configuration are possible: with bicoloured LED (red/green) or with separate blue and red LEDs. The bicoloured version is the one we know from EM5E. The version with blue LED works slightly different. The blue LED is controlled by software (via ON_OFF_LED). The red LED will light in anti-phase to the blue one, but with a time delay. This means that if the blue LED is blinking fast, the red LED will stay off. But after the blue LED is "OFF" long enough, the red LED will go "ON".
So take care: In certain service modes (e.g. blinking LED, stepwise start-up, etc.) you must observe the blue LED and ignore the red LED.

5.2.1 Service Default Mode (SDM)

Purpose
- To create a pre-defined setting, to get the same measurement results as given in this manual.
- To override SW protections.
- To start the blinking LED procedure.

Specifications
- Tuning frequency: 475.25 MHz for PAL/SECAM.
- Colour system: SECAM L for France or PAL B/G for the rest of Europe.
- All picture settings at 50 % (brightness, colour, contrast).
- All sound settings at 50 %, except volume at 25 %.
- All service-unfriendly modes (if present) are disabled, like:
  - (Sleep) timer.
  - Child/parental lock.
  - Blue mute.
  - Automatic volume limiter (AVL).
  - Auto switch-off (when no video signal was received for 10 minutes).
  - Skip/blank of non-favourite pre-sets.
  - Smart modes.
  - Auto store of personal presets.
  - Auto user menu time-out.

How to enter SDM
Use one of the following methods:
- Use the standard RC-transmitter and key in the code "062596", directly followed by the "MENU" button.
  Note: It is possible that, together with the SDM, the main menu will appear. To switch it off, push the "MENU" button again.
- When you shorten for a moment the two solder pads on the 'external part' of the SSB print, with the indication "SDM". Activation can be performed in all modes, except when the set has a problem with the main-processor.
  Caution: If the SDM is entered via the pins, all the software-controlled protections are de-activated.
- Use the DST-emulation feature of ComPair.
- Use the "DEFAULT" button on the Dealer Service Tool (RC7150).

After entering this mode, "SDM" will appear in the upper right corner of the screen.

How to navigate
When you press the "MENU" button on the RC transmitter, the set will toggle between the SDM and the normal user menu (with the SDM mode still active in the background).

How to exit SDM
Use one of the following methods:
- Switch the set to STANDBY via the RC-transmitter.
- Press the "EXIT" button on the DST.
- Via a standard customer RC-transmitter: key in "00"-sequence.

5.2.2 Service Alignment Mode (SAM)

Purpose
- To perform (software) alignments.
- To change option settings.
- To easily identify the used software version.
- To view operation hours.
- To display (or clear) the error code buffer.

Specifications
- Operation hours counter.
- Software version.
- Option settings.
- Error buffer reading and erasing.
- Software alignments.

How to enter SAM
Use one of the following methods:
- Via a standard RC transmitter: key in the code "062596" directly followed by the "OSD [i+]" button. After activating SAM with this method a service warning will appear on the screen, you can continue by pressing any digit key on the RC.
- Short for a moment the two solder pads on the 'external part' of the SSB print, with the indication SAM. Depending on the software version it is possible that the service warning will appear, you can continue by pressing any digit key on the RC.
- Use the DST-emulation feature of ComPair.
- Press the ALIGN button on the DST while the set is in the normal operation

After entering this mode, "SAM" will appear in the upper right corner of the screen.

Contents of SAM:

- **OPERATION HOURS.** Displays the accumulated total of operation hours (not the standby hours).
- **HARDWARE INFO**
  - **ROM VERSION.** Displays the date of the software and the software version of the ROM (example: EM51EU1-1.0_01234 = AAABBC-X.Y_NNNNN).
    - **AAA**= the chassis name.
    - **BB**= the region: EU= Europe, AP= Asia Pacific PAL/Multi, AN= Asia Pacific NTSC, US= USA, LT= LATAM.
    - **C**= the language cluster number.
    - **X.Y**= the software version, where X is the main version number (different numbers are not compatible with one another) and Y is the sub version number (a higher number is always compatible with a lower number).
    - **NNNNN**= last five digits of 12nc code software.
- **ERRORS** (followed by maximal 10 errors). The most recent error is displayed at the upper left (for an error explanation see paragraph "Error Codes").
- **DEFECTIVE MODULE.** Here the module that generates the error is displayed. If there are multiple errors in the buffer, which are not all generated by a single module, there is probably another defect. It will then display the message "UNKNOWN" here.
- **RESET ERROR BUFFER.** When you press the "OK" button, the error buffer is reset.
- **ALIGNMENTS.** This will activate the "ALIGNMENTS" sub-menu.
- **DEALER OPTIONS.** Extra features for the dealers.
- **SERVICE OPTIONS.** Extra features for Service.
- **INITIALISE NVM.** When an NVM was corrupted (or replaced) in the former EM3 chassis, the microprocessor replaces the content with default data (to assure that the set can operate). However, all pre-sets and alignment values are gone now, and option numbers are not correct. Therefore, this was a very drastic way. In this chassis, the procedure is implemented in another way: The moment the processor recognises a corrupted NVM, the "INITIALISE NVM" line will be highlighted. Now, you can do two things (dependent of the service instructions at that moment):
  - Save the content of the NVM via ComPair for development analysis, before initialising. This will give the Philips Service department an extra possibility for diagnosis (e.g. when Development asks for this).
  - Initialise the NVM (same as in the past, however now it happens conscious).
- **STORE.** All options and alignments are stored when pressing the "OK"-button
- **FUNCTIONAL TEST.** All devices are tested via the "OK" button. Eventual errors are displayed in the error buffer. The error buffer is not erased, the content returns when this test is terminated.
- **DAILY MENUS.** With the "OK" button, you can go to the normal user menu. SAM is still active in the background. With the "MENU" button, you return from the user menu to SAM menu. This feature can be helpful to quickly change some settings in the user menu.
- **SW MAINTENANCE**
  - **UPGRADE.** Not applicable for this chassis
  - **EVENTS.** Not useful for service purposes. In case of specific software problems, the development department can ask for this info.
  - **BDM INFO.** Broadcast Debug Menu info. The purpose of this menu is to debug the broadcast, NOT the TV. The menu gives an overview of what is received on the current preset. Following items are displayed:

```
Presetnr:          --       UTC:             --:--:--
Presetname:        -----    LTO:             --:--:--
                            Time:            --:--:--
CNI NVM:           ----     Date:            --/--/----
CNI F1:            ----
CNI F2:            ----     Time TXT:        --:--:--
CNI VPS:           ----     Time 8/30 F1:    --:--:--
Morning Prog:      ---      Date 8/30 F1:    --/--/----
Name 8/30 F1:      -----    LTO 8/30 F1:     --:--:--
Name 8/30 F2:      -----
Name TXT:          -----    WSS G1:          ----
Signal Strength:---         WSS G2:          ----
                            WSS G3:          ---
EPG Service:       ---      WSS G4:          ---
```

CL 36532017_055.eps 240403

Figure 5-1 Broadcast debug menu overview

Table 5-1 Broadcast debug menu explanation

Item	Source	Description
Presetnr	Set	Presetnumber of the current selected preset.
Presetname	Set	Presetname of the current selected preset.
CNI NVM	Broadcaster	CNI number stored in NVM for the current preset.
CNI F1	Broadcaster	CNI number from transmitted Packet 8/30 Format 1.
CNI F2	Broadcaster	CNI number from transmitted Packet 8/30 Format 2.
CNI VPS	Broadcaster	CNI number from transmitted VPS line.
Morning Prog	Broadcaster	"ARD" or "ZDF" according to dedicated bit in 8/30 Format 1.
Name 8/30 F1	Broadcaster	Name extracted from status message of 8/30 Format 1.
Name 8/30 F2	Broadcaster	Name extracted from status message of 8/30 Format 2.
Name TXT	Broadcaster	Name extracted from TXT header.
Signal Strength	FBX	Noise figure measured for selected preset.
EPG Service	Set	EPG Service stored in NVM for current preset displayed as "TXT", "MCP", "SCP", "OCP".
UTC	Set	UTC (Universal Time Code formerly known as Greenwich Mean Time) used in the set.
LTO	Set	LTO (Local Time Offset) used in the set. Used by EPG for all Nextview displays. (= Time TXT header - Time 8/30 F1)
Time	Set	Current time running in the set. Was extracted at startup, then maintained by software.
Date	Set	Current date running in the set. Was extracted at startup, then maintained by software.
Time TXT	Broadcaster	TXT header time from the selected preset.
Time 8/30 F1	Broadcaster	UTC time from 8/30 Format 1.
Date 8/30 F1	Broadcaster	Date from 8/30 Format 1.
LTO 8/30 F1	Broadcaster	LTO from 8/30 Format 1.
WSS G1	Broadcaster	WSS Group 1 (Aspect Ratio) bits 0 1 2 3
WSS G2	Broadcaster	WSS Group 2 (Enhanced Services) bits 4 5 6 7
WSS G3	Broadcaster	WSS Group 3 (Subtitles) bits 8 9 10
WSS G4	Broadcaster	WSS Group 4 (Reserved) bits 11 12 13

How to navigate

- In SAM, you can select the menu items with the "CURSOR UP/DOWN" key on the RC-transmitter. The selected item will be highlighted. When not all menu items fit on the screen, move the "CURSOR UP/DOWN" key to display the next/previous menu items.
- With the "CURSOR LEFT/RIGHT" keys, it is possible to:
  - (De) activate the selected menu item.
  - Change the value of the selected menu item.
  - Activate the selected submenu.

How to exit SAM

Use one of the following methods:

- Press the "MENU" button on the RC-transmitter, or
- Switch the set to STANDBY via the RC-transmitter, or
- Press the "EXIT" button on the DST.

5.2.3 Customer Service Mode (CSM)

Purpose

When a customer is having problems with his TV-set, he can call his dealer. The service technician can than ask the customer to activate the CSM, in order to identify the status of the set. Now, the service technician can judge the severity of the complaint. In many cases, he can advise the customer how to solve the problem, or he can decide if it is necessary to visit the customer.
The CSM is a read only mode; therefore, modifications in this mode are not possible.

How to enter CSM

Use one of the following methods:

- Press the "MUTE" button on the RC-transmitter simultaneously with the "MENU" button on the TV (top control) for at least 4 seconds.
- Key in the code "123654" via the standard RC transmitter.

Note: Activation of the CSM is only possible if there is no (user) menu on the screen!

How to navigate

By means of the "CURSOR-DOWN/UP" knob on the RC-transmitter, you can navigate through the five menus.

Contents of CSM

Customer Service Menu 1

- **SOFTWARE VERSION (example: EM51EU1-1.0_01234).** Displays the build in software version. In case of field problems related to software, software flash-RAM pos.7006 must be changed by a new one. Do this via soldering. You will find details of the software versions in the chapter "Software Survey" of the "Product Survey - Colour Television" publication. This publication is generated four times a year.
- **FEATURE BOX.** The 12NC-number of the build in Feature Box software
- **SET TYPE.** This information is very helpful for a helpdesk/ workshop as reference for further diagnosis. In this way, it is not necessary for the customer to look at the rear of the TV-set.
- **CODE 1.** Gives the latest 5 errors of the error buffer. As soon as the built-in diagnose software has detected an error the buffer is adapted. The last occurred error is displayed on the leftmost position. Each error code is displayed as a 3-digit number. When less than 10 errors occur, the rest of the buffer is empty (000). See also paragraph "Error Codes" for a description.
- **CODE 2.** Gives the first 5 errors of the error buffer. See also paragraph Error Codes for a description.
- **VOLUME.** Gives the last status of the volume as set by the customer. The value can vary from 0 (volume is minimum) to 100 (volume is maximum). Volume values can be changed via the volume key on the RC-transmitter.
- **BRIGHTNESS.** Gives the last status of the brightness as set by the customer. The value can vary from 0 (brightness is minimum) to 100 (brightness is maximum). Brightness values can be changed via the "CURSOR LEFT" and "CURSOR RIGHT" keys on the RC-transmitter after pressing the "MENU" button and selecting "PICTURE" and "BRIGHTNESS".
- **CONTRAST.** Gives the last status of the contrast as set by the customer. The value can vary from 0 (contrast is minimum) to 100 (contrast is maximum). Contrast values can be changed via "CURSOR LEFT" and "CURSOR RIGHT" keys on the RC-transmitter after pressing the "MENU" button and selecting "PICTURE" and "CONTRAST".
- **COLOUR.** Gives the last status of the colour saturation, as set by the customer. The value can vary from 0 (colour is minimum) to 100 (colour is maximum). Colour values can be changed via "CURSOR LEFT" and "CURSOR RIGHT" keys on the RC-transmitter after pressing the "MENU" button and selecting "PICTURE" and "COLOUR".
- **HUE.** Only relevant for NTSC-signals (e.g. some NTSC-DVD-discs).

Customer Service Menu 2

- **SHARPNESS**. Gives the sharpness value. The value can vary from 0 (sharpness is minimum) to 7 (sharpness is maximum). In case of bad antenna signals, a too high value of the sharpness can result in a noisy picture. Sharpness values can be changed via the "CURSOR LEFT" and "CURSOR RIGHT" keys on the RC-transmitter after pressing the "MENU" button and selecting "PICTURE" and "SHARPNESS".
- **HEADPHONE VOLUME**. Gives the last status of the headphone volume, as set by the customer. The value can vary from 0 (volume is minimum) to 100 (volume is maximum). Headphone volume values can be changed via the "CURSOR LEFT" and "CURSOR RIGHT" keys on the RC-transmitter after pressing the "MENU" button and selecting "SOUND" and "HEADPHONE VOLUME".
- **DOLBY**. Indicates whether the received transmitter transmits Dolby sound ("ON") or not ("OFF"). Attention: The presence of Dolby can only be tested by the software on the Dolby Signalling bit. If a Dolby transmission is received without a Dolby Signalling bit, this indicator will show "OFF" even though a Dolby transmission is received.
- **SURROUND MODE**. Indicates the by the customer selected surround mode (or automatically chosen mode). In case the set is a Non-Dolby set, there will be displayed "0". If it is a Dolby-set then is displayed: "STEREO", "3 STEREO", "HALL", "3DSURROUND", "DOLBY PRO LOGIC" or "DOLBY DIGITAL". These settings can be influenced after pressing the "MENU" button and selecting "SOUND" and SURROUND MODE". It can also have been selected automatically by signalling bits (internal software).
- **TUNER FREQUENCY**. Indicates the frequency the selected transmitter is tuned to. The tuner frequency can be changed via the "CURSOR LEFT" and "CURSOR RIGHT" keys for fine tune after opening the installation menu and selecting "INSTALL" and "MANUAL INSTALL".
- **DIGITAL OPTION**. Gives the selected digital mode, "100 HZ", "DIGITAL SCAN", "NATURAL MOTION", "DOUBLE LINES", or "PIXEL PLUS". Change via "MENU", "PICTURE", "DIGITAL OPTIONS".
- **CENTRE TRIM.** Indicates the difference between main volume and volume of centre speaker. Change via: "MENU", "SETUP", "SPEAKERS", and "CENTRE VOLUME" (not available when "Surround Mode" is set to "STEREO" or "HALL"). The value can vary from "-10" to "+10"
- **TV SYSTEM.** Gives information about the video system of the selected transmitter.
  - BG: PAL BG signal received.
  - DK: PAL DK signal received.

- I: PAL I signal received.
- L/La: SECAM L/La signals received.
- M: NTSC M signal received with video carrier on 38.9 MHz.

Customer Service Menu 3

- **BALANCE.** Indicates the balance settings, between "-50" and "+50". Change via "MENU", "SOUND", and "BALANCE". Not applicable for Dolby Pro Logic sets.
- **CENTRE MODE.** Indicates if centre mode is set "ON" or "OFF". When centre mode is on, all TV speakers are used as one centre speaker. Change Centre mode via "MENU", "SETUP", "SPEAKERS", and "CENTRE MODE".
- **DNR.** Gives the selected DNR setting (Dynamic Noise Reduction), "OFF", "MINIMUM", "MEDIUM", or "MAXIMUM". Change via "MENU", "PICTURE", "DNR"
- **NOISE FIGURE.** Gives the noise ratio for the selected transmitter. This value can vary from 0 (good signal) to 127 (average signal) and to 255 (bad signal). For some software versions, the noise figure will only be valid when "Active Control" is set to "medium" or "maximum".
- **SOURCE.** Indicates which source is used and the video/audio signal quality of the selected source. (Example: Tuner, Video/NICAM) Source: "TUNER", "EXT1", "EXT2", "EXT3", "EXT4", "SIDE", "AV1", "AV2", "AV3" or "AV4". Video signal quality: "VIDEO", "S-VIDEO", "RGB 1FH", "YPBPR 1FH 480P", "YPBPR 1FH 576P", "YPBPR 1FH 1080I", "YPBPR 2FH 480P", "YPBPR 2FH 576P", "YPBPR 2FH 1080I", "RGB 2FH 480P", "RGB 2FH 576P" or "RGB 2FH 1080I". Audio signal quality: "STEREO", "SPDIF 1", "SPDIF 2" or "SPDIF".
- **AUDIO SYSTEM.** Gives information about the audio system of the selected transmitter: "ANALOGUE MONO", "ANALOGUE STEREO", "PCM 2/0", "DD 1/0", "DD 2/0 LtRt", "DD 2/0 L0R0", "DD 2/1", "DD 2/2", "DD 3/0", "DD 3/1", "DD 3/2", "DD 1+1", "MPEG 1/0", "MPEG 2/0", "MPEG 2/0 LtRt", "MPEG 2/1", "MPEG 2/2", "MPEG 3/0", "MPEG 3/1", "MPEG 3/2", "MPEG 1+1" or "MPEG 2+2".
- **TUNED BIT.** Gives information about the tuning method of the stored pre-set. If a channel is found via "automatic installation", you will see the value "Off". When you change this (automatically found) frequency via "fine tune" adjustment (installation menu - manual installation), the displayed value will change to "On". Therefore, when you see the value "On" in this line, it is an indication that the received channel is a non-standard signal (e.g. of a VCR).
- **SURROUND SPEAKERS.** Indicates if the surround speakers are present, "YES" or "NO". Change via "MENU", "SETUP", "SPEAKERS", and "SURROUND SPEAKERS".
- **ON TIMER.** Indicates if the "On Timer" is set "ON" or "OFF" and if the timer is "ON" also displays start time, start day and program number. Change via "MENU", "TV", "FEATURES", and "ON TIMER".
- **PRESET LOCK.** Indicates if the selected preset has a child lock: "LOCKED" or "UNLOCKED". Change via "MENU", "TV", "FEATURES", "CHILD LOCK", and "CUSTOM LOCK".

Customer Service Menu 4

- **CHILD LOCK.** Indicates the last status of the general child lock: "UNLOCK", "LOCK", or "CUSTOM LOCK". Change via "MENU", "TV", "FEATURES", "CHILD LOCK", and "LOCK".
- **AGE LOCK.** Indicates the last status of the EPG rating for child lock: "OFF", "4 YEARS", "6 YEARS", "8 YEARS", "10 YEARS", "12 YEARS", "14 YEARS" or "16 YEARS". This is only displayed if child lock is set to "CUSTOM LOCK"
- **LOCK AFTER.** Indicates at what time the child lock is set: "OFF" or e.g. "18:45" (lock time). This is only displayed if child lock is set to "CUSTOM LOCK"
- **CATEGORY LOCK.** Indicates the last status of the EPG theme childlock: "MOVIES", "NEWS", "SHOWS", "SPORTS", "CHILDREN", "MUSIC", "CULTURE", or "SERIES". This is only displayed if child lock is set to "CUSTOM LOCK". It is possible that more than one value is shown.
- **PROGRAM CATEGORY.** Indicates the theme of the selected transmitter: "MOVIES", "NEWS", "SHOWS", "SPORTS", "CHILDREN", "MUSIC", "CULTURE", or "SERIES".
- **TV RATINGS LOCK.** Only applicable for US.
- **MOVIE RATINGS LOCK.** Only applicable for US.
- **V-CHIP TV STATUS.** Only applicable for US.

Customer Service Menu 5

- **V-CHIP MOVIE STATUS.** Only applicable for US.
- **OPTIONS 1.** Gives the option codes of option group 1 as set in SAM (Service Alignment Mode).
- **OPTIONS 2.** Gives the option codes of option group 2 as set in SAM (Service Alignment Mode).
- **AVL.** Indicates the last status of AVL (Automatic Volume Level): "ON" or "OFF". Change via "MENU", "TV", "SOUND", "AVL"
- **DELTA VOLUME.** Indicates the last status of the delta volume for the selected preset as set by the customer: from "-12" to "+12". Change via "MENU", "TV", "SOUND", "DELTA VOLUME".
- **SURROUND TRIM L.** Indicates the last status of "SURROUND LEFT VOLUME" as set by the customer: from "-10" to "+10". Only available in Digital Dolby sets. Change via "MENU", "SETUP", "SPEAKERS", "SURROUND L VOLUME.
- **SURROUND TRIM R.** Indicates the last status of "Surround Right Volume" as set by the customer: from "-10" to "+10". Only available in Digital Dolby sets. Change via "MENU", "SETUP", "SPEAKERS", "SURROUND R VOLUME.
- **FRONT SPKR DIST.** Indicates the last status of the distance to the front speakers as set by the customer: "1m", "2m", or "3m",.... Change via "MENU", "SETUP", "SPEAKERS", "TO FRONT".
- **SURR. SPKR DIST.** Indicates the last status of the distance to the surround speakers as set by the customer: "1m", "2m", or "3m",.... Change via "MENU", "SETUP", "SPEAKERS", "TO SURROUND".

How to exit CSM

Use one of the following methods:

- After you press a key on the RC-transmitter (with exception of the "CHANNEL", "VOLUME" and digit (0-9) keys), or
- After you switch the TV-set "OFF" with the mains switch.

5.3 Problems and Solving Tips (related to CSM)

Note: Below described problems are all related to the TV settings. The procedures to change the value (or status) of the different settings are described above. New value(s) are automatically stored.

5.3.1 Picture Problems

Snowy/noisy picture

1. Check line 24 "Noise Figure". In case the value is 127 or higher, and the value is also high on other programs, check the aerial cable/aerial system. For some software versions, the noise figure will only be valid when "Active Control" is set to "medium" or "maximum".
2. Check lines 11 "Sharpness" and 24 "Noise Figure". In case the value of line 11 is 3 or 4 and the value of line 24 is high (127 or higher), decrease the "Sharpness" value.

Picture too dark

1. Press "MENU", "TV", "PICTURE", "SMART PICTURE". In case the picture improves, increase the "Brightness" or the "Contrast" value. The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.

2. Check line 7 "Brightness" and 8 "Contrast". If the value of line 7 is low (< 10) or the value of line 8 is low (< 10), increase the "Brightness" or the "Contrast" value.

Picture too bright
1. Press "MENU", "TV", "PICTURE", "SMART PICTURE". In case the picture improves, decrease the "Brightness" or the "Contrast" value. The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.
2. Check lines 7 "Brightness" and 8 "Contrast". If the value of line 7 is high (> 40) or the value of line 8 is high (> 50). Decrease the "Brightness" value or increase the "Contrast" value.

White line around picture elements and text
1. Press "MENU", "TV", "PICTURE", "SMART PICTURE". In case the picture improves, decrease the "Sharpness" value. The new value is automatically stored (in "personal" pre-set) for all TV channels.
2. Check line 11 "Sharpness". Decrease the "Sharpness" value. The new value is automatically stored for all TV channels.

No picture
Check line 27 "Tuned bit". In case the value is "No", install the required program again. Open the installation menu and perform manual installation.

Blue picture
No proper signal is received. Check the aerial cable/aerial system.

Blue picture and/or unstable picture
A scrambled or decoded signal is received.

Black and white picture
Check line 9 "Colour". In case the value is low (< 10), increase the "Colour" value. The new value is automatically stored for all TV channels.

No colours/colour lines around picture elements or colours not correct or unstable picture
1. Check line 20 "TV System". If a "strange" system pops up, something has gone wrong during installation. Re-install the channel.
2. In case line 20 is "L", the installed system for this pre-set is "France", while "West Europe" is required. Install the required program again: open the installation menu and perform manual installation. Select system "West Europe".

Menu text not sharp enough
1. Press "MENU", "TV", "PICTURE", "SMART PICTURE". In case picture improves, decrease the contrast value. The new value(s) are automatically stored for all TV channels.
2. Check line 8 "Contrast". The value of line 8 is high (> 50). Decrease the contrast value.

5.3.2 Sound Problems

No sound from left and right speaker
Check line 6 "Volume". The value is low. Increase the value of "Volume". The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.

Sound too loud for left and right speaker
Check line 6 "Volume". The value is high. Decrease the value of " Volume". The new value(s) are automatically stored (in "personal" pre-set) for all TV channels.

5.4 ComPair

5.4.1 Introduction

ComPair (Computer Aided Repair) is a service tool for Philips Consumer Electronics products. ComPair is a further development on the European DST (service remote control), which allows faster and more accurate diagnostics. ComPair has three big advantages:
- ComPair helps you to quickly get an understanding on how to repair the chassis in a short time by guiding you systematically through the repair procedures.
- ComPair allows very detailed diagnostics (on I2C level) and is therefore capable of accurately indicating problem areas. You do not have to know anything about I2C commands yourself because ComPair takes care of this.
- ComPair speeds up the repair time since it can automatically communicate with the chassis (when the microprocessor is working) and all repair information is directly available. When ComPair is installed together with the SearchMan electronic manual of the defective chassis, schematics and PWBs are only a mouse click away.

5.4.2 Specifications

ComPair consists of a Windows based faultfinding program and an interface box between PC and the (defective) product. The ComPair interface box is connected to the PC via a serial or RS232 cable.
For this chassis, the ComPair interface box and the TV communicate via a bi-directional service cable via the service connector.

The ComPair faultfinding program is able to determine the problem of the defective television. ComPair can gather diagnostic information in two ways:
- **Automatic** (by communication with the television): ComPair can automatically read out the contents of the entire error buffer. Diagnosis is done on I2C level. ComPair can access the I2C bus of the television. ComPair can send and receive I2C commands to the micro controller of the television. In this way, it is possible for ComPair to communicate (read and write) to devices on the I2C busses of the TV-set.
- **Manually** (by asking questions to you): Automatic diagnosis is only possible if the micro controller of the television is working correctly and only to a certain extends. When this is not the case, ComPair will guide you through the faultfinding tree by asking you questions (e.g. Does the screen give a picture? Click on the correct answer: YES / NO) and showing you examples (e.g. Measure test-point I7 and click on the correct oscillogram you see on the oscilloscope). You can answer by clicking on a link (e.g. text or a waveform picture) that will bring you to the next step in the faultfinding process.

By a combination of automatic diagnostics and an interactive question / answer procedure, ComPair will enable you to find most problems in a fast and effective way.

Beside fault finding, ComPair provides some **additional features** like:
- Up- or downloading of pre-sets.
- Managing of pre-set lists.
- Emulation of the Dealer Service Tool (DST).
- If both ComPair and SearchMan (Electronic Service Manual) are installed, all the schematics and the PWBs of the set are available by clicking on the appropriate hyperlink.
  Example: Measure the DC-voltage on capacitor C2568 (Schematic/Panel) at the Mono-carrier.
  - Click on the "Panel" hyperlink to automatically show the PWB with a highlighted capacitor C2568.
  - Click on the "Schematic" hyperlink to automatically show the position of the highlighted capacitor.

5.4.3 Stepwise Start-up

Under normal circumstances, a fault in the power supply, or an error during start-up, will switch the television to protection mode. ComPair can take over the initialisation of the television. In this way, it is possible to distinguish which part of the start-up routine (hence which circuitry) is causing the problem. Take notice that the transition between two steps can take some time, so give the set some time to reach a stable state. During the transition time the LED can blink strangely.

Stepwise start- up explanation
This is realised via ComPair and is very helpful when a protection is activated (see also chapter "Protections").

Table 5-2 Stepwise start-up table

State	Description mode	Display LED	Enabled protection
0	Low power standby: 5V2/3V3 present, uP in standby-mode	On	None
1	High power Standby: TV-set in standby-mode	Wait 1s, flash 1 x	None
2	Main Power On : HOP in standby, 5V/8V present, I2C protections on, SSB is powered by standby-supply (5V/8V). De-gaussing (12 s) has been activated, MSP is reset.	Wait 1s, flash 2 x	4 & 5
3	Initialized (Semi stand-by): most IC's are initialized, HOP still in standby	Wait 1s, flash 3 x	Plus 1, 6 & 18
4	HOP : HOP fully powered and working, EHT is present, rest of IC's initialized, black current stabilisation is off, picture is still blanked	Wait 1s, flash 4 x	Plus 2 & 16
5	On: TV-set operates, black current stabilisation is on, picture is unblanked	Wait 1s, flash 5 x	

Note (*):
- When the set is in stepwise mode and, due to stepping-up, a protection is activated, the set will really go into protection (blinking LED). The set will not leave the stepwise-mode however. If state X is the state where the set went to protection, stepwise start-up will return to state X-1. At state (X-1) diagnostic measurements can be performed. Also, in the short time the set is in state X but not yet in protection, you can also do some measurements.

5.4.4 How To Connect

1. First, install the ComPair Browser software (see the Quick Reference Card for installation instructions).
2. Connect the RS232 interface cable between a free serial (COM) port of your PC and the PC connector (marked with "PC") of the ComPair interface.
3. Connect the mains adapter to the supply connector (marked with "POWER 9V DC") of the ComPair interface.
4. Switch the ComPair interface "OFF".
5. Switch the television set "OFF" with the mains switch.
6. Connect the ComPair interface cable between the connector on the rear side of the ComPair interface (marked with "I2C") and the ComPair connector at the rear side of the TV (situated just below the tuner input, see also chapter 4).
7. Plug the mains adapter in a mains outlet, and switch the interface "ON". The green and red LEDs light up together. The red LED extinguishes after approx. 1 second while the green LED remains lit.
8. Start the ComPair program and read the "Introduction" chapter.

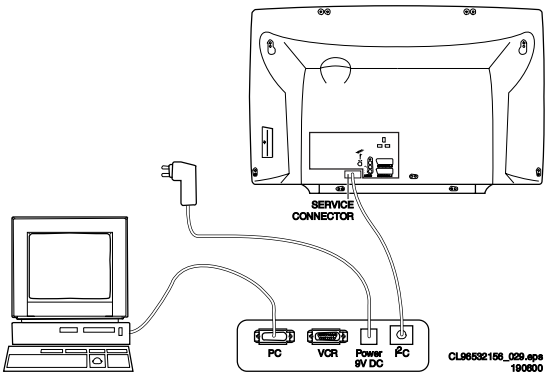

Figure 5-2 ComPair Interface connection

5.4.5 How To Order

ComPair order codes (EU/AP):
- Starter kit ComPair32/SearchMan32 software and ComPair interface (excl. transformer): 3122 785 90450.
- ComPair interface (excluding transformer): 4822 727 21631.
- Starter kit ComPair32 software (registration version): 3122 785 60040.
- Starter kit SearchMan32 software: 3122 785 60050.
- ComPair32 CD (update): 3122 785 60110.
- SearchMan32 CD (update): 3122 785 60120.
- ComPair interface cable: 3122 785 90004.

5.5 Error Codes

5.5.1 Introduction

The error code buffer contains all detected errors since the last time the buffer was erased. The buffer is written from left to right, new errors are logged at the left side, and all other errors shift one position to the right.
When an error has occurred, the error is added to the list of errors, provided the list is not full or the error is a protection error.
When an error occurs and the error buffer is full, then the new error is not added, and the error buffer stays intact (history is maintained), except when the error is a protection error.
To prevent that an occasional error stays in the list forever, the error is removed from the list after 50+ operation hours.
When multiple errors occur (errors occurred within a short time span), there is a high probability that there is some relation between them.

5.5.2 How to read the Error Buffer

Use one of the following methods:
- On screen via the SAM (only if you have a picture). Examples:
  - **0 0 0 0 0:** No errors detected
  - **6 0 0 0 0:** Error code 6 is the last and only detected error
  - **9 6 0 0 0:** Error code 6 was first detected and error code 9 is the last detected error
- Via the blinking LED procedure (when you have no picture). See next paragraph.
- Via ComPair.

5.5.3 How to clear the Error Buffer

Use one of the following methods:
- By activation of the "RESET ERROR BUFFER" command in the SAM menu.
- With a normal RC, key in sequence "MUTE" followed by "062599" and "OK".
- When you transmit the commands "DIAGNOSE" - "99" - "OK" with ComPair (or with a DST).
- If the content of the error buffer has not changed for 50+ hours, it resets automatically.

5.5.4 Error Codes

In case of non-intermittent faults, clear the error buffer before you begin the repair. This to ensure that old error codes are no longer present. Before clearing the buffer, write down the content, as this history can give you significant information.

If possible, check the entire contents of the error buffer. In some situations, an error code is only the result of another error code and not the actual cause (e.g., a fault in the protection detection circuitry can also lead to a protection).

There are various errors:
- I2C device errors.
- I2C bus errors.
- Protection errors.
- Errors not related to an I2C device, but of importance:
  - **BLACK CURRENT LOOP (ERROR 28):** detection of a continuous fail of the black current stabilisation loop of the HOP.
  - **FALCONIC (ERROR 26):** at start-up, after initialisation of the PICNIC, the presence of the FALCONIC can be checked.
  - **EAGLE (ERROR 27):** at start-up, after initialisation of the PICNIC, the presence of the Eagle can be checked.

Table 5-3 Error codes

Error	Device	Description	Def. item	Defect. module indication	Diag
1	M24C32	NVM, spontaneous blinking error 1	7011	Control	B5a
2	Hfail Protection	Horizontal Flyback protection	/	Horizontal Flyback	/
3	SAA4978	PICNIC	7713	Feature Box	B3a
4	Supply 5V	5V protection	/	+5V Supply	B5a
5	Supply 8V	8V protection	/	+8V Supply	B5a
6	Slow I2C bus blocked	Spontaneous blinking error 6	/	Slow I2C Blocked	/
7	TDA9330	HOP High-end Output Processor	7301	Video Controller	B4
8	TDA932x	HIP High-end Input Processor	7323	Chroma IF IO	B2
9	PCF8574	Wireless expander	7501	Sound Output	H
13	UV1318/...	Tuner protection	1T01	Tuner	A8
14	MSPxxxx	ITT sound processor	7A02	Audio module	B6a
16	FBX	Feature Box Protection	/	+3V (Fbx) Supply	B3
18	Fast I2C bus blocked	Spontaneous blinking error 18	/	Fast I2C Blocked	/
19	TDA8444	Auto Scavem DAC	7500	Auto Scavem	SC1
21	M62320P	PIP I/O Expander	7403	Video Dual Screen	C3
22	TDA888X	PIP BOCMA	7301	Video Dual Screen	C4
23	TELE9	PIP Tuner	7201	Video Dual Screen	C2
24	SAB9081	PIP Muppet	7801	Video Dual Screen	C1
26	SAA4992	Falconic	7718	+3V (Fbx) Supply	B3b
27	T8F24EF	Eagle	7724	+3V (Fbx) Supply	B3c
28	Black current loop	Black current loop	/	Video Controller	/
32	M29W400BT	Flash Ram (EPG)	7012	EPG Memory	B5a

Note:
Error codes 1, 6, or 18 are protection codes and in this case, supplies of some circuits will be switched "OFF". Also, in protection, the LED will blink the number of times equivalent to the most recent error code.

5.6 The Blinking LED Procedure

5.6.1 Introduction

Via this procedure, you can make the contents of the error buffer visible via the front LED. This is especially useful for fault finding, when there is no picture.

When the SDM is entered, the front LED will show (blink) the contents of the error-buffer. Error-codes = 10 are shown as follows:
- A long blink of 750 ms (which is an indication of the decimal digit),
- A pause of 1.5 s,
- "n" short blinks (where "n" = 1 - 9),
- When all the error-codes are displayed, the sequence finishes with a LED blink of 3 s,
- The sequence starts again.

Example: Error 12 9 6 0 0.
After activation of the SDM, the red front LED will show:
- 1 long blink of 750 ms (which is an indication of the decimal digit) followed by a pause of 1.5 s,
- 2 short blinks followed by a pause of 3 s,
- 9 short blinks followed by a pause of 3 s,
- 6 short blinks followed by a pause of 3 s,
- 1 long blink of 3 s to finish the sequence,
- The sequence starts again.

Note: If errors 1, 6 or 18 occur, the LED always gives the last occurred error even if the set is NOT in service mode.

5.6.2 How to Enter

Use one of the following methods:
- Enter the SDM (only via soldering pads marked "SDM" on SSB). The blinking red front LED will show the entire

contents of the error buffer (this works in "normal operation" mode and in "protection" mode).
- Transmit the commands "MUTE" - "062500" - "OK" with a normal RC. The complete error buffer is shown. Take notice that it takes some seconds before the blinking led LED starts.
- Transmit the commands "MUTE" - "06250x" - "OK" with a normal RC (where "x" is a number between 1 and 5). When x= 1 the last detected error is shown, x= 2 the second last error, etc.... Take notice that it takes some seconds before the blinking led LED starts.
- "DIAGNOSE X" with the DST (where "x" is a number between 1 and 5). When x= 1 the last detected error is shown, x= 2 the second last error, etc.... When x = 0 all errors are shown.

5.7 Protections

5.7.1 Introduction

This chassis has only one microprocessor (OTC), which remains active during Standby. This because power of the microprocessor and the attached memory chip set is coming from the 3V3 supply, which is derived from the 5V Standby-circuitry. Therefore, in both Power-on as in Standby mode, the microprocessor is connected to this power supply.

If a fault situation is detected, an error code will be generated and if necessary, the set is put in protection mode. The protection mode is indicated by the blinking of the front LED at a frequency of 3 Hz (or by a coded blinking in special cases). In some error cases however, the microprocessor does not put the set in the protection mode (this is the case with the - hardware - loudspeaker protection of the audio amplifier).

The content of the error buffer can be read via the service menu (SAM), the blinking LED procedure or via DST/ComPair.

To get a quick diagnosis, this chassis has three service-modes implemented:
- The **Customer Service Mode** (CSM).
- The **Service Default Mode (SDM).** Start-up of the set in a predefined way.
- The **Service Alignment Mode** (SAM). In this mode, items of the set can be adjusted via a menu.

You can enter both SDM and SAM modes via the 'service pads' on the SSB, via an RC-transmitter (DST or standard RC), or via ComPair. It is not possible to enter the SAM in "standby"; the TV has to be in "normal operation" mode.

The "Protection Diagram" shows the structure of the protection system. See diagram below.

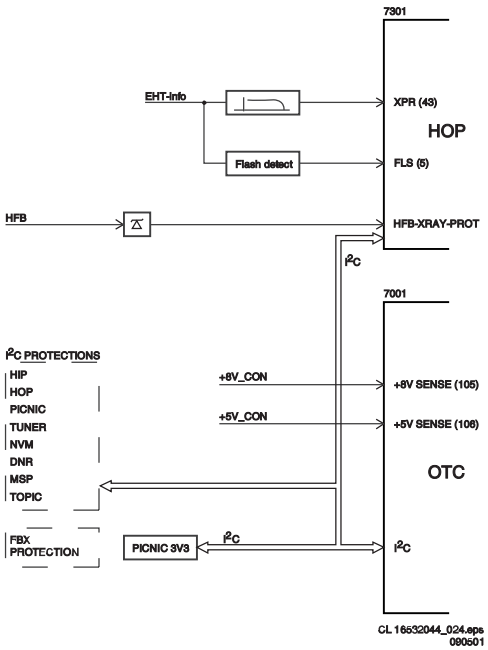

Figure 5-3 Protection diagram

There are several types of protections:
- I2C related protections.
- OTC related protections (via polling on I/O pins or via algorithms).
- HOP related protections (mainly for deflection items).
- Hardware errors that are not sensed by the OTC (e.g. vertical flyback protection, bridge coil protection, E/W protection, arcing protection).

All protections are explained below.

5.7.2 I2C Related Protections

In normal operation, some registers of the I2C controlled ICs are refreshed every 200 ms. During this sequence, the I2C busses and the I2C ICs are checked.
An I2C protection will take place if the SDA and SCL lines are short-circuited to ground, or to each other. An I2C error will also occur, if the power supply of the IC is missing (e.g. FBX_PROT (error 16)).

5.7.3 OTC Related Protections

If a protection is detected at an OTC input, the OTC will start to scan all protection inputs every 200 ms for 5 times. If the protection on one of the inputs is still active after 1 s, the microprocessor will put the set in the protection mode. Before the scanning is started, a so-called "ESD refresh" is carried out. This is done, because the interrupt on one of the inputs is possibly caused either by a flash or by ESD. As a flash or ESD can influence IC settings, the HIP, MSP, 3D Comb (US only) and wireless module are initialised again, to ensure the normal picture and sound conditions of the set.

8 V and 5 V protection: The microprocessor senses the presence of the 8 V and 5 V (via the "+5V_CON" and "+8V_CON" lines). If one (or both) of these voltages is (are) not present, an error code is stored in the error buffer of the NVM, and the set is put in the protection mode.

5.7.4 HOP Related Protections

Every 200 ms, the status register of the HOP is read by the OTC (via the I2C bus). If a protection signal is detected on one

of the inputs of the HOP, the relevant error bit in the HOP register is set to "high". If this error bit is still "high" after 1 s, the OTC will store the error code in the error buffer of the NVM and, depending on the relevancy of the error bit, the set will either go into the protection mode or not.

The following protections are implemented:
- **HFB (Horizontal Flyback):** If the horizontal flyback is not present, this is detected via the HOP (HFB_X-RAY_PROT). One status bit is set to "high". The error code is stored in the error buffer and the set will go into the protection mode.
- **XPR (X-ray protection):** If the HFB pulses are too low (level detection), the HOP will detect this via the XPR-bit. The error will be logged in the error buffer and the set will go into protection mode.

Note: Both errors will be logged as HFB-failure.

5.7.5 Hardware Related Protections

Due to the architecture ("hot" deflection), some protections cannot be sensed by the microprocessor. Three of these protections will lead to a protection on set level (Standby mode and blinking LED), while another will only lead to a circuit protection.

TV-set Protection
The following fault conditions will lead to a "complete" set protection:
- **BRIDGECOIL protection:** This is sensed via the "EW" signal going to the base of TS7652 (via R3495 and D6499). In a normal situation, the voltage on C2498 (diagram A4) is high and TS7652 is conducting. When bridge coil 5422 (diagram A3) is short circuited, the voltage on C2498 changes to low, which will block TS7652. In this case, also TS7641 will block and the voltage on 2642 will rise until TS7443 is forced in conduction. The "SUP-ENABLE" signal (in normal operating condition -20 V) is shorted now to ground level, which will force the Main Power Supply to Standby mode.
- **ARC protection:** If there are "open" connections (e.g. bad solder joints) in the high-energy deflection circuitry, this can lead to damaging effects (read: fire). For that reason, the E/W current is sensed (via 3479//3480). If this current becomes too high, the "thyristor" circuit (TS7653 and TS7654) is triggered. TS7442 is switched "on" and TS7443 is forced into conduction. . The "SUP-ENABLE" signal is shorted now to ground level, which will force the Main Power Supply to Standby mode.
- **NON_VFB (No vertical Flyback) protection:** If the frame stage generates no pulses, TS7641 will block. TS7443 is now switched "on", which will lead to Standby mode. Therefore, in normal operation condition, TS7641 and TS7652 are conducting, while TS7443 is blocked.

Circuit Protection
The following fault condition will lead to a "partly" set protection:
- **PROT1 (DC) protection:** When a DC-voltage (positive or negative) is sensed on one of the loudspeaker outputs, the protection circuit (TS7704, 7705, 7706 and 7707 in diagram A6) will put the IC7700 in Standby mode (via tri-state input pin 6). For more details, see chapter "Circuit Descriptions".

5.8 Repair tips

5.8.1 Miscellaneous

The relay you hear when you switch the set "on" (from Standby or via the mains switch), is from the degaussing circuitry. It is not used for switching the Power Supply (as done in the MG-chassis).

Take care not to touch the "hot" heatsink while disconnecting the SSB, despite the fact that the mains cord is out of the mains socket. There can still be an annoying rest-voltage on the heatsink for a short while. This, because the discharge resistors 3502 and 3503 (on the LSP between hot and cold part) are not stuffed for Europe. Instead, discharge resistors 3066 and 3057 on the Mains Switch panel are used, but because they are located before the Mains switch, they only discharge when this switch is "on".
Advice: when you remove the SSB, disconnect the Mains cord, but keep the Mains Switch "on".

Do not try to measure on the SSB side, which is facing the 'hot' heatsink. This is dangerous. Most service test points are guided to the 'tuner' side and are indicated by the 'service' printing.
Where the circuitry was too "crowded" for service printing, you can find the correct location on the "test point overviews" in this manual.
A very large part of the LSP is **"hot"**, such as:
- The primary part of the Standby Supply.
- The whole Main supply (except for the secondary Audio supply).
- And the complete deflection circuitry (so notice that the deflection coil is hot!).

5.8.2 Start-up Sequence

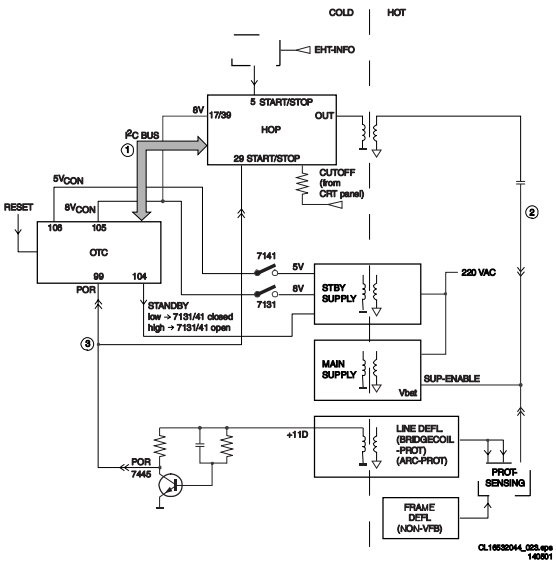

Figure 5-4 Start-up circuitry

The start up sequence differs from other sets (e.g. MG-sets or EM2E-sets, but is same as in EM3E-set):
1. When the set is switched "on", the 5 and 8 V lines ("+5V_CON" and "+8V_CON") of the standby power supply are activated.
2. After the OTC senses them, the P will address the HOP via the I2C-bus, to start the drive [1].
3. Via the "SUP-ENABLE" signal, the Main Supply is switched "on" and will deliver the V_BAT to the Line deflection stage [2].
4. EHT generation is now started.
5. The OTC will un-blank the picture.
6. When you switch "off" the set, this is done in a controlled way via the POR signal [3].

Note: Standby is not directly achieved via the Standby line of the microprocessor, but indirectly via the HOP circuitry.

5.8.3 ComPair

This chassis does not have an IR transmitting LED (as in MG-sets). Therefore, a "Service" (ComPair) connector is implemented at the rear side of the set, which is directly accessible (as in A10-, EM2E-, EM3E and EM5E-sets). In addition to this, there is also a blinking LED procedure to show the contents of the error buffer.

When you use ComPair, you have the possibility to activate a "stepwise start-up" mode. With this mode, you can initiate the start-up sequence step by step. This also means that in certain steps, some protections are not activated. This is sometimes very convenient during repair.

5.8.4 Protections

Activating SDM via the "service pads" will overrule the processor-controlled protections, but not the hardware protections. This means, that the A/D-input protections (5 and 8 V) and the I2C "not-acknowledging" info of the feature box (FBX) and of the Tuner are overruled.
Caution: When doing this, the service technician must know what he is doing, as it could lead to damaging the set.

The "ARC"- and/or "BRIDGECOIL" protection are hardly ever triggered, however:
- When you suspect the "ARC" protection, look for bad solder joints and smell. By interrupting resistor 3497, this protection is disabled (special attention needed!).
- When you suspect the "BRIDGECOIL" protection, which can also be due to a too wide picture amplitude, shorten G and S of the E/W MOSFET 7480. This will disable the protection. You will now have minimal horizontal amplitude. Re-align the horizontal amplitude in the SAM menu and remove the G/S short of TS7480.

5.8.5 Main Supply

The simplest way is, to replace the components of the Main Supply with repair kit 3122 785 90310.

More detailed way:
1. Replace FET 7504 and zener 6505.
2. Remove the SSB panel.
3. Short B and E of TS7529, in order to put the Main Supply in "on"-mode (TS7529 is blocking then).
   Caution: To prevent that R3403 and TS7443 will be damaged, **first disable the HW-protection of the deflection circuit.** Therefore short circuit C2642 on the LSP (diagram A4).
4. Attach a load of 500 O to V_BAT capacitor C2515 (the supply can not work without a minimum load).
5. Use a variac, and slowly increase the V_MAINS. Measure over sensing resistors R3514//15, if a nice sawtooth voltage becomes available.
6. Also measure the V_BAT. This may never exceed +141 V. If it does, there is something wrong in the feedback circuitry (e.g. regulator 7506).

Note: Be careful when measuring on the gate of FET TS7504. This circuitry is very high ohmic and can easily be damaged (first connect ground to measuring equipment, than measure the gate).

5.8.6 Standby Supply

The simplest way is to replace the components of the Standby Supply with repair kit 3122 785 90460.

5.8.7 Line Deflection

The simplest way is to replace the components of the Line Deflection circuitry with repair kit 3122 785 90330.

5.8.8 Frame Deflection

Caution: When the Frame Deflection circuitry is suspected, one must be careful. Because there is a DC-voltage on the frame deflection, **the beam current could damage the CRT neck, leading to a defective CRT.**

To prevent this from happening, you must:
1. Interrupt the resistors 3403 and 3404 on the CRT panel (diagram F1), in order to remove the "filament" voltage from the tube (no beam current, so no chance of destroying the CRT).
2. Interrupt resistor 3403 on the LSP (diagram A4) to disable the "SUP-ENABLE" line.
3. Measure with a multi-meter, or better with a oscilloscope, the functionality of the Frame stage.
4. After you have found the cause, exchange the defective component (e.g. TDA8177), and re-solder the interrupted resistors.

Phenomenon	Possible Cause	Repair tip
No picture, no LED.	Standby Supply defective.	Measure circuitry (see diagram A2). Start at test-point A19. When the Mains switch is 'on', this voltage must always be available
No picture, no LED.	Bad connection of SSB in SIMM-connector.	In case of a bad connection, it can happen that there is no picture, and that the Standby LED is not controllable. Re-place the SSB.
No picture, LED blinking at 3 Hz.	Set is in protection due to various causes. For error codes see error-code list.	You have no picture, so: - Read the error buffer via ComPair (error buffer is accessible when set is in protection, compare-file will guide you to this) - Read the blinking LED information via standard remote command <mute>06250X<ok> - Or you read the error code sequence via standard remote command <mute>062500<ok>. When you have found the error, check the circuitry related to the supply voltage and I²C-communication or the circuitry that triggers the protection.
No picture, LED blinking with code 6-6-6 or 18-18-18.	No communication on slow I²C- or fast I²C-bus.	As processor cannot communicate with one of the 2 busses it the standby-led spontaneously starts blinking 6-6-6... or 18-18-18... If in the error buffer somewhere is an error 6 or 18, these will have the highest priority starting the mentioned blinking. Measure dependent of the error on the I²C-bus which device is loading the bus. (Use I²C -overview)
No picture, LED blinking with code 1-1-1.	No communication on NVM-I²C bus to the uP.	As the uP cannot communicate with the NVM I²C bus, it spontaneously starts blinking 1-1-1. Note: when there is no access to the NVM, a lot of picture setting can go wrong.
No picture, no sound. Set is making audible squeaking sound	Supply is possibly in hiccup-mode, which is audible via a squeaking supply transformer.	Possible causes: V_{BAT} is shorted (caused by short circuited line transistor 7421), or Sound winding is shorted (amplifier is shortening the power supply lines), or - D6514 is shorted (due to a too high V_{BAT}). Remove excessive load, to see what causes the failure, or check feedback circuit. See repair tip 'Main Power Supply' (supply needs a minimal load).
No picture, no sound. Power LED works fine	Supply does not work correctly.	If e.g. V_{BAT} is only about 90 V, it is possible that the regulator IC (7506) is defective.
No RC-reception. LED does not echo RC-commands.	uP circuitry or RC-receiver is defective.	In case the set does react on a local keyboard operation, you must check the RC-receiver circuitry (diagram E).
Relay (degaussing) is not audible, when set is switched from 'off' or 'standby' to 'on'.	uP is not working correctly. When pin 115 is low, the degaussing must be activated.	Check RESET-circuitry on diagram B5. Check the level on pin 115 when you switch the set 'on'. Signal must be low initially and go to high after approx. 12 s.
Picture is rotated.	Rotation circuitry on diagram A5, or related supply to it, malfunctions.	Measure test points on diagram A5.
Picture is continuously switching 'off' and 'on', showing heavy 'switch' spots (set does not go into protection).	200 V is missing on CRT panel.	Probably a bad connection from LSP connector 1424 to CRT connector 1424 (diagram F1), or an interruption of the 200 V supply line (e.g. R3341 on circuit F1 is interrupted).
Picture is not sharp.	Focus is possibly mis-aligned or SCAVEM-circuitry does not work correctly.	Re-align the 'focus' potmeter on the Line Output Transformer, or check the SCAVEM circuitry on the CRT-panel (diagram F2). It is also possible that the DAF circuitry is defective (see diagram I). Check the Vdc values.
Picture is not synchronised.	The sync is derived in the HIP from x-tal 1305 and/or 1308.	Maybe the crystals 1305 and/or 1308 are making a bad contact.
Picture is distorted.	Check video-path in Service Default Mode.	Investigate whether there is an error code present in the error buffer. In case there is one, check the I²C -bus and/or supply lines (see overview supply lines). Measure and check signal path Tuner-HIP-PICNIC-HOP-RGB amplifier. In case it is a geometry issue, check on diagram A4 opto-coupler 7482, Opamps 7440/7450 and the Frame circuitry alignments or a possible corrupted NVM (7011) on diagram B5.
Picture with horizontal stripes.	Pixel Plus processing is malfunctioning	Check functionality on circuitry (B3a, B3b, and B3c) of PICNIC (7713), FALCONIC (7718, EAGLE (7724) and/or field memories (7714, 7717, 7719, 7722 and 7723. Tip the whole Pixel Plus chipset (3 ICs + 5 Field Memories can be diagnosed very good via ComPair.
No menu, no OSD.	Probably a defective uP.	Measure test points B61to B64 on diagram B5.
No NexTView (EPG).	IC7012 defective or not powered.	Check circuitry around IC7012 on diagram B5.
No Teletext.	IC7007 defective or not powered.	Check circuitry around IC7007 on diagram B5. Check also B61to B64 around uP on diagram B5.
Strange switch 'off' behaviour	TS7445 possibly defective.	Check, with a multi-meter, whether transistor TS7445 is well functioning. (diagram A3).
Various symptoms, due to missing local supply voltage.	An interrupted fuse, NFR-resistor or connection.	When no symptom or error code leads you to a specific circuitry, use the supply lines overview (see chapter 6), for a quick scan of all supply lines.

CL 36532017_047.eps
240403

Figure 5-5 Repair tips

Personal Notes:

6. Wiring Diagram, Block Diagrams and Overviews

Wiring Diagram

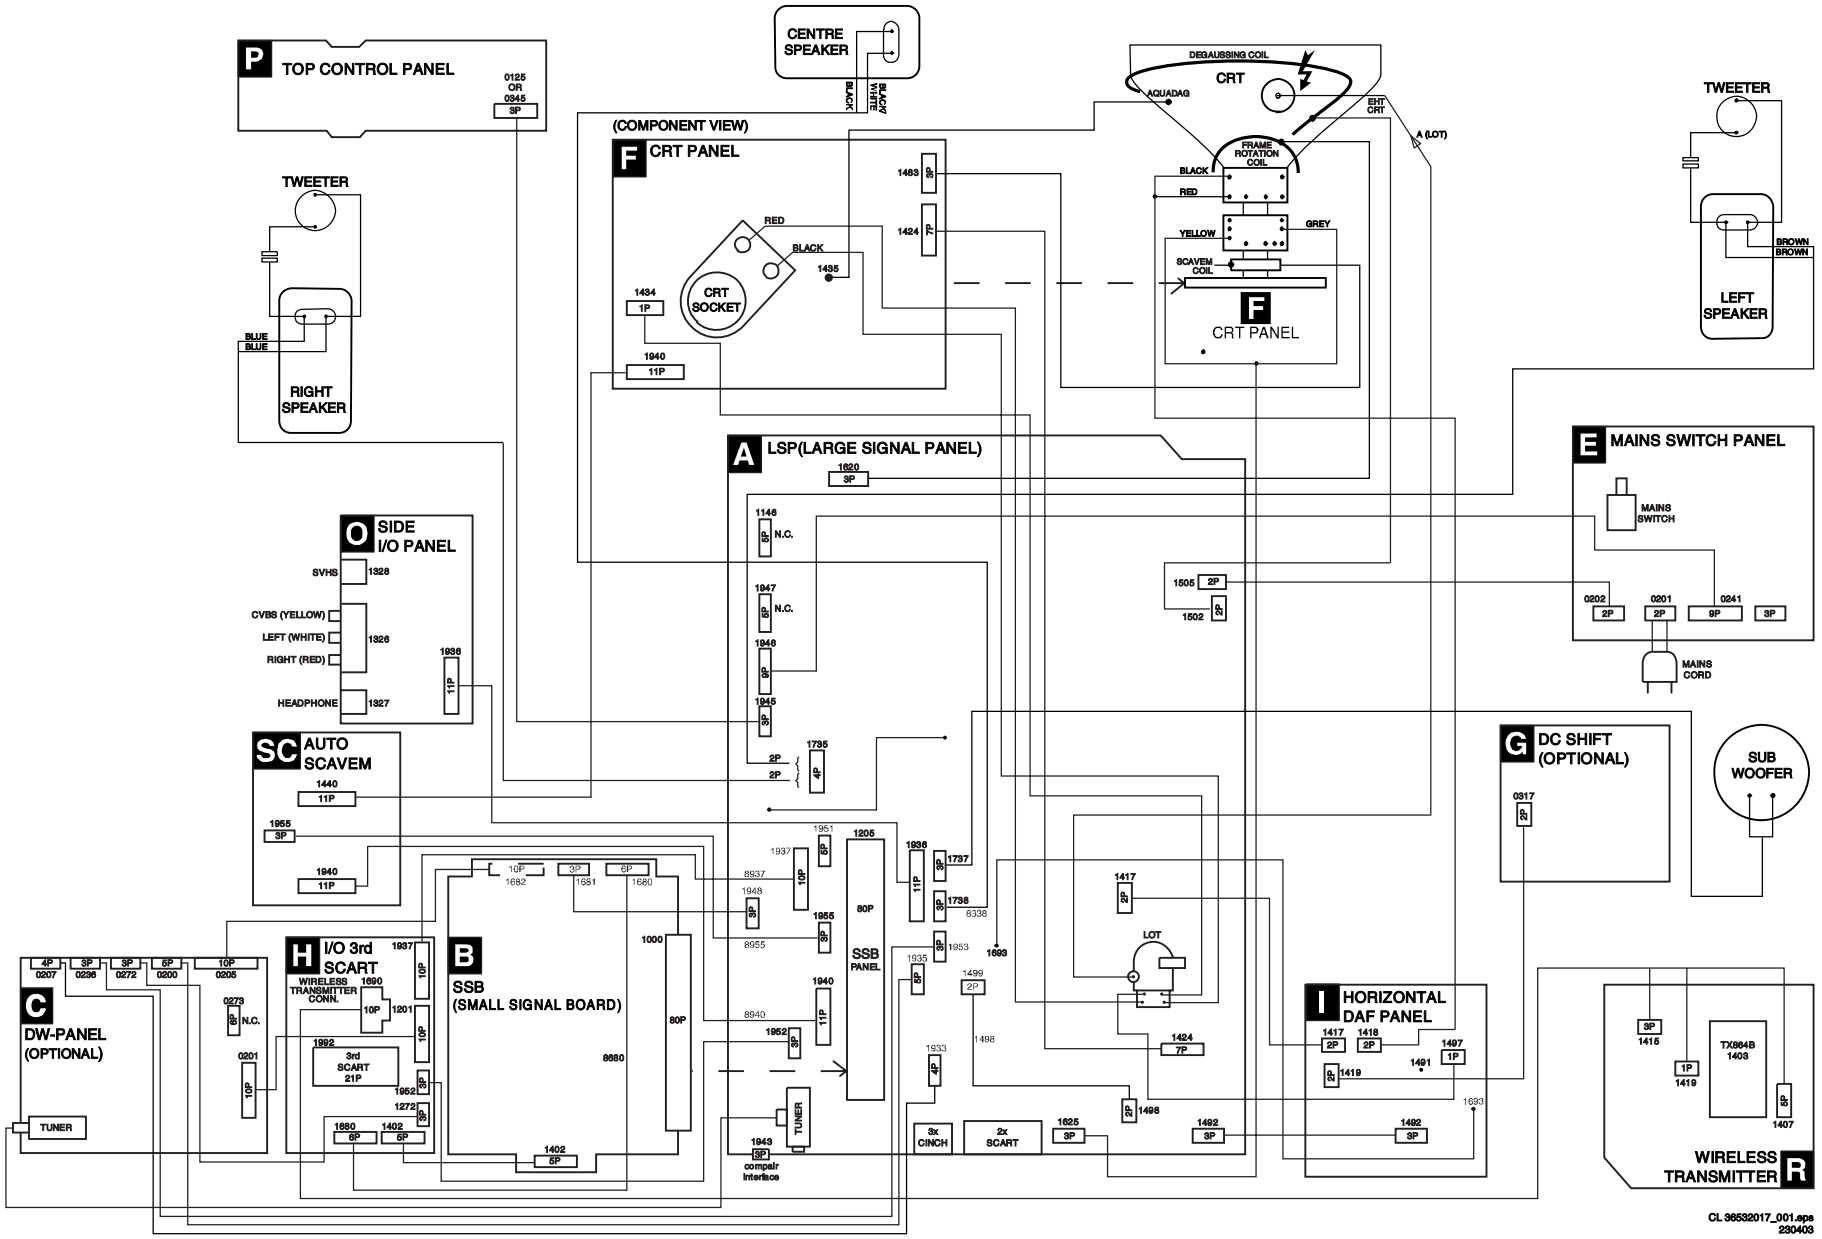

Block Diagram Supply and Deflection

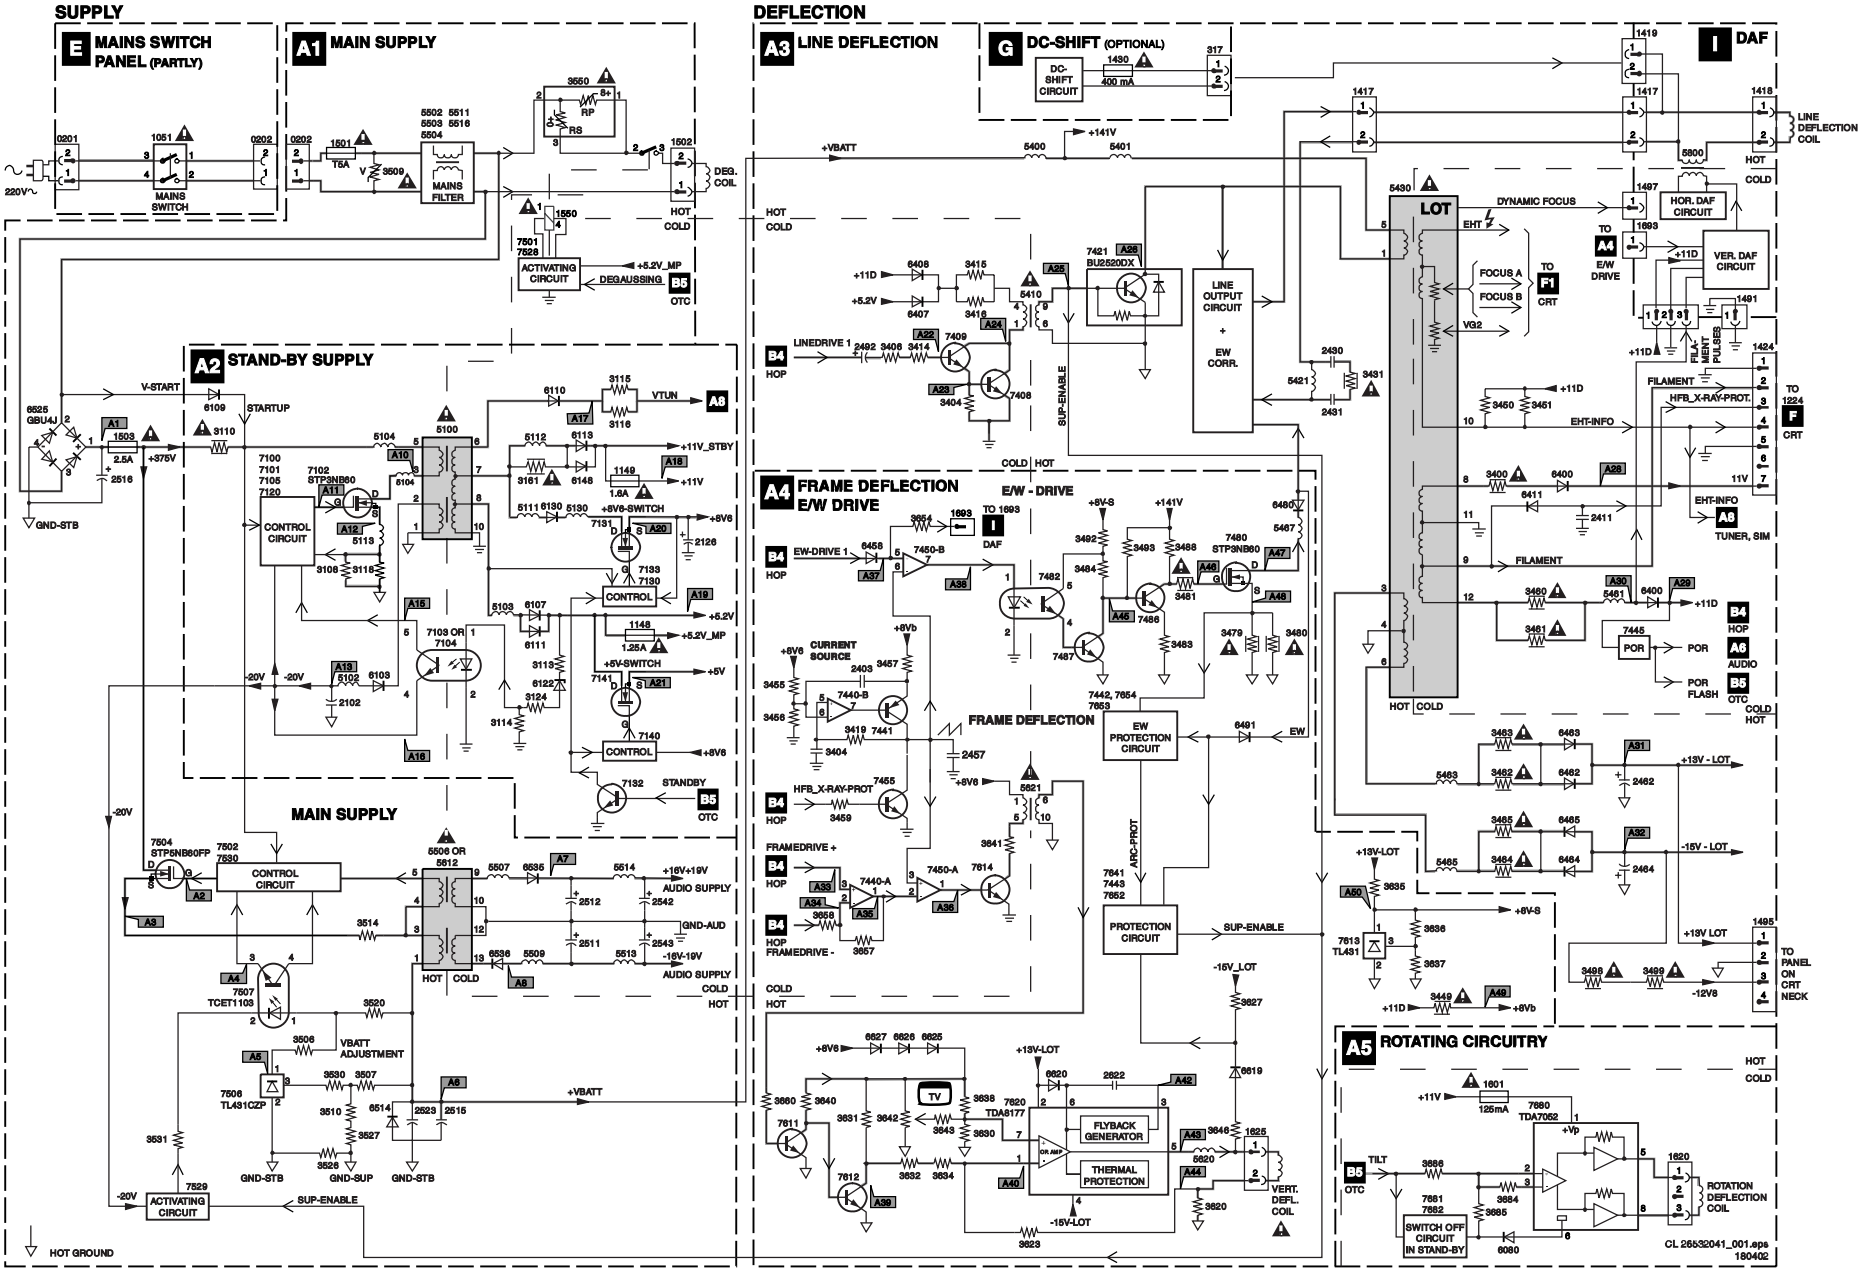

Block Diagram Video

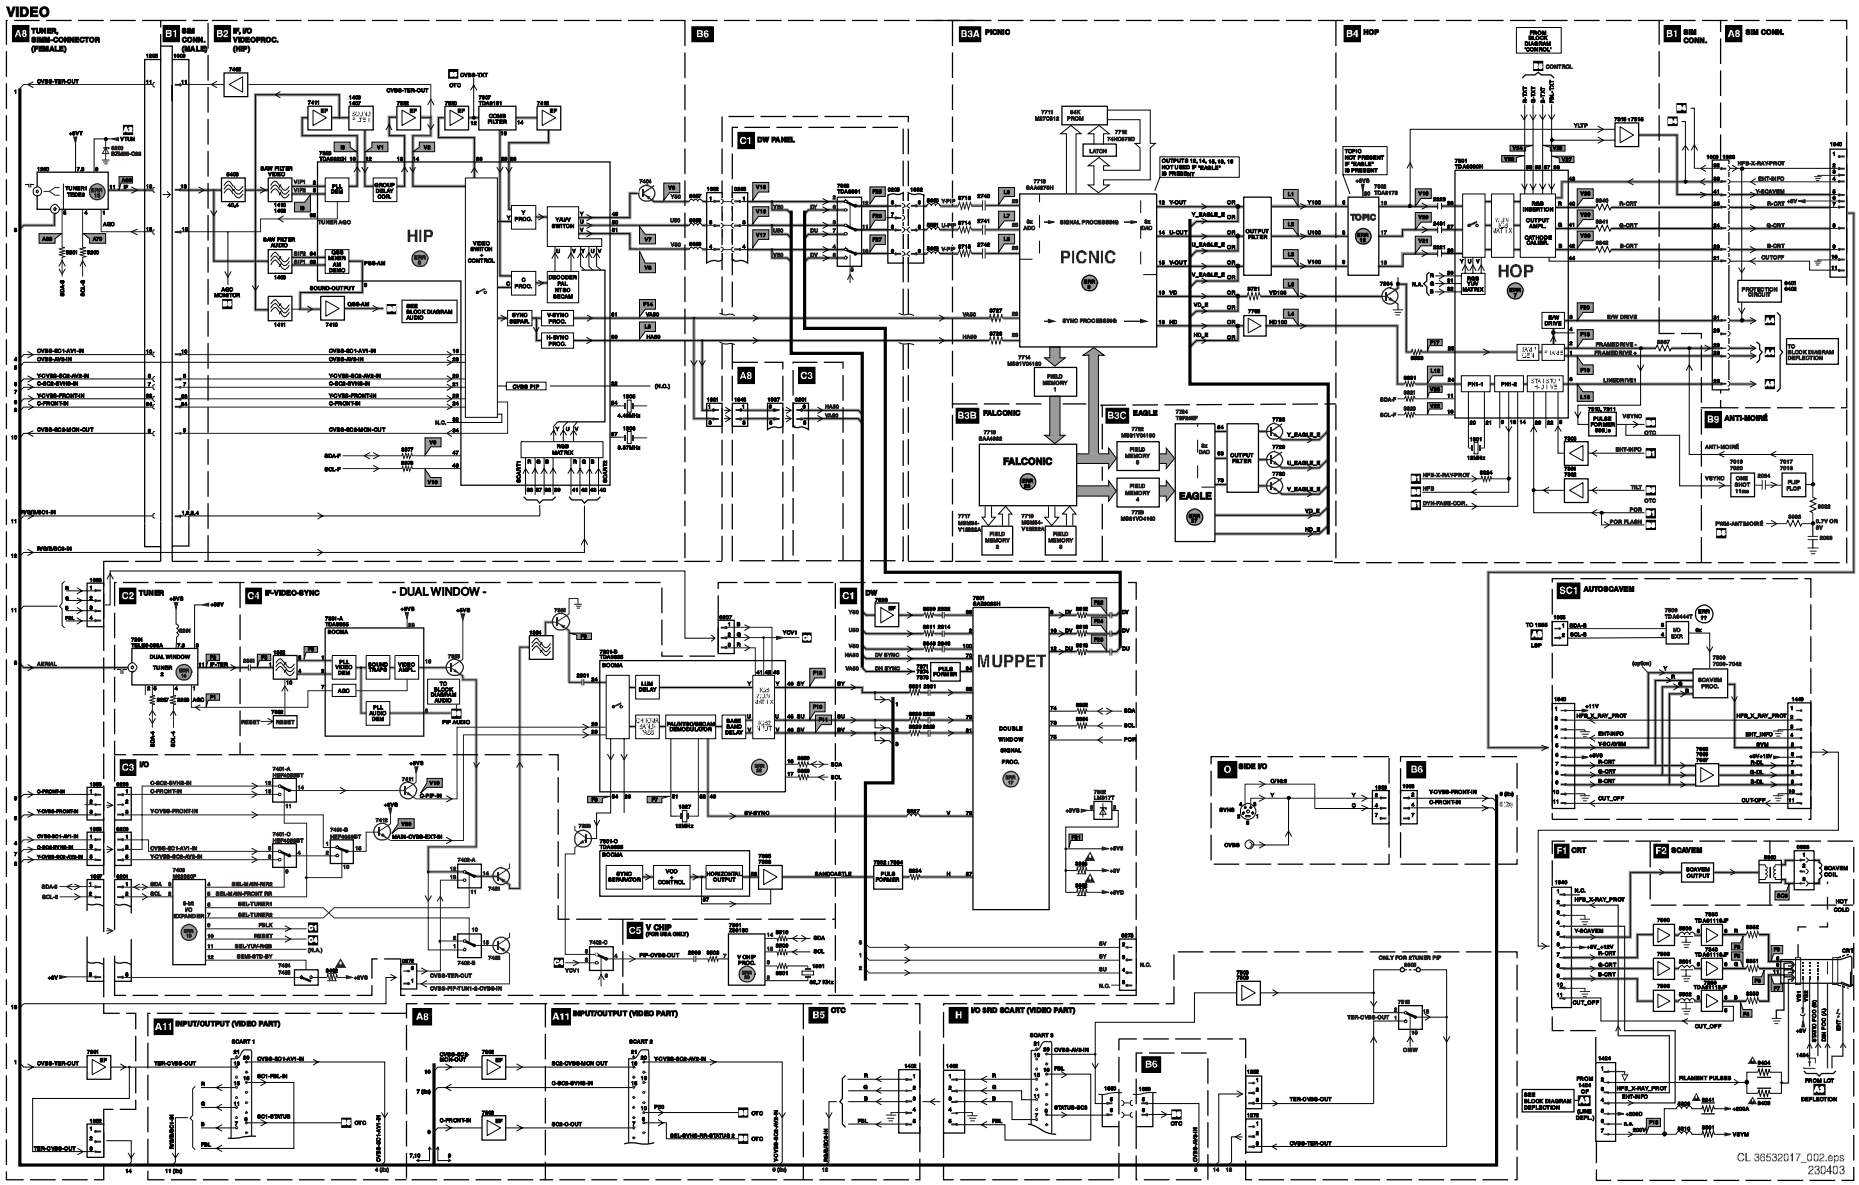

Block Diagram Audio 1 (Exclusive Wireless Audio Details)

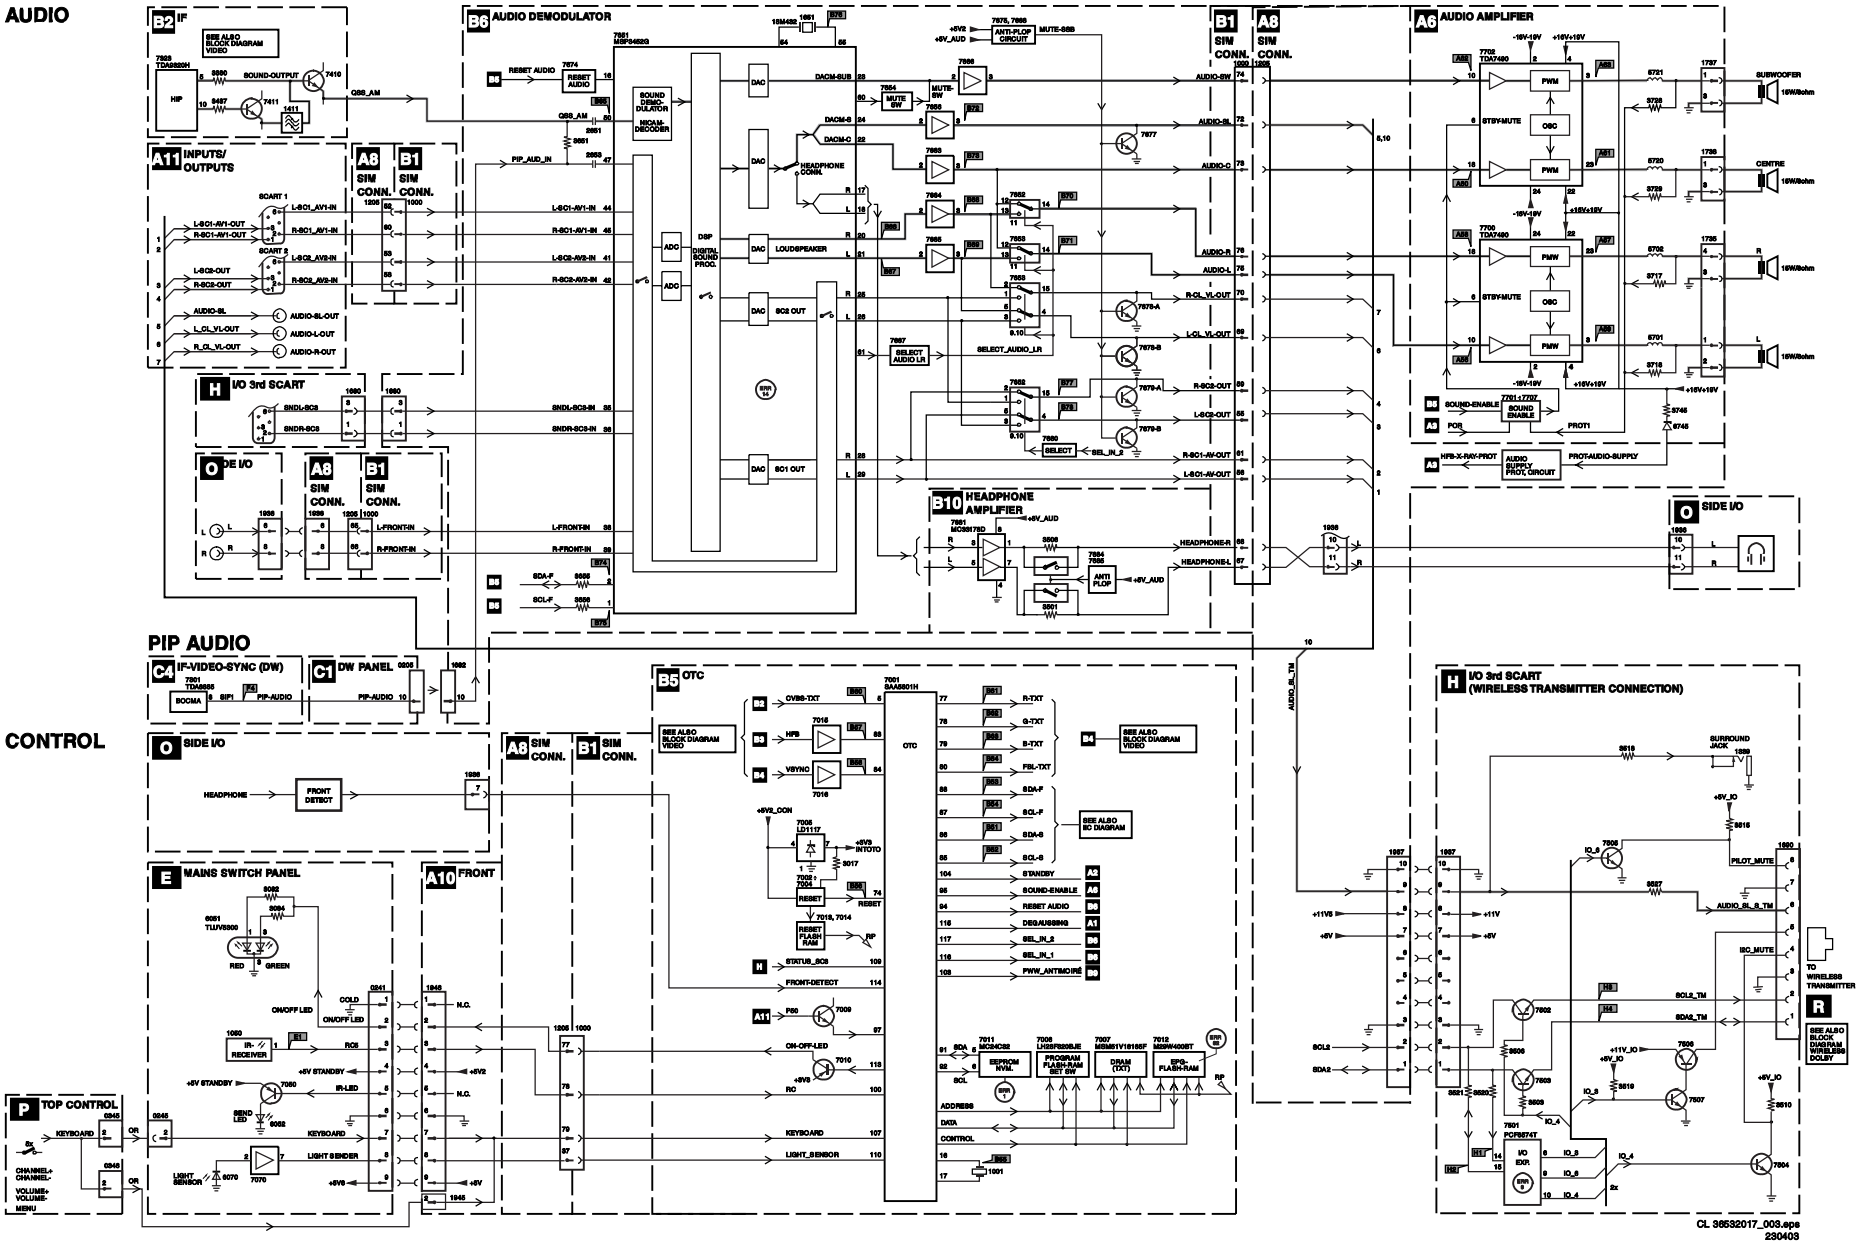

I2C IC's overview

IIC

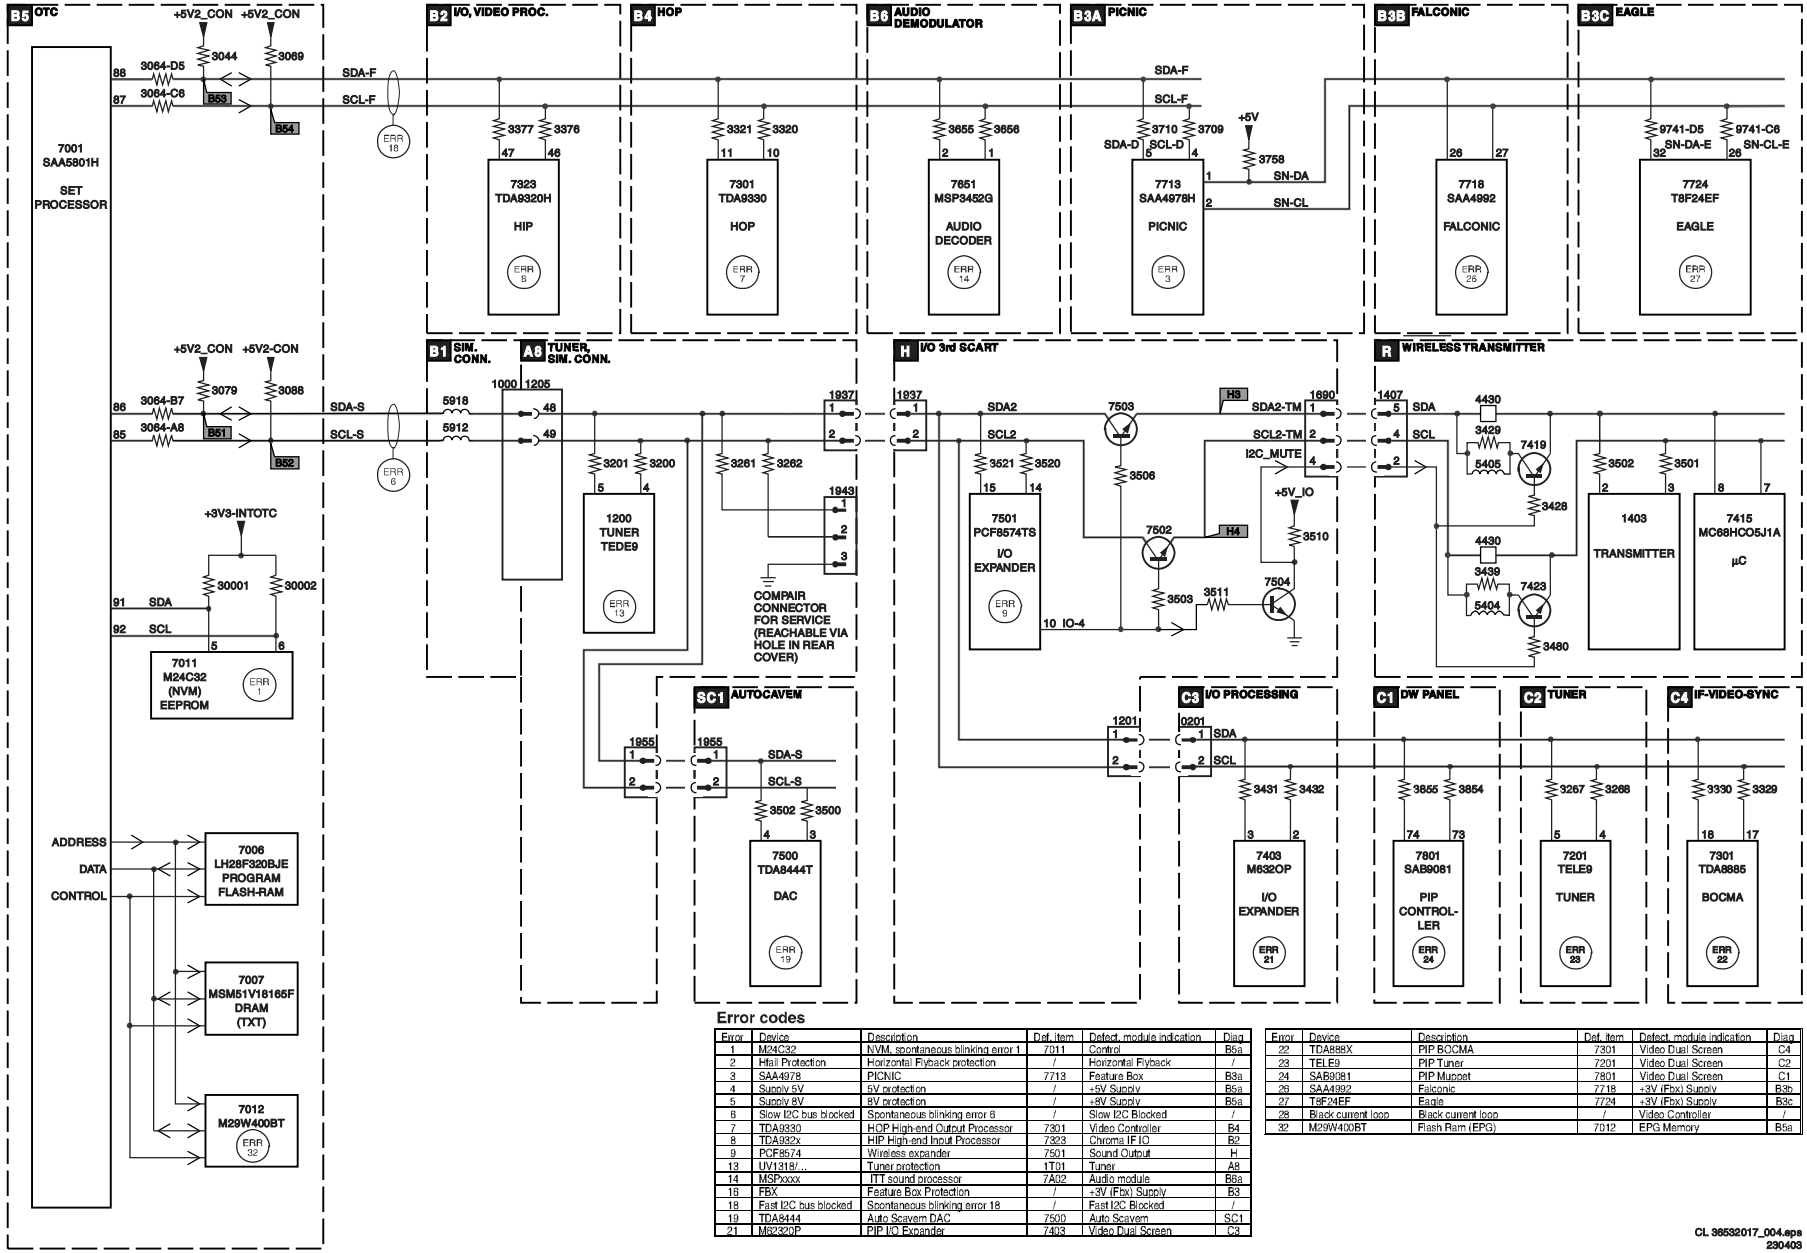

Error codes

Error	Device	Description	Det. item	Detect. module indication	Diag
1	M24C32	NVM, spontaneous blinking error 1	7011	Control	B5a
2	Hfall Protection	Horizontal Flyback protection	/	Horizontal Flyback	/
3	SAA4978	PICNIC	7713	Feature Box	B3a
4	Supply 5V	5V protection	/	+5V Supply	B5a
5	Supply 8V	8V protection	/	+8V Supply	B5a
6	Slow I2C bus blocked	Spontaneous blinking error 6	/	Slow I2C Blocked	/
7	TDA9330	HOP High-end Output Processor	7301	Video Controller	B4
8	TDA932x	HIP High-end Input Processor	7323	Chroma IF IO	B2
9	PCF8574	Wireless expander	7501	Sound Output	H
13	UV1318/...	Tuner protection	1T01	Tuner	A8
14	MSPxxxx	ITT sound processor	7A02	Audio module	B8a
16	FBX	Feature Box Protection	/	+3V (Fbx) Supply	B3
18	Fast I2C bus blocked	Spontaneous blinking error 18	/	Fast I2C Blocked	/
19	TDA8444	Auto Scavem DAC	7500	Auto Scavem	SC1
21	M62320P	PIP I/O Expander	7403	Video Dual Screen	C3

Error	Device	Description	Det. item	Detect. module indication	Diag
22	TDA888X	PIP BOCMA	7301	Video Dual Screen	C4
23	TELE9	PIP Tuner	7201	Video Dual Screen	C2
24	SAB9081	PIP Muppet	7801	Video Dual Screen	C1
26	SAA4992	Falconic	7718	+3V (Fbx) Supply	B3b
27	T8F24EF	Eagle	7724	+3V (Fbx) Supply	B3c
28	Black current loop	Black current loop	/	Video Controller	/
32	M29W400BT	Flash Ram (EPG)	7012	EPG Memory	B5a

CL 36532017_004.eps
230403

Supply Lines Overview

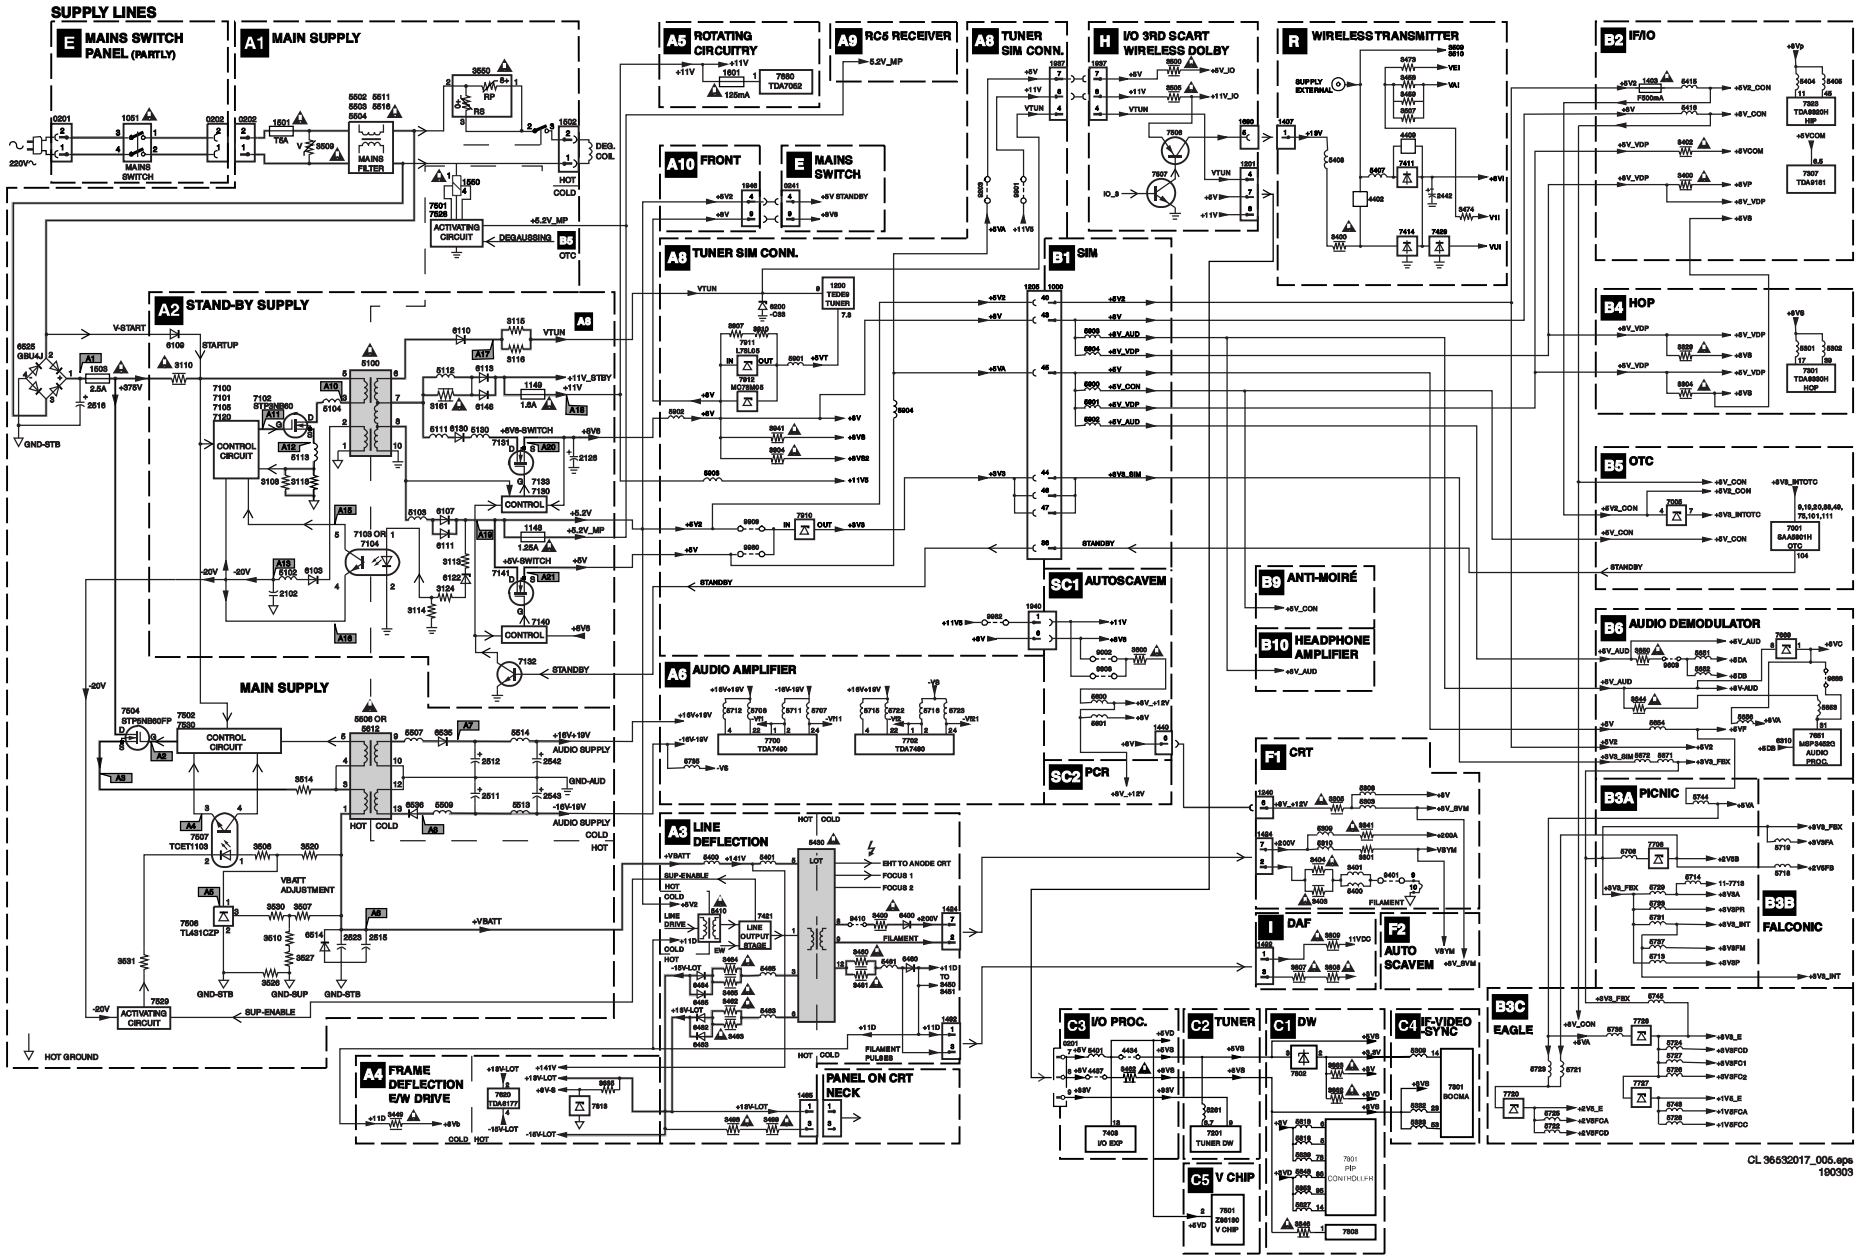

Testpoint Overview LSP and CRT Panel

LSP COPPER TRACK SIDE

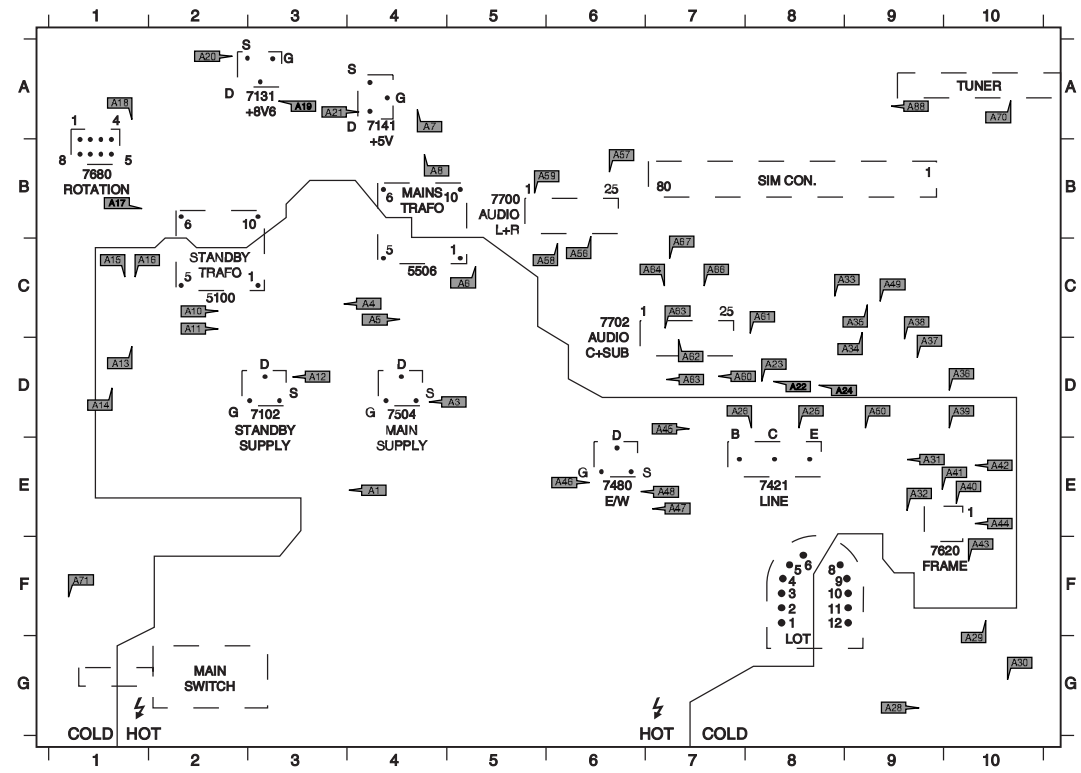

A1	E4	A58	C6
A3	D4	A59	B5
A4	C4	A60	D7
A5	C4	A61	C8
A6	C5	A62	D7
A7	A4	A63	D7
A8	B4	A64	C7
A10	C2	A66	C7
A11	C2	A67	C7
A12	D3	A70	A10
A13	D1	A71	F1
A14	D1	A88	A9
A15	C1		
A16	C1		
A17	B1		
A18	A1		
A19	A3		
A20	A2		
A21	A3		
A22	D8		
A23	D8		
A24	D8		
A25	D8		
A26	D7		
A28	G9		
A29	G10		
A30	G10		
A31	E9		
A32	E9		
A33	C8		
A34	D9		
A35	C9		
A36	D10		
A37	D9		
A38	C9		
A39	D10		
A40	E10		
A41	E10		
A42	E10		
A43	F10		
A44	E10		
A45	D7		
A46	E6		
A47	E7		
A48	E7		
A49	C9		
A50	D9		
A56	C6		
A57	B6		

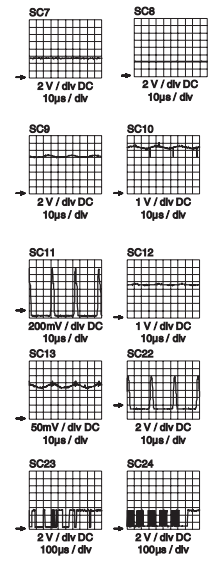

CRT PANEL (COPPER TRACK SIDE)

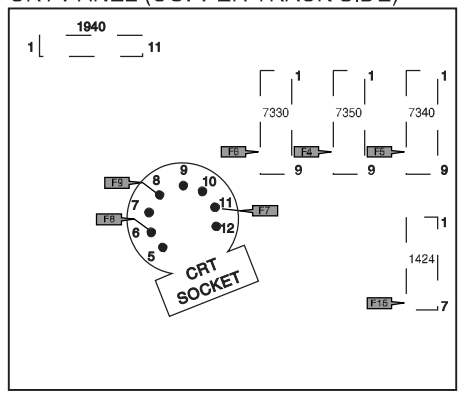

AUTO SCAVEM PANEL (COPPER TRACK SIDE)

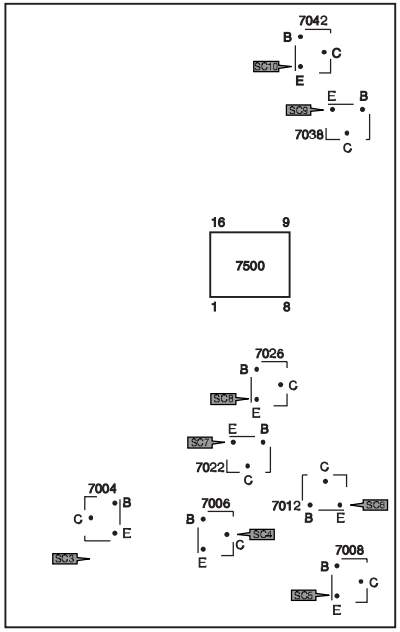

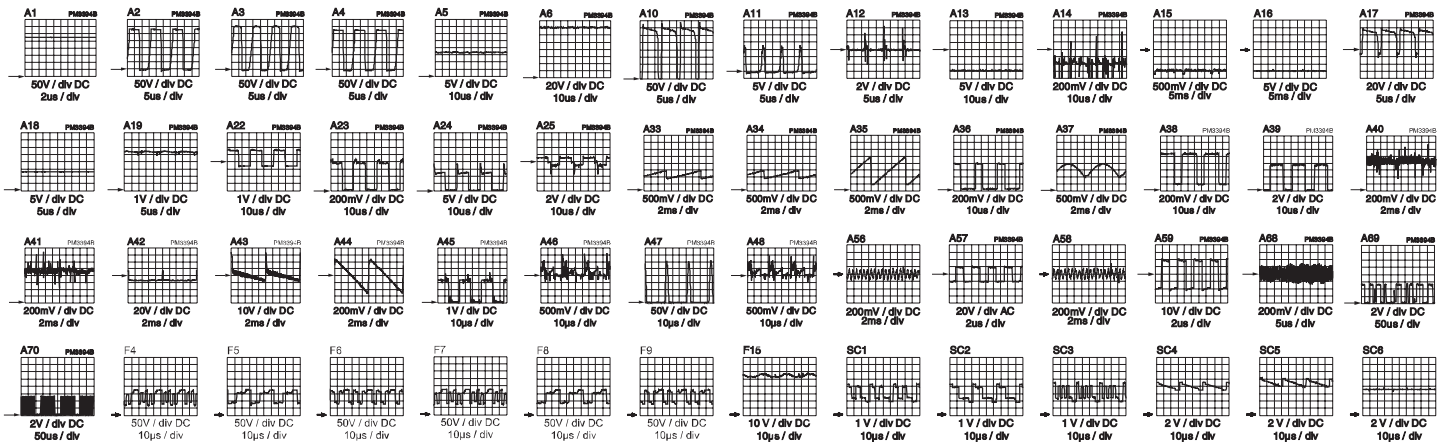

Testpoint Overview Small Signal Board

SSB SIDE A

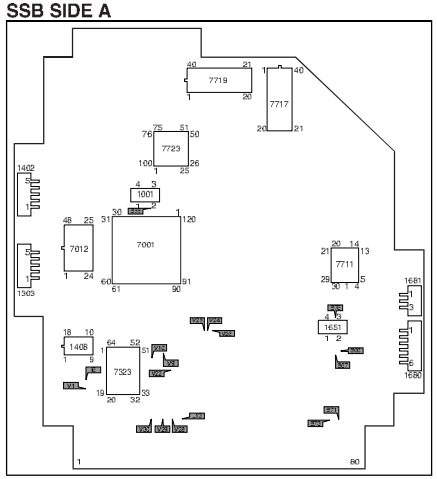

SSB SIDE Z

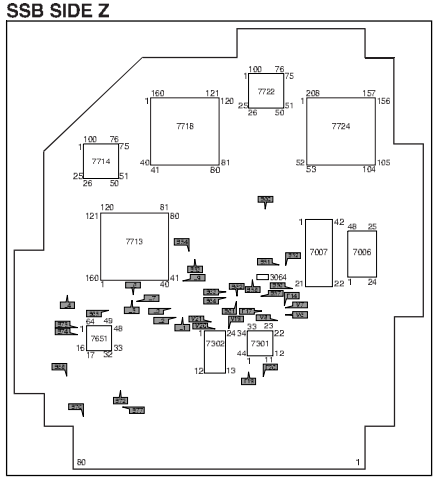

DW PANEL

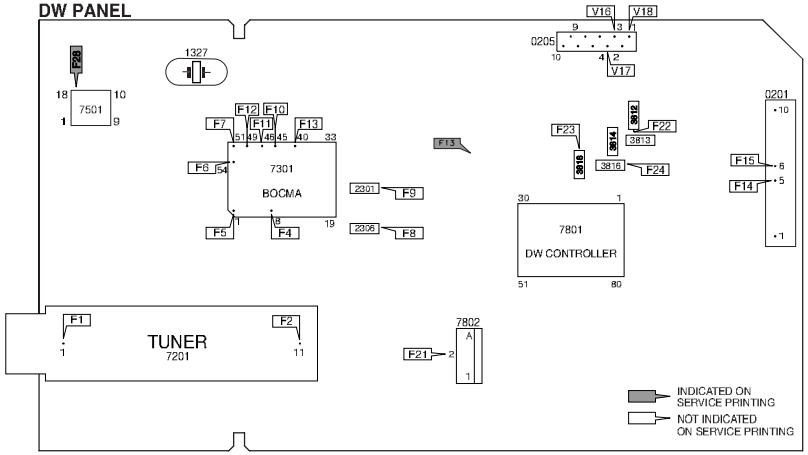

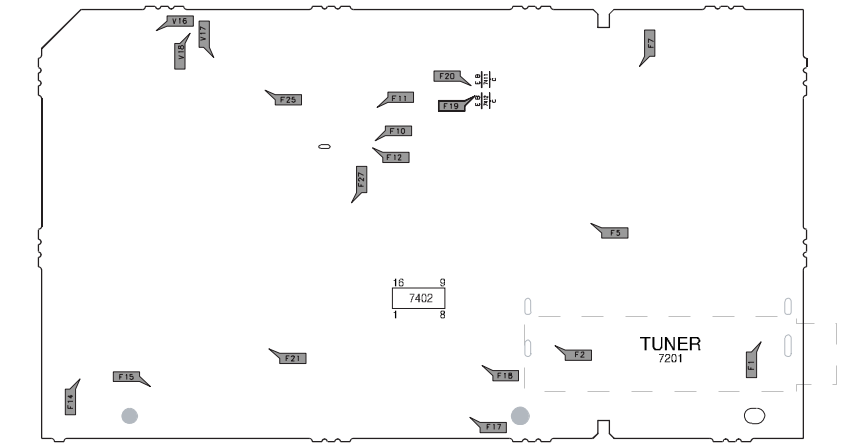

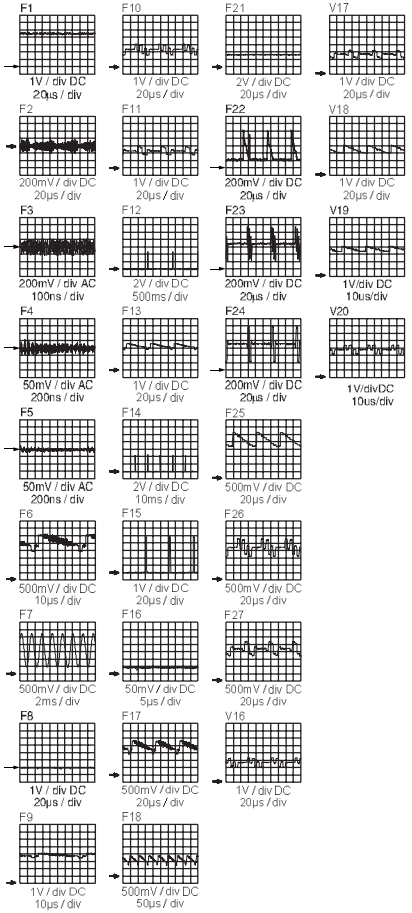
F1 1V / div DC 20µs / div
F10 1V / div DC 20µs / div
F21 2V / div DC 20µs / div
V17 1V / div DC 20µs / div
F2 200mV / div DC 20µs / div
F11 1V / div DC 20µs / div
F22 200mV / div DC 20µs / div
V18 1V / div DC 20µs / div
F3 200mV / div AC 100ns / div
F12 2V / div DC 500ms / div
F23 200mV / div DC 20µs / div
V19 1V/div DC 10us/div
F4 50mV / div AC 200ns / div
F13 1V / div DC 20µs / div
F24 200mV / div DC 20µs / div
V20 1V/divDC 10us/div
F5 50mV / div AC 200ns / div
F14 2V / div DC 10ms / div
F25 500mV / div DC 20µs / div
F6 500mV / div DC 10µs / div
F15 1V / div DC 20µs / div
F26 500mV / div DC 20µs / div
F7 500mV / div DC 2ms / div
F16 50mV / div DC 5µs / div
F27 500mV / div DC 20µs / div
F8 1V / div DC 20µs / div
F17 500mV / div DC 20µs / div
V16 1V / div DC 20µs / div
F9 1V / div DC 10µs / div
F18 500mV / div DC 50µs / div

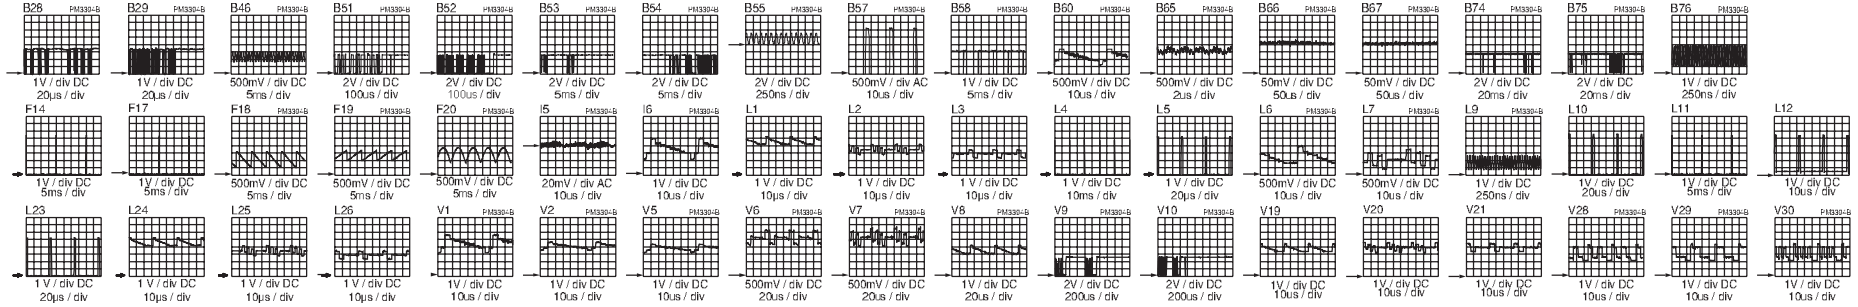
B28 PM330-B 1V / div DC 20µs / div
B29 PM330-B 1V / div DC 20µs / div
B46 PM330-B 500mV / div DC 5ms / div
B51 PM330-B 2V / div DC 100us / div
B52 PM330-B 2V / div DC 100us / div
B53 PM330-B 2V / div DC 5ms / div
B54 PM330-B 2V / div DC 5ms / div
B55 PM330-B 2V / div DC 250ns / div
B57 PM330-B 500mV / div AC 10us / div
B58 PM330-B 1V / div DC 5ms / div
B60 PM330-B 500mV / div DC 10us / div
B65 PM330-B 500mV / div DC 2us / div
B66 PM330-B 50mV / div DC 50us / div
B67 PM330-B 50mV / div DC 50us / div
B74 PM330-B 2V / div DC 20ms / div
B75 PM330-B 2V / div DC 20ms / div
B76 PM330-B 1V / div DC 250ns / div
F14 1V / div DC 5ms / div
F17 1V / div DC 5ms / div
F18 PM330-B 500mV / div DC 5ms / div
F19 PM330-B 500mV / div DC 5ms / div
F20 PM330-B 500mV / div DC 5ms / div
I5 PM330-B 20mV / div AC 10us / div
I6 PM330-B 1V / div DC 10us / div
L1 1 V / div DC 10µs / div
L2 1 V / div DC 10µs / div
L3 1 V / div DC 10µs / div
L4 1 V / div DC 10ms / div
L5 1 V / div DC 20µs / div
L6 500mV / div DC 10us / div
L7 500mV / div DC 10us / div
L9 PM330-B 1V / div DC 250ns / div
L10 1V / div DC 20us / div
L11 1V / div DC 5ms / div
L12 1V / div DC 10us / div
L23 1 V / div DC 20µs / div
L24 1 V / div DC 10µs / div
L25 1 V / div DC 10µs / div
L26 1 V / div DC 10µs / div
V1 PM330-B 1V / div DC 10us / div
V2 PM330-B 1V / div DC 10us / div
V5 PM330-B 1V / div DC 10us / div
V6 PM330-B 500mV / div DC 20us / div
V7 PM330-B 500mV / div DC 20us / div
V8 PM330-B 1V / div DC 20us / div
V9 PM330-B 2V / div DC 200us / div
V10 PM330-B 2V / div DC 200us / div
V19 1V / div DC 10us / div
V20 1V / div DC 10us / div
V21 1V / div DC 10us / div
V28 PM330-B 1V / div DC 10us / div
V29 PM330-B 1V / div DC 10us / div
V30 PM330-B 1V / div DC 10us / div

CL 36532017_007.eps
230403

7. Circuit Diagrams and PWB Layouts

Large Signal Panel: Main Supply

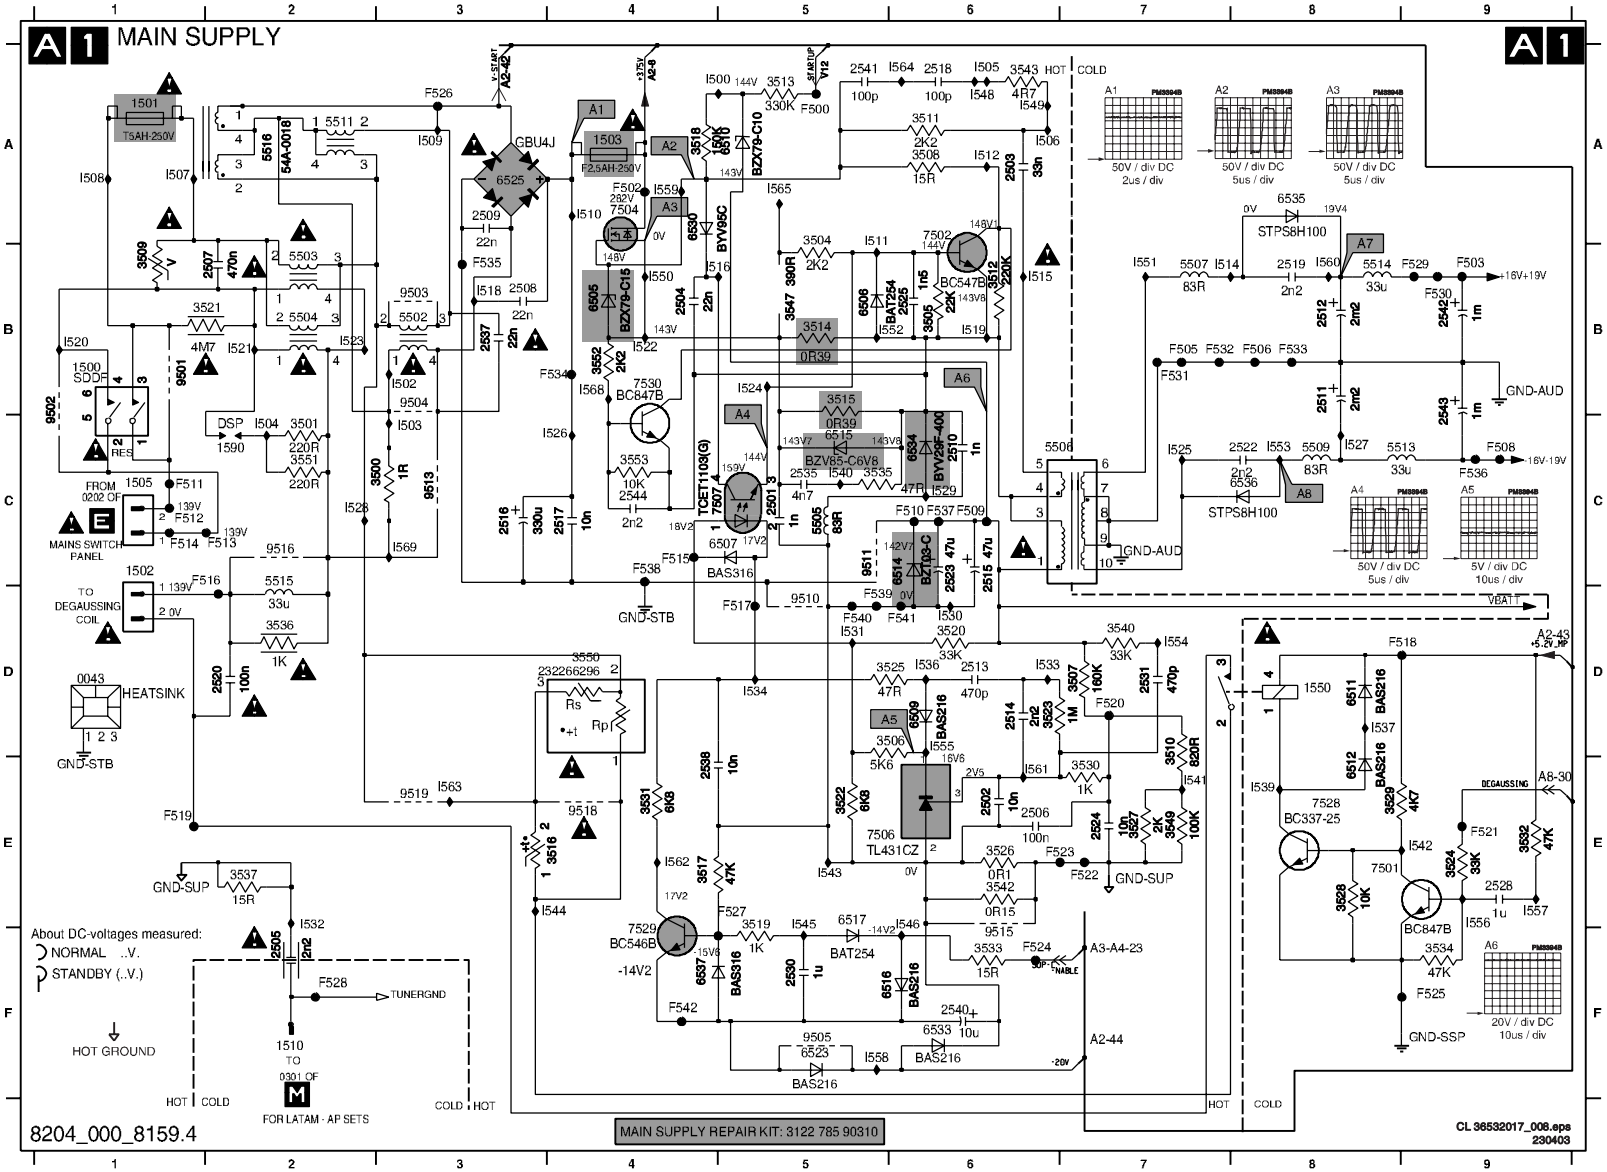

0043 D1	3520 D6	7507 C5	I507 A1
1500 B1	3521 B2	7528 E8	I508 A1
1501 A1	3522 E5	7529 F4	I509 A3
1502 C1	3523 D6	7530 B4	I510 A4
1503 A4	3524 E9	9501 B1	I511 A5
1505 C1	3525 D6	9502 B1	I512 A6
1510 F2	3526 E6	9503 B3	I514 B7
1550 D8	3527 E7	9504 B3	I515 B6
1590 C2	3528 E8	9505 F5	I516 B5
2501 C5	3529 E8	9510 D5	I518 B3
2502 E6	3530 E7	9511 C5	I519 B6
2503 A6	3531 E4	9513 C3	I520 B1
2504 B4	3532 E9	9515 F6	I521 B2
2505 F2	3533 F6	9516 C2	I522 B4
2506 E6	3534 F9	9518 E4	I523 B2
2507 B2	3535 C5	9519 E3	I524 B5
2508 B3	3536 D2	F500 A5	I525 C7
2509 A3	3537 E2	F502 A4	I526 C4
2510 C6	3540 D7	F503 B9	I527 C8
2511 B8	3542 E6	F505 B7	I528 C2
2512 B8	3543 A6	F506 B8	I529 C6
2513 D6	3547 B5	F508 C9	I530 D6
2514 D6	3549 E7	F509 C6	I531 D5
2515 C6	3550 D4	F510 C6	I532 E2
2516 C3	3551 C2	F511 C1	I533 D6
2517 C4	3552 B4	F512 C1	I534 D5
2518 A6	3553 C4	F513 C2	I536 D6
2519 B8	5502 B3	F514 C1	I537 D8
2520 D2	5503 B2	F515 C4	I539 E8
2522 C8	5504 B2	F516 C2	I540 C5
2523 C6	5505 C5	F517 D5	I541 E7
2524 E7	5506 C6	F518 D9	I542 E9
2525 B6	5507 B7	F519 E1	I543 E5
2528 E9	5509 C8	F520 D7	I544 E4
2530 F5	5511 A2	F521 E9	I545 E5
2531 D7	5513 C9	F522 E7	I546 E6
2535 C5	5514 B8	F523 E7	I548 A6
2537 B3	5515 C2	F524 F6	I549 A6
2538 E4	5516 A2	F525 F9	I550 B4
2540 F6	6505 B4	F526 A3	I551 B7
2541 A5	6506 B5	F527 E5	I552 B6
2542 B9	6507 C5	F528 F2	I553 C8
2543 B9	6509 D6	F529 B9	I554 D7
2544 C4	6510 A5	F530 B9	I555 D6
3500 C3	6511 D8	F531 B7	I556 E9
3501 C2	6512 E8	F532 B7	I557 E9
3504 B5	6514 C6	F533 B8	I558 F5
3505 B6	6515 C5	F534 B4	I559 A4
3506 D6	6516 F6	F535 B3	I560 B8
3507 D7	6517 E5	F536 C9	I561 E6
3508 A6	6523 F5	F537 C6	I562 E4
3509 B1	6525 A3	F538 C4	I563 E3
3510 D7	6530 A4	F539 D5	I564 A6
3511 A6	6533 F6	F540 D5	I565 A5
3512 B6	6534 C6	F541 D6	I568 B4
3513 A5	6535 A8	F542 F4	I569 C3
3514 B5	6536 C8	I500 A5	
3515 B5	6537 F4	I502 B3	
3516 E4	7501 E8	I503 C3	
3517 E4	7502 A6	I504 C2	
3518 A4	7504 A4	I505 A6	
3519 F5	7506 E5	I506 A6	

Large Signal Panel: Stand-by Supply

1146 E10	2109 E7	2123 D4	2149 E7	3108 C4	3122 B2	3136 B8	3150 C3	3164 A8	5105 B6	6107 C6	6119 C7	6148 B6	7133 B9	F100 A1	F113 E1	F900 A4	I108 B1	I120 C4	I132 D7	I144 E7	I157 D9	I170 E4	I188 A7
1148 C10	2110 D2	2124 E3	2150 B9	3109 D8	3123 D6	3137 B7	3151 B9	3165 B10	5106 B5	6108 D2	6120 D6	6149 B10	7140 D9	F101 B7	F114 E8	F901 A4	I109 B2	I121 D6	I133 D7	I145 E1	I158 E8	I171 E9	I189 A7
1149 B7	2111 D1	2126 A10	2152 A4	3110 B3	3124 E6	3140 A9	3152 D2	3166 D8	5111 A7	6109 B2	6121 E6	7100 E1	7141 D10	F103 C9	F115 E8	F902 A4	I110 B4	I122 C3	I134 B7	I146 E2	I160 A1	I172 A7	I191 C8
2100 D5	2112 D3	2130 C9	2153 E4	3111 C1	3125 D1	3141 E8	3153 B9	3167 D8	5112 B6	6110 A5	6122 E7	7101 C3	9102 C8	F104 C8	F116 E10	F903 A4	I111 C1	I123 C2	I135 D7	I147 E5	I161 A2	I173 A7	I192 C8
2101 C2	2114 B3	2131 A8	2154 A8	3113 D7	3126 E2	3142 E8	3155 D9	3168 A9	5113 C4	6111 C6	6130 A7	7102 B3	9103 E5	F105 C9	F117 E10	I100 A5	I112 C2	I124 C4	I136 D1	I148 B3	I162 A2	I176 C9	I193 D9
2102 D1	2115 C8	2140 E8	3101 C2	3114 E6	3127 E2	3143 E9	3156 A10	3170 A6	5130 A8	6112 A9	6132 B10	7103 E6	9106 E5	F106 D6	F118 E10	I101 A6	I113 C6	I125 C4	I137 D1	I149 B3	I163 A3	I180 B8	I194 A8
2103 C1	2116 A5	2141 B8	3102 D2	3115 A6	3130 A8	3144 A7	3157 C9	3171 A6	6101 E3	6113 B6	6133 A7	7104 E5	9107 B7	F107 E9	F120 D10	I102 B3	I114 C7	I126 D1	I138 C7	I150 C7	I164 B2	I181 B9	I195 C2
2104 C6	2118 C6	2143 B6	3103 C2	3116 A6	3131 B8	3145 E3	3158 B10	3998 A4	6102 A2	6114 E2	6134 A7	7105 D3	9108 C7	F108 E9	F121 A9	I103 B5	I115 C3	I127 D1	I139 E2	I151 C7	I165 C1	I182 B9	I196 D3
2105 C1	2119 C7	2144 D3	3104 C2	3117 C2	3132 B8	3146 E4	3159 D8	5100 B5	6103 B1	6115 C3	6141 D9	7120 A2	9110 B3	F109 E9	F123 A9	I104 B6	I116 C6	I128 B6	I140 E2	I152 B8	I166 C3	I184 E7	I197 D3
2106 B10	2120 A7	2145 C2	3105 C2	3118 C4	3133 C10	3147 E3	3160 D3	5102 C1	6104 B2	6116 D4	6142 D3	7130 B9	9112 B6	F110 E9	F124 D10	I105 B5	I117 C7	I129 D2	I141 E2	I153 B8	I167 D3	I185 B8	I198 E3
2107 C6	2121 A1	2147 D9	3106 D1	3120 C1	3134 C10	3148 D3	3161 B6	5103 C6	6105 C3	6117 B7	6144 D2	7131 A8	9122 B7	F111 D8	F126 C10	I106 B3	I118 C1	I130 D2	I142 E7	I154 A9	I168 D4	I186 A10	
2108 B4	2122 A1	2148 A6	3107 E1	3121 A2	3135 B9	3149 D4	3162 A7	5104 B4	6106 E2	6118 C7	6147 C4	7132 C9	9126 C10	F112 D1	F143 E6	I107 B6	I119 C4	I131 D6	I143 A8	I155 A8	I169 D4	I187 A9	

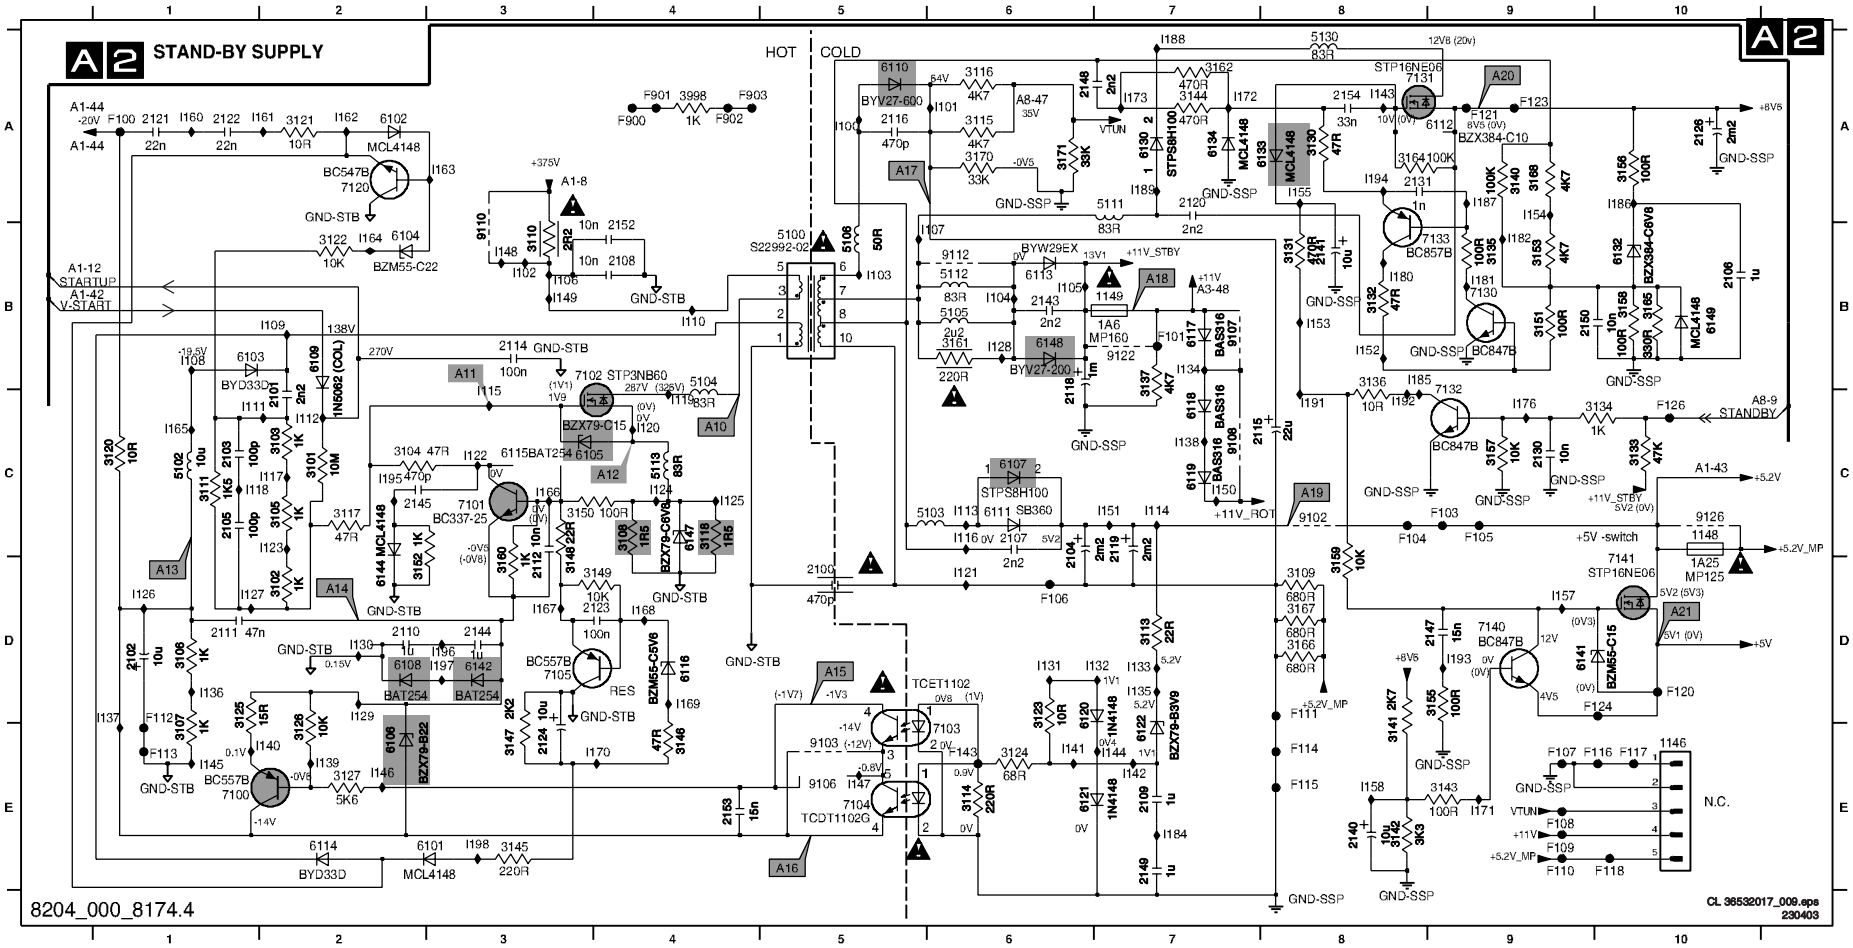

About DC-voltages measured:
- NORMAL ..V.
- STANDBY (..V.)

STANDBY SUPPLY REPAIR KIT: 3122 785 90460


A10 50V / div DC 5us / div
A11 5V / div DC 5us / div
A12 2V / div DC 5us / div
A13 5V / div DC 10us / div
A14 200mV / div DC 10us / div
A15 500mV / div DC 5ms / div
A16 5V / div DC 5ms / div
A17 20V / div DC 5us / div
A18 5V / div DC 5us / div
A19 1V / div DC 5us / div

Large Signal Panel: Line Deflection



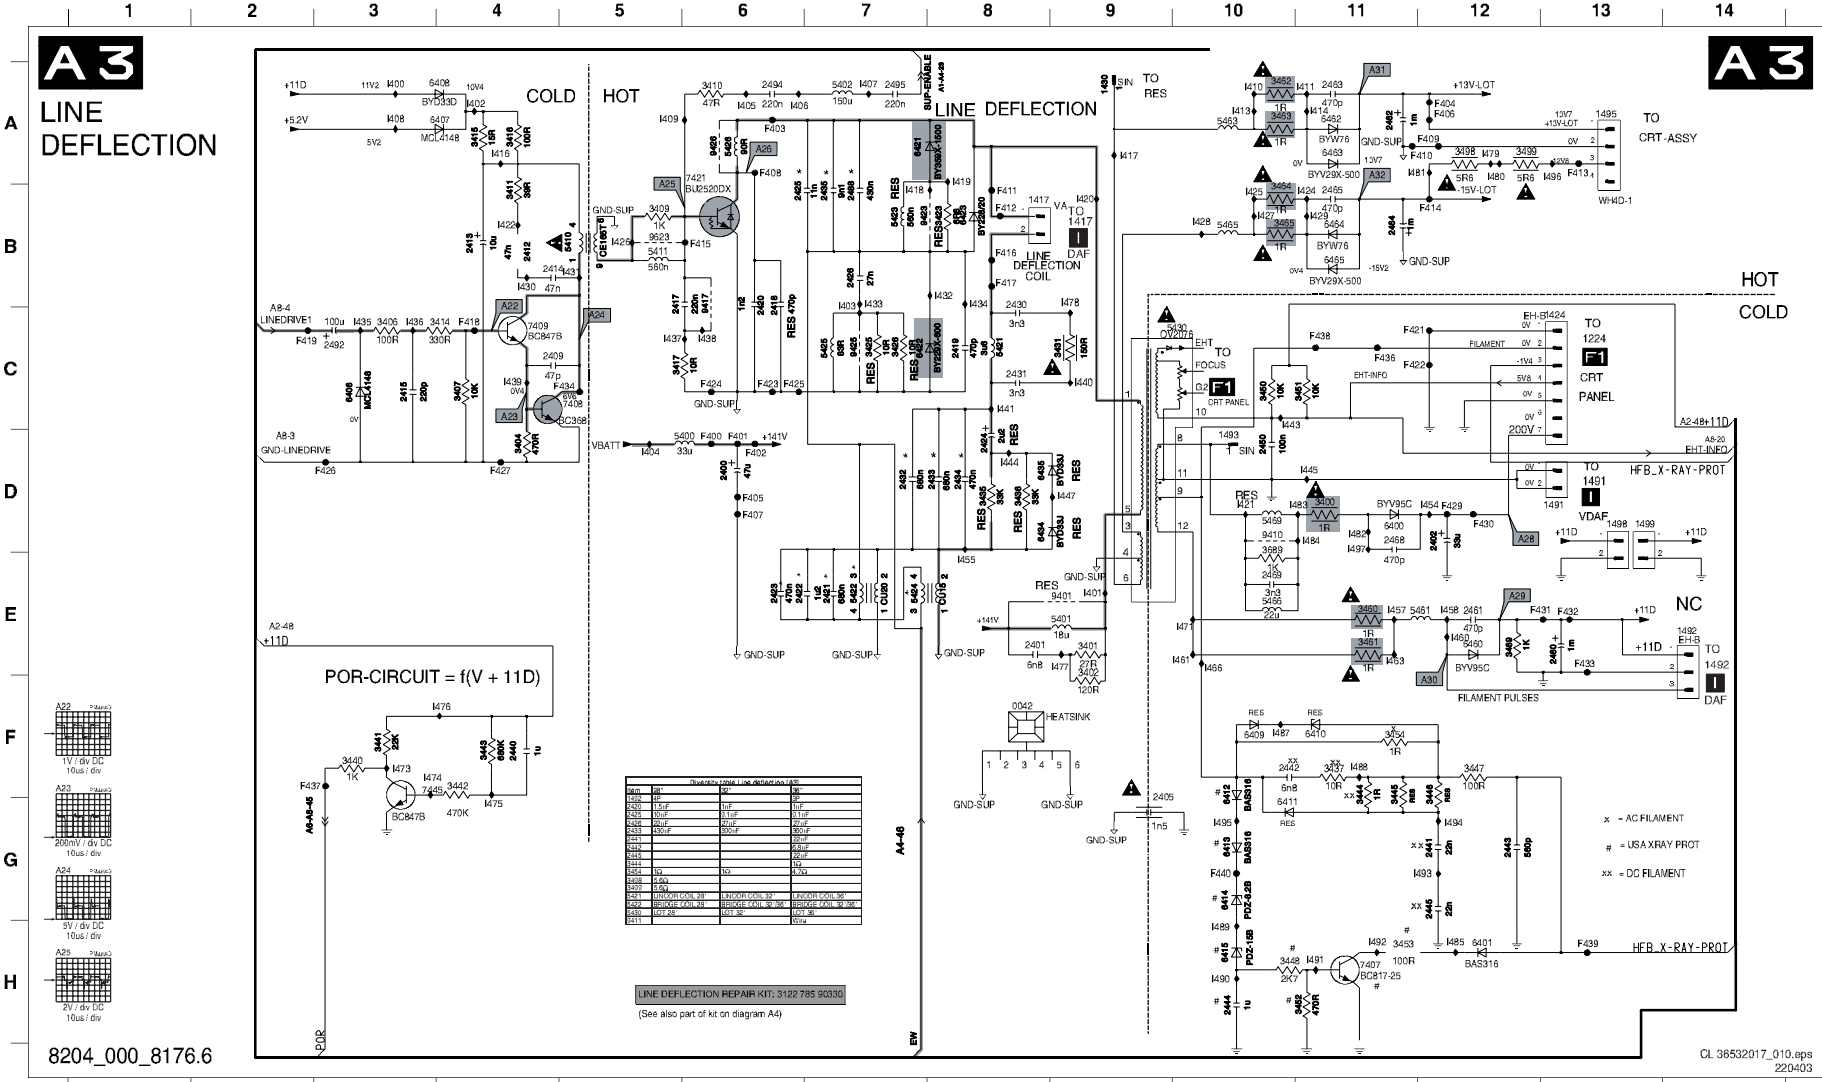

Large Signal Panel: Frame Deflection E/W Drive

2400 F9	2404 D2	2629 A9	3419 D9	3490 E5	3627 C12	3422 D9	3664 C2	3611 B3	6627 A6	7612 D6	6461 F9	F624 F11	7483 E5	I619 A9	F613 C2	I607 F8	I672 A7	I673 A6	I649 D4
2401 F9	2448 B12	2629 C12	3472 E12	3491 F12	3628 A7	3449 F2	7664 E12	3620 D11	6628 C13	7613 A9	6462 F8	F625 F12	7486 F9	I620 B11	I636 C10	I606 B8	I625 B9	I674 B9	I650 E3
2631 B9	3478 P11	2630 B9	3474 E13	3492 E8	6619 C11	3465 C2	9405 F4	3621 D11	7440-A B3	7614 C5	6463 P10	F626 G3	7487 F8	I621 B4	I637 C11	I609 A11	I626 B11	I675 D3	I651 E5
2451 F2	3482 F9	3629 C12	3475 P11	2498 P14	3630 B8	3466 D2	9481 F6	3622 D11	7440-B D3	I615 A11	6491 E13	F627 P11	I611 A12	I622 B13	I638 F4	I610 A9	I627 C6	I676 B12	I652 E12
2454 F3	3483 F9	2633 D7	3476 E12	2499 E13	3631 B7	3467 C4	9482 F7	3623 D10	3643 B6	7641 A12	6493 P12	F628 E2	I612 A13	I623 A7	I639 C10	I654 E5	I628 C3	I677 C12	I653 E10
2457 E4	3484 E8	2635 A9	3661 C12	2603 C6	3632 C7	3468 E3	3624 C11	3644 A12	7652 B13	6494 P12	F629 C7	I613 A10	I624 B9	I698 G2	I655 E10	I629 B6	I678 D2
2458 E2	3485 F7	2642 B11	3479 P10	2604 C9	6623 A11	3469 E2	6621 A5	6615 E5	3645 A11	7653 P13	6499 P14	7441 D3	I614 F4	F603 A11	I641 B7	I656 E9	I630 D13	I679 E2
2466 D12	3486 E3	2633 B7	3480 P11	2605 C6	6624 C12	3486 E12	6405 A12	6616 C5	3646 C12	9483 E7	6614 C5	7442 D13	I668 F8	F604 A11	I642 C9	I657 F7	I631 C6	I699 P10
2653 D10	2482 Q10	2634 C9	3481 P10	2620 C9	3637 A9	3467 A12	6442 B12	6617 B6	3647 C12	9499 P13	F614 E3	7443 A13	I616 B12	F605 B3	I643 D4	I658 P13	I632 C11	I680 P4
2656 B2	2487 A13	2635 A9	3665 B12	2621 D10	3638 B6	3657 C9	6455 E3	6618 A6	3648 D11	9620 B10	F615 P12	7450-A	I617 B13	F606 B12	I600 A9	I660 P10	I633 C11	I692 P11
2657 B3	2490 E8	2636 A9	3688 G10	2622 A10	3639 C6	3658 C2	6456 F3	F618 D11	3652 A12	9622 B11	F616 D10	B4	I618 A9	F607 B2	I601 A11	I661 P10	I634 C12	I693 B5
2659 C2	2491 P12	2661 C8	3690 C7	2623 C3	3640 A7	3659 C2	3469 E9	6620 A10	3653 C11	F601 F2	F617 D11	7450-B	I662 F9	F608 B11	I602 B5	I667 P13	I635 C12	I644 D2
2660 P11	2493 Q4	2662 C3	5467 P10	2624 C11	3641 C6	3660 B6	3495 P13	6621 A10	3654 F4	F602 A9	I640 C12	F5	I663 P10	F609 B13	I603 E8	I668 P10	I894 A6	I645 D3
1627 C13	2497 E12	3403 A13	3487 F3	2625 C10	3642 B6	7620 B10	3496 F8	6622 B10	3655 B2	6457 F2	F621 E13	7455 D3	I664 C11	F610 C2	I604 F2	I669 A12	I895 A6	I646 D5
1693 F4	1625 B13	3412 D5	3488 E9	2626 C12	3420 C3	3662 B6	3497 D13	6625 A7	3656 B2	6458 G3	F622 E13	7460 P10	I665 F9	F611 C13	I605 D3	I670 D12	I896 F3	I647 C6
2403 D3	2627 C11	3418 E9	3489 P10	2626 C12	3421 D2	3663 C13	3610 B5	6626 A7	7611 A7	6460 E10	F623 F2	7462 F6	I666 F7	F612 C13	I606 A13	I671 E12	I897 F3	I648 A7

Diversity table Frame deflection [A4]			
Item	28°	32°	36°
1693			1P
2493			3.3nF
3490		8.8Ω	
3498	1MΩ	680kΩ	1MΩ
3621	1Ω	1.5Ω	1Ω
3622	1.5Ω	1.8Ω	1Ω
3625	120Ω	220Ω	56Ω
3626	100Ω	220Ω	56Ω
3654			4.7kΩ
3661		470Ω	120Ω
6499	BZX384-C10	PDZ9.1B	BZX384-C10
6624		BAS516	BAS516

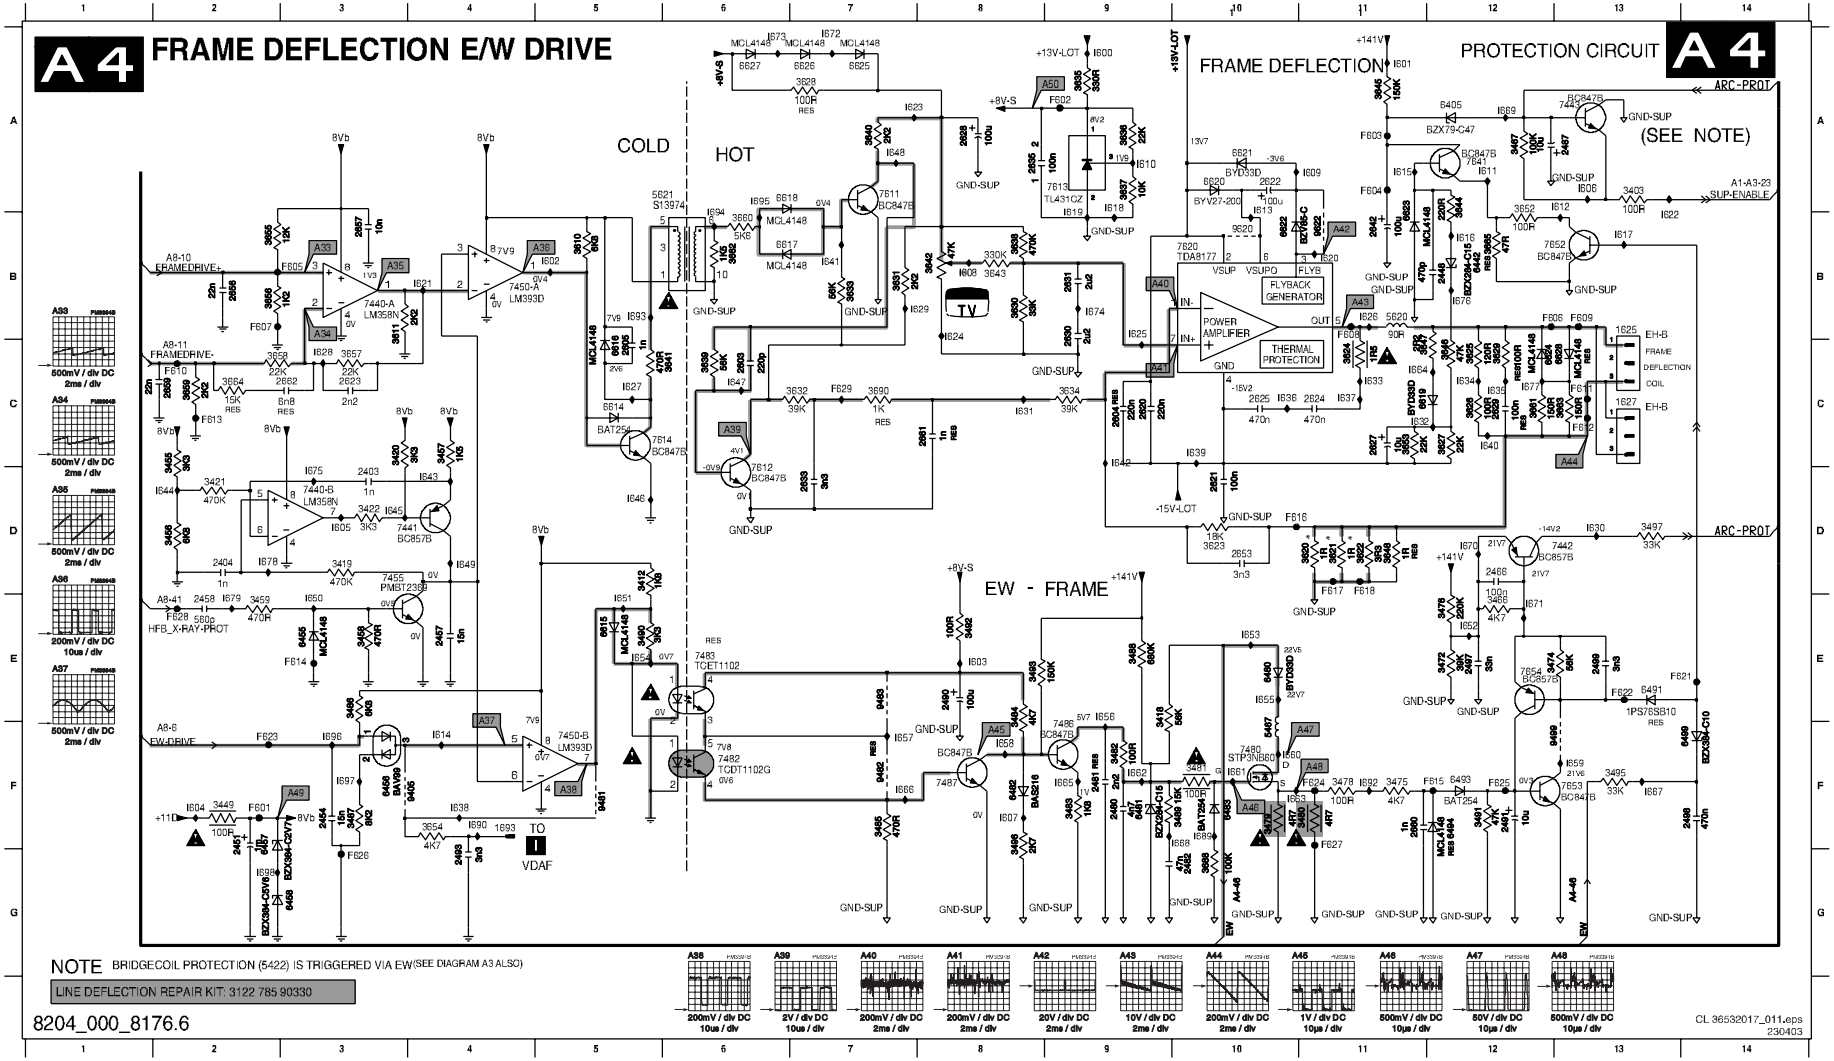

NOTE BRIDGECOIL PROTECTION (5422) IS TRIGGERED VIA EW(SEE DIAGRAM A3 ALSO)

LINE DEFLECTION REPAIR KIT: 3122 785 90330

8204_000_8176.6

CL 36532017_011.eps 230403

Large Signal Panel: Rotation Circuitry

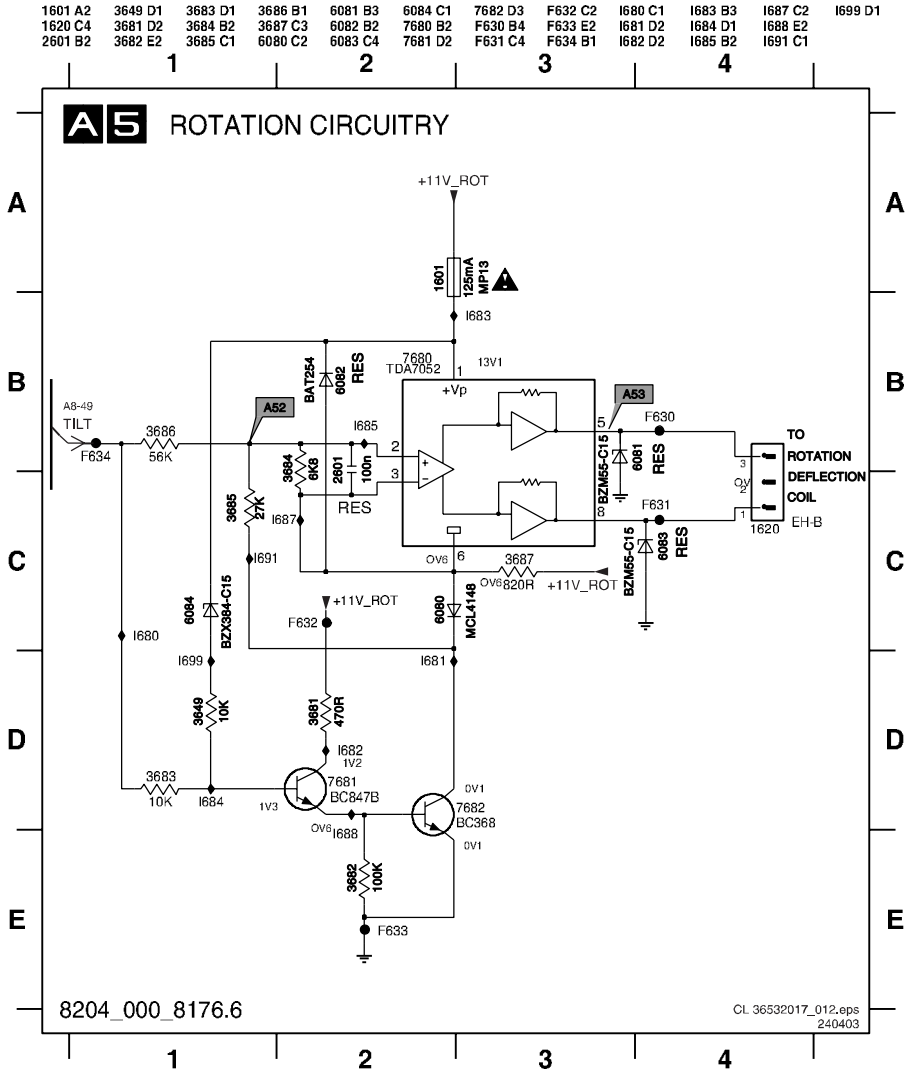

Personal Notes:

Large Signal Panel: Audio Amplifier

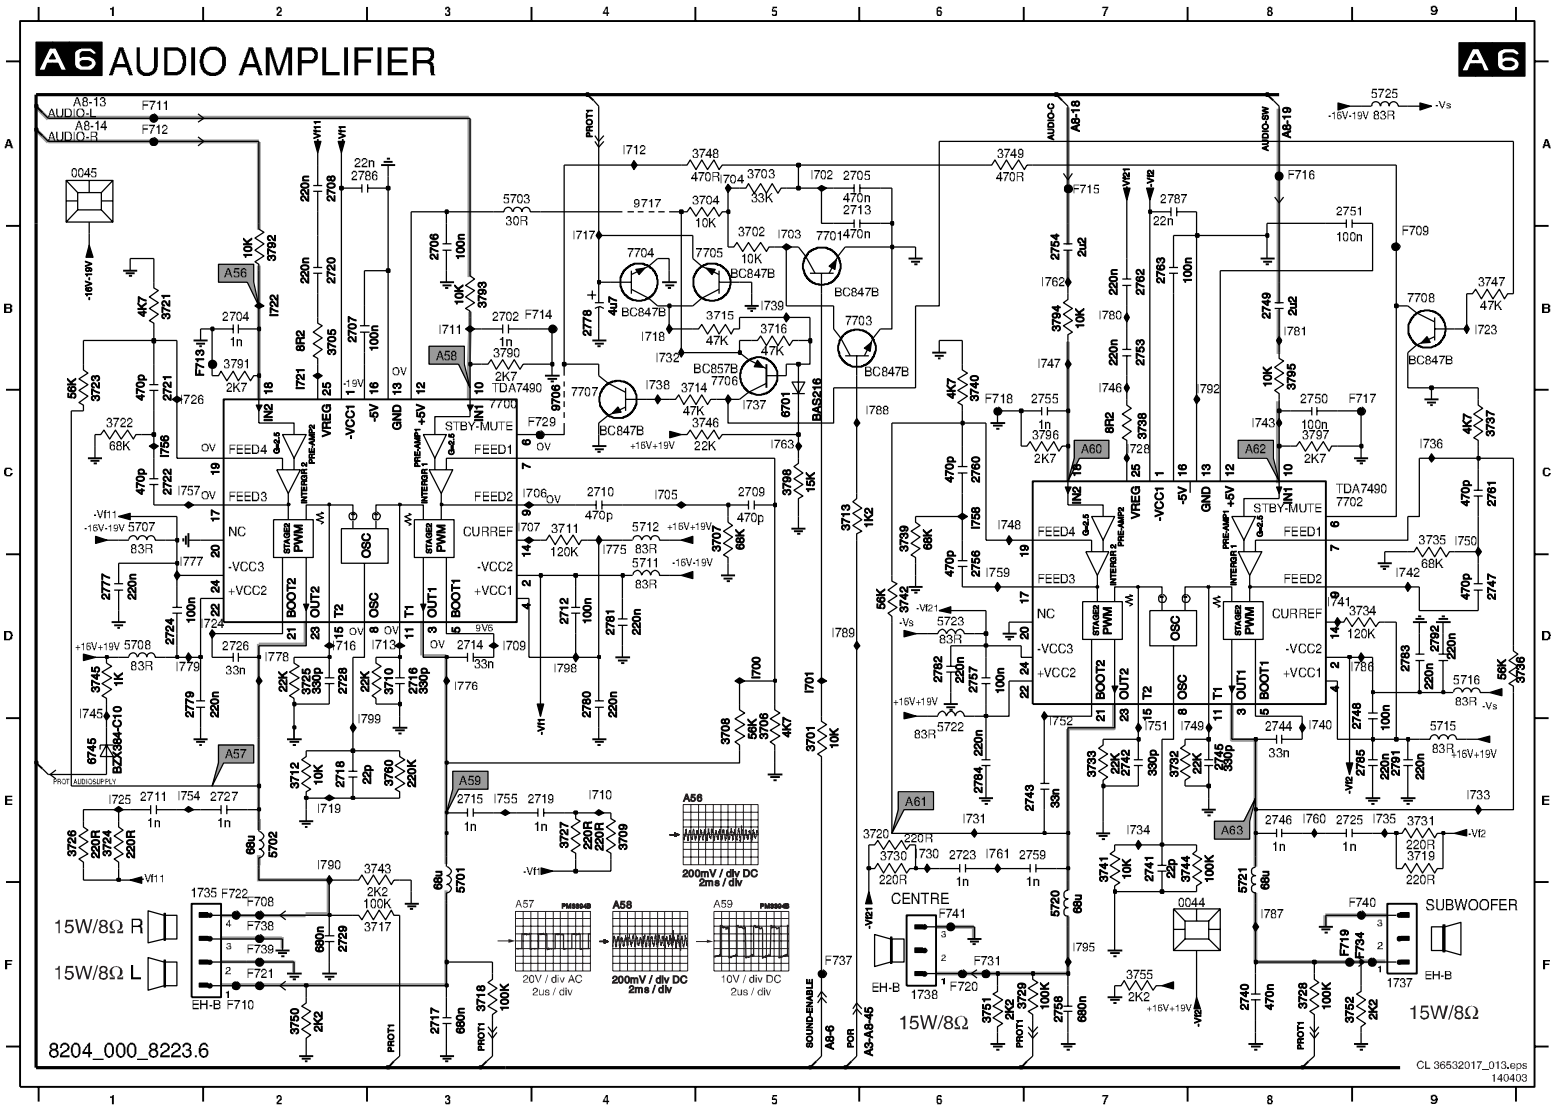

0044 F7	2783 D9	3790 B3	I702 A5	I786 D9
0045 A1	2784 E6	3791 B2	I703 B5	I787 F8
1735 F2	2785 E9	3792 B2	I704 A5	I788 C6
1737 F9	2786 A2	3793 B3	I705 C4	I789 D5
1738 F6	2787 A7	3794 B7	I706 C4	I790 E2
2702 B3	2791 E9	3795 B8	I707 C3	I792 B8
2704 B2	2792 D9	3796 C7	I709 D3	I795 F7
2705 A5	3701 E5	3797 C8	I710 E4	I798 D4
2706 B3	3702 B5	3798 C5	I711 B3	I799 E3
2707 B2	3703 A5	5701 E3	I712 A4	
2708 A2	3704 A5	5702 E2	I713 D3	
2709 C5	3705 B2	5703 A3	I716 D2	
2710 C4	3706 E5	5707 C1	I717 B4	
2711 E1	3707 C5	5708 D1	I718 B4	
2712 D4	3708 E5	5711 D4	I719 E2	
2713 A5	3709 E4	5712 C4	I721 B2	
2714 D3	3710 D3	5715 E9	I722 B2	
2715 E3	3711 C4	5716 D9	I723 B9	
2716 D3	3712 E2	5720 F7	I724 D2	
2717 F3	3713 C5	5721 E8	I725 E1	
2718 E2	3714 C4	5722 E6	I726 C1	
2719 E4	3715 B5	5723 D6	I728 C7	
2720 B2	3716 B5	5725 A9	I730 E6	
2721 B1	3717 F3	6701 C5	I731 E6	
2722 C1	3718 F3	6745 E1	I732 B4	
2723 E6	3719 E9	7700 C3	I733 E9	
2724 D1	3720 E6	7701 B5	I734 E7	
2725 E8	3721 B1	7702 C8	I735 E9	
2726 D2	3722 C1	7703 B5	I736 C9	
2727 E2	3723 B1	7704 B4	I737 C5	
2728 D2	3724 E1	7705 B5	I738 B4	
2729 F2	3725 D2	7706 B5	I739 B5	
2740 F8	3726 E1	7707 C4	I740 E8	
2741 E7	3727 E4	7708 B9	I741 D8	
2742 E7	3728 F8	9706 C4	I742 D9	
2743 E7	3729 F7	9717 A4	I743 C8	
2744 E8	3730 E6	F708 F2	I745 D1	
2745 E8	3731 E9	F709 B9	I746 B7	
2746 E8	3732 E7	F710 F2	I747 B7	
2747 D9	3733 E7	F711 A1	I748 C6	
2748 D8	3734 D9	F712 A1	I749 E8	
2749 B8	3735 C9	F713 B2	I750 C9	
2750 C8	3736 D9	F714 B4	I751 E7	
2751 A8	3737 C9	F715 A7	I752 E7	
2753 B7	3738 C7	F716 A8	I754 E1	
2754 B7	3739 C6	F717 C9	I755 E3	
2755 C7	3740 B6	F718 C6	I756 C1	
2756 D6	3741 E7	F719 F8	I757 C1	
2757 D6	3742 D6	F720 F6	I758 C6	
2758 F7	3743 E3	F721 F2	I759 D6	
2759 E7	3744 E8	F722 F2	I760 E8	
2760 C6	3745 D1	F729 C4	I761 E6	
2761 C9	3746 C5	F731 F6	I762 B7	
2762 B7	3747 B9	F734 F9	I763 C5	
2763 B7	3748 A5	F737 F5	I775 C4	
2777 D1	3749 A6	F738 F2	I776 D3	
2778 B4	3750 F2	F739 F2	I777 D1	
2779 D1	3751 F6	F740 F9	I778 D2	
2780 D4	3752 F9	F741 F6	I779 D1	
2781 D4	3755 F7	I700 D5	I780 B7	
2782 D6	3760 E3	I701 D5	I781 B8	

Large Signal Panel: Tuner SIM Connector (Female)

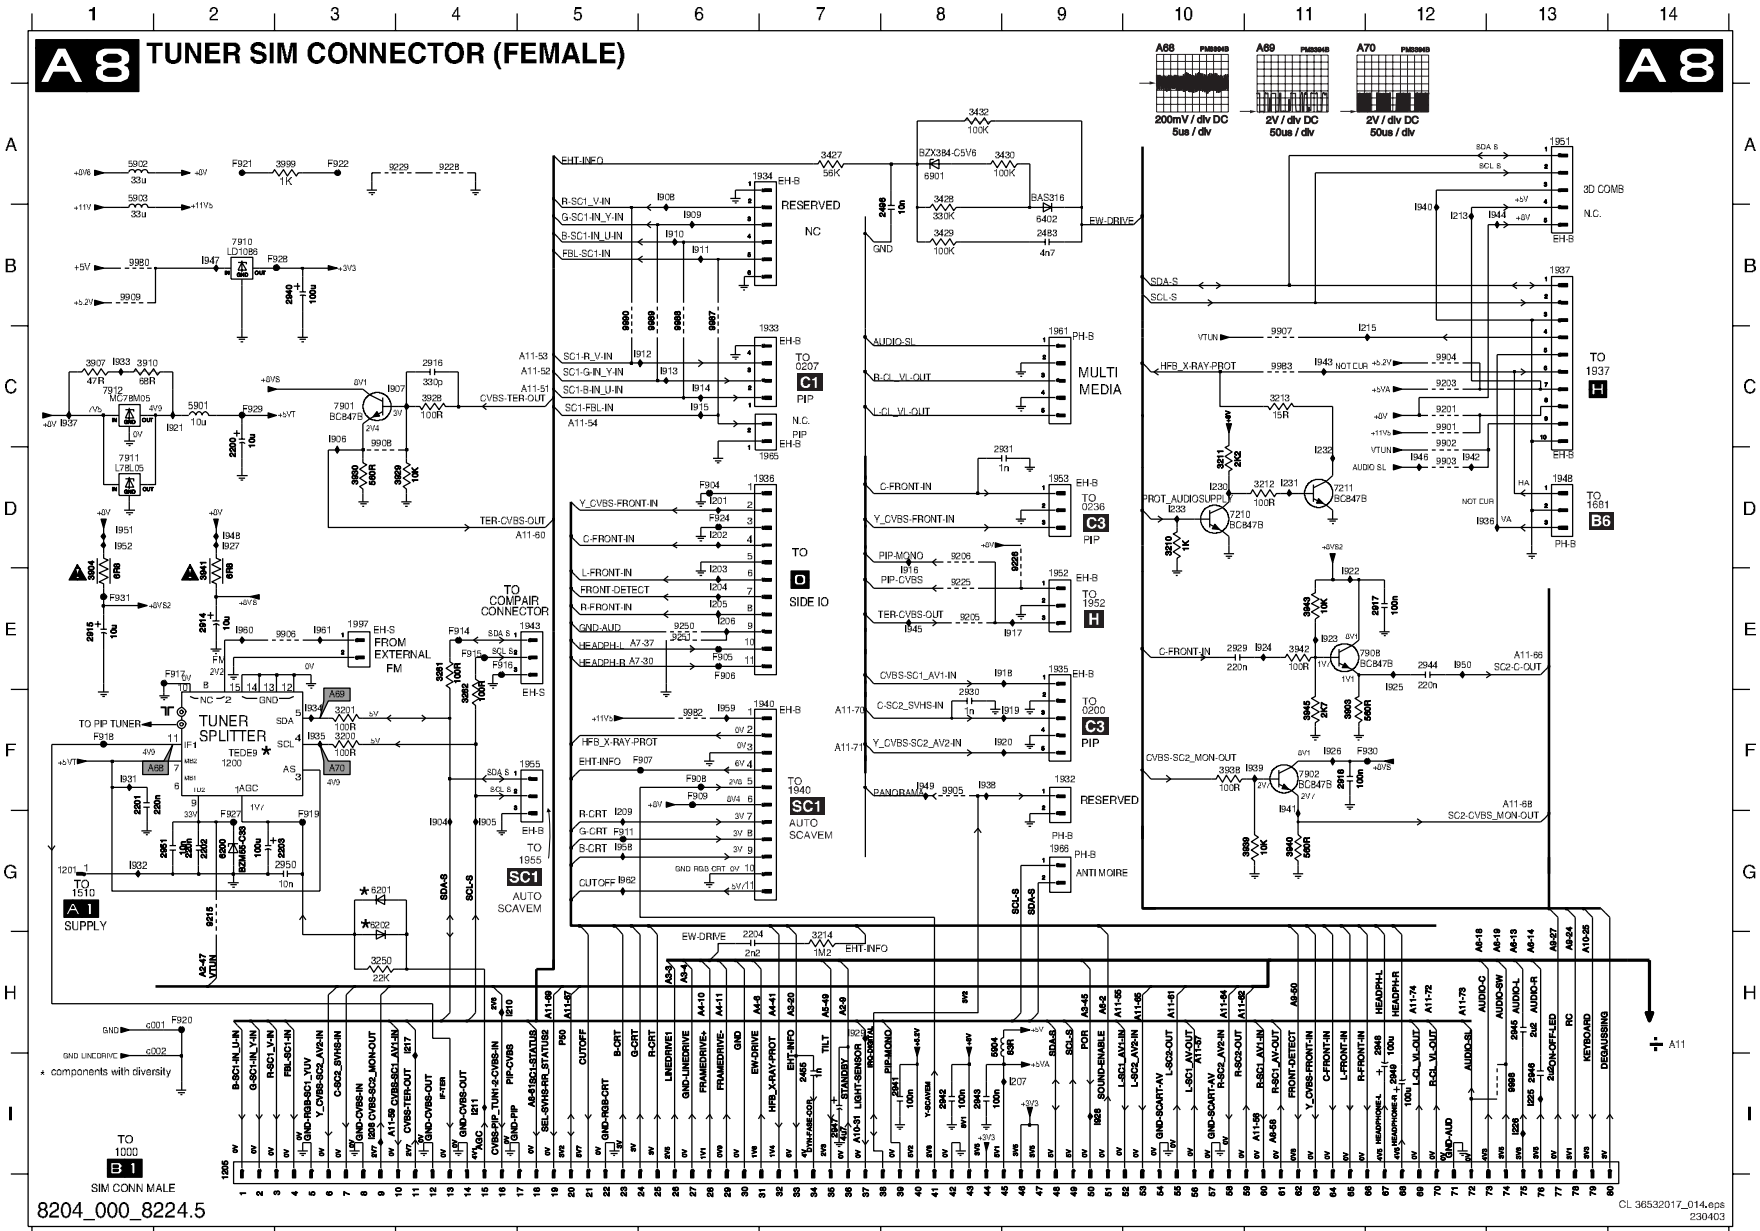

Large Signal Panel: Receiver

1950 A1 2900 B2 3900 A3 3901 B3 3902 C3 6900 B3 I953 A2 I954 A2 I955 B3 I956 B3 I957 A3

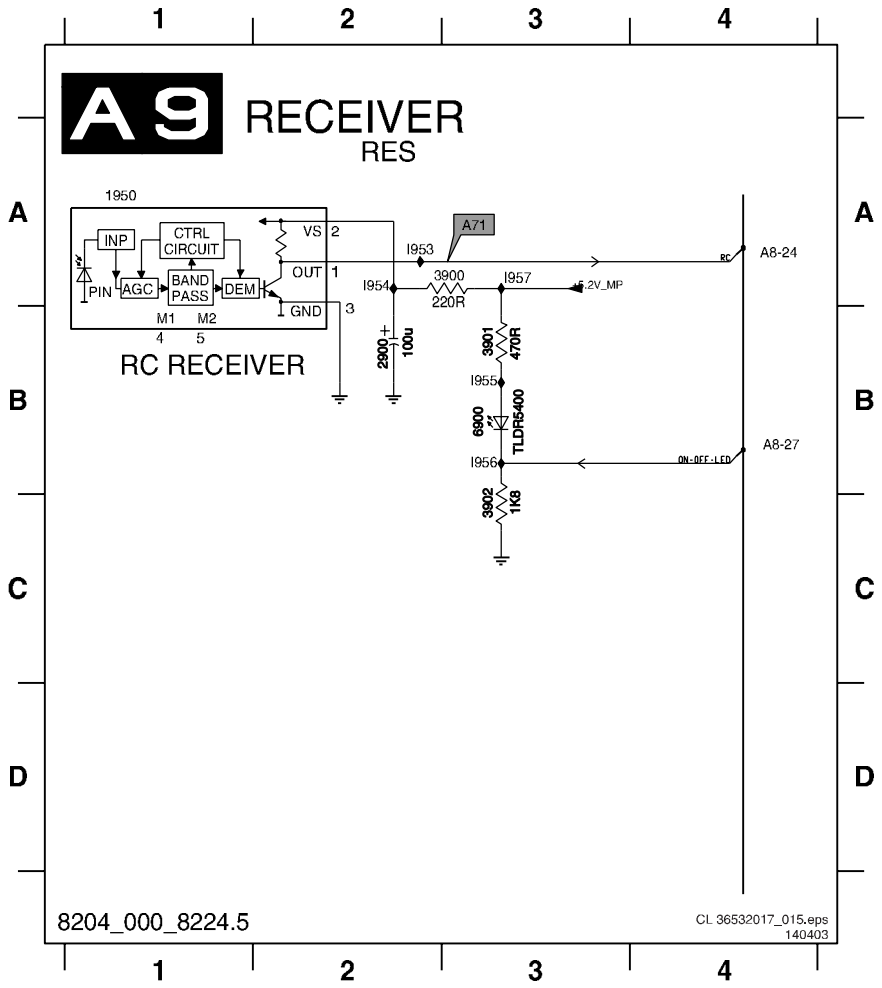

Large Signal Panel: Front

1945 E3
1946 B2
1947 A2
1949 B2
2952 D2
9970 A3
9973 B3
9978 A2
I900 A2
I901 B2
I902 E2
I903 E2
I930 B3

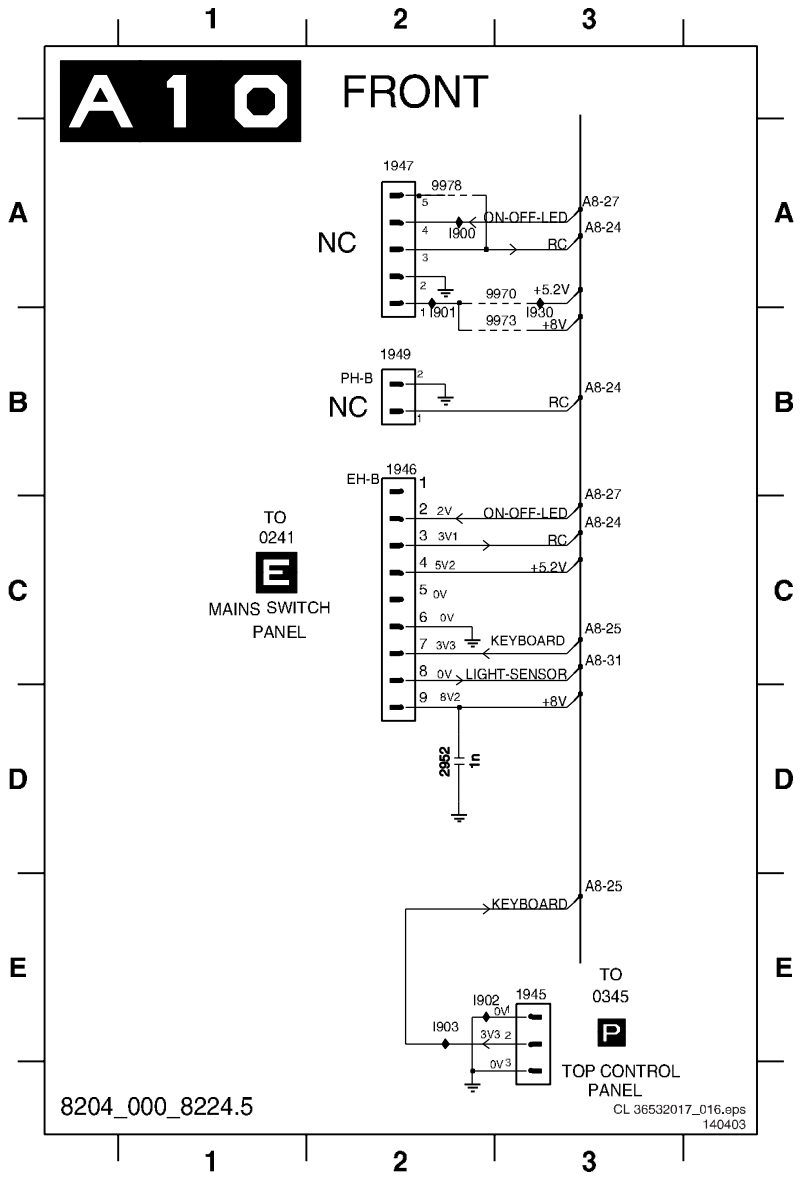

Large Signal Panel: Inputs/Outputs

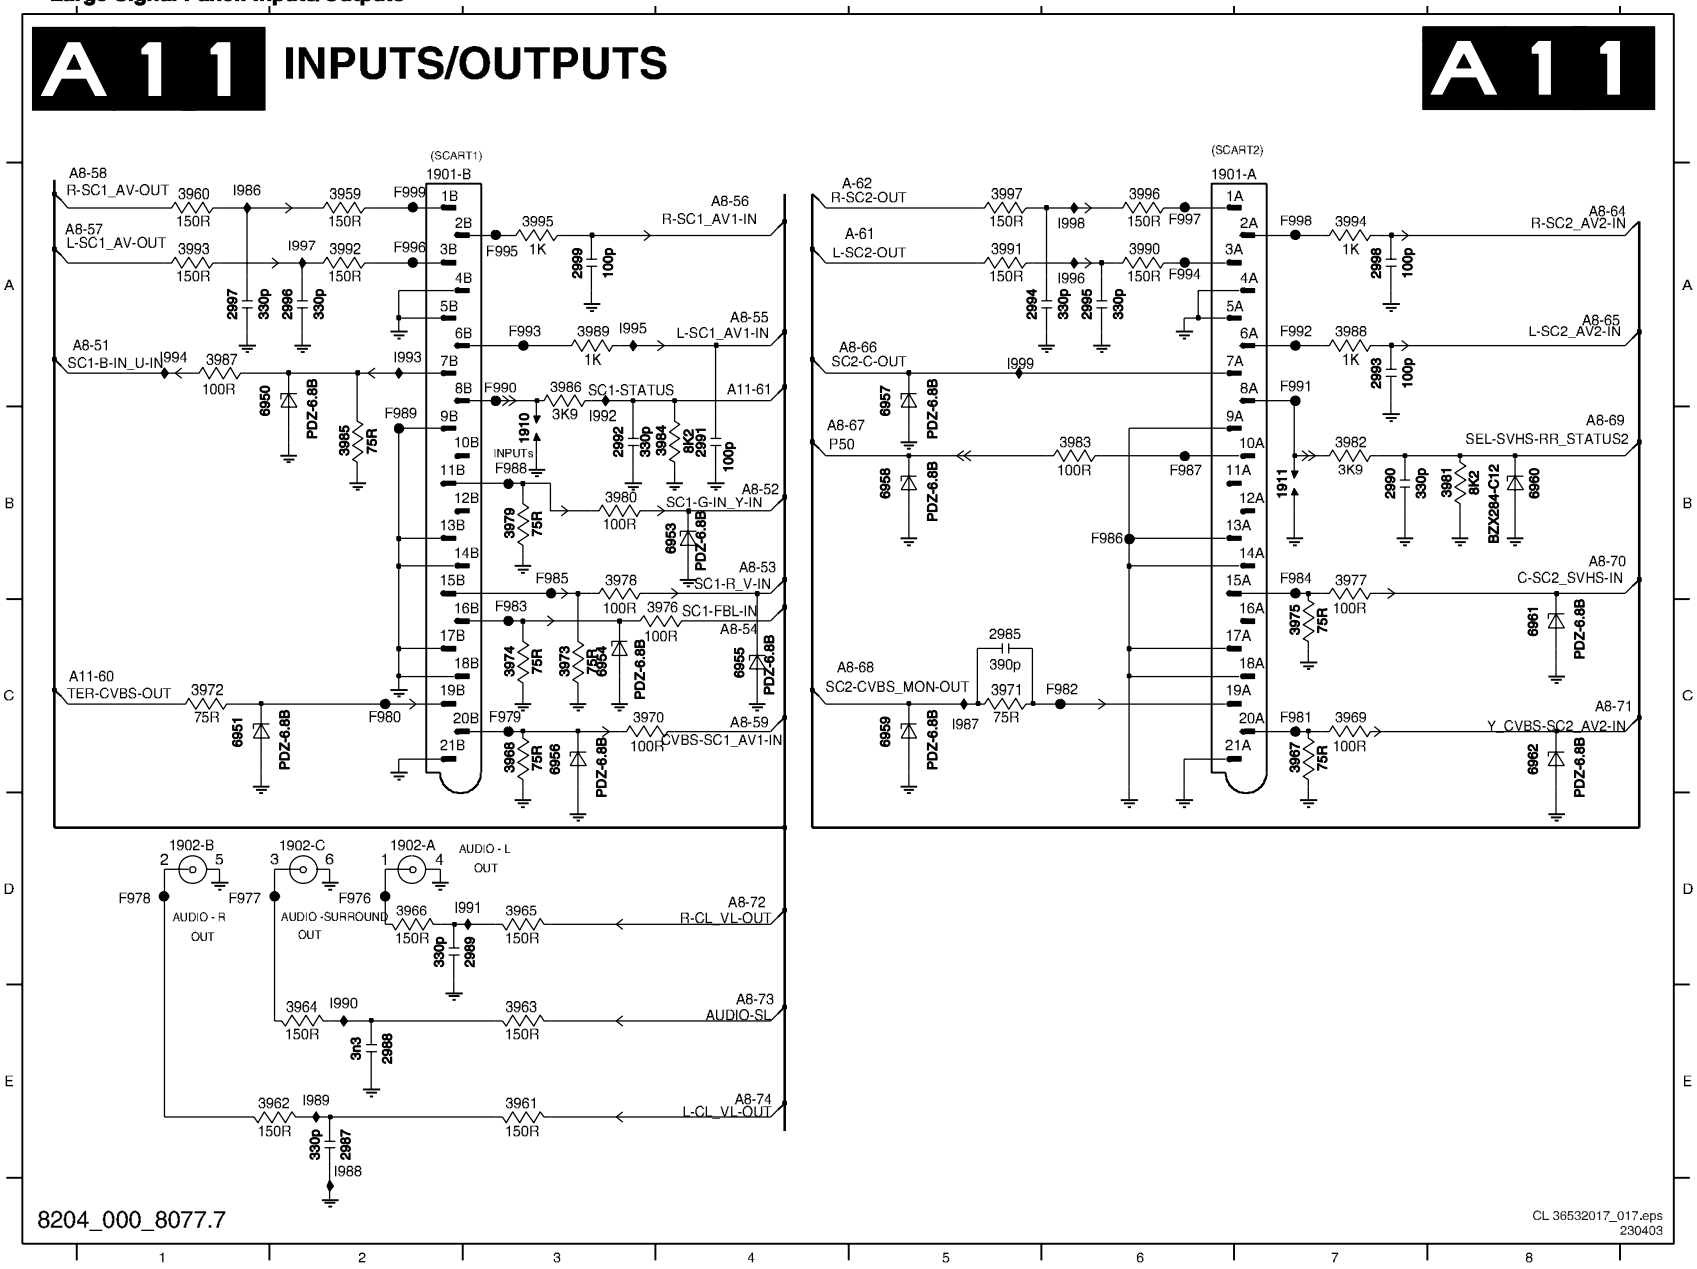

1901-A	A6	3997	A5
1901-B	A2	6950	A1
1902-A	D2	6951	C1
1902-B	D1	6953	B4
1902-C	D2	6954	C3
1910	B3	6955	C4
1911	B7	6956	C3
2985	C5	6957	A5
2987	E2	6958	B5
2988	E2	6959	C5
2989	D3	6960	B8
2990	B7	6961	C8
2991	B4	6962	C8
2992	B3	F976	D2
2993	A7	F977	D1
2994	A5	F978	D1
2995	A6	F979	C3
2996	A2	F980	C2
2997	A1	F981	C7
2998	A7	F982	C6
2999	A3	F983	C3
3959	A2	F984	B7
3960	A1	F985	B3
3961	E3	F986	B6
3962	E2	F987	B6
3963	E3	F988	B3
3964	E2	F989	B2
3965	D3	F990	A3
3966	D2	F991	A7
3967	C7	F992	A7
3968	C3	F993	A3
3969	C7	F994	A6
3970	C3	F995	A3
3971	C5	F996	A2
3972	C1	F997	A6
3973	C3	F998	A7
3974	C3	F999	A2
3975	C7	I986	A1
3976	C4	I987	C5
3977	B7	I988	E2
3978	B3	I989	E2
3979	B3	I990	E2
3980	B3	I991	D3
3981	B8	I992	B3
3982	B7	I993	A2
3983	B6	I994	A1
3984	B4	I995	A3
3985	B2	I996	A6
3986	A3	I997	A2
3987	A1	I998	A6
3988	A7	I999	A5
3989	A3		
3990	A6		
3992	A2		
3991	A5		
3993	A1		
3994	A7		
3995	A3		
3996	A6		

Layout Large Signal Panel (Top Side)

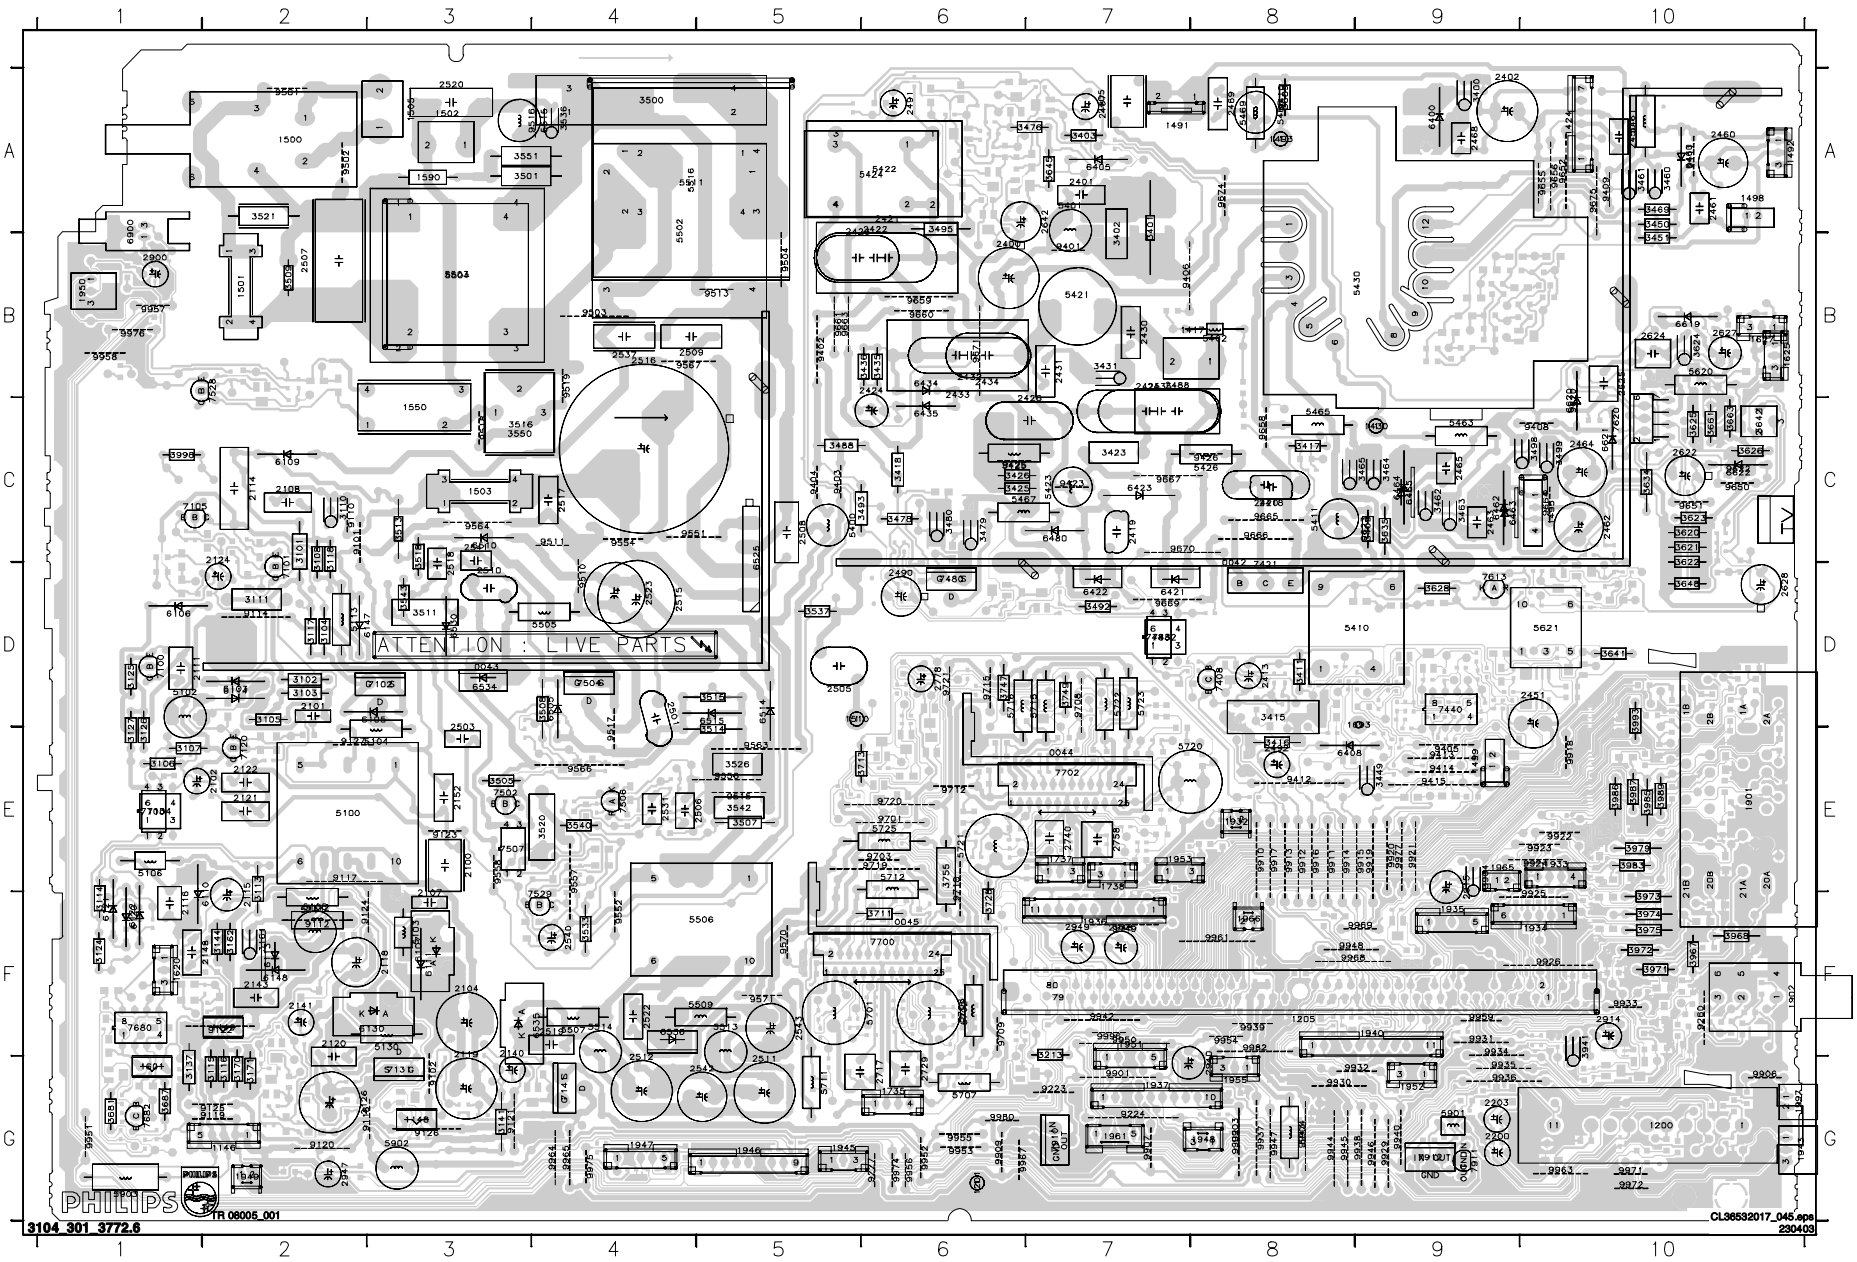

Mapping Large Signal Panel (Top Side)

0042 C8 2420 C8 3137 G1 3749 D7 6130 F3 9411 A10 9932 G9
0043 D3 2421 B6 3141 G3 3755 E6 6147 D3 9412 E8 9933 F10
0044 E7 2422 A5 3144 F2 3904 E9 6148 F2 9413 E9 9934 F9
0045 F5 2423 A6 3161 F2 3941 F10 6400 A9 9414 E9 9935 G9
1146 G2 2424 C5 3162 F2 3967 F10 6405 A7 9415 E9 9936 G9
1148 G3 2425 C7 3170 G2 3968 F10 6408 E8 9423 C7 9937 G8
1149 F2 2426 C6 3171 G2 3971 F10 6421 D8 9425 C6 9938 G9
1200 G10 2430 B7 3213 F7 3972 F10 6422 D7 9426 C8 9939 F8
1201 G6 2431 B7 3400 A9 3973 F10 6423 C7 9501 A2 9940 G9
1205 F8 2432 B6 3401 A7 3974 E10 6434 B6 9502 A2 9942 F7
1417 B8 2433 B6 3402 A7 3975 F10 6435 C6 9503 B4 9943 G8
1424 A10 2434 B6 3403 A7 3979 E10 6460 A10 9504 B5 9944 G8
1430 C9 2435 C8 3409 C9 3983 E10 6462 C9 9510 D4 9945 G8
1491 A7 2450 A10 3411 D8 3985 E10 6463 C9 9511 C4 9946 G9
1492 A10 2451 D10 3415 D8 3986 E10 6464 C9 9513 B5 9947 G8
1493 A8 2460 A10 3416 E8 3987 E10 6465 C9 9515 E5 9948 F8
1495 C10 2461 A10 3417 C8 3989 E10 6480 C7 9516 A3 9949 F7
1498 A10 2462 C10 3418 C6 3993 D10 6505 D4 9517 E4 9950 F7
1499 D9 2463 C9 3423 C7 3998 C1 6510 C3 9518 C3 9951 G1
1500 A2 2464 C10 3425 C6 5100 E2 6514 D5 9519 B4 9952 G6
1501 B2 2465 C9 3426 C6 5102 D1 6515 D5 9551 C4 9953 G6
1502 A3 2468 A9 3431 B7 5103 F3 6525 C5 9552 F4 9954 F8
1503 C3 2469 A8 3435 B6 5104 E2 6530 D3 9554 C4 9955 G6
1505 A2 2487 A7 3436 B5 5105 F2 6534 D3 9556 E5 9956 G6
1510 E5 2488 C8 3449 E9 5106 E1 6535 F3 9557 E4 9957 B1
1550 B3 2490 D6 3450 A10 5111 F2 6536 G4 9558 E3 9958 B1
1590 A3 2491 A6 3451 B10 5112 F2 6619 B10 9563 E5 9959 F9
1601 G1 2492 E8 3460 A10 5113 D2 6620 C10 9564 C3 9961 F8
1620 F1 2501 D4 3461 A10 5130 F2 6621 C10 9566 E4 9963 G10
1625 B10 2503 E3 3462 C9 5400 C5 6622 C10 9567 B4 9964 G4
1627 B10 2505 D5 3463 C9 5401 A7 6900 B1 9570 F5 9965 G4
1693 D9 2506 E5 3464 C9 5402 B8 7100 D1 9571 F5 9967 G6
1735 G5 2507 A2 3465 C9 5410 D9 7101 C2 9620 C10 9968 F8
1737 E7 2508 C5 3469 A10 5411 C8 7102 D3 9622 C10 9969 F9
1738 E7 2509 B5 3476 A7 5421 B7 7103 E1 9623 C9 9971 G10
1901 E10 2510 D3 3478 C6 5422 A6 7104 E1 9650 C10 9972 G10
1902 F10 2511 G5 3479 C6 5423 C7 7105 C1 9651 C10 9974 G6
1932 E8 2512 G4 3480 C6 5424 A6 7120 E2 9652 A10 9975 G4
1933 E10 2515 D4 3488 C5 5425 C7 7131 F3 9655 A10 9976 B1
1934 F10 2516 B4 3492 D7 5426 C8 7141 G4 9656 A10 9977 E9
1935 F9 2517 C4 3493 C6 5430 B10 7408 D8 9658 C8 9980 G6
1936 F7 2518 D3 3495 A6 5461 A10 7421 D8 9659 B6 9982 F8
1937 G7 2519 F4 3498 C10 5463 C9 7440 D9 9660 B6 9996 F7
1940 F9 2520 A3 3499 C10 5465 C8 7480 D6 9661 B5
1943 G10 2522 F4 3500 A4 5466 A8 7482 D8 9663 B5
1945 G5 2523 D4 3501 A4 5467 C6 7483 D8 9664 C10
1946 G5 2531 E4 3505 E3 5469 A8 7502 E3 9665 C8
1947 G4 2537 B4 3507 E5 5502 A5 7504 D4 9666 C8
1948 G8 2540 F4 3508 D4 5503 A3 7506 E4 9667 C7
1949 G2 2541 C3 3509 B2 5504 A3 7507 E4 9669 D7
1950 B1 2542 G5 3511 D3 5505 D4 7528 B2 9670 C7
1951 G7 2543 F5 3513 C3 5506 E5 7529 F4 9671 B6
1952 G9 2622 C10 3514 E4 5507 F4 7613 D9 9674 A8
1953 E7 2624 B10 3515 D5 5509 F5 7620 C10 9675 A10
1955 G8 2625 B10 3516 C3 5511 A4 7680 F1 9701 E6
1961 G7 2627 B10 3518 C3 5513 G5 7682 G1 9703 E6
1965 E9 2628 D10 3520 E4 5514 G4 7700 F6 9708 D7
1966 F8 2642 A6 3521 A2 5515 A3 7702 E6 9709 F6
1997 G10 2717 G5 3526 E5 5516 A5 7910 G7 9712 E6
2100 E8 2729 G6 3533 F4 5620 B10 7911 G9 9715 D6
2101 D2 2740 E7 3536 A4 5621 D10 7912 G9 9718 E6
2102 E2 2758 E7 3537 D5 5701 F6 9101 C2 9719 E6
2104 F3 2778 D6 3540 E4 5702 F6 9102 F3 9720 E6
2107 F3 2900 B1 3542 E5 5707 G6 9110 C2 9721 D6
2108 C2 2914 F10 3543 D3 5708 F6 9112 F2 9901 G7
2111 D1 2915 E9 3550 C4 5711 G5 9114 D2 9902 G8
2114 C2 2940 F7 3551 A3 5712 F6 9117 E2 9903 G8
2115 E2 2947 G2 3620 C10 5715 E7 9118 G2 9906 G10
2116 F1 2948 F7 3621 C10 5716 E6 9119 G2 9907 G7
2118 F2 2949 F7 3622 C10 5720 E7 9120 G2 9909 G6
2119 F3 3101 C2 3623 C10 5721 E6 9121 G3 9910 E8
2120 F2 3102 D2 3624 B10 5722 D7 9122 F1 9911 E8
2121 E2 3103 D2 3625 C10 5723 D7 9123 E3 9912 E8
2122 E2 3104 D2 3626 C10 5725 E5 9124 F2 9913 E8
2124 C2 3105 E2 3628 D9 5901 G9 9125 G2 9914 E8
2126 G2 3106 E1 3634 C10 5902 G3 9126 G3 9915 E9
2140 G3 3107 E2 3635 C9 5903 G1 9127 E2 9916 E8
2141 F2 3108 C2 3641 D10 5904 G8 9223 G7 9917 E8
2143 F2 3110 C2 3642 B10 6103 D2 9224 G7 9918 E10
2148 F1 3111 D2 3645 A7 6105 D2 9227 G6 9919 E9
2152 E3 3113 E2 3648 D10 6106 D1 9260 F10 9920 E9
2200 G9 3114 E1 3661 C10 6107 F3 9401 B7 9921 E9
2203 G9 3115 G1 3663 C10 6109 C2 9402 B5 9922 E10
2400 B6 3116 G2 3681 G1 6110 E2 9403 C5 9923 E10
2401 A7 3117 D2 3687 G1 6111 F3 9404 C5 9924 E10
2402 A10 3118 C2 3689 A8 6113 F2 9405 E9 9925 E10
2405 A7 3124 F1 3711 F6 6114 D2 9406 B7 9926 F10
2413 D8 3125 D1 3713 E6 6120 F1 9408 C10 9929 G9
2418 C8 3126 E1 3728 F6 6121 E1 9409 A10 9930 G8
2419 C7 3127 E1 3747 E6 6122 F1 9410 A8 9931 F9

CL36532017_45m.eps 230403

Mapping Large Signal Panel (Bottom Side)

0042 C3 2147 G8 2514 E7 2757 D4 3141 G8 3460 A1 3629 B1 3746 E6 5411 C3 6406 D3 7130 G9 9209 B10 9566 E7 9942 F4
0043 D8 2148 F10 2515 D7 2758 E4 3142 G8 3461 A1 3630 C1 3747 D5 5421 B4 6407 E3 7131 F8 9210 F4 9567 B7 9943 G3
0044 E4 2149 F10 2516 C7 2759 E4 3143 G8 3462 C2 3631 D1 3748 D5 5422 A5 6408 E3 7132 G8 9211 F4 9570 F6 9944 G3
0045 F6 2150 G9 2517 C7 2760 E4 3144 F9 3463 C2 3632 D1 3749 D4 5423 C4 6409 B2 7133 F9 9212 G2 9571 F6 9945 G3
1146 G9 2152 E8 2518 D8 2761 E5 3145 D9 3464 C2 3633 D1 3750 G6 5424 A5 6410 B2 7140 G7 9214 G2 9620 B1 9946 G2
1148 G8 2153 E10 2519 F7 2762 E4 3146 C9 3465 C2 3634 C1 3751 E4 5425 C5 6411 B2 7141 G7 9215 G2 9621 G10 9947 G3
1149 F9 2154 F9 2520 A8 2763 E4 3147 D9 3466 A5 3635 C2 3752 E4 5426 C4 6412 B2 7210 G5 9216 G1 9622 C1 9948 F3
1200 G1 2200 G2 2522 F7 2777 F5 3148 C9 3467 A4 3636 D2 3755 E5 5430 B2 6413 B2 7211 F5 9217 G1 9623 C3 9949 F4
1201 G5 2201 G1 2523 D7 2778 D5 3149 C10 3469 A1 3637 D1 3760 F5 5461 A1 6414 B2 7407 B1 9218 G1 9624 D5 9950 F4
1205 F3 2202 G1 2524 E7 2779 F5 3150 C9 3472 A5 3638 C1 3790 E5 5463 C2 6415 B1 7408 D3 9219 F1 9650 C1 9951 G10
1417 B4 2203 G2 2525 E7 2780 F6 3151 G9 3474 A5 3639 D1 3791 F5 5465 C3 6421 D4 7409 D3 9221 G9 9651 C1 9952 G5
1424 A1 2204 F3 2528 B9 2781 F6 3152 C9 3475 A6 3640 D1 3792 E5 5466 A3 6422 D4 7421 C3 9222 G9 9652 A1 9953 G5
1430 C2 2400 B5 2530 E7 2782 E4 3153 F9 3476 A4 3641 D1 3793 F5 5467 C4 6423 C4 7440 D2 9223 G4 9655 A1 9954 F3
1491 A3 2401 A4 2531 E7 2783 E5 3155 G8 3478 C5 3642 B1 3794 D4 5469 A3 6434 B5 7441 D2 9224 G4 9656 A1 9955 G5
1492 A1 2402 A2 2535 D6 2784 E4 3156 G9 3479 C5 3643 C1 3795 D4 5502 B7 6435 C5 7442 A5 9225 F2 9658 C3 9956 G5
1493 A3 2403 D2 2537 B7 2785 E5 3157 G8 3480 C5 3644 A4 3796 D4 5503 B8 6442 B1 7443 A4 9226 F2 9659 B5 9957 B10
1495 C2 2404 D2 2538 E7 2786 F6 3158 G9 3481 D5 3645 A4 3797 E4 5504 B8 6455 D3 7445 D2 9227 G5 9660 B5 9958 B10
1498 A1 2405 A4 2540 F7 2787 E5 3159 G8 3482 D5 3646 B1 3798 E6 5505 D7 6456 E1 7450 D1 9228 G9 9661 B6 9959 F2
1499 E2 2409 D3 2541 D8 2791 E5 3160 C9 3483 D5 3647 B1 3900 B10 5506 F6 6457 E2 7455 E3 9229 G7 9663 B6 9960 G6
1500 A9 2412 D3 2542 G7 2792 E5 3161 F9 3484 D4 3648 D1 3901 B10 5507 F7 6458 E2 7480 D5 9250 F4 9664 C1 9961 F3
1501 B9 2413 D3 2543 F6 2900 B10 3162 F9 3485 D3 3649 F10 3902 B10 5509 F7 6460 A1 7482 D3 9251 F4 9665 C3 9962 G6
1502 A8 2414 D3 2544 D7 2914 F1 3164 G9 3486 D2 3652 A5 3903 F2 5511 A6 6462 C2 7483 D3 9260 F1 9666 C3 9963 G1
1503 C8 2415 D3 2601 F10 2915 E2 3165 G9 3487 E2 3653 B1 3904 E2 5513 F6 6463 C2 7486 D5 9261 E1 9667 C4 9964 G7
1505 A8 2417 C3 2603 D1 2916 F1 3166 G10 3488 C6 3654 E2 3907 G2 5514 F7 6464 C2 7487 D4 9262 E1 9669 D4 9965 G7
1510 D6 2418 C3 2604 C1 2917 E2 3167 G10 3489 D5 3655 D2 3910 G2 5515 A8 6465 C2 7501 C9 9263 D1 9670 C4 9966 G7
1550 C8 2419 C4 2605 D1 2918 F1 3168 F10 3490 D4 3656 E2 3928 F1 5516 A7 6480 C4 7502 E8 9264 F1 9671 B5 9967 G5
1590 A8 2420 C3 2620 C1 2929 E4 3170 G9 3491 A5 3657 D2 3929 F1 5620 B1 6481 C5 7504 D7 9401 B4 9674 A3 9968 F3
1601 G10 2421 B5 2621 C1 2930 F2 3171 G9 3492 D4 3658 E2 3930 G1 5621 D1 6482 D5 7506 E7 9402 B6 9675 A1 9969 F2
1620 F10 2422 B5 2622 C1 2931 F4 3200 G1 3493 C5 3659 D2 3938 F1 5701 F6 6483 C5 7507 E8 9403 C6 9676 E2 9970 G7
1625 B1 2423 B5 2623 D2 2940 F4 3201 G1 3495 B5 3660 D1 3939 F1 5702 F5 6491 A5 7528 C9 9404 C6 9677 D1 9971 G1
1627 B1 2424 C5 2624 B1 2941 F3 3210 F5 3496 D4 3661 C1 3940 F1 5703 F5 6493 A5 7529 E7 9405 E2 9701 E5 9972 G1
1693 D2 2425 B4 2625 B1 2942 G3 3211 G4 3497 A4 3662 D1 3941 G1 5707 G5 6494 A5 7530 E7 9406 B4 9702 E5 9973 G7
1735 G5 2426 C5 2627 B1 2943 G3 3212 F5 3498 C2 3663 B1 3942 E3 5708 F5 6499 A5 7611 D1 9408 C1 9703 E5 9974 G5
1737 E4 2430 B4 2628 D1 2944 E1 3213 F4 3499 C1 3664 D2 3943 F2 5711 G6 6505 D7 7612 C1 9409 A1 9704 E5 9975 G7
1738 E4 2431 B4 2629 B1 2945 F4 3214 F3 3500 A7 3665 A5 3945 F2 5712 F5 6506 E7 7613 D2 9410 A3 9705 F5 9976 B10
1901 E1 2432 B5 2630 D1 2946 F4 3250 G2 3501 A8 3681 G10 3959 D1 5715 D4 6507 E7 7614 D1 9411 A1 9706 E6 9977 E2
1902 F1 2433 B5 2631 D1 2947 G9 3261 G1 3504 E7 3682 G10 3960 D1 5716 D5 6509 E7 7620 B1 9412 E3 9707 E5 9978 G7
1932 E3 2434 B5 2633 C1 2948 F4 3262 G1 3505 E8 3683 G10 3961 F1 5720 E4 6510 C8 7641 A4 9413 E2 9708 D4 9979 G7
1933 E2 2435 C4 2635 D2 2949 F4 3400 A2 3506 E7 3684 F10 3962 F1 5721 E5 6511 B9 7652 B5 9414 E2 9709 F5 9980 G5
1934 F2 2440 D2 2642 A4 2950 G1 3401 A4 3507 E6 3685 G10 3963 F1 5722 D4 6512 C9 7653 A5 9415 E2 9711 D5 9981 G2
1935 F2 2441 B2 2653 C1 2951 G2 3402 A4 3508 D7 3686 G10 3964 F1 5723 D4 6514 D6 7654 A5 9417 C3 9712 E5 9982 F3
1936 E4 2442 B2 2656 D2 2952 G6 3403 A4 3509 B9 3687 G10 3965 F1 5725 E6 6515 D6 7680 F10 9418 A5 9713 D5 9983 G3
1937 G4 2443 B2 2657 D2 2985 F1 3404 D3 3510 E7 3688 C5 3966 F1 5901 G2 6516 E7 7681 G10 9421 E2 9714 F6 9985 E1
1940 F2 2444 B1 2659 D2 2987 F1 3406 D3 3511 D8 3689 A3 3967 F1 5902 G8 6517 E7 7682 G10 9422 E3 9715 D5 9986 E1
1943 G1 2445 B1 2660 A5 2988 F1 3407 D3 3512 D8 3690 C1 3968 F1 5903 G10 6523 F7 7700 F5 9423 C4 9716 F6 9987 F2
1945 G6 2448 A5 2661 C1 2989 F1 3409 C2 3513 C8 3701 E5 3969 F1 5904 G3 6525 D6 7701 E5 9424 D4 9717 F5 9988 F1
1946 G6 2450 A1 2662 E2 2990 E1 3410 C3 3514 E6 3702 E5 3970 F1 6080 G10 6530 D8 7702 E4 9425 C5 9718 E5 9989 F1
1947 G7 2451 E1 2702 E5 2991 E1 3411 D3 3515 D6 3703 D5 3971 F1 6081 F10 6533 F8 7703 E5 9426 C3 9719 E5 9990 F1
1948 G3 2454 E2 2704 E5 2992 E1 3412 D2 3516 C8 3704 E5 3972 F1 6082 F10 6534 D8 7704 E5 9427 E2 9720 E5 9991 F1
1949 G9 2455 F3 2705 D5 2993 D1 3414 D3 3517 E7 3705 F5 3973 E1 6083 F10 6535 F8 7705 D5 9428 D2 9721 D5 9992 F1
1950 B10 2457 D1 2706 F5 2994 D1 3415 D3 3518 C8 3706 F5 3974 F1 6084 F10 6536 G7 7706 E5 9429 E2 9901 G4 9993 F1
1951 G4 2458 E3 2707 F5 2995 E1 3416 E3 3519 E7 3707 F5 3975 F1 6101 D9 6537 E7 7707 E5 9430 E2 9902 G3 9994 F1
1952 G2 2460 A1 2708 F5 2996 E1 3417 C3 3520 E7 3708 F6 3976 F1 6102 E9 6614 D2 7708 D4 9431 D2 9903 G3 9996 F4
1953 E3 2461 A1 2709 F6 2997 D1 3418 C5 3521 A9 3709 G6 3977 F1 6103 D9 6615 D3 7901 G1 9432 E2 9904 G3 9997 F3
1955 G3 2462 C1 2710 F6 2998 D1 3419 D2 3522 E7 3710 F5 3978 E1 6104 E9 6616 D2 7902 G1 9433 D3 9905 E3 9998 F4
1961 G4 2463 C2 2711 F5 2999 D1 3420 D2 3523 E7 3711 F5 3979 E1 6105 D9 6617 D1 7908 F2 9434 D2 9906 G1
1965 E2 2464 C1 2712 F6 3101 C9 3421 D2 3524 B9 3712 F5 3980 E1 6106 D10 6618 D1 7910 G4 9435 D1 9907 G4
1966 F3 2465 C2 2713 D5 3102 D9 3422 D2 3525 E7 3713 E6 3981 E1 6107 F8 6619 B1 7911 G2 9436 D2 9908 G1
1997 G1 2466 A5 2714 F6 3103 D9 3423 C4 3526 E6 3714 E5 3982 E1 6108 D10 6620 C1 7912 G2 9437 E3 9909 G5
2100 E8 2468 A2 2715 F6 3104 D9 3425 C5 3527 E7 3715 D5 3983 E1 6109 C9 6621 C1 9101 C9 9438 C1 9910 E3
2101 E9 2469 A3 2716 F5 3105 D9 3426 C5 3528 C9 3716 D5 3984 E1 6110 F9 6622 C1 9102 F8 9440 G10 9911 E3
2102 E9 2480 C5 2717 G5 3106 E10 3427 F2 3529 B9 3717 G5 3985 E1 6111 F8 6623 A5 9103 E10 9441 D1 9912 E3
2103 D9 2481 C5 2718 F5 3107 E10 3428 F3 3530 E7 3718 G5 3986 E1 6112 G9 6624 B1 9105 G9 9443 D3 9913 E3
2104 F8 2482 D5 2719 G6 3108 D9 3429 F2 3531 E7 3719 E5 3987 E1 6113 F9 6625 D2 9106 E10 9481 E2 9914 E3
2105 D9 2483 F2 2720 F5 3109 G10 3430 F3 3532 B9 3720 D4 3988 E1 6114 D9 6626 D2 9107 F9 9482 D4 9915 E2
2106 G9 2487 A4 2721 F5 3110 C9 3431 B4 3533 F7 3721 F5 3989 E1 6115 D9 6627 D2 9108 F9 9483 D4 9916 E3
2107 F8 2488 C4 2722 F5 3111 D9 3432 F2 3534 B9 3722 F5 3990 D1 6116 C9 6628 B1 9110 C9 9499 A5 9917 E3
2108 C9 2490 D5 2723 E4 3113 E9 3435 B5 3535 D6 3723 F5 3991 E1 6117 F9 6701 E5 9112 F9 9501 A9 9918 E1
2109 F10 2491 A5 2724 F5 3114 E10 3436 B6 3536 A7 3724 F5 3992 D1 6118 F10 6745 G5 9114 D9 9502 A9 9919 E2
2110 D10 2492 E3 2725 E5 3115 F9 3437 B2 3537 D6 3725 F5 3993 D1 6119 F10 6900 B10 9117 E9 9503 B7 9920 E2
2111 D10 2493 E2 2726 F5 3116 G9 3440 E2 3540 E7 3726 F5 3994 D1 6120 F10 6901 F3 9118 G9 9504 B6 9921 E2
2112 D9 2494 B3 2727 F5 3117 D9 3441 D2 3542 E6 3727 G6 3995 D1 6121 E10 6950 E1 9119 G9 9505 F7 9922 E1
2114 C9 2495 B4 2728 F5 3118 D9 3442 D2 3543 D8 3728 F5 3996 D1 6122 E10 6951 F1 9120 G9 9510 D7 9923 E1
2115 F9 2496 F2 2729 F5 3120 E9 3443 D2 3547 E8 3729 E3 3997 D1 6130 F8 6953 E1 9121 G8 9511 C7 9924 E1
2116 F10 2497 A5 2740 E4 3121 E9 3444 B2 3549 E6 3730 D4 3998 C10 6132 G9 6954 E1 9122 F9 9513 B6 9925 F1
2118 F8 2498 A5 2741 E4 3122 E9 3445 B2 3550 C8 3731 E5 3999 B10 6133 F9 6955 E1 9123 E8 9515 E6 9926 F1
2119 G8 2499 A5 2742 E4 3123 F10 3446 B2 3551 A8 3732 E4 5100 E9 6134 F9 6956 F1 9124 F9 9516 A7 9927 E3
2120 G9 2501 D7 2743 E4 3124 F10 3447 B2 3552 D7 3733 E4 5102 D10 6141 G7 6957 E1 9125 G9 9517 E7 9928 F4
2121 E9 2502 E7 2744 E5 3125 D10 3448 B1 3553 D7 3734 E4 5103 F8 6142 C10 6958 E1 9126 G8 9518 B8 9929 G2
2122 E9 2503 D8 2745 E4 3126 E10 3449 E2 3610 D2 3735 E4 5104 E8 6144 C9 6959 F1 9127 E9 9519 B7 9930 G3
2123 C10 2504 D8 2746 E5 3127 E10 3450 A1 3611 E2 3736 E5 5105 F9 6147 D8 6960 E1 9128 G8 9551 C7 9931 F2
2124 C9 2505 D6 2747 E4 3130 F9 3451 B1 3620 C1 3737 E4 5106 E10 6148 F9 6961 F1 9200 F3 9552 F7 9932 G2
2126 G9 2506 E6 2748 D5 3131 F9 3452 B1 3621 C1 3738 E4 5111 F9 6149 G9 6962 F1 9201 G4 9554 C7 9933 F1
2130 G8 2507 B9 2749 D5 3132 G9 3453 B1 3622 C1 3739 E4 5112 F9 6200 G1 7100 D10 9202 F2 9556 E6 9934 F2
2131 G9 2508 C6 2750 E4 3133 F9 3454 B2 3623 C1 3740 E4 5113 D9 6201 G2 7101 D9 9203 G3 9557 E7 9935 G2
2140 F8 2509 B6 2751 E4 3134 G8 3455 D2 3624 B1 3741 E4 5130 F9 6202 G2 7102 D8 9204 F3 9558 E8 9936 G2
2141 F9 2510 D8 2753 E4 3135 G9 3456 D2 3625 C1 3742 E4 5400 C6 6400 A2 7103 E10 9205 G2 9560 D7 9937 G3
2143 F9 2511 G6 2754 D4 3136 F8 3457 D2 3626 C1 3743 G5 5401 A4 6401 B1 7104 E10 9206 G2 9561 E7 9938 G2
2144 C10 2512 G7 2755 D4 3137 G10 3458 E3 3627 B1 3744 E4 5402 B3 6402 F2 7105 C10 9207 G3 9563 E6 9939 F3
2145 C9 2513 E7 2756 E4 3140 F9 3459 E3 3628 D2 3745 G5 5410 D3 6405 A4 7120 E9 9208 G3 9564 C8 9940 G2

CL36532017_46m.eps 230403

Layout Large Signal Panel (Overview Bottom Side)

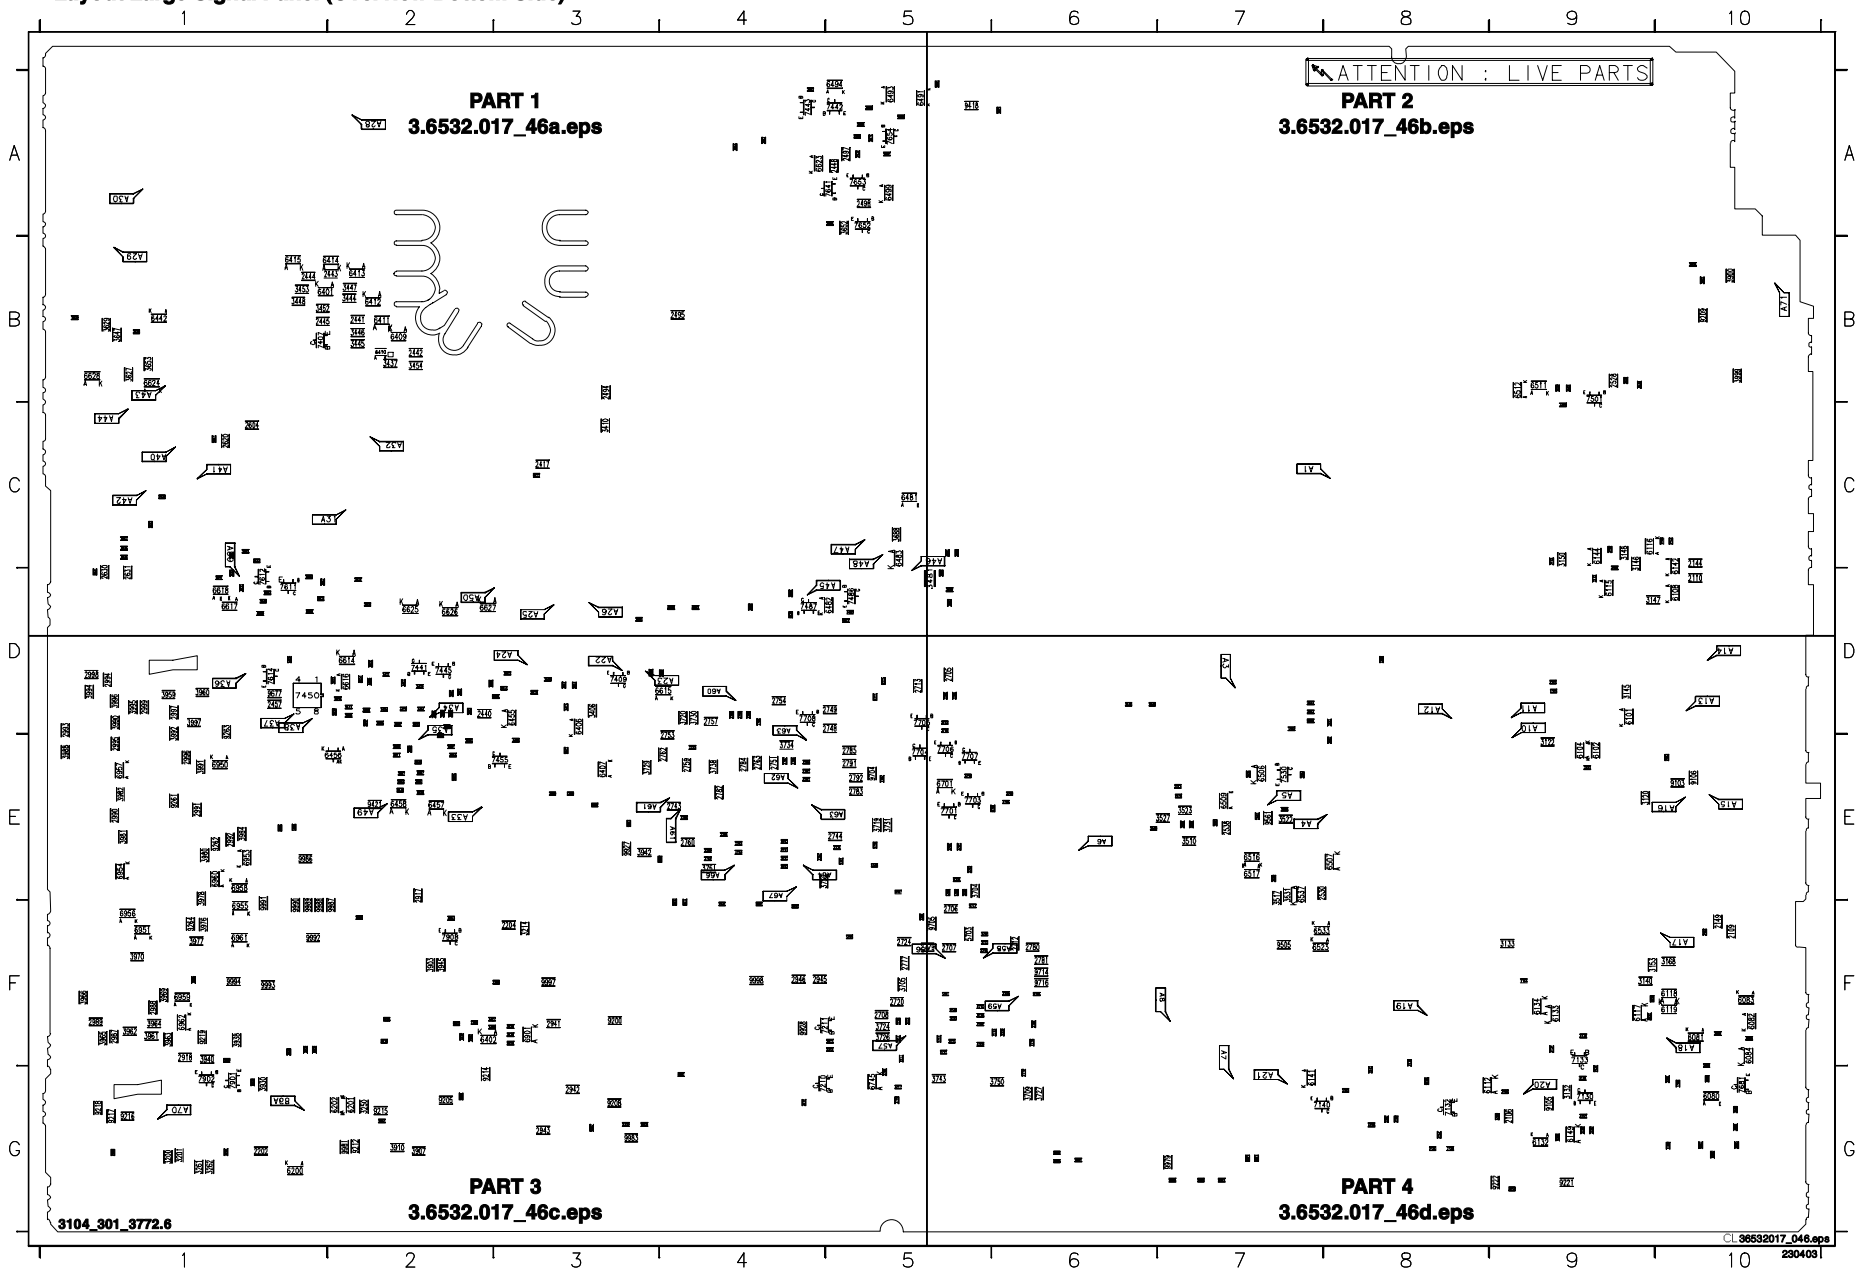

Layout Large Signal Panel (Part 1 Bottom Side)

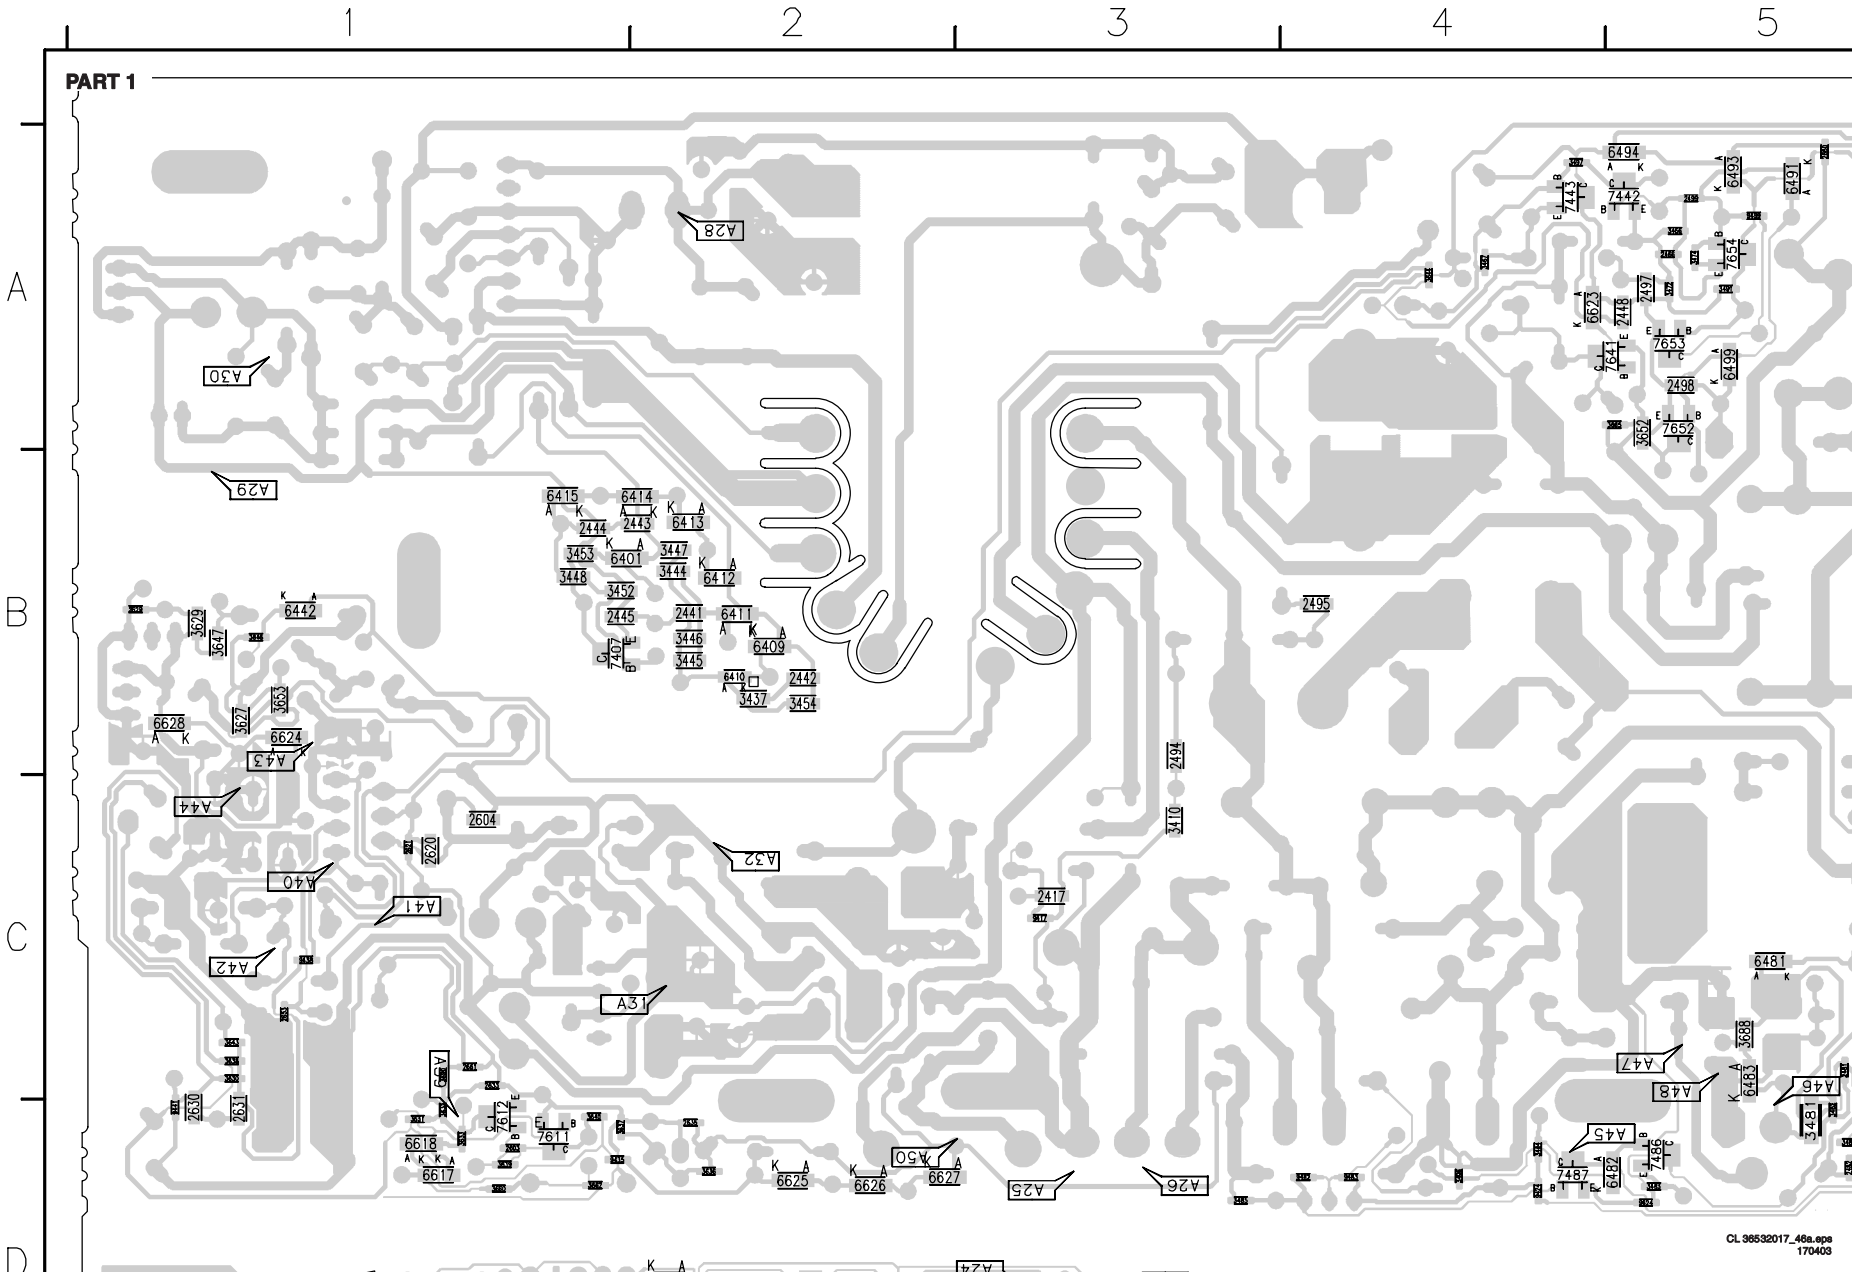

Layout Large Signal Panel (Part 2 Bottom Side)

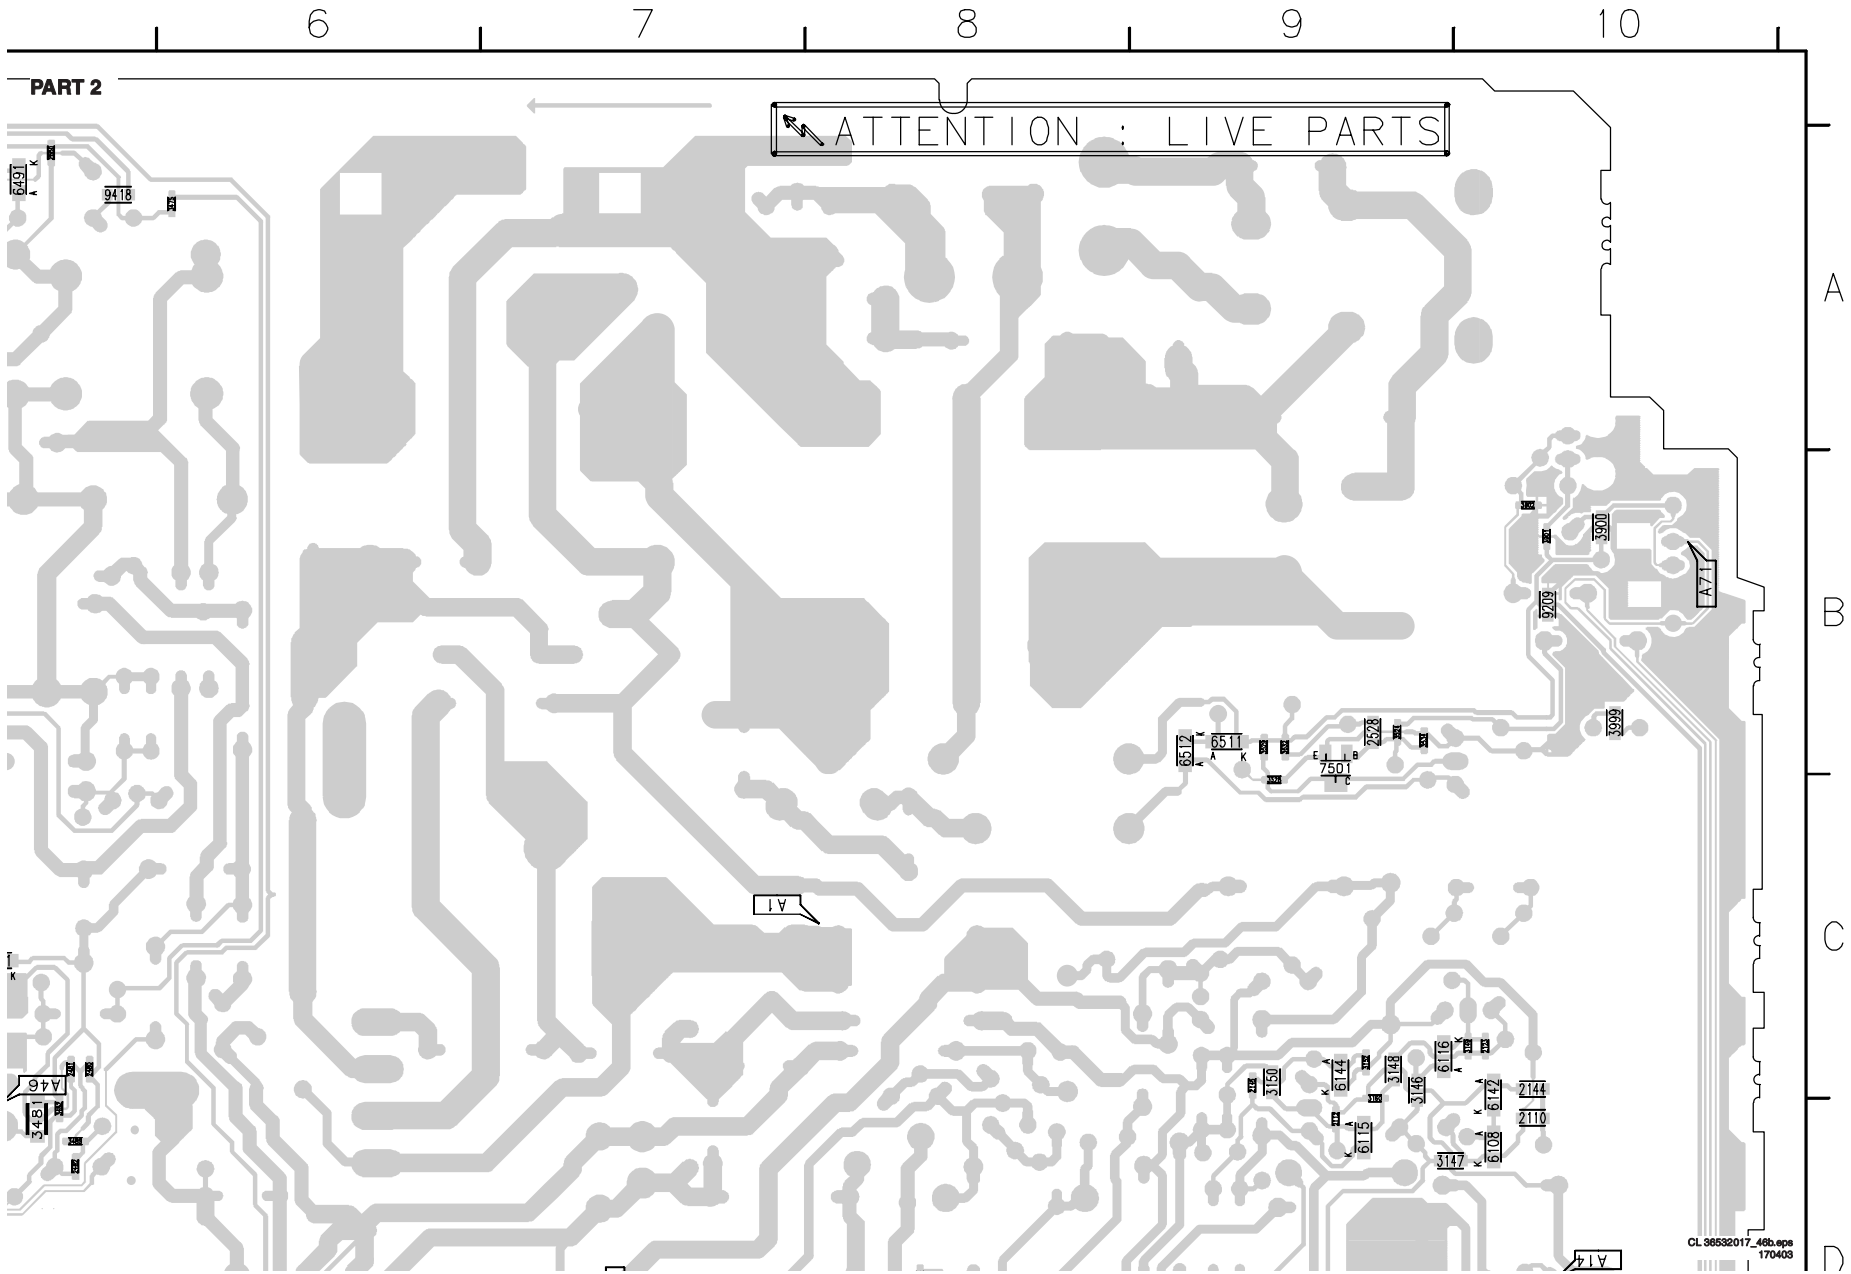

Layout Large Signal Panel (Part 3 Bottom Side)

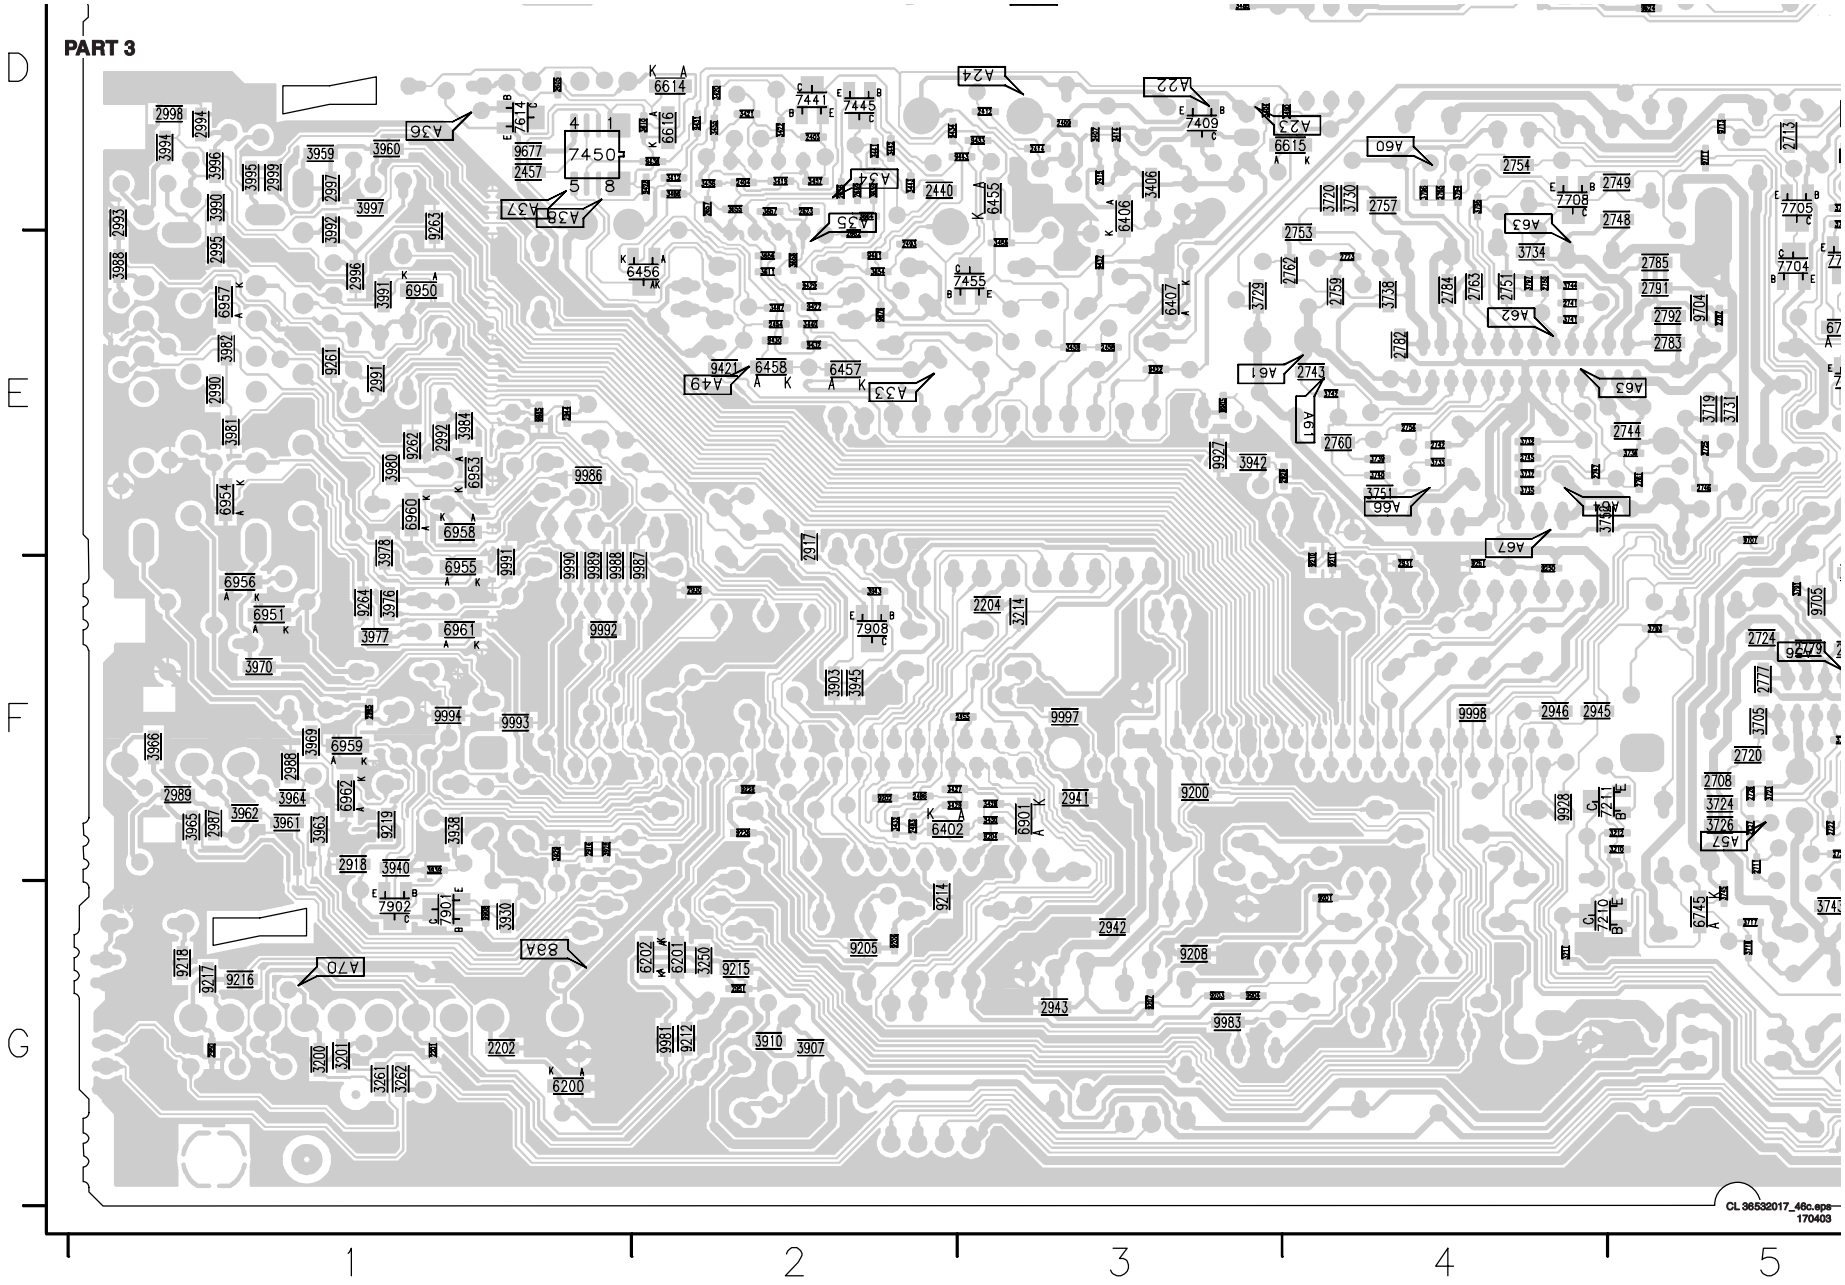

Layout Large Signal Panel (Part 4 Bottom Side)

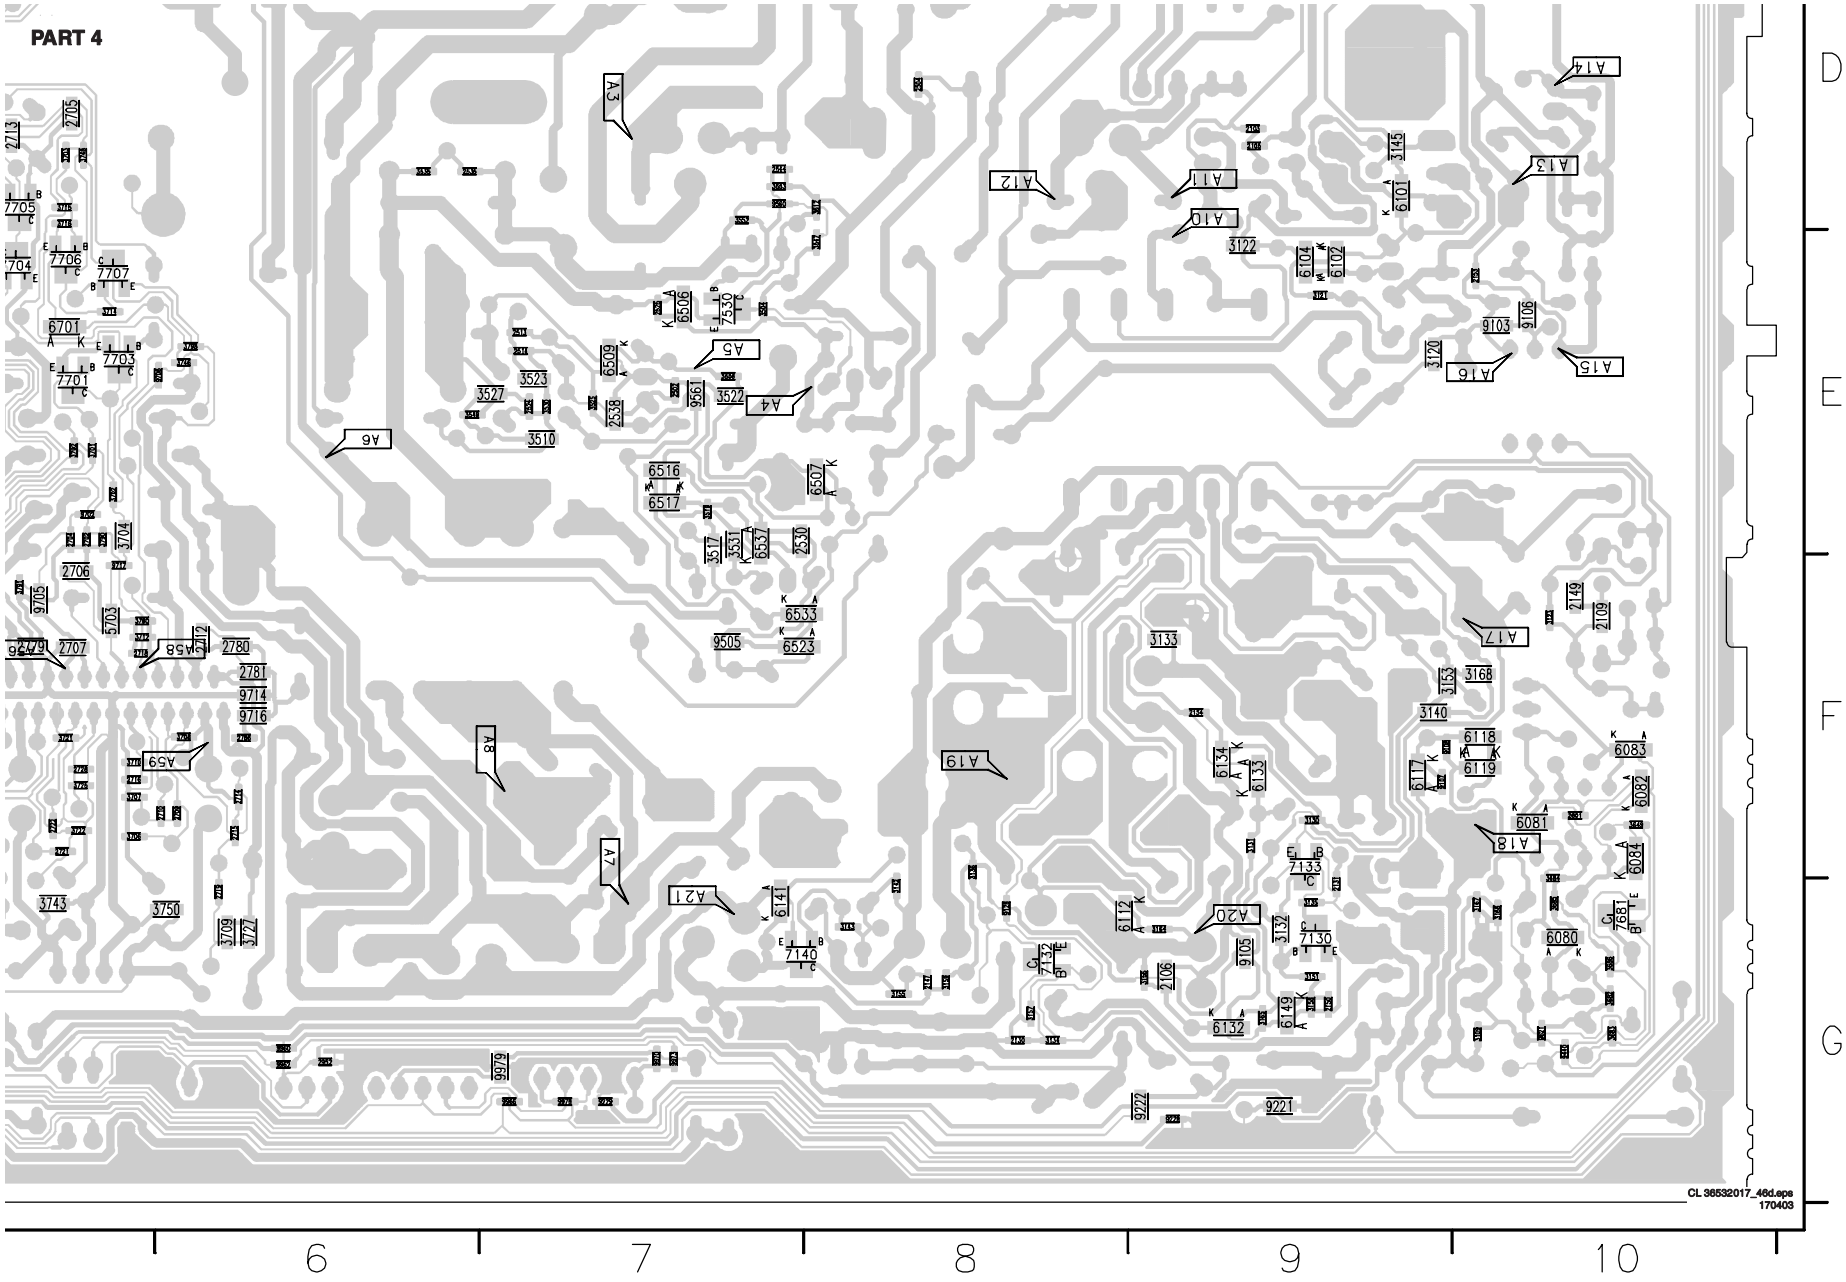

Small Signal Board: SIM Connector (Male)

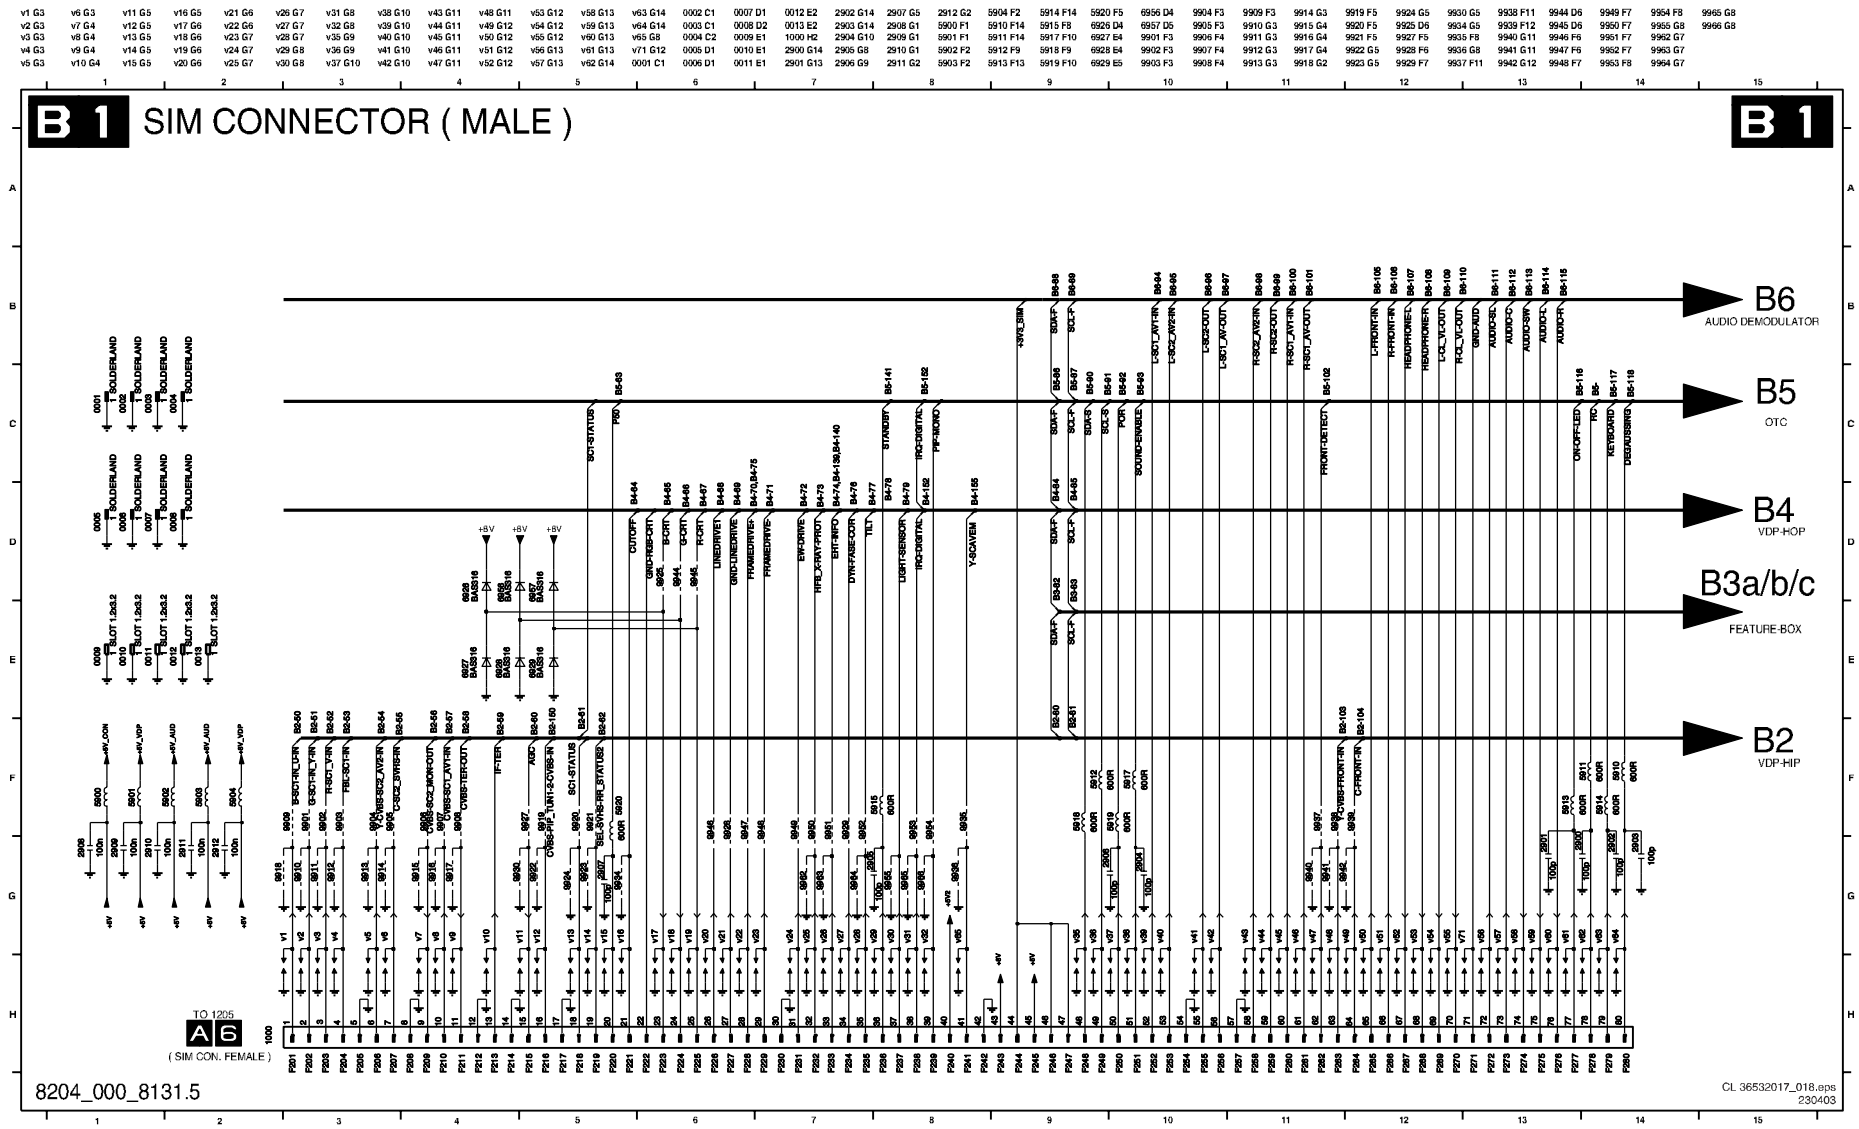

Small Signal Board: IF. I/O Video Processing

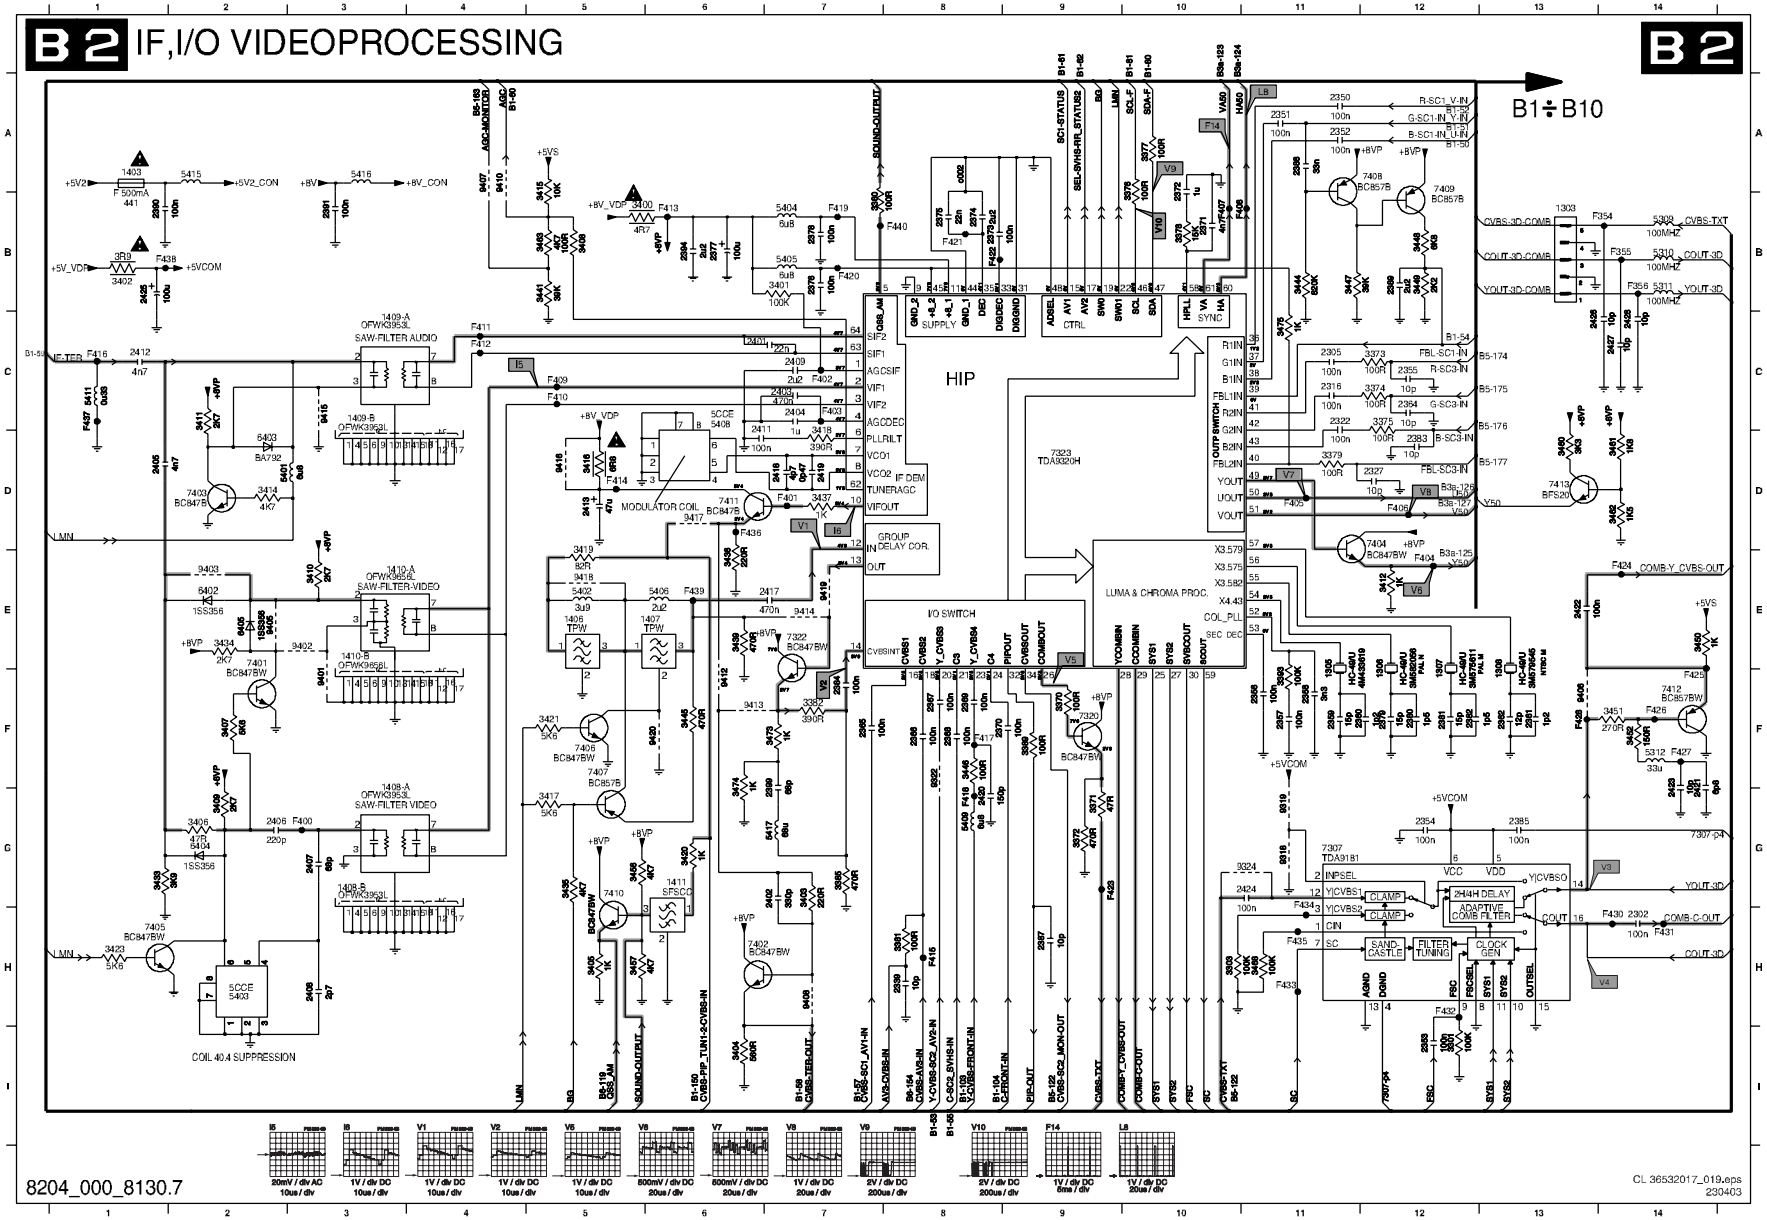

Small Signal Board: PICNIC

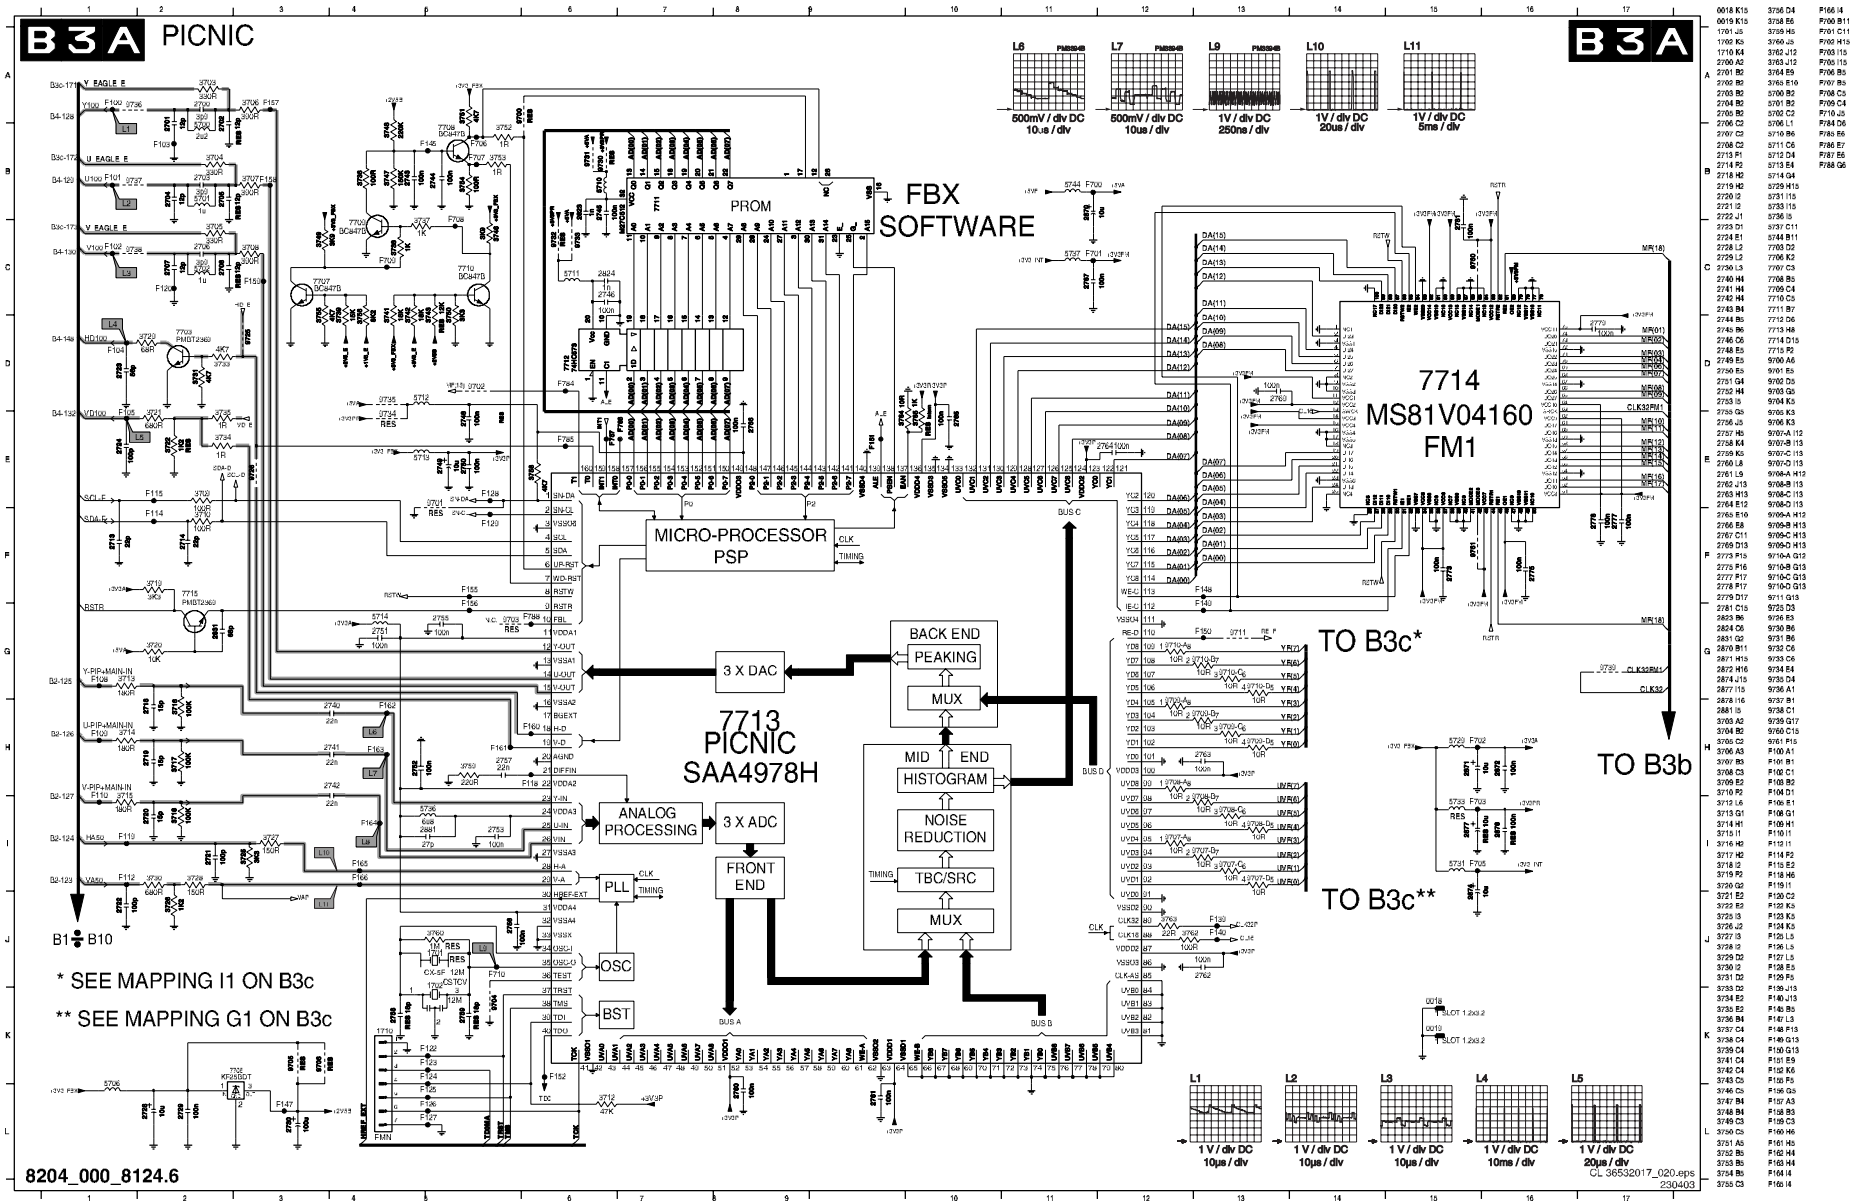

Small Signal Board: Diversity Tables

Small Signal Board: Falconic

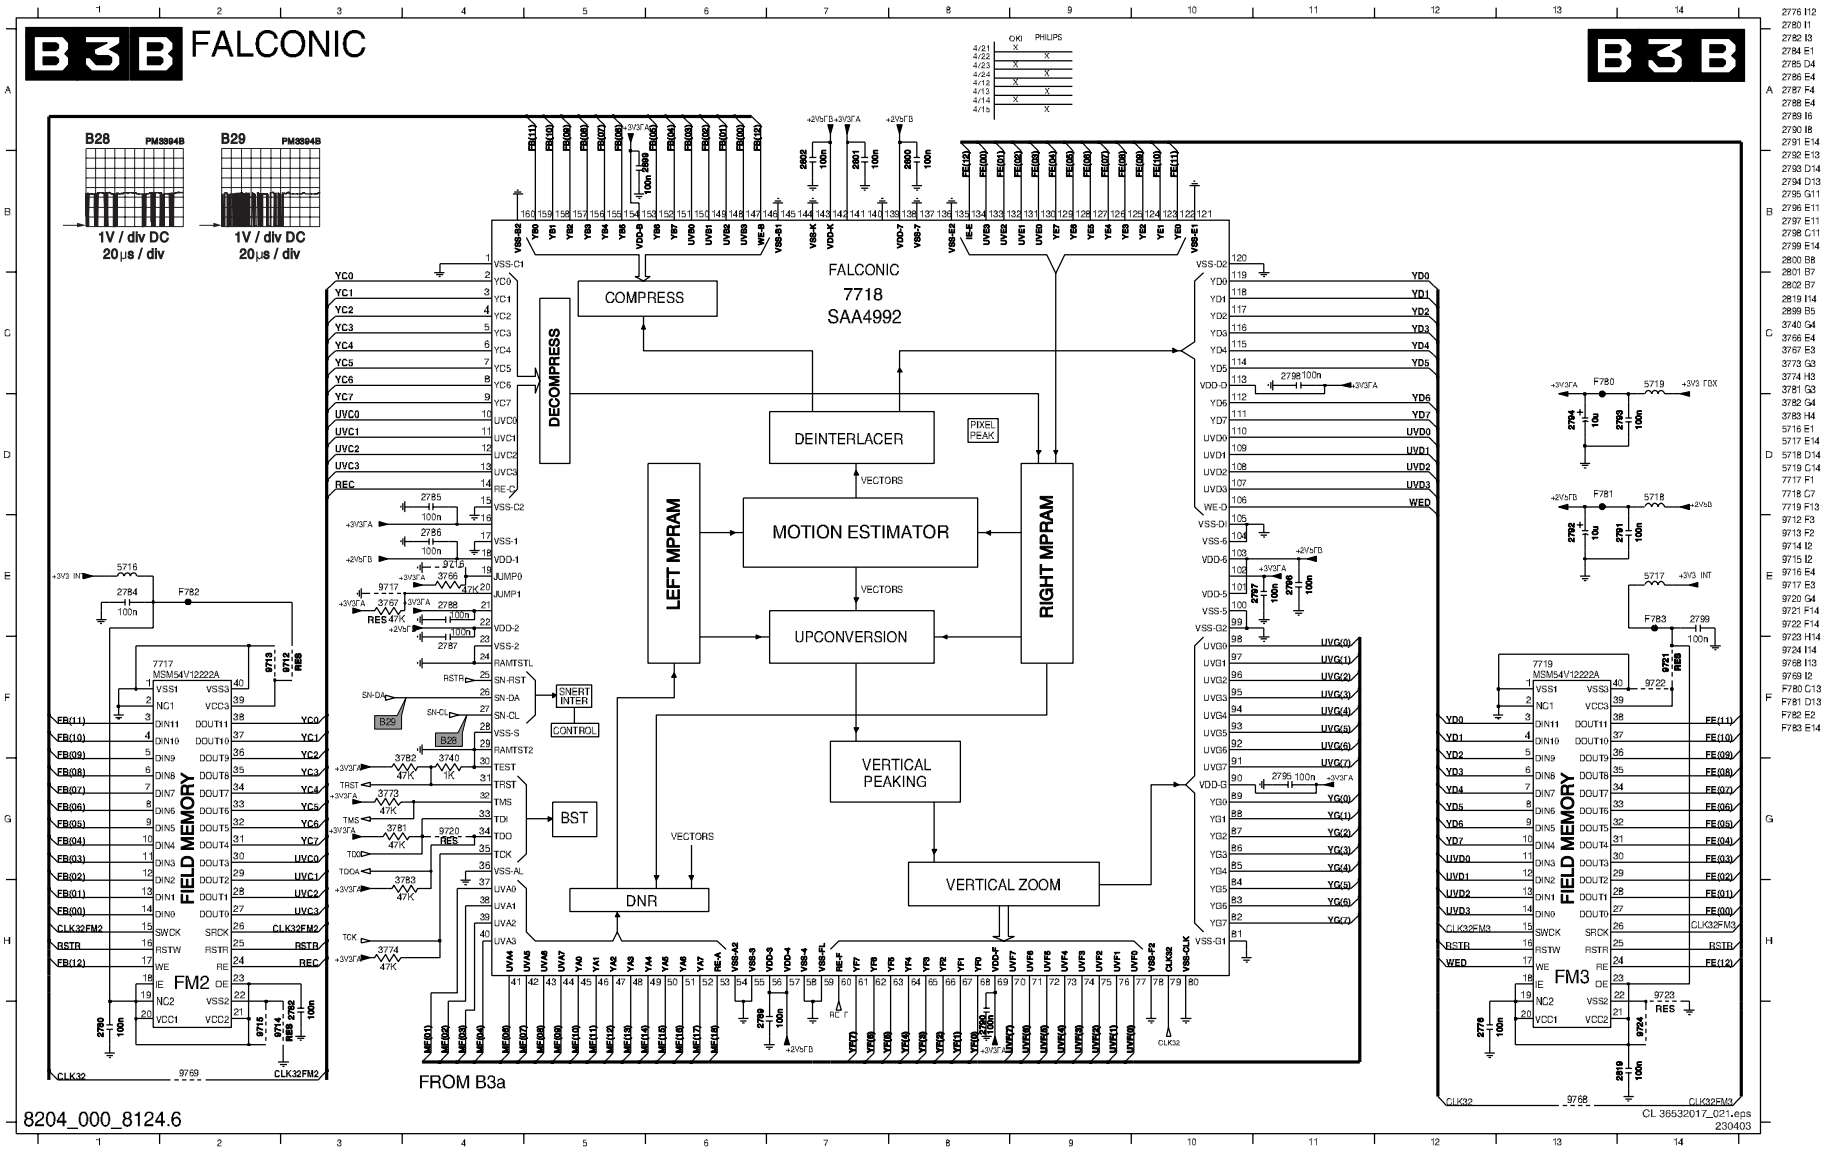

Small Signal Board: Eagle

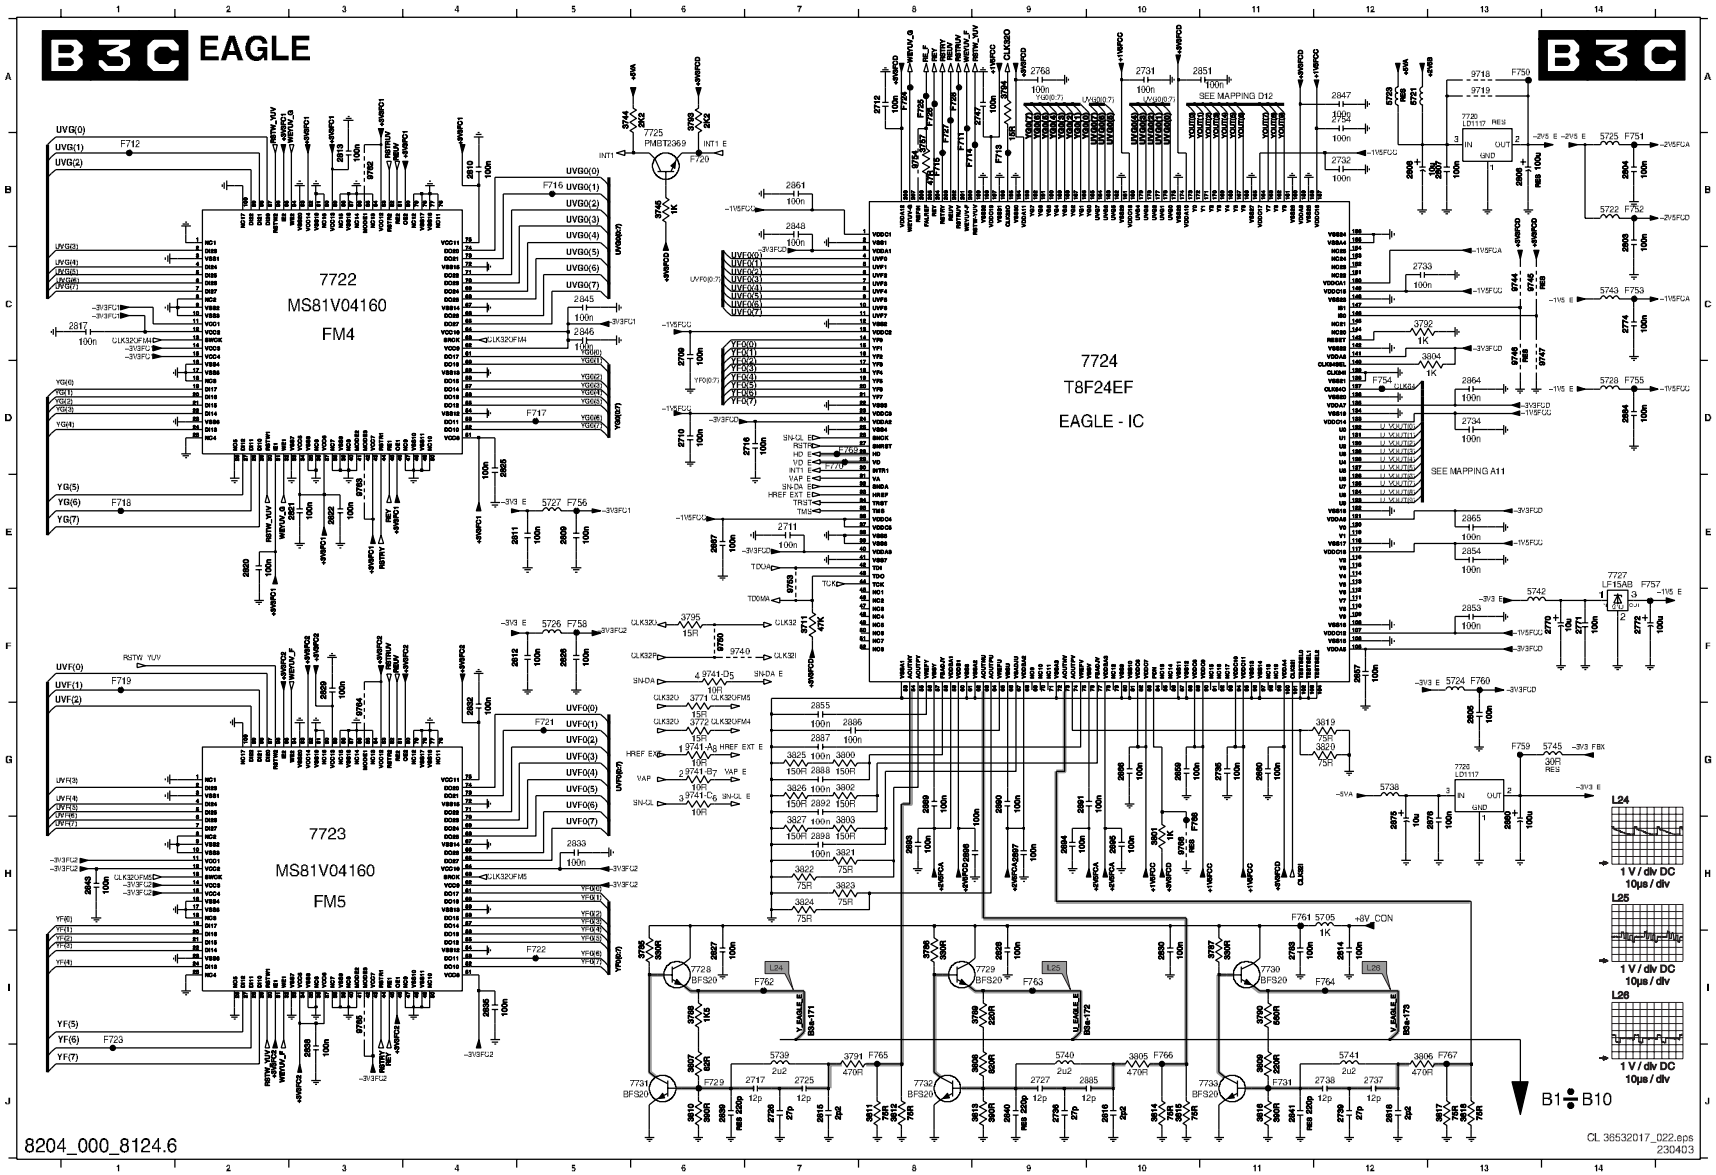

2709 D6 3795 F6 F762 I7
2710 D6 3800 G7 F763 I9
2711 E7 3801 H10 F764 I12
2712 A8 3802 G7 F765 J8
2716 D7 3803 H7 F766 J10
2717 J7 3804 C13 F767 J13
2725 J7 3805 J10 F768 H10
2726 J7 3806 J12 F769 D7
2727 J9 3807 J6 F770 D7
2731 A10 3808 J9
2732 B12 3809 J11
2733 C12 3810 J6
2734 D13 3811 J8
2735 G11 3812 J8
2736 J9 3813 J9
2737 J12 3814 J10
2738 J12 3815 J10
2739 J12 3816 J11
2747 A9 3817 J13
2754 A12 3818 J13
2768 A9 3819 G12
2770 F14 3820 G12
2771 F14 3821 H7
2772 F14 3822 H7
2774 C14 3823 H7
2783 I11 3824 H7
2803 B14 3825 G7
2804 B14 3826 G7
2805 G13 3827 H7
2806 B13 5705 H12
2807 B13 5721 A12
2808 B12 5722 B14
2809 E5 5723 A12
2810 B4 5724 F13
2811 E5 5725 B14
2812 F5 5726 F5
2813 B3 5727 E5
2814 I12 5728 D14
2815 J7 5738 G12
2816 J10 5739 J7
2817 C1 5740 J9
2818 J12 5741 J12
2820 E2 5742 F13
2821 E3 5743 C14
2822 E3 5745 G14
2825 D4 7720 A13
2826 F5 7722 C3
2827 I6 7723 H3
2828 I9 7724 D10
2829 F3 7725 B6
2830 I10 7726 G13
2832 G4 7727 E14
2833 H5 7728 I6
2835 I4 7729 I9
2838 J3 7730 I11
2839 J6 7731 J6
2840 J9 7732 J8
2841 J11 7733 J11
2843 H1 9718 A13
2845 C5 9719 A13
2846 C5 9740 F6
2847 A12 9741-A G6
2848 B7 9741-B G6
2851 A11 9741-C G6
2853 F13 9741-D F6
2854 E13 9744 C13
2855 G7 9745 C13
2857 F12 9746 C13
2859 G10 9747 C13
2860 G11 9750 F6
2861 B7 9753 E7
2864 D13 9754 B8
2865 E13 9762 B3
2866 G10 9763 E3
2867 E5 9767 G3
2875 H12 9765 I3
2876 H13 9766 H10
2880 H13 F711 B8
2884 D14 F712 B1
2885 J10 F713 B9
2886 G7 F714 B8
2887 G7 F715 B8
2888 G7 F716 B5
2889 G8 F717 D5
2890 G9 F718 E1
2891 G9 F719 F1
2892 G7 F720 B6
2893 H8 F721 G5
2894 H9 F722 I5
2895 H10 F723 I1
2896 H6 F724 A8
2897 H9 F725 A8
2898 H7 F726 A8
3711 F7 F727 B8
3744 A5 F728 A8
3745 B6 F729 J6
3757 B8 F731 J11
3771 F6 F750 A13
3772 G6 F751 B14
3785 I5 F752 B14
3786 I8 F753 C14
3787 I11 F754 D12
3788 I5 F755 D14
3789 I9 F756 E5
3790 I11 F757 E14
3791 J7 F758 F5
3792 C12 F759 G13
3793 A6 F760 F13
3794 A9 F761 H11

Small Signal Board: HOP

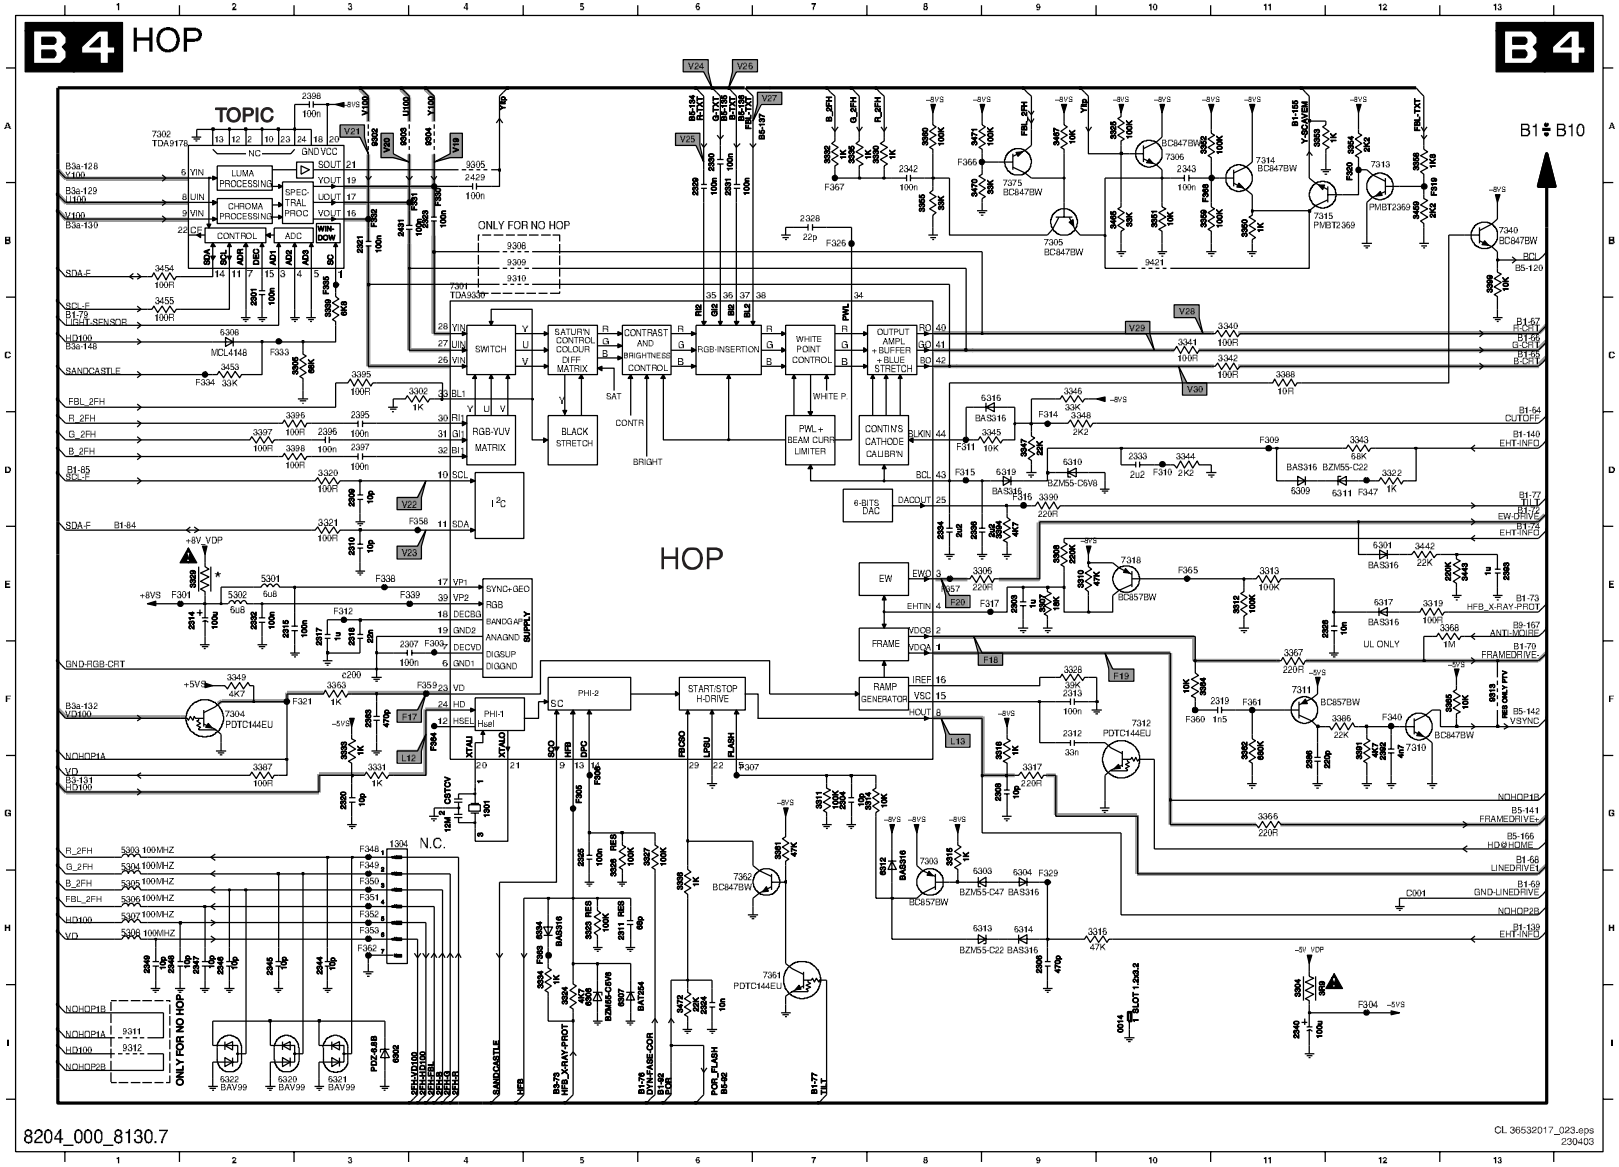

0014 I10 3347 D9 9310 B4
1301 G4 3348 D9 9311 I1
1304 G3 3349 F2 9312 I1
2301 B2 3350 B11 9313 F13
2303 E9 3351 B10 9421 B10
2304 G7 3352 A10 C001 H12
2306 H9 3353 A11 F301 E2
2307 F4 3354 A12 F303 E4
2308 G9 3355 B8 F304 I12
2309 D3 3358 A12 F305 G5
2310 E3 3359 B10 F306 G5
2311 H5 3360 A8 F307 G6
2312 F9 3361 G7 F309 D11
2313 F9 3362 F11 F310 D10
2314 E2 3363 F3 F311 D8
2315 E2 3364 F10 F312 E3
2317 E3 3365 F13 F314 C9
2318 E3 3366 G11 F315 D8
2319 F11 3367 F11 F316 D9
2320 G3 3368 E13 F317 E9
2321 B3 3386 F12 F319 B12
2323 B4 3387 G2 F320 A12
2324 I6 3388 C11 F321 F3
2325 G5 3390 D9 F326 B7
2326 E12 3391 F12 F329 H9
2328 B7 3394 E9 F330 B4
2329 B6 3395 C3 F331 B4
2330 A6 3396 D3 F332 B3
2331 B6 3397 D2 F333 C2
2332 E2 3398 D3 F334 C2
2333 D10 3399 B13 F335 B3
2334 E8 3442 E12 F338 E3
2336 E8 3443 E13 F339 E4
2340 I11 3453 C2 F340 F12
2342 A8 3454 B1 F347 D12
2343 A10 3455 C1 F348 G3
2344 H3 3459 B12 F349 G3
2345 H2 3465 B10 F350 H3
2346 H2 3467 A9 F351 H3
2347 H2 3470 B8 F352 H3
2348 H1 3471 A8 F353 H3
2349 H1 3472 I6 F357 E8
2363 F3 5301 E2 F358 D4
2386 G11 5302 E2 F359 F4
2392 F12 5303 G1 F360 F10
2393 E13 5304 G1 F361 F11
2395 D3 5305 H1 F362 H3
2396 D3 5306 H1 F363 H5
2397 D3 5307 H1 F364 F4
2398 A3 5308 H1 F365 E10
2429 A4 6301 E12 F366 A8
2431 B3 6302 I3 F367 B7
3302 C4 6303 H9 F368 B10
3304 I11 6304 H9 c200 F3
3305 C3 6306 I5
3306 E9 6307 I5
3307 E9 6308 C2
3308 E9 6309 D11
3310 E9 6310 D9
3311 G7 6311 D12
3312 E11 6312 G8
3313 E11 6313 H9
3314 G8 6314 H9
3315 G8 6316 C9
3316 H10 6317 E12
3317 G9 6319 D9
3318 F9 6320 I2
3319 E12 6321 I3
3320 D3 6322 I2
3321 D3 6334 H5
3322 D12 7301 B4
3323 H5 7302 A1
3324 I5 7303 G8
3325 A10 7304 F2
3326 G5 7305 B9
3327 G6 7306 A10
3328 F9 7310 F12
3329 E2 7311 F11
3330 A8 7312 F10
3331 G3 7313 A12
3332 A7 7314 A11
3333 F3 7315 B12
3334 H5 7318 E10
3335 A7 7340 B13
3336 H6 7361 H7
3339 C3 7362 H6
3340 C11 7375 B9
3341 C10 9302 A3
3342 C11 9303 A3
3343 D12 9304 A4
3344 D10 9305 A4
3345 D9 9308 B4
3346 C9 9309 B4

F17
1V / div DC
5ms / div
F18
500mV / div DC
5ms / div
F19
500mV / div DC
5ms / div
F20
500mV / div DC
5ms / div
L12
1V / div DC
10us / div
V19
1V / div DC
10us / div
V20
1V / div DC
10us / div
V21
1V / div DC
10us / div
V28
1V / div DC
10us / div
V29
1V / div DC
10us / div
V30
1V / div DC
10us / div

Small Signal Board: OTC

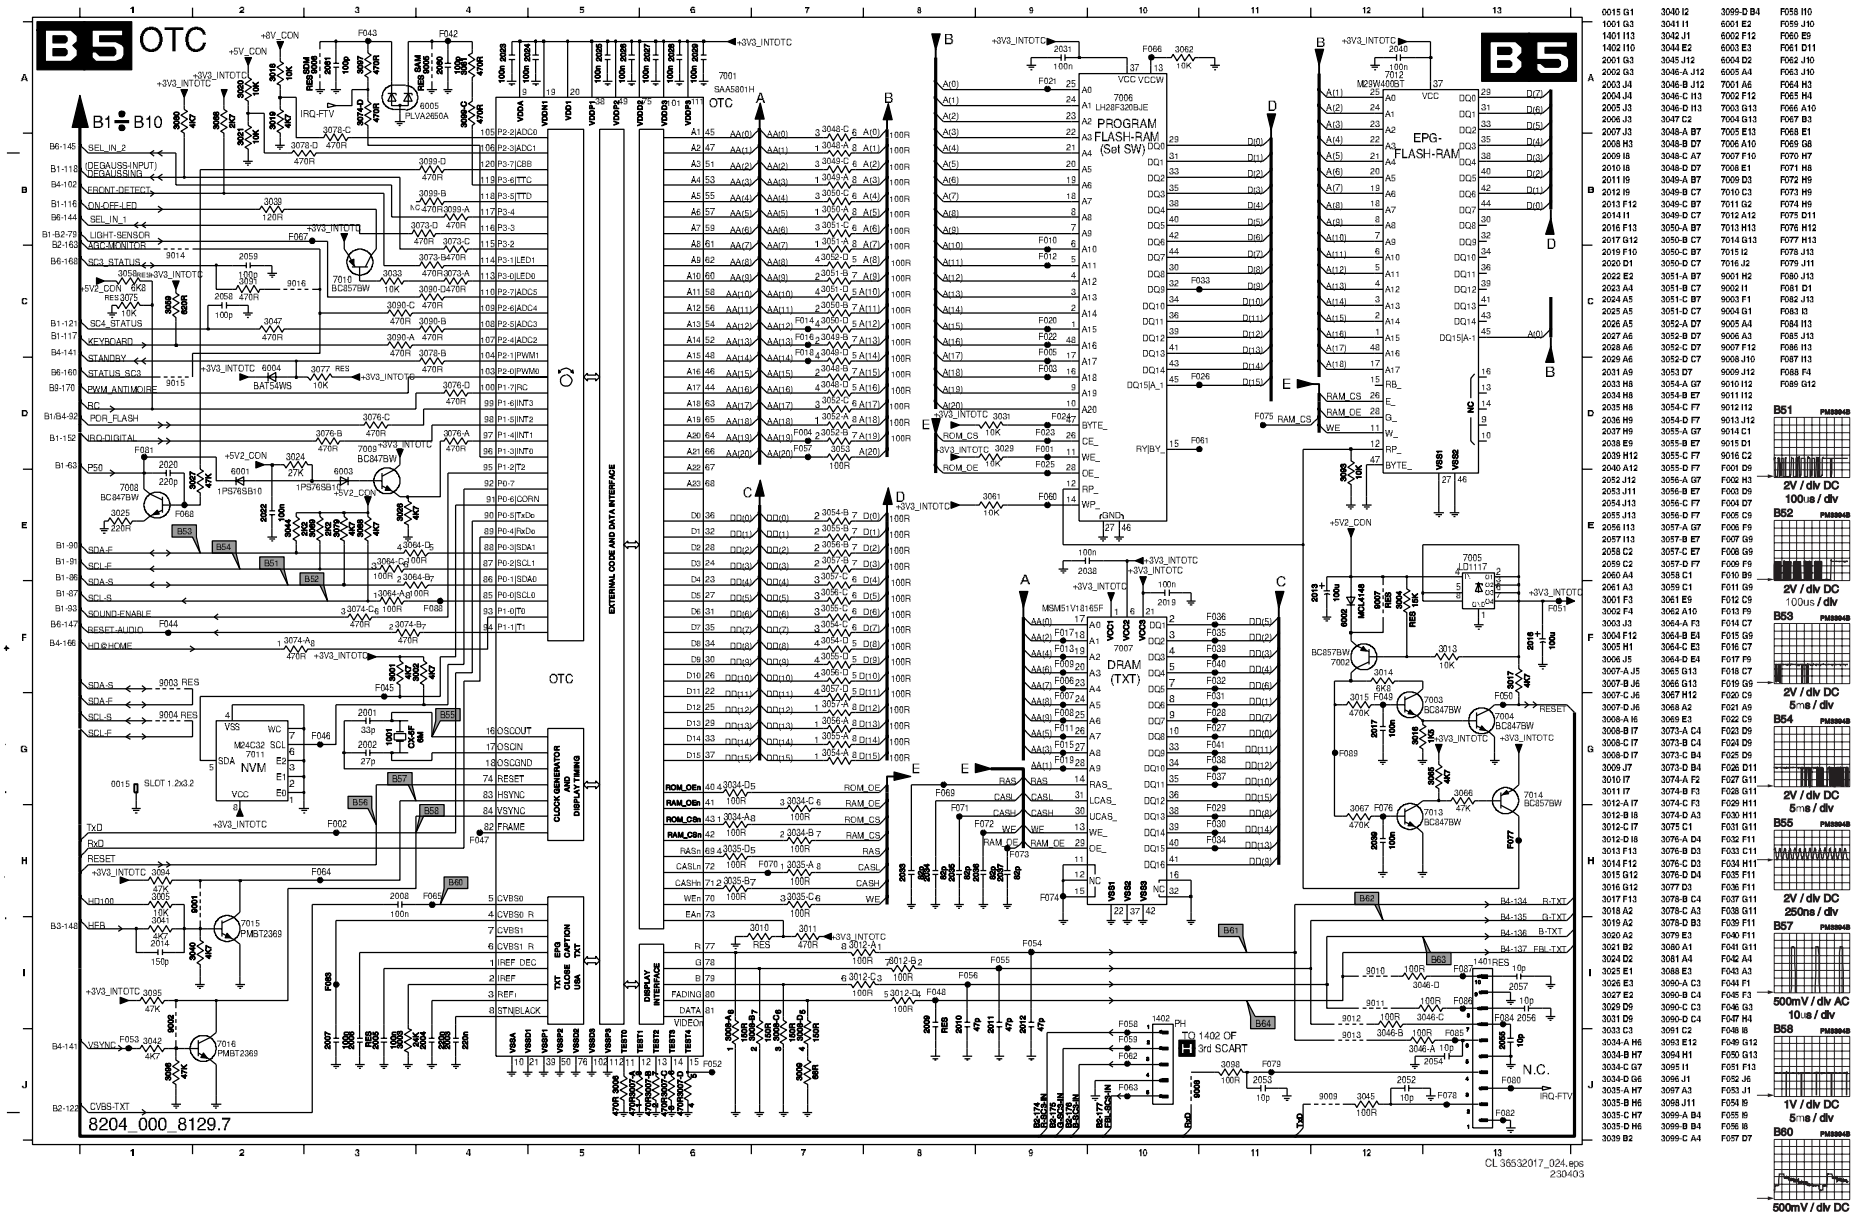

0015 G1	3040 I2	3099-D B4	F058 I10
1001 G3	3041 I1	6001 E2	F059 J10
1401 I13	3042 J1	6002 F12	F060 E9
1402 I10	3044 E2	6003 E3	F061 D11
2001 G3	3045 J12	6004 D2	F062 J10
2002 G3	3046-A J12	6005 A4	F063 J10
2003 J4	3046-B J12	7001 A6	F064 H3
2004 J4	3046-C I13	7002 F12	F065 H4
2005 J3	3046-D I13	7003 G13	F066 A10
2006 J3	3047 C2	7004 G13	F067 B3
2007 J3	3048-A B7	7005 E13	F068 E1
2008 H3	3048-B D7	7006 A10	F069 G8
2009 I8	3048-C A7	7007 F10	F070 H7
2010 I8	3048-D D7	7008 E1	F071 H8
2011 I9	3049-A B7	7009 D3	F072 H9
2012 I9	3049-B C7	7010 C3	F073 H9
2013 F12	3049-C B7	7011 G2	F074 H9
2014 I1	3049-D C7	7012 A12	F075 D11
2016 F13	3050-A B7	7013 H13	F076 H12
2017 G12	3050-B C7	7014 G13	F077 H13
2019 F10	3050-C B7	7015 I2	F078 J13
2020 D1	3050-D C7	7016 J2	F079 J11
2022 E2	3051-A B7	9001 H2	F080 J13
2023 A4	3051-B C7	9002 I1	F081 D1
2024 A5	3051-C B7	9003 F1	F082 J13
2025 A5	3051-D C7	9004 G1	F083 I3
2026 A5	3052-A D7	9005 A4	F084 I13
2027 A6	3052-B D7	9006 A3	F085 J13
2028 A6	3052-C D7	9007 F12	F086 I13
2029 A6	3052-D C7	9008 J10	F087 I13
2031 A9	3053 D7	9009 J12	F088 F4
2033 H8	3054-A G7	9010 I12	F089 G12
2034 H8	3054-B E7	9011 I12	
2035 H8	3054-C F7	9012 I12	
2036 I9	3054-D F7	9013 J12	
2037 H9	3055-A G7	9014 C1	
2038 E9	3055-B E7	9015 D1	
2039 H12	3055-C F7	9016 C2	
2040 A12	3055-D F7	F001 D9	
2052 J12	3056-A G7	F002 H3	
2053 J11	3056-B E7	F003 D9	
2054 J13	3056-C F7	F004 D7	
2055 J13	3056-D F7	F005 C9	
2056 I13	3057-A G7	F006 F9	
2057 I13	3057-B E7	F007 G9	
2058 C2	3057-C E7	F008 G9	
2059 C2	3057-D F7	F009 F9	
2060 A4	3058 C1	F010 B9	
2061 A3	3059 C1	F011 G9	
3001 F3	3061 E5	F012 C9	
3002 F4	3062 A10	F013 F9	
3003 J3	3064-A F3	F014 C7	
3004 F12	3064-B E4	F015 G9	
3005 H1	3064-C E3	F016 C7	
3006 J5	3064-D E4	F017 F9	
3007-A J5	3065 G13	F018 C7	
3007-B J6	3066 G13	F019 G9	
3007-C J6	3067 H12	F020 C9	
3007-D J6	3068 A2	F021 A9	
3008-A I6	3069 E3	F022 C9	
3008-B I7	3073-A C4	F023 D9	
3008-C I7	3073-B C4	F024 D9	
3008-D I7	3073-C B4	F025 D9	
3009 J7	3073-D B4	F026 D11	
3010 I7	3074-A F2	F027 G11	
3011 I7	3074-B F3	F028 G11	
3012-A I7	3074-C F3	F029 H11	
3012-B I8	3074-D A3	F030 H11	
3012-C I7	3075 C1	F031 G11	
3012-D I8	3076-A D4	F032 C11	
3013 F13	3076-B D3	F033 C11	
3014 F12	3076-C D3	F034 H11	
3015 G12	3076-D D4	F035 F11	
3016 G12	3077 D3	F036 F11	
3017 F13	3078-B C4	F037 G11	
3018 A2	3078-C A3	F038 G11	
3019 A2	3078-D B3	F039 F11	
3020 A2	3079 E3	F040 F11	
3021 B2	3080 A1	F041 G11	
3024 D2	3081 A4	F042 A4	
3025 E1	3088 E3	F043 A3	
3026 E3	3090-A C3	F044 F1	
3027 E2	3090-B C4	F045 F3	
3029 D9	3090-C C3	F046 G3	
3031 D9	3090-D C4	F047 H4	
3033 C3	3091 C2	F048 I8	
3034-A H6	3093 E12	F049 G12	
3034-B H7	3094 H1	F050 G13	
3034-C G7	3095 I1	F051 F13	
3034-D G6	3096 J1	F052 J6	
3035-A H7	3097 A3	F053 J1	
3035-B H6	3098 J11	F054 I8	
3035-C H7	3099-A B4	F055 I8	
3035-D H6	3099-B B4	F056 I8	
3039 B2	3099-C A4	F057 D7	

Small Signal Board: Audio Demodulator

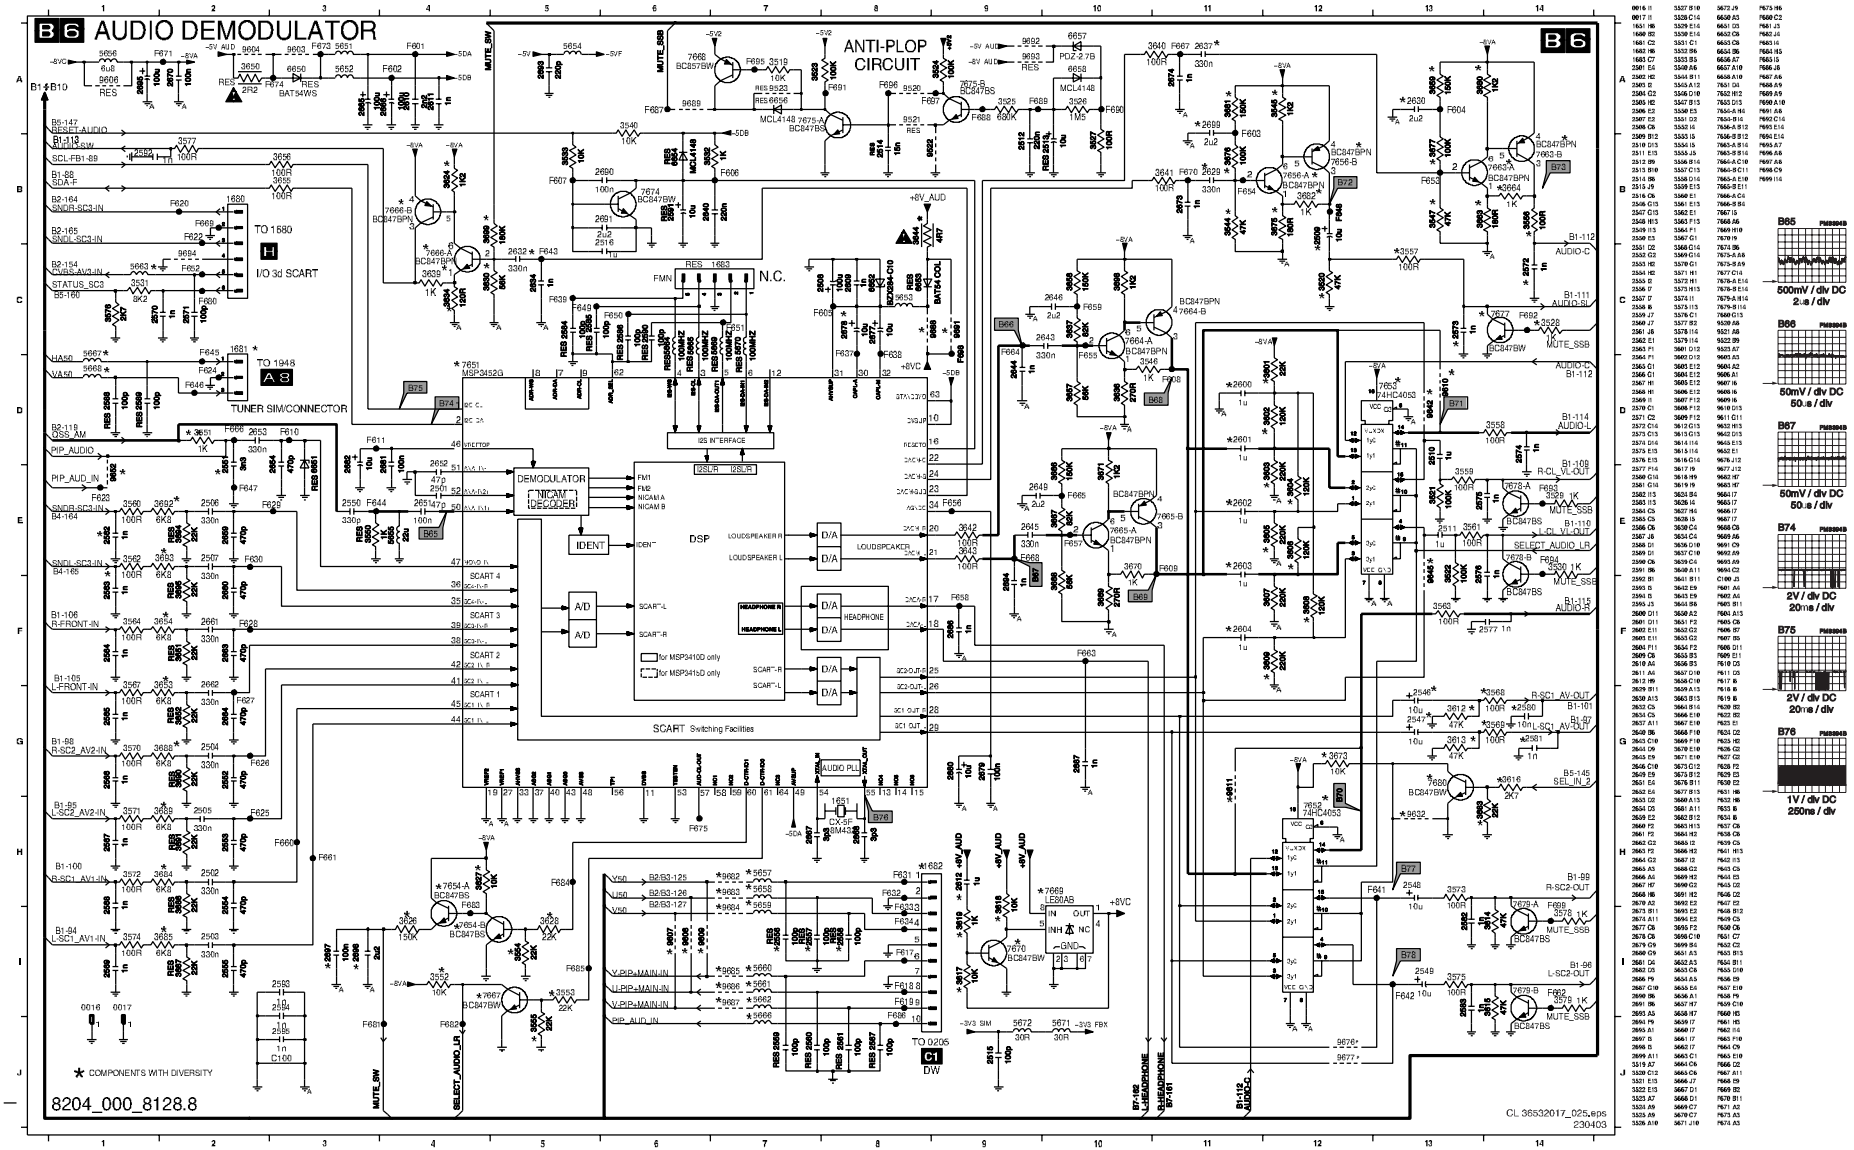

Small Signal Board: Anti-moiré

2062 B3	2065 D2	3022 A2	3030 B4	3037 C2	3060 D1	3071 D2	6007 C2	7019 D2	F091 A2	F094 C2	F097 D2	
2063 C4	2066 A3	3023 A3	3032 B3	3038 C2	3063 D2	3072 C4	7017 A2	7020 E1	F092 B3	F095 C2		
2064 C2	2067 E2	3028 B3	3036 B4	3043 D2	3070 E1	6006 C2	7018 C3	F090 A3	F093 B2	F096 D1		

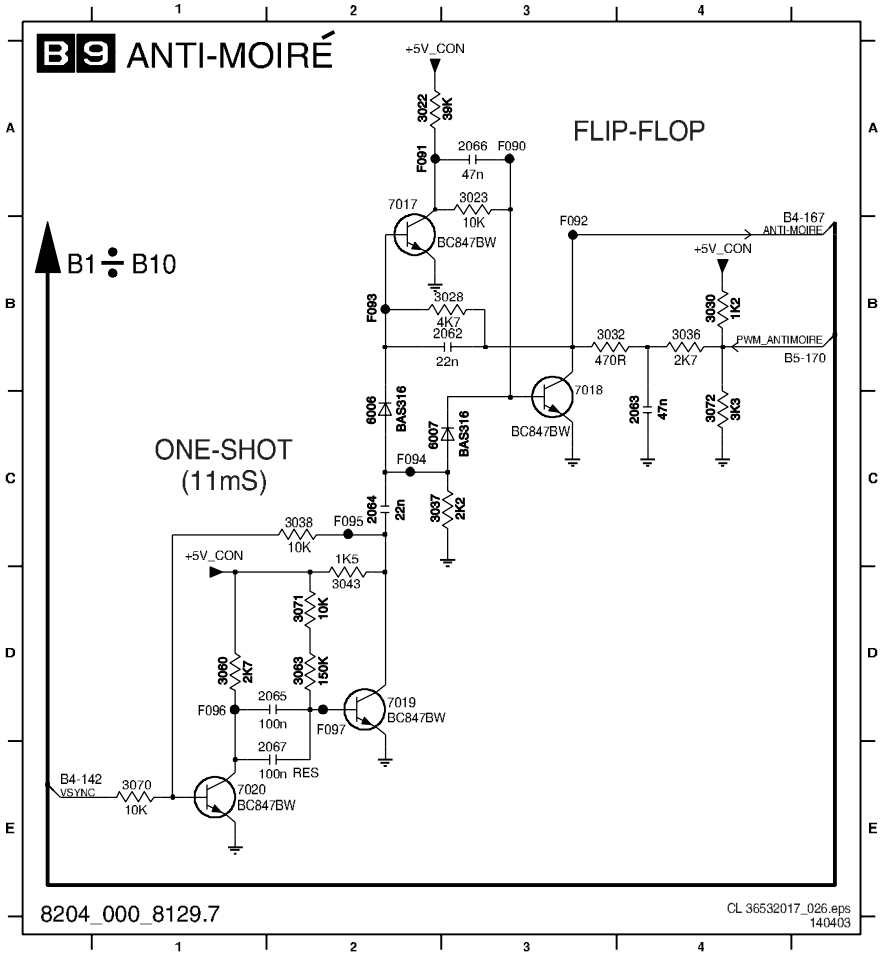

Personal Notes:

Small Signal Board: Headphone Amplifier

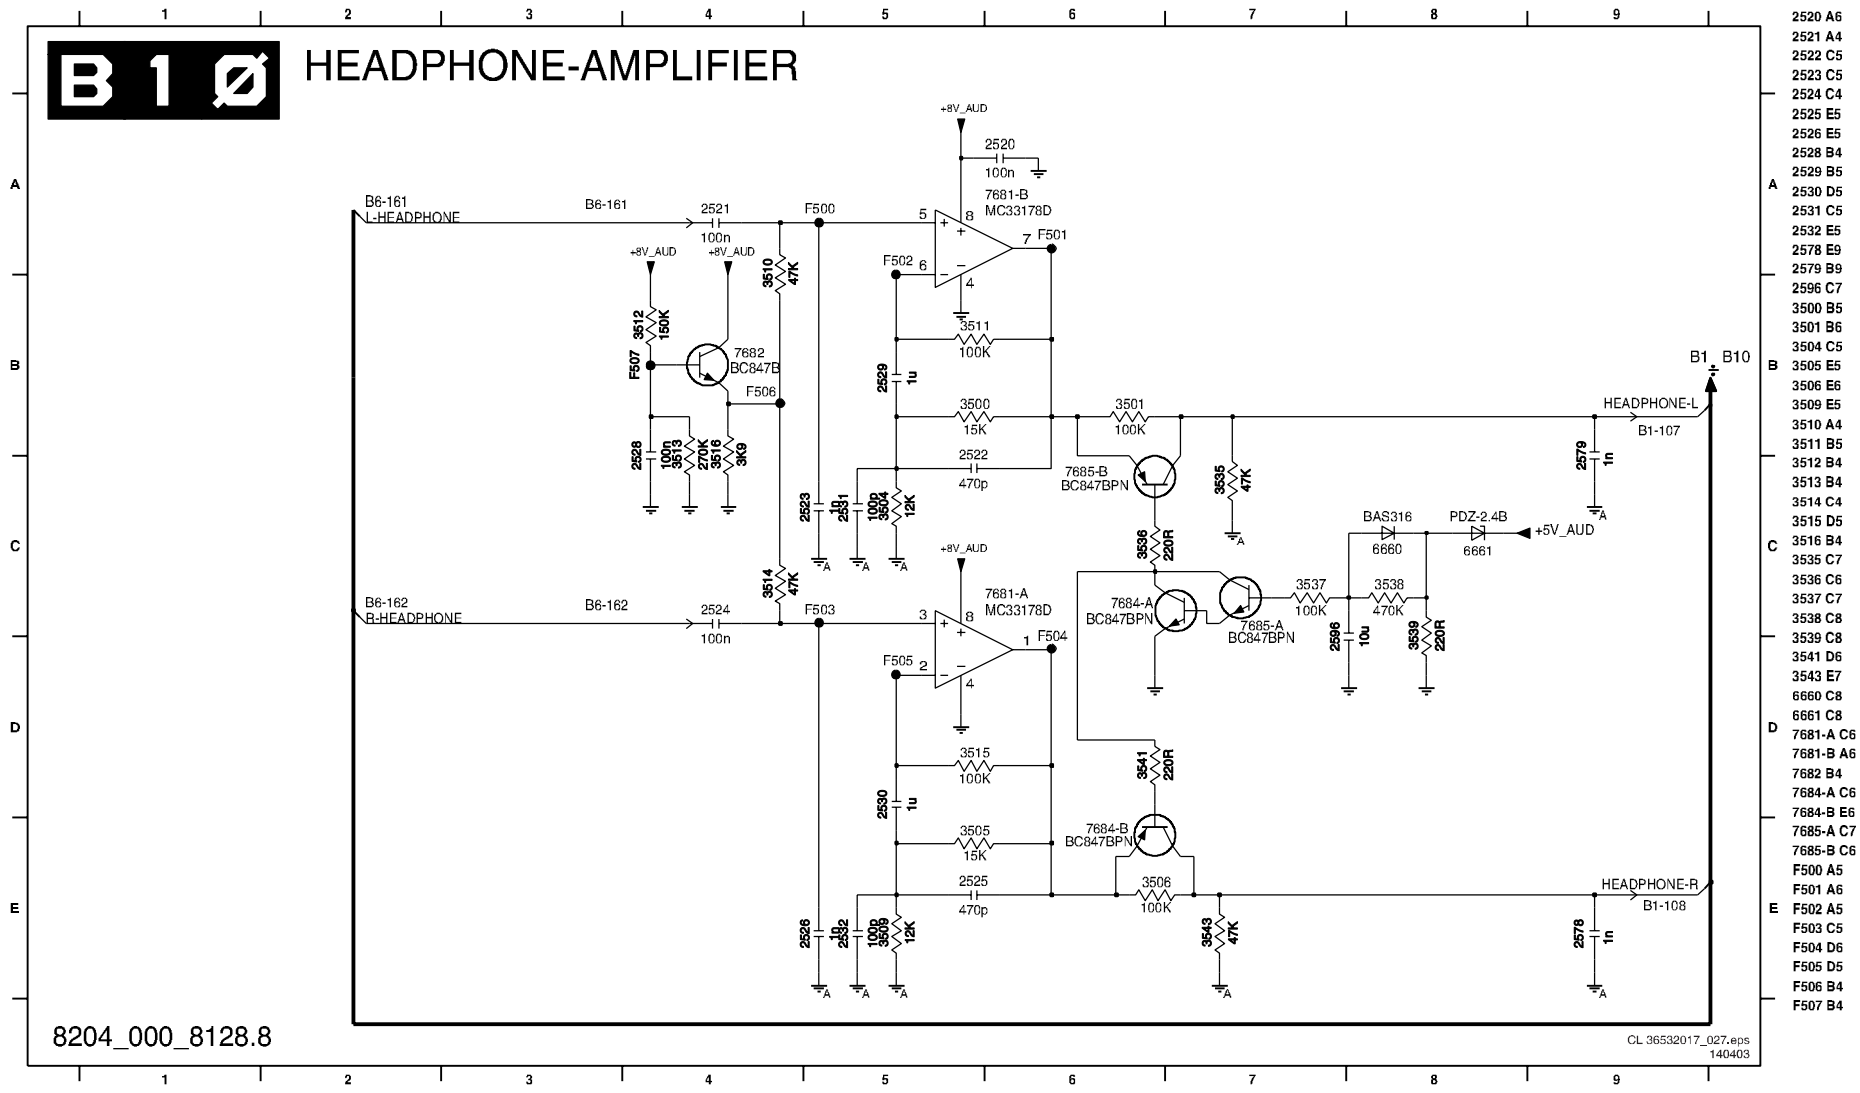

2520 A6
2521 A4
2522 C5
2523 C5
2524 C4
2525 E5
2526 E5
2528 B4
2529 B5
2530 D5
2531 C5
2532 E5
2578 E9
2579 B9
2596 C7
3500 B5
3501 B6
3504 C5
3505 E5
3506 E6
3509 E5
3510 A4
3511 B5
3512 B4
3513 B4
3514 C4
3515 D5
3516 B4
3535 C7
3536 C6
3537 C7
3538 C8
3539 C8
3541 D6
3543 E7
6660 C8
6661 C8
7681-A C6
7681-B A6
7682 B4
7684-A C6
7684-B E6
7685-A C7
7685-B C6
F500 A5
F501 A6
F502 A5
F503 C5
F504 D6
F505 D5
F506 B4
F507 B4

Layout Small Signal Board (Overview Top Side)

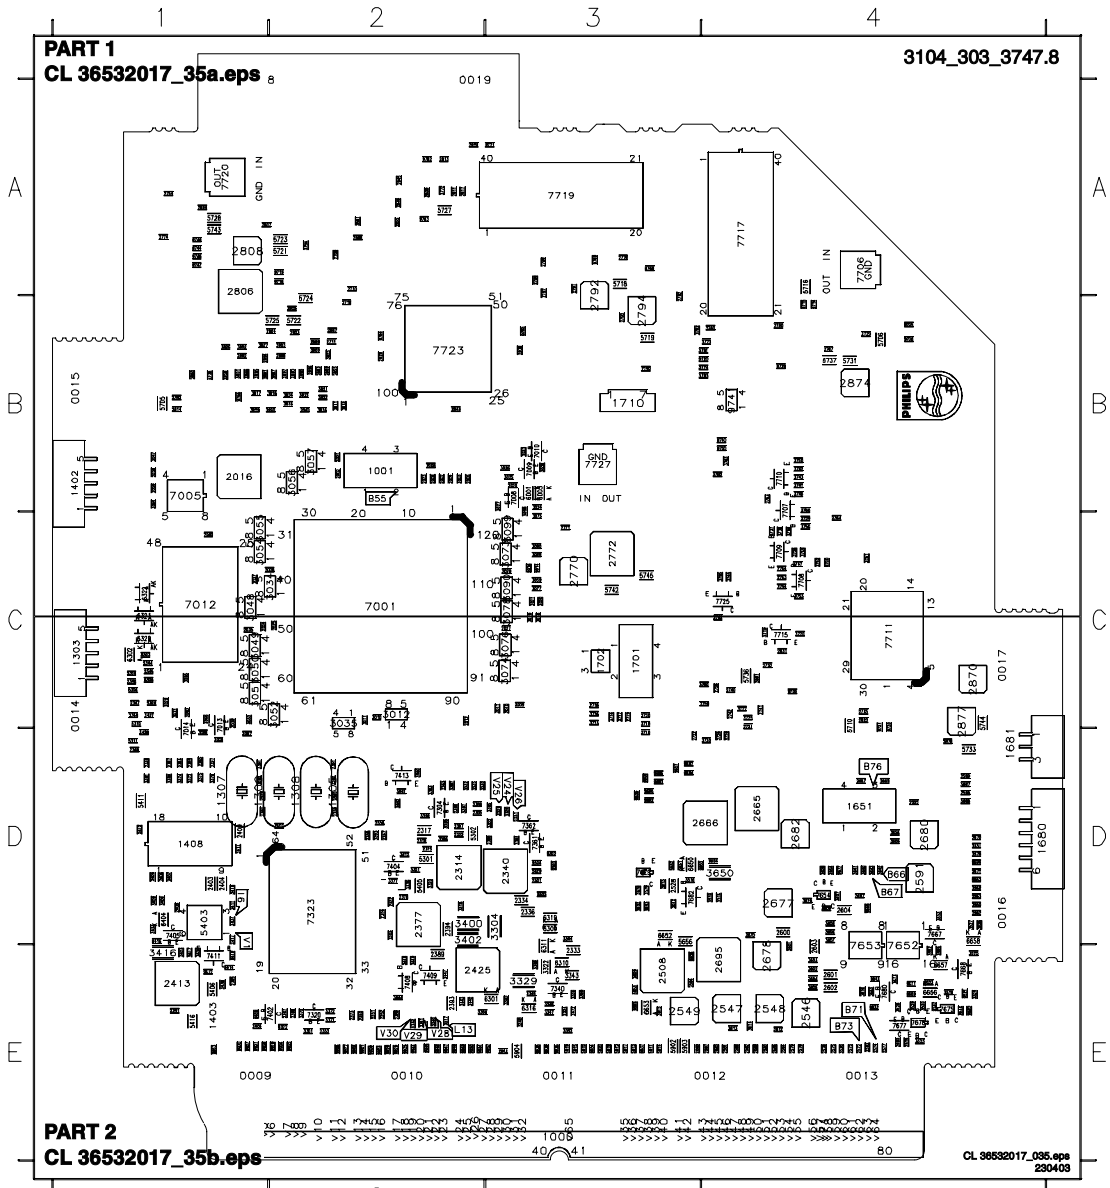

0009 E1	2362 D2	2678 E4	2894 B1	3377 D2	3683 E4	5710 C4	7711 C4	9928 E2
0010 E2	2363 D2	2680 D4	2895 B1	3379 D1	3713 C3	5716 A4	7715 C4	9929 E2
0011 E3	2364 D1	2682 D4	2896 B2	3381 D1	3714 C3	5718 A3	7717 A4	9935 E3
0012 E4	2365 E1	2687 D4	2897 B2	3387 D2	3715 D3	5719 B3	7719 A3	9937 E3
0013 E4	2367 E2	2693 E4	2898 B2	3388 E3	3716 C3	5721 A2	7720 A1	9938 E3
0014 D1	2368 E2	2695 D4	2912 E3	3389 D1	3717 C3	5722 B2	7723 A2	9939 E3
0015 B1	2373 E2	2709 A2	3003 B2	3390 E3	3718 C3	5723 A2	7725 C4	9944 E2
0016 D4	2376 D2	2710 A2	3004 D1	3393 D2	3719 C4	5724 B2	7727 B3	9945 E2
0017 C4	2377 D2	2711 B2	3010 C2	3394 D2	3720 C4	5725 B2	9014 C3	9946 E2
0018 A1	2379 D1	2716 B2	3011 C2	3395 D3	3725 C4	5727 A2	9016 C3	9947 E2
0019 A2	2380 D1	2718 C3	3012 C2	3396 D2	3726 D4	5728 A1	9302 D3	9948 E2
1000 E3	2381 D1	2719 C3	3018 C3	3397 D2	3727 C4	5731 B4	9303 D3	9949 E2
1001 B2	2382 D1	2720 C3	3019 C3	3398 D2	3728 D4	5733 D4	9304 D3	9950 E2
1303 C1	2383 D1	2721 C4	3020 C3	3399 E3	3730 D4	5736 C4	9305 D3	9951 E2
1305 D2	2387 D1	2722 D3	3021 C3	3400 E3	3736 C4	5737 B4	9322 E2	9952 E3
1306 D2	2388 E2	2729 B4	3024 B3	3402 D2	3737 C4	5742 C3	9408 E1	9953 E1
1307 D1	2389 E2	2735 B1	3025 B3	3404 E1	3738 C4	5743 A1	9412 E1	9954 E3
1308 D2	2391 E1	2740 C4	3026 B3	3406 D1	3739 C4	5744 C4	9414 E1	
1402 B1	2393 E2	2741 C4	3027 B3	3409 D1	3740 B4	5745 C3	9416 D1	
1403 E1	2394 D2	2742 C4	3029 C1	3411 D1	3741 B4	5902 E3	9417 E1	
1408 D1	2395 D2	2743 C4	3031 C1	3412 D2	3742 B4	5903 E3	9419 E1	
1651 D4	2396 D2	2744 C4	3033 B3	3416 E1	3743 B4	5904 E3	9520 E4	
1680 D4	2397 D2	2745 C4	3034 C2	3418 D1	3744 C4	5910 E3	9521 E4	
1681 D4	2398 D3	2752 C4	3035 C2	3423 E1	3745 C4	5911 E3	9522 E4	
1701 C3	2401 D2	2754 A1	3039 B3	3433 D1	3746 B4	5912 E3	9523 E4	
1702 C3	2403 D1	2758 C4	3047 B1	3436 E1	3747 C4	5913 E3	9603 D3	
1710 B3	2404 D1	2759 C4	3048 C1	3437 D1	3748 C4	5914 E3	9604 D4	
2001 B2	2405 D1	2763 B4	3049 C2	3439 E1	3749 C4	5915 E3	9606 E3	
2002 B2	2406 D1	2764 C4	3050 C2	3442 E2	3750 B4	5917 E3	9607 D3	
2004 B2	2407 D1	2767 B4	3051 C2	3443 E2	3751 C4	5918 E3	9608 D3	
2005 B2	2408 D1	2770 C3	3052 C1	3444 E2	3752 C4	5919 E3	9609 D3	
2006 B2	2409 D1	2771 C3	3053 C1	3447 E2	3753 C4	5920 E3	9611 E4	
2007 B2	2411 D1	2772 C3	3054 C1	3448 E2	3754 C4	6001 B3	9632 E4	
2008 B2	2412 D1	2774 A1	3055 C1	3449 E2	3755 B4	6003 B3	9642 E4	
2009 C3	2413 E1	2776 A3	3056 B2	3460 D2	3756 C4	6301 E3	9645 D4	
2010 C3	2417 D1	2780 B4	3057 B2	3461 D2	3760 C4	6302 C1	9677 D4	
2011 C3	2425 E3	2782 B3	3058 B3	3462 D2	3762 B4	6309 D3	9682 D3	
2012 C2	2427 C1	2783 B1	3059 C3	3472 E3	3763 B4	6310 E3	9683 D3	
2016 B1	2428 D1	2790 B3	3062 C1	3510 D4	3772 A2	6311 E3	9684 D3	
2020 B3	2429 D3	2791 A3	3065 C1	3512 D3	3773 B4	6316 E3	9685 D3	
2023 B2	2508 E3	2792 B3	3066 D1	3513 D3	3774 B4	6319 D3	9686 D3	
2025 C2	2514 E4	2793 B3	3067 D1	3514 D4	3781 B4	6320 C1	9687 D3	
2027 C3	2515 E4	2794 B3	3068 C3	3516 D3	3782 B3	6321 C1	9688 E3	
2028 C2	2528 D3	2796 A3	3073 C3	3519 E4	3783 B4	6322 C1	9689 E4	
2029 C3	2546 E4	2797 A3	3074 C3	3520 E4	3793 C4	6404 D1	9692 D3	
2034 C1	2547 E4	2798 A3	3075 C3	3523 E4	3794 A2	6650 D4	9693 D3	
2035 C1	2548 E4	2803 B2	3076 C3	3524 E4	3800 B2	6652 D3	9694 D4	
2037 C1	2549 E3	2804 B2	3077 C3	3525 E4	3801 B1	6653 E3	9700 C4	
2039 C1	2562 D4	2805 B2	3078 C2	3526 D4	3802 B1	6656 E4	9703 C4	
2040 C1	2563 D4	2806 B1	3080 C3	3527 D4	3803 B2	6657 E4	9705 B4	
2058 B1	2564 E4	2807 A1	3090 C3	3528 E4	3811 B2	6658 E4	9706 B4	
2059 B1	2565 E4	2808 A1	3091 B1	3529 E4	3812 B2	7001 B2	9714 B4	
2301 D3	2566 E4	2809 A2	3093 C1	3530 E4	3814 B2	7005 B1	9715 B4	
2305 D2	2567 E4	2811 A2	3099 C3	3531 D4	3815 B2	7008 B3	9718 A2	
2314 D2	2568 E4	2813 A2	3301 E2	3552 E4	3817 B1	7009 B3	9719 A2	
2315 D2	2569 E3	2814 B1	3302 D3	3553 D4	3818 B2	7010 B3	9720 B4	
2316 D2	2570 D4	2817 A2	3304 D3	3554 D4	3819 B1	7012 C1	9721 A3	
2317 D2	2571 D4	2819 A2	3306 E2	3555 E4	3820 B2	7013 C1	9730 C4	
2318 D2	2572 E4	2823 C4	3317 E2	3560 D4	3821 B2	7014 D1	9731 C4	
2322 D2	2573 E4	2825 A2	3318 D2	3562 D4	3822 B2	7304 D2	9739 B4	
2324 E3	2574 E4	2829 B2	3320 D2	3576 D4	3823 B2	7320 E2	9740 B4	
2327 D1	2575 E4	2831 C4	3321 D2	3578 D3	3824 B2	7323 D2	9741 B4	
2329 D3	2576 E4	2838 B3	3322 E3	3579 D3	3825 B2	7340 E3	9744 A1	
2330 D3	2577 E4	2840 B2	3329 E3	3601 E4	3826 B1	7361 D3	9745 A1	
2331 D3	2578 E4	2843 B2	3330 D2	3602 E4	3827 B1	7362 D3	9746 A1	
2332 D2	2579 E4	2845 A2	3332 D2	3603 E4	5301 D2	7402 E1	9747 A1	
2333 E3	2580 E4	2846 A2	3335 D2	3604 E4	5302 D2	7404 D2	9750 B4	
2334 D3	2581 E4	2848 A2	3336 E3	3605 E4	5303 C1	7405 D1	9762 A2	
2336 D3	2582 E4	2855 B2	3340 E2	3606 D4	5304 C1	7408 E2	9763 A2	
2339 D1	2583 E4	2859 B1	3341 E2	3607 D4	5305 C1	7409 E2	9764 B2	
2340 D3	2588 D4	2860 B1	3342 E2	3608 D4	5306 C1	7411 E1	9765 B3	
2344 C1	2589 D4	2861 A2	3343 E3	3609 D4	5309 C1	7413 D2	9766 B1	
2345 C1	2591 D4	2866 B1	3344 D3	3612 E4	5310 C1	7652 D4	9768 A3	
2346 C1	2592 E4	2867 B2	3345 E3	3613 E4	5311 D1	7653 D4	9769 A3	
2347 C1	2593 D4	2870 C4	3346 E3	3614 E4	5403 D1	7654 D4	9901 E2	
2348 C1	2594 E3	2874 B4	3347 E3	3615 E3	5405 D2	7667 D4	9902 E2	
2349 D1	2600 D4	2877 C4	3348 E3	3616 E4	5406 E1	7668 E4	9903 E2	
2350 E2	2601 E4	2878 D4	3349 D2	3626 D4	5411 D1	7675 E4	9904 E2	
2351 E2	2602 E4	2881 C4	3353 E3	3627 D4	5416 E1	7677 E4	9905 E2	
2352 E2	2603 E4	2884 A1	3361 D3	3628 D4	5651 D3	7678 E4	9906 E2	
2353 E2	2604 D4	2886 B2	3363 D2	3640 D4	5652 D3	7679 D3	9907 E1	
2355 D1	2609 E3	2887 B2	3370 E2	3641 D4	5653 E3	7680 E4	9908 E1	
2356 D2	2665 D4	2888 B2	3371 E2	3642 D4	5656 D3	7682 D4	9909 E2	
2357 D2	2666 D3	2889 B2	3372 E2	3643 D4	5663 D4	7706 A4	9919 E2	
2358 D2	2667 D4	2890 B2	3373 D1	3650 D4	5667 D4	7707 C4	9920 E1	
2359 D2	2668 D4	2891 B1	3374 D1	3655 D4	5668 D4	7708 C4	9921 E1	
2360 D2	2670 D4	2892 B1	3375 D1	3656 D4	5705 B1	7709 C4	9925 E2	
2361 D2	2677 D4	2893 B2	3376 D2	3673 E4	5706 B4	7710 B4	9927 E2	

Layout Small Signal Board (Part 1 Top Side)

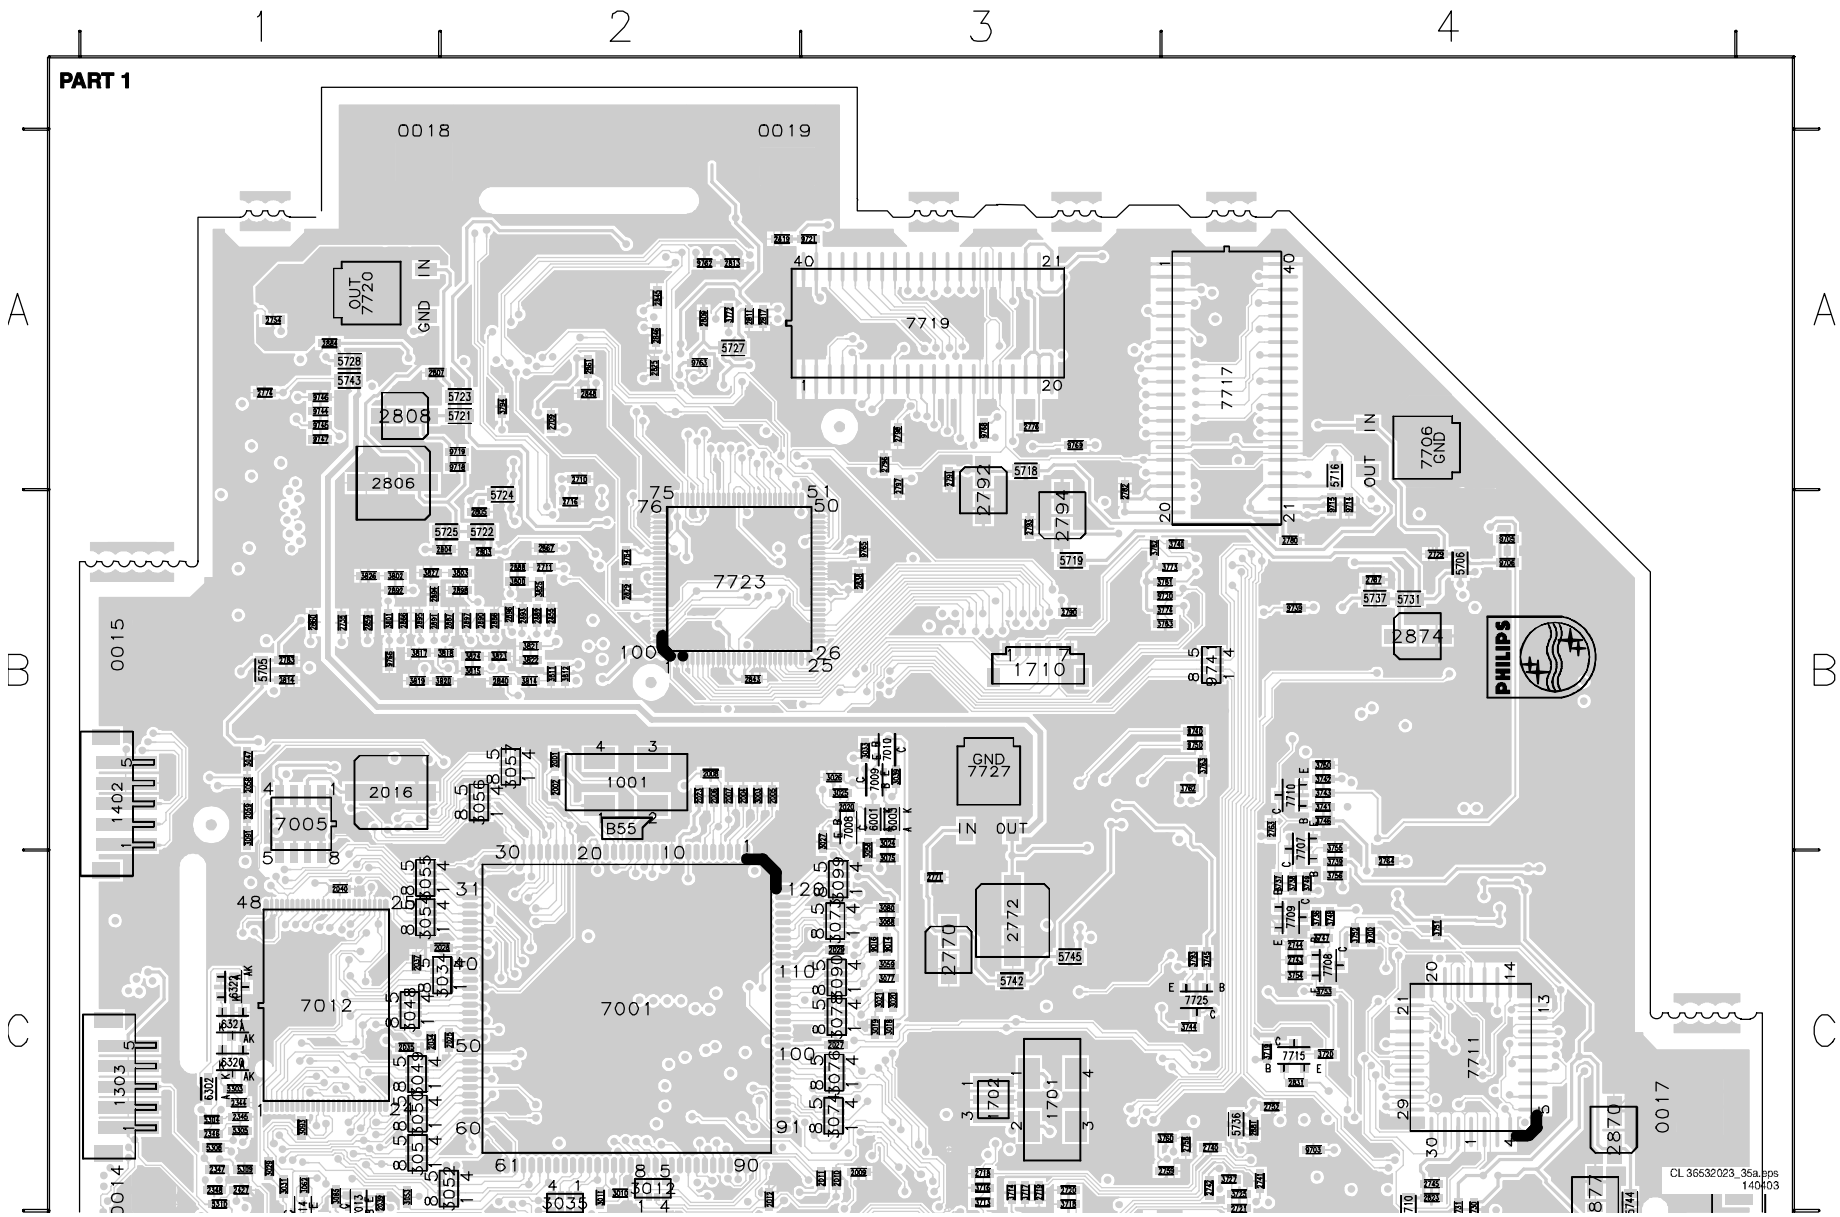

Layout Small Signal Board (Part 2 Top Side)

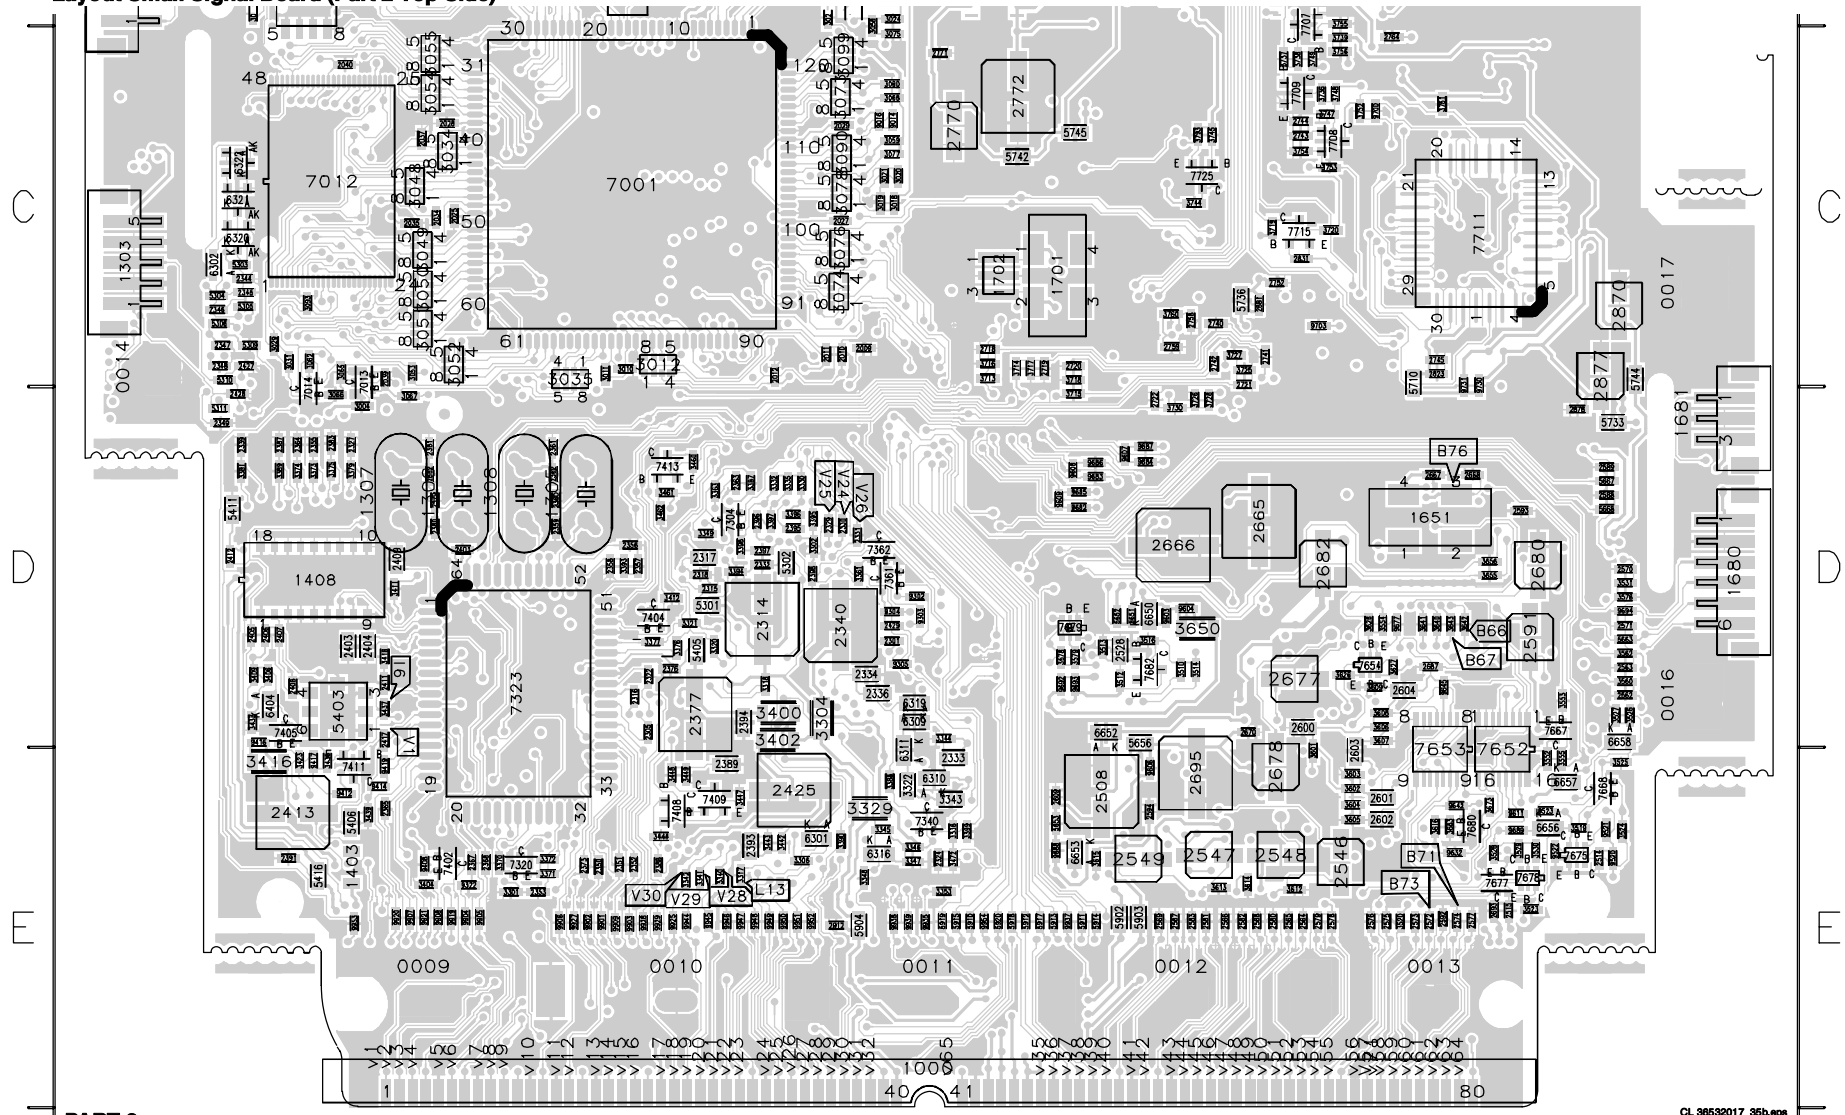

Layout Small Signal Board (Overview Bottom Side)

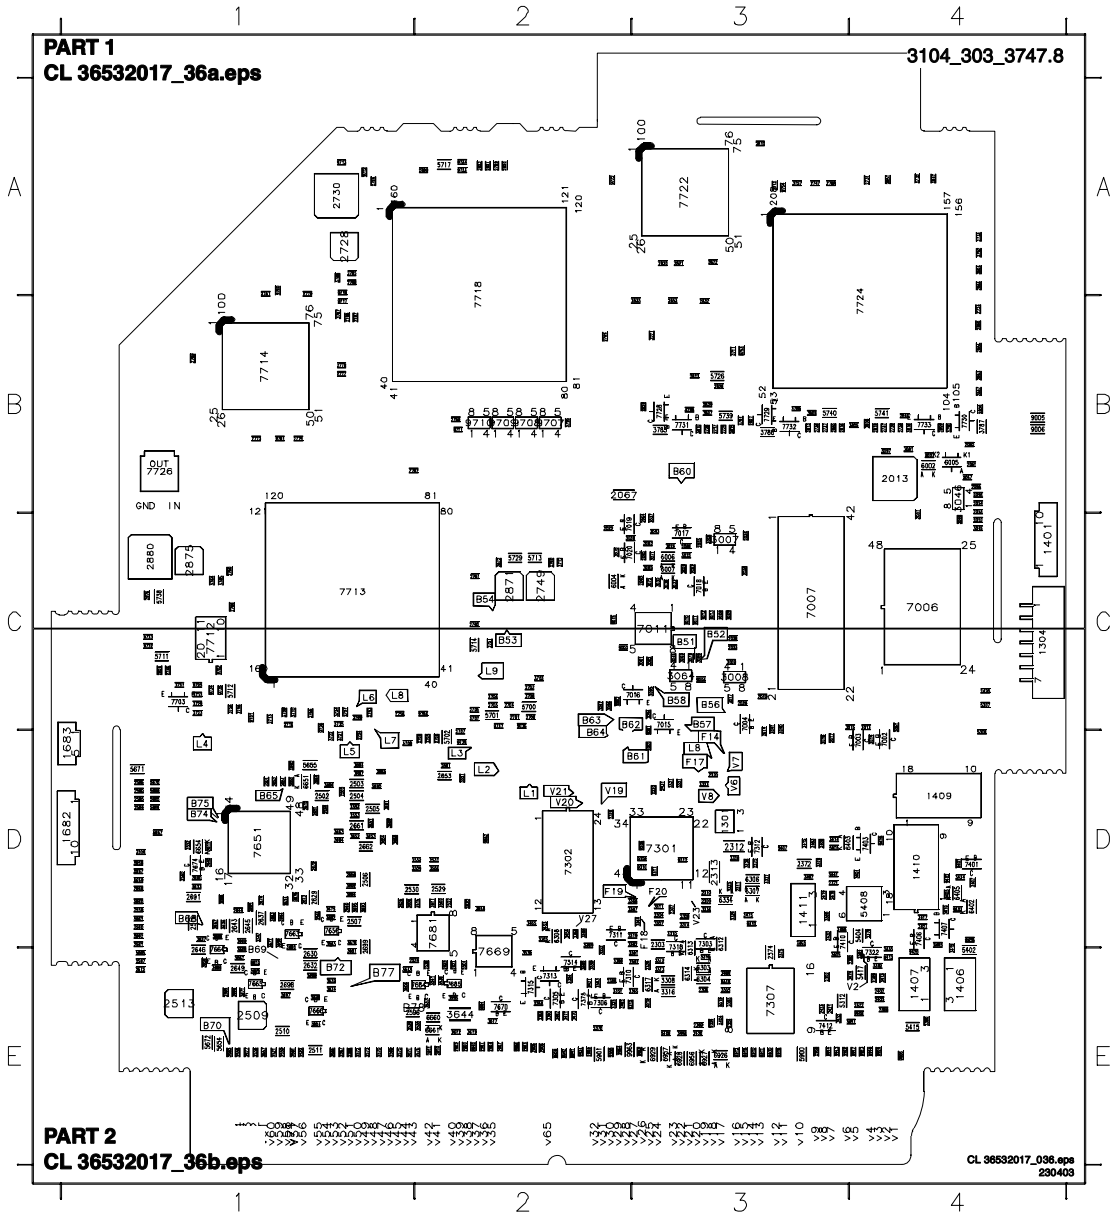

0009 E4 0010 E3 0011 E2 0012 E1 0013 E1 0014 C4 0015 B4 0016 D1 0017 C1 0018 A4 0019 A3 1000 E2 1301 D3 1304 C4 1305 D3 1306 D4 1307 D4 1308 D3 1401 C4 1406 E4 1407 E4 1409 D4 1410 D4 1411 D3 1682 D1 1683 D1 2003 C3 2013 B4 2014 D3 2017 D3 2019 C3 2022 C2 2024 C3 2026 C3 2031 C4 2033 C3 2036 C3 2038 C3 2052 C4 2053 B4 2054 B4 2055 B4 2056 B4 2057 B4 2060 B4 2061 B4 2062 C3 2063 C3 2064 C3 2065 C3 2066 C3 2067 B2 2302 E3 2303 D3 2304 D3 2306 E3 2307 D3 2308 D3 2309 D3 2310 D3 2311 D3 2312 D3 2313 D3 2319 D3 2320 D3 2321 D3 2323 D3 2325 D3 2326 E3 2328 D2 2342 E2 2343 E2 2354 E3 2366 E4 2369 E3 2370 E2 2371 D3 2372 D3 2374 E3 2375 E3 2378 D4 2384 E4 2385 E3 2386 E2 2390 E4 2392 E3 2399 E4
2402 E4 2418 D3 2419 D3 2420 E3 2421 E3 2422 E4 2423 E3 2424 E3 2426 C4 2431 D3 2501 D1 2502 D1 2503 D1 2504 D1 2505 D1 2506 D1 2507 D1 2509 E1 2510 E1 2511 E1 2512 E1 2513 E1 2516 D1 2520 D2 2521 E2 2522 D2 2523 E2 2524 E1 2525 D1 2526 E2 2529 D2 2530 D1 2531 D2 2532 D2 2550 D1 2551 D2 2552 D1 2553 D1 2554 D1 2555 D1 2556 D1 2557 D1 2558 D1 2559 D1 2560 D1 2561 D1 2584 D1 2585 D1 2586 D1 2587 E1 2590 D1 2595 E1 2596 E1 2610 D1 2611 D1 2612 E2 2629 D1 2630 E1 2632 E1 2634 D1 2637 D1 2640 D1 2643 D1 2644 D1 2645 D1 2646 E1 2649 E1 2651 D1 2652 D1 2653 D2 2654 D1 2659 D1 2660 D1 2661 D1 2662 D1 2663 D1 2664 D1 2673 D1 2674 D1 2679 D1 2681 D1 2686 D1 2690 D1 2691 D1 2694 D1 2697 E1 2698 E1
2699 D1 2700 C2 2701 C2 2702 C2 2703 C2 2704 C2 2705 C2 2706 D2 2707 D2 2708 D2 2712 A3 2713 C1 2714 C1 2717 B3 2723 C1 2724 D1 2725 B3 2726 B3 2727 B3 2728 A1 2730 A1 2731 A4 2732 A4 2733 A4 2734 B4 2736 B3 2737 B4 2738 B4 2739 B4 2746 C1 2747 A3 2748 C1 2749 C2 2750 C2 2751 C2 2753 C1 2755 C1 2756 C1 2757 C1 2760 C2 2761 C2 2762 B1 2765 C1 2766 C1 2768 A3 2769 B1 2773 B1 2775 B1 2777 B1 2778 B1 2779 A1 2781 A1 2784 A1 2785 A1 2786 A1 2787 B1 2788 B1 2789 B2 2795 B2 2799 A2 2800 A2 2801 A2 2802 A2 2810 A3 2812 B3 2815 B3 2816 B3 2818 B4 2820 A3 2821 A3 2822 A3 2824 C1 2826 B3 2827 B3 2828 B3 2830 B4 2832 B3 2833 B3 2835 B3 2839 B3 2841 B4 2847 A4 2851 A4 2853 B4 2854 B4 2857 B4 2864 A4
2865 B4 2871 C2 2872 C2 2875 C1 2876 C1 2880 C1 2885 B3 2899 A2 2900 E2 2901 E2 2902 E2 2903 E2 2904 E2 2905 E2 2906 E2 2907 E2 2908 E3 2909 E2 2910 E2 2911 E2 3001 C3 3002 C3 3005 D3 3006 C3 3007 C3 3008 C3 3009 C3 3013 C4 3014 D4 3015 C4 3016 D3 3017 C3 3022 C3 3023 C3 3028 C3 3030 C3 3032 C3 3036 C3 3037 C3 3038 C2 3040 C3 3041 C3 3042 C2 3043 C3 3044 C3 3045 C4 3046 B4 3060 C3 3061 C4 3063 C3 3064 C3 3069 C3 3070 C2 3071 C3 3072 C3 3079 C3 3081 B4 3088 C3 3094 C3 3095 C3 3096 C2 3097 B4 3098 C4 3303 E3 3305 D2 3307 D3 3308 E3 3310 D3 3311 D3 3312 E3 3313 E3 3314 D3 3315 E3 3316 E3 3319 E3 3323 D3 3324 D3 3325 E2 3326 D3 3327 D3 3328 D3 3331 D3 3333 D3 3334 D3 3339 E2 3350 E2 3351 E2
3352 E2 3354 E2 3355 E2 3358 D2 3359 E2 3360 E2 3362 D3 3364 D3 3365 E3 3366 D3 3367 D3 3368 D2 3378 D3 3380 D3 3382 E4 3385 E4 3386 E2 3391 E3 3401 D4 3403 E4 3405 E3 3407 D4 3408 D3 3410 D4 3414 D3 3415 D3 3417 D4 3419 E4 3420 D3 3421 D4 3434 D4 3435 E4 3441 D3 3445 D4 3446 E3 3450 D3 3451 E4 3452 E3 3453 D2 3454 D2 3455 D2 3456 D3 3457 D3 3459 D2 3463 D3 3465 E2 3467 E2 3468 E3 3470 E2 3471 E2 3473 E4 3474 E4 3475 D3 3500 D2 3501 E2 3504 D2 3505 D1 3506 E1 3509 D2 3511 D2 3515 D2 3521 E1 3522 E1 3532 D1 3533 D1 3535 E2 3536 E2 3537 E2 3538 E2 3539 E1 3540 D1 3541 E2 3543 E1 3544 D1 3545 D1 3546 D1 3547 D1 3550 D1 3551 D2 3556 E1 3557 E1 3558 E1 3559 E1 3561 E1 3563 E1 3564 E1 3567 E1
3568 E1 3569 E1 3570 E1 3571 E1 3572 E1 3573 E1 3574 E2 3575 E1 3577 E1 3617 E2 3618 D2 3619 E2 3624 E1 3630 E1 3634 E1 3636 D1 3637 D1 3639 E1 3644 E2 3651 D1 3652 D1 3653 D1 3654 D1 3657 D1 3658 E1 3659 D1 3663 D1 3666 E1 3667 E1 3668 E1 3669 D1 3670 E1 3671 E1 3675 D1 3676 D1 3677 D1 3680 D1 3681 E1 3682 D1 3684 D1 3685 D1 3686 D1 3687 D1 3688 D1 3689 D1 3690 D1 3692 D1 3693 D1 3694 D1 3695 D1 3698 E1 3699 E1 3703 C2 3704 C2 3705 D2 3706 C2 3707 C2 3708 D1 3709 C1 3710 C1 3711 B3 3712 C2 3721 D1 3722 D1 3729 C1 3731 C1 3733 C1 3734 C1 3735 C1 3757 A3 3758 C1 3759 C1 3764 C1 3765 C1 3766 A1 3767 B1 3771 B3 3785 B3 3786 B3 3787 B4 3788 B3 3789 B3 3790 B4 3791 B3 3792 A4
3795 B2 3804 A4 3805 B4 3806 B4 3807 B3 3808 B3 3809 B4 3810 B3 3813 B3 3816 B4 5307 C4 5308 D4 5312 E3 5401 D3 5402 E4 5404 D4 5408 D4 5409 E3 5415 E4 5417 E4 5654 E1 5655 D1 5657 D1 5658 D1 5659 D1 5660 D1 5661 D1 5662 D1 5664 D1 5665 D1 5666 E1 5669 D1 5670 D1 5671 D1 5672 E1 5700 C2 5701 C2 5702 D2 5711 C1 5712 C1 5713 C2 5714 C2 5717 A2 5726 B3 5729 C2 5738 C1 5739 B3 5740 B3 5741 B4 5900 E3 5901 E2 6002 B4 6004 C2 6005 B4 6006 C3 6007 C3 6303 E3 6304 E3 6306 D3 6307 D3 6308 E2 6312 D3 6313 D3 6314 E3 6317 E3 6334 D3 6402 D4 6403 D3 6405 D4 6651 D1 6654 D1 6660 E2 6661 E2 6926 E3 6927 E3 6929 E3 6956 E3 6957 E3 7002 D4 7003 D4 7006 C4 7007 C4 7011 C3 7015 D3 7016 C2
7017 B3 7018 C3 7019 B2 7020 C2 7301 D2 7302 D2 7303 E3 7305 E2 7306 E2 7310 E3 7311 D2 7312 D3 7313 E2 7314 E2 7315 E2 7318 D3 7322 E4 7375 E2 7401 D4 7403 D4 7406 D4 7407 D4 7410 D3 7412 E3 7651 D1 7656 D1 7663 D1 7664 E1 7665 E1 7666 E1 7669 D2 7671 C1 7672 A1 7675 C1 7676 C1 7677 C1 7678 C1 7679 C1 7680 C1 7681 D1 7682 D1 7683 D1 7685 E2 7686 E2 7687 E2 7688 E2 7689 E2 7690 E2 7691 E2 7692 E2 7693 E2 7694 E2 7695 E2 7696 E2 7697 E2 7698 E2 7699 E2 7700 E2 7701 E2 7702 E2 7703 E2 7704 E2 7705 E2 7706 E2 7707 E2 7708 E2 7709 E2 7710 E2 7711 E2 7712 E2 7713 E2 7714 E2 7715 E2 7716 E2 7717 E2 7718 E2 7719 E2 7720 E2 7721 E2 7722 E2 7723 E2 7724 E2 7725 E2 7726 E2 7727 E2 7728 E2 7729 E2 7730 E2 7731 E2 7732 E2 7733 E2 7734 E2 7735 E2 7736 E2 7737 E2 7738 E2 7739 E2 7740 E2 7741 E2 7742 E2 7743 E2 7744 E2 7745 E2 7746 E2 7747 E2 7748 E2 7749 E2 7750 E2 7751 E2 7752 E2 7753 E2 7754 E2 7755 E2 7756 E2 7757 E2 7758 E2 7759 E2 7760 E2 7761 E2 7762 E2 7763 E2 7764 E2 7765 E2 7766 E2 7767 E2 7768 E2 7769 E2 7770 E2 7771 E2 7772 E2 7773 E2 7774 E2 7775 E2 7776 E2 7777 E2 7778 E2 7779 E2 7780 E2 7781 E2 7782 E2 7783 E2 7784 E2 7785 E2 7786 E2 7787 E2 7788 E2 7789 E2 7790 E2 7791 E2 7792 E2 7793 E2 7794 E2 7795 E2 7796 E2 7797 E2 7798 E2 7799 E2 7800 E2 7801 E2 7802 E2 7803 E2 7804 E2 7805 E2 7806 E2 7807 E2 7808 E2 7809 E2 7810 E2 7811 E2 7812 E2 7813 E2 7814 E2 7815 E2 7816 E2 7817 E2 7818 E2 7819 E2 7820 E2 7821 E2 7822 E2 7823 E2 7824 E2 7825 E2 7826 E2 7827 E2 7828 E2 7829 E2 7830 E2 7831 E2 7832 E2 7833 E2 7834 E2 7835 E2 7836 E2 7837 E2 7838 E2 7839 E2 7840 E2 7841 E2 7842 E2 7843 E2 7844 E2 7845 E2 7846 E2 7847 E2 7848 E2 7849 E2 7850 E2 7851 E2 7852 E2 7853 E2 7854 E2 7855 E2 7856 E2 7857 E2 7858 E2 7859 E2 7860 E2 7861 E2 7862 E2 7863 E2 7864 E2 7865 E2 7866 E2 7867 E2 7868 E2 7869 E2 7870 E2 7871 E2 7872 E2 7873 E2 7874 E2 7875 E2 7876 E2 7877 E2 7878 E2 7879 E2 7880 E2 7881 E2 7882 E2 7883 E2 7884 E2 7885 E2 7886 E2 7887 E2 7888 E2 7889 E2 7890 E2 7891 E2 7892 E2 7893 E2 7894 E2 7895 E2 7896 E2 7897 E2 7898 E2 7899 E2 7900 E2 7901 E2 7902 E2 7903 E2 7904 E2 7905 E2 7906 E2 7907 E2 7908 E2 7909 E2 7910 E2 7911 E2 7912 E2 7913 E2 7914 E2 7915 E2 7916 E2 7917 E2 7918 E2 7919 E2 7920 E2 7921 E2 7922 E2 7923 E2 7924 E2 7925 E2 7926 E2 7927 E2 7928 E2 7929 E2 7930 E2 7931 E2 7932 E2 7933 E2 7934 E2 7935 E2 7936 E2 7937 E2 7938 E2 7939 E2 7940 E2 7941 E2 7942 E2 7943 E2 7944 E2 7945 E2 7946 E2 7947 E2 7948 E2 7949 E2 7950 E2 7951 E2 7952 E2 7953 E2 7954 E2 7955 E2 7956 E2 7957 E2 7958 E2 7959 E2 7960 E2 7961 E2 7962 E2 7963 E2 7964 E2 7965 E2 7966 E2 7967 E2 7968 E2 7969 E2 7970 E2 7971 E2 7972 E2 7973 E2 7974 E2 7975 E2 7976 E2 7977 E2 7978 E2 7979 E2 7980 E2 7981 E2 7982 E2 7983 E2 7984 E2 7985 E2 7986 E2 7987 E2 7988 E2 7989 E2 7990 E2 7991 E2 7992 E2 7993 E2 7994 E2 7995 E2 7996 E2 7997 E2 7998 E2 7999 E2 8000 E2 8001 E2 8002 E2 8003 E2 8004 E2 8005 E2 8006 E2 8007 E2 8008 E2 8009 E2 8010 E2 8011 E2 8012 E2 8013 E2 8014 E2 8015 E2 8016 E2 8017 E2 8018 E2 8019 E2 8020 E2 8021 E2 8022 E2 8023 E2 8024 E2 8025 E2 8026 E2 8027 E2 8028 E2 8029 E2 8030 E2 8031 E2 8032 E2 8033 E2 8034 E2 8035 E2 8036 E2 8037 E2 8038 E2 8039 E2 8040 E2 8041 E2 8042 E2 8043 E2 8044 E2 8045 E2 8046 E2 8047 E2 8048 E2 8049 E2 8050 E2 8051 E2 8052 E2 8053 E2 8054 E2 8055 E2 8056 E2 8057 E2 8058 E2 8059 E2 8060 E2 8061 E2 8062 E2 8063 E2 8064 E2 8065 E2 8066 E2 8067 E2 8068 E2 8069 E2 8070 E2 8071 E2 8072 E2 8073 E2 8074 E2 8075 E2 8076 E2 8077 E2 8078 E2 8079 E2 8080 E2 8081 E2 8082 E2 8083 E2 8084 E2 8085 E2 8086 E2 8087 E2 8088 E2 8089 E2 8090 E2 8091 E2 8092 E2 8093 E2 8094 E2 8095 E2 8096 E2 8097 E2 8098 E2 8099 E2 8100 E2 8101 E2 8102 E2 8103 E2 8104 E2 8105 E2 8106 E2 8107 E2 8108 E2 8109 E2 8110 E2 8111 E2 8112 E2 8113 E2 8114 E2 8115 E2 8116 E2 8117 E2 8118 E2 8119 E2 8120 E2 8121 E2 8122 E2 8123 E2 8124 E2 8125 E2 8126 E2 8127 E2 8128 E2 8129 E2 8130 E2 8131 E2 8132 E2 8133 E2 8134 E2 8135 E2 8136 E2 8137 E2 8138 E2 8139 E2 8140 E2 8141 E2 8142 E2 8143 E2 8144 E2 8145 E2 8146 E2 8147 E2 8148 E2 8149 E2 8150 E2 8151 E2 8152 E2 8153 E2 8154 E2 8155 E2 8156 E2 8157 E2 8158 E2 8159 E2 8160 E2 8161 E2 8162 E2 8163 E2 8164 E2 8165 E2 8166 E2 8167 E2 8168 E2 8169 E2 8170 E2 8171 E2 8172 E2 8173 E2 8174 E2 8175 E2 8176 E2 8177 E2 8178 E2 8179 E2 8180 E2 8181 E2 8182 E2 8183 E2 8184 E2 8185 E2 8186 E2 8187 E2 8188 E2 8189 E2 8190 E2 8191 E2 8192 E2 8193 E2 8194 E2 8195 E2 8196 E2 8197 E2 8198 E2 8199 E2 8200 E2 8201 E2 8202 E2 8203 E2 8204 E2 8205 E2 8206 E2 8207 E2 8208 E2 8209 E2 8210 E2 8211 E2 8212 E2 8213 E2 8214 E2 8215 E2 8216 E2 8217 E2 8218 E2 8219 E2 8220 E2 8221 E2 8222 E2 8223 E2 8224 E2 8225 E2 8226 E2 8227 E2 8228 E2 8229 E2 8230 E2 8231 E2 8232 E2 8233 E2 8234 E2 8235 E2 8236 E2 8237 E2 8238 E2 8239 E2 8240 E2 8241 E2 8242 E2 8243 E2 8244 E2 8245 E2 8246 E2 8247 E2 8248 E2 8249 E2 8250 E2 8251 E2 8252 E2 8253 E2 8254 E2 8255 E2 8256 E2 8257 E2 8258 E2 8259 E2 8260 E2 8261 E2 8262 E2 8263 E2 8264 E2 8265 E2 8266 E2 8267 E2 8268 E2 8269 E2 8270 E2 8271 E2 8272 E2 8273 E2 8274 E2 8275 E2 8276 E2 8277 E2 8278 E2 8279 E2 8280 E2 8281 E2 8282 E2 8283 E2 8284 E2 8285 E2 8286 E2 8287 E2 8288 E2 8289 E2 8290 E2 8291 E2 8292 E2 8293 E2 8294 E2 8295 E2 8296 E2 8297 E2 8298 E2 8299 E2 8300 E2 8301 E2 8302 E2 8303 E2 8304 E2 8305 E2 8306 E2 8307 E2 8308 E2 8309 E2 8310 E2 8311 E2 8312 E2 8313 E2 8314 E2 8315 E2 8316 E2 8317 E2 8318 E2 8319 E2 8320 E2 8321 E2 8322 E2 8323 E2 8324 E2 8325 E2 8326 E2 8327 E2 8328 E2 8329 E2 8330 E2 8331 E2 8332 E2 8333 E2 8334 E2 8335 E2 8336 E2 8337 E2 8338 E2 8339 E2 8340 E2 8341 E2 8342 E2 8343 E2 8344 E2 8345 E2 8346 E2 8347 E2 8348 E2 8349 E2 8350 E2 8351 E2 8352 E2 8353 E2 8354 E2 8355 E2 8356 E2 8357 E2 8358 E2 8359 E2 8360 E2 8361 E2 8362 E2 8363 E2 8364 E2 8365 E2 8366 E2 8367 E2 8368 E2 8369 E2 8370 E2 8371 E2 8372 E2 8373 E2 8374 E2 8375 E2 8376 E2 8377 E2 8378 E2 8379 E2 8380 E2 8381 E2 8382 E2 8383 E2 8384 E2 8385 E2 8386 E2 8387 E2 8388 E2 8389 E2 8390 E2 8391 E2 8392 E2 8393 E2 8394 E2 8395 E2 8396 E2 8397 E2 8398 E2 8399 E2 8400 E2 8401 E2 8402 E2 8403 E2 8404 E2 8405 E2 8406 E2 8407 E2 8408 E2 8409 E2 8410 E2 8411 E2 8412 E2 8413 E2 8414 E2 8415 E2 8416 E2 8417 E2 8418 E2 8419 E2 8420 E2 8421 E2 8422 E2 8423 E2 8424 E2 8425 E2 8426 E2 8427 E2 8428 E2 8429 E2 8430 E2 8431 E2 8432 E2 8433 E2 8434 E2 8435 E2 8436 E2 8437 E2 8438 E2 8439 E2 8440 E2 8441 E2 8442 E2 8443 E2 8444 E2 8445 E2 8446 E2 8447 E2 8448 E2 8449 E2 8450 E2 8451 E2 8452 E2 8453 E2 8454 E2 8455 E2 8456 E2 8457 E2 8458 E2 8459 E2 8460 E2 8461 E2 8462 E2 8463 E2 8464 E2 8465 E2 8466 E2 8467 E2 8468 E2 8469 E2 8470 E2 8471 E2 8472 E2 8473 E2 8474 E2 8475 E2 8476 E2 8477 E2 8478 E2 8479 E2 8480 E2 8481 E2 8482 E2 8483 E2 8484 E2 8485 E2 8486 E2 8487 E2 8488 E2 8489 E2 8490 E2 8491 E2 8492 E2 8493 E2 8494 E2 8495 E2 8496 E2 8497 E2 8498 E2 8499 E2 8500 E2 8501 E2 8502 E2 8503 E2 8504 E2 8505 E2 8506 E2 8507 E2 8508 E2 8509 E2 8510 E2 8511 E2 8512 E2 8513 E2 8514 E2 8515 E2 8516 E2 8517 E2 8518 E2 8519 E2 8520 E2 8521 E2 8522 E2 8523 E2 8524 E2 8525 E2 8526 E2 8527 E2 8528 E2 8529 E2 8530 E2 8531 E2 8532 E2 8533 E2 8534 E2 8535 E2 8536 E2 8537 E2 8538 E2 8539 E2 8540 E2 8541 E2 8542 E2 8543 E2 8544 E2 8545 E2 8546 E2 8547 E2 8548 E2 8549 E2 8550 E2 8551 E2 8552 E2 8553 E2 8554 E2 8555 E2 8556 E2 8557 E2 8558 E2 8559 E2 8560 E2 8561 E2 8562 E2 8563 E2 8564 E2 8565 E2 8566 E2 8567 E2 8568 E2 8569 E2 8570 E2 8571 E2 8572 E2 8573 E2 8574 E2 8575 E2 8576 E2 8577 E2 8578 E2 8579 E2 8580 E2 8581 E2 8582 E2 8583 E2 8584 E2 8585 E2 8586 E2 8587 E2 8588 E2 8589 E2 8590 E2 8591 E2 8592 E2 8593 E2 8594 E2 8595 E2 8596 E2 8597 E2 8598 E2 8599 E2 8600 E2 8601 E2 8602 E2 8603 E2 8604 E2 8605 E2 8606 E2 8607 E2 8608 E2 8609 E2 8610 E2 8611 E2 8612 E2 8613 E2 8614 E2 8615 E2 8616 E2 8617 E2 8618 E2 8619 E2 8620 E2 8621 E2 8622 E2 8623 E2 8624 E2 8625 E2 8626 E2 8627 E2 8628 E2 8629 E2 8630 E2 8631 E2 8632 E2 8633 E2 8634 E2 8635 E2 8636 E2 8637 E2 8638 E2 8639 E2 8640 E2 8641 E2 8642 E2 8643 E2 8644 E2 8645 E2 8646 E2 8647 E2 8648 E2 8649 E2 8650 E2 8651 E2 8652 E2 8653 E2 8654 E2 8655 E2 8656 E2 8657 E2 8658 E2 8659 E2 8660 E2 8661 E2 8662 E2 8663 E2 8664 E2 8665 E2 8666 E2 8667 E2 8668 E2 8669 E2 8670 E2 8671 E2 8672 E2 8673 E2 8674 E2 8675 E2 8676 E2 8677 E2 8678 E2 8679 E2 8680 E2 8681 E2 8682 E2 8683 E2 8684 E2 8685 E2 8686 E2 8687 E2 8688 E2 8689 E2 8690 E2 8691 E2 8692 E2 8693 E2 8694 E2 8695 E2 8696 E2 8697 E2 8698 E2 8699 E2 8700 E2 8701 E2 8702 E2 8703 E2 8704 E2 8705 E2 8706 E2 8707 E2 8708 E2 8709 E2 8710 E2 8711 E2 8712 E2 8713 E2 8714 E2 8715 E2 8716 E2 8717 E2 8718 E2 8719 E2 8720 E2 8721 E2 8722 E2 8723 E2 8724 E2 8725 E2 8726 E2 8727 E2 8728 E2 8729 E2 8730 E2 8731 E2 8732 E2 8733 E2 8734 E2 8735 E2 8736 E2 8737 E2 8738 E2 8739 E2 8740 E2 8741 E2 8742 E2 8743 E2 8744 E2 8745 E2 8746 E2 8747 E2 8748 E2 8749 E2 8750 E2 8751 E2 8752 E2 8753 E2 8754 E2 8755 E2 8756 E2 8757 E2 8758 E2 8759 E2 8760 E2 8761 E2 8762 E2 8763 E2 8764 E2 8765 E2 8766 E2 8767 E2 8768 E2 8769 E2 8770 E2 8771 E2 8772 E2 8773 E2 8774 E2 8775 E2 8776 E2 8777 E2 8778 E2 8779 E2 8780 E2 8781 E2 8782 E2 8783 E2 8784 E2 8785 E2 8786 E2 8787 E2 8788 E2 8789 E2 8790 E2 8791 E2 8792 E2 8793 E2 8794 E2 8795 E2 8796 E2 8797 E2 8798 E2 8799 E2 8800 E2 8801 E2 8802 E2 8803 E2 8804 E2 8805 E2 8806 E2 8807 E2 8808 E2 8809 E2 8810 E2 8811 E2 8812 E2 8813 E2 8814 E2 8815 E2 8816 E2 8817 E2 8818 E2 8819 E2 8820 E2 8821 E2 8822 E2 8823 E2 8824 E2 8825 E2 8826 E2 8827 E2 8828 E2 8829 E2 8830 E2 8831 E2 8832 E2 8833 E2 8834 E2 8835 E2 8836 E2 8837 E2 8838 E2 8839 E2 8840 E2 8841 E2 8842 E2 8843 E2 8844 E2 8845 E2 8846 E2 8847 E2 8848 E2 8849 E2 8850 E2 8851 E2 8852 E2 8853 E2 8854 E2 8855 E2 8856 E2 8857 E2 8858 E2 8859 E2 8860 E2 8861 E2 8862 E2 8863 E2 8864 E2 8865 E2 8866 E2 8867 E2 8868 E2 8869 E2 8870 E2 8871 E2 8872 E2 8873 E2 8874 E2 8875 E2 8876 E2 8877 E2 8878 E2 8879 E2 8880 E2 8881 E2 8882 E2 8883 E2 8884 E2 8885 E2 8886 E2 8887 E2 8888 E2 8889 E2 8890 E2 8891 E2 8892 E2 8893 E2 8894 E2 8895 E2 8896 E2 8897 E2 8898 E2 8899 E2 8900 E2 8901 E2 8902 E2 8903 E2 8904 E2 8905 E2 8906 E2 8907 E2 8908 E2 8909 E2 8910 E2 8911 E2 8912 E2 8913 E2 8914 E2 8915 E2 8916 E2 8917 E2 8918 E2 8919 E2 8920 E2 8921 E2 8922 E2 8923 E2 8924 E2 8925 E2 8926 E2 8927 E2 8928 E2 8929 E2 8930 E2 8931 E2 8932 E2 8933 E2 8934 E2 8935 E2 8936 E2 8937 E2 8938 E2 8939 E2 8940 E2 8941 E2 8942 E2 8943 E2 8944 E2 8945 E2 8946 E2 8947 E2 8948 E2 8949 E2 8950 E2 8951 E2 8952 E2 8953 E2 8954 E2 8955 E2 8956 E2 8957 E2 8958 E2 8959 E2 8960 E2 8961 E2 8962 E2 8963 E2 8964 E2 8965 E2 8966 E2 8967 E2 8968 E2 8969 E2 8970 E2 8971 E2 8972 E2 8973 E2 8974 E2 8975 E2 8976 E2 8977 E2 8978 E2 8979 E2 8980 E2 8981 E2 8982 E2 8983 E2 8984 E2 8985 E2 8986 E2 8987 E2 8988 E2 8989 E2 8990 E2 8991 E2 8992 E2 8993 E2 8994 E2 8995 E2 8996 E2 8997 E2 8998 E2 8999 E2 9000 E2 9001 E2 9002 E2 9003 E2 9004 E2 9005 E2 9006 E2 9007 E2 9008 E2 9009 E2 9010 E2 9011 E2 9012 E2 9013 E2 9015 E2 9017 E2 9018 E2 9019 E2 9020 E2 9021 E2 9022 E2 9023 E2 9024 E2 9025 E2 9026 E2 9027 E2 9028 E2 9029 E2 9030 E2 9031 E2 9032 E2 9033 E2 9034 E2 9035 E2 9036 E2 9037 E2 9038 E2 9039 E2 9040 E2 9041 E2 9042 E2 9043 E2 9044 E2 9045 E2 9046 E2 9047 E2 9048 E2 9049 E2 9050 E2 9051 E2 9052 E2 9053 E2 9054 E2 9055 E2 9056 E2 9057 E2 9058 E2 9059 E2 9060 E2 9061 E2 9062 E2 9063 E2 9064 E2 9065 E2 9066 E2 9067 E2 9068 E2 9069 E2 9070 E2 9071 E2 9072 E2 9073 E2 9074 E2 9075 E2 9076 E2 9077 E2 9078 E2 9079 E2 9080 E2 9081 E2 9082 E2 9083 E2 9084 E2 9085 E2 9086 E2 9087 E2 9088 E2 9089 E2 9090 E2 9091 E2 9092 E2 9093 E2 9094 E2 9095 E2 9096 E2 9097 E2 9098 E2 9099 E2 9100 E2 9101 E2 9102 E2 9103 E2 9104 E2 9105 E2 9106 E2 9107 E2 9108 E2 9109 E2 9110 E2 9111 E2 9112 E2 9113 E2 9114 E2 9115 E2 9116 E2 9117 E2 9118 E2 9119 E2 9120 E2 9121 E2 9122 E2 9123 E2 9124 E2 9125 E2 9126 E2 9127 E2 9128 E2 9129 E2 9130 E2 9131 E2 9132 E2 9133 E2 9134 E2 9135 E2 9136 E2 9137 E2 9138 E2 9139 E2 9140 E2 9141 E2 9142 E2 9143 E2 9144 E2 9145 E2 9146 E2 9147 E2 9148 E2 9149 E2 9150 E2 9151 E2 9152 E2 9153 E2 9154 E2 9155 E2 9156 E2 9157 E2 9158 E2 9159 E2 9160 E2 9161 E2 9162 E2 9163 E2 9164 E2 9165 E2 9166 E2 9167 E2 9168 E2 9169 E2 9170 E2 9171 E2 9172 E2 9173 E2 9174 E2 9175 E2 9176 E2 9177 E2 9178 E2 9179 E2 9180 E2 9181 E2 9182 E2 9183 E2 9184 E2 9185 E2 9186 E2 9187 E2 9188 E2 9189 E2 9190 E2 9191 E2 9192 E2 9193 E2 9194 E2 9195 E2 9196 E2 9197 E2 9198 E2 9199 E2 9200 E2 9201 E2 9202 E2 9203 E2 9204 E2 9205 E2 9206 E2 9207 E2 9208 E2 9209 E2 9210 E2 9211 E2 9212 E2 9213 E2 9214 E2 9215 E2 9216 E2 9217 E2 9218 E2 9219 E2 9220 E2 9221 E2 9222 E2 9223 E2 9224 E2 9225 E2 9226 E2 9227 E2 9228 E2 9229 E2 9230 E2 9231 E2 9232 E2 9233 E2 9234 E2 9235 E2 9236 E2 9237 E2 9238 E2 9239 E2 9240 E2 9241 E2 9242 E2 9243 E2 9244 E2 9245 E2 9246 E2 9247 E2 9248 E2 9249 E2 9250 E2 9251 E2 9252 E2 9253 E2 9254 E2 9255 E2 9256 E2 9257 E2 9258 E2 9259 E2 9260 E2 9261 E2 9262 E2 9263 E2 9264 E2 9265 E2 9266 E2 9267 E2 9268 E2 9269 E2 9270 E2 9271 E2 9272 E2 9273 E2 9274 E2 9275 E2 9276 E2 9277 E2 9278 E2 9279 E2 9280 E2 9281 E2 9282 E2 9283 E2 9284 E2 9285 E2 9286 E2 9287 E2 9288 E2 9289 E2 9290 E2 9291 E2 9292 E2 9293 E2 9294 E2 9295 E2 9296 E2 9297 E2 9298 E2 9299 E2 9300 E2 9301 E2 9302 E2 9303 E2 9304 E2 9305 E2 9306 E2 9307 E2 9308 E2 9309 E2 9310 E2 9311 E2 9312 E2 9313 E2 9314 E2 9315 E2 9316 E2 9317 E2 9318 E2 9319 E2 9320 E2 9321 E2 9322 E2 9323 E2 9324 E2 9325 E2 9326 E2 9327 E2 9328 E2 9329 E2 9330 E2 9331 E2 9332 E2 9333 E2 9334 E2 9335 E2 9336 E2 9337 E2 9338 E2 9339 E2 9340 E2 9341 E2 9342 E2 9343 E2 9344 E2 9345 E2 9346 E2 9347 E2 9348 E2 9349 E2 9350 E2 9351 E2 9352 E2 9353 E2 9354 E2 9355 E2 9356 E2 9357 E2 9358 E2 9359 E2 9360 E2 9361 E2 9362 E2 9363 E2 9364 E2 9365 E2 9366 E2 9367 E2 9368 E2 9369 E2 9370 E2 9371 E2 9372 E2 9373 E2 9374 E2 9375 E2 9376 E2 9377 E2 9378 E2 9379 E2 9380 E2 9381 E2 9382 E2 9383 E2 9384 E2 9385 E2 9386 E2 9387 E2 9388 E2 9389 E2 9390 E2 9391 E2 9392 E2 9393 E2 9394 E2 9395 E2 9396 E2 9397 E2 9398 E2 9399 E2 9400 E2 9401 E2 9402 E2 9403 E2 9404 E2 9405 E2 9406 E2 9407 E2 9408 E2 9409 E2 9410 E2 9411 E2 9412 E2 9413 E2 9414 E2 9415 E2 9416 E2 9417 E2 9418 E2 9419 E2 9420 E2 9421 E2 9422 E2 9423 E2 9424 E2 9425 E2 9426 E2 9427 E2 9428 E2 9429 E2 9430 E2 9431 E2 9432 E2 9433 E2 9434 E2 9435 E2 9436 E2 9437 E2 9438 E2 9439 E2 9440 E2 9441 E2 9442 E2 9443 E2 9444 E2 9445 E2 9446 E2 9447 E2 9448 E2 9449 E2 9450 E2 9451 E2 9452 E2 9453 E2 9454 E2 9455 E2 9456 E2 9457 E2 9458 E2 9459 E2 9460 E2 9461 E2 9462 E2 9463 E2 9464 E2 9465 E2 9466 E2 9467 E2 9468 E2 9469 E2 9470 E2 9471 E2 9472 E2 9473 E2 9474 E2 9475 E2 9476 E2 9477 E2 9478 E2 9479 E2 9480 E2 9481 E2 9482 E2 9483 E2 9484 E2 9485 E2 9486 E2 9487 E2 9488 E2 9489 E2 9490 E2 9491 E2 9492 E2 9493 E2 9494 E2 9495 E2 9496 E2 9497 E2 9498 E2 9499 E2 9500 E2 9501 E2 9502 E2 9503 E2 9504 E2 9505 E2 9506 E2 9507 E2 9508 E2 9509 E2 9510 E2 9511 E2 9512 E2 9513 E2 9514 E2 9515 E2 9516 E2 9517 E2 9518 E2 9519 E2 9520 E2 9521 E2 9522 E2 9523 E2 9524 E2 9525 E2 9526 E2 9527 E2 9528 E2 9529 E2 9530 E2 9531 E2 9532 E2 9533 E2 9534 E2 9535 E2 9536 E2 9537 E2 9538 E2 9539 E2 9540 E2 9541 E2 9542 E2 9543 E2 9544 E2 9545 E2 9546 E2 9547 E2 9548 E2 9549 E2 9550 E2 9551 E2 9552 E2 9553 E2 9554 E2 9555 E2 9556 E2 9557 E2 9558 E2 9559 E2 9560 E2 9561 E2 9562 E2 9563 E2 9564 E2 9565 E2 9566 E2 9567 E2 9568 E2 9569 E2 9570 E2 9571 E2 9572 E2 9573 E2 9574 E2 9575 E2 9576 E2 9577 E2 9578 E2 9579 E2 9580 E2 9581 E2 9582 E2 9583 E2 9584 E2 9585 E2 9586 E2 9587 E2 9588 E2 9589 E2 9590 E2 9591 E2 9592 E2 9593 E2 9594 E2 9595 E2 9596 E2 9597 E2 9598 E2 9599 E2 9600 E2 9601 E2 9602 E2 9603 E2 9604 E2 9605 E2 9606 E2 9607 E2 9608 E2 9609 E2 9610 E1
9652 D2 9676 D1 9691 E2 9701 C1 9702 C1 9704 C2 9707 B2 9708 B2 9709 B2 9710 B2 9711 B2 9712 A1 9713 A1 9716 A1 9717 B1 9722 A2 9723 A2 9724 A2 9725 C1 9726 C1 9732 C1 9733 C1 9734 C1 9735 C1 9736 C2 9737 C2 9738 D2 9753 B3 9754 A3 9760 A1 9761 B1 9910 E3 9911 E3 9912 E3 9913 E3 9914 E3 9915 E3 9916 E4 9917 E4 9918 E3 9922 E3 9923 E4 9924 E4 9930 E3 9934 E2 9936 E2 9940 E2 9941 E2 9942 E2 9955 E2 9962 E3 9963 E2 9964 E2 9965 E4 9966 E2

Layout Small Signal Board (Part 1 Bottom Side)

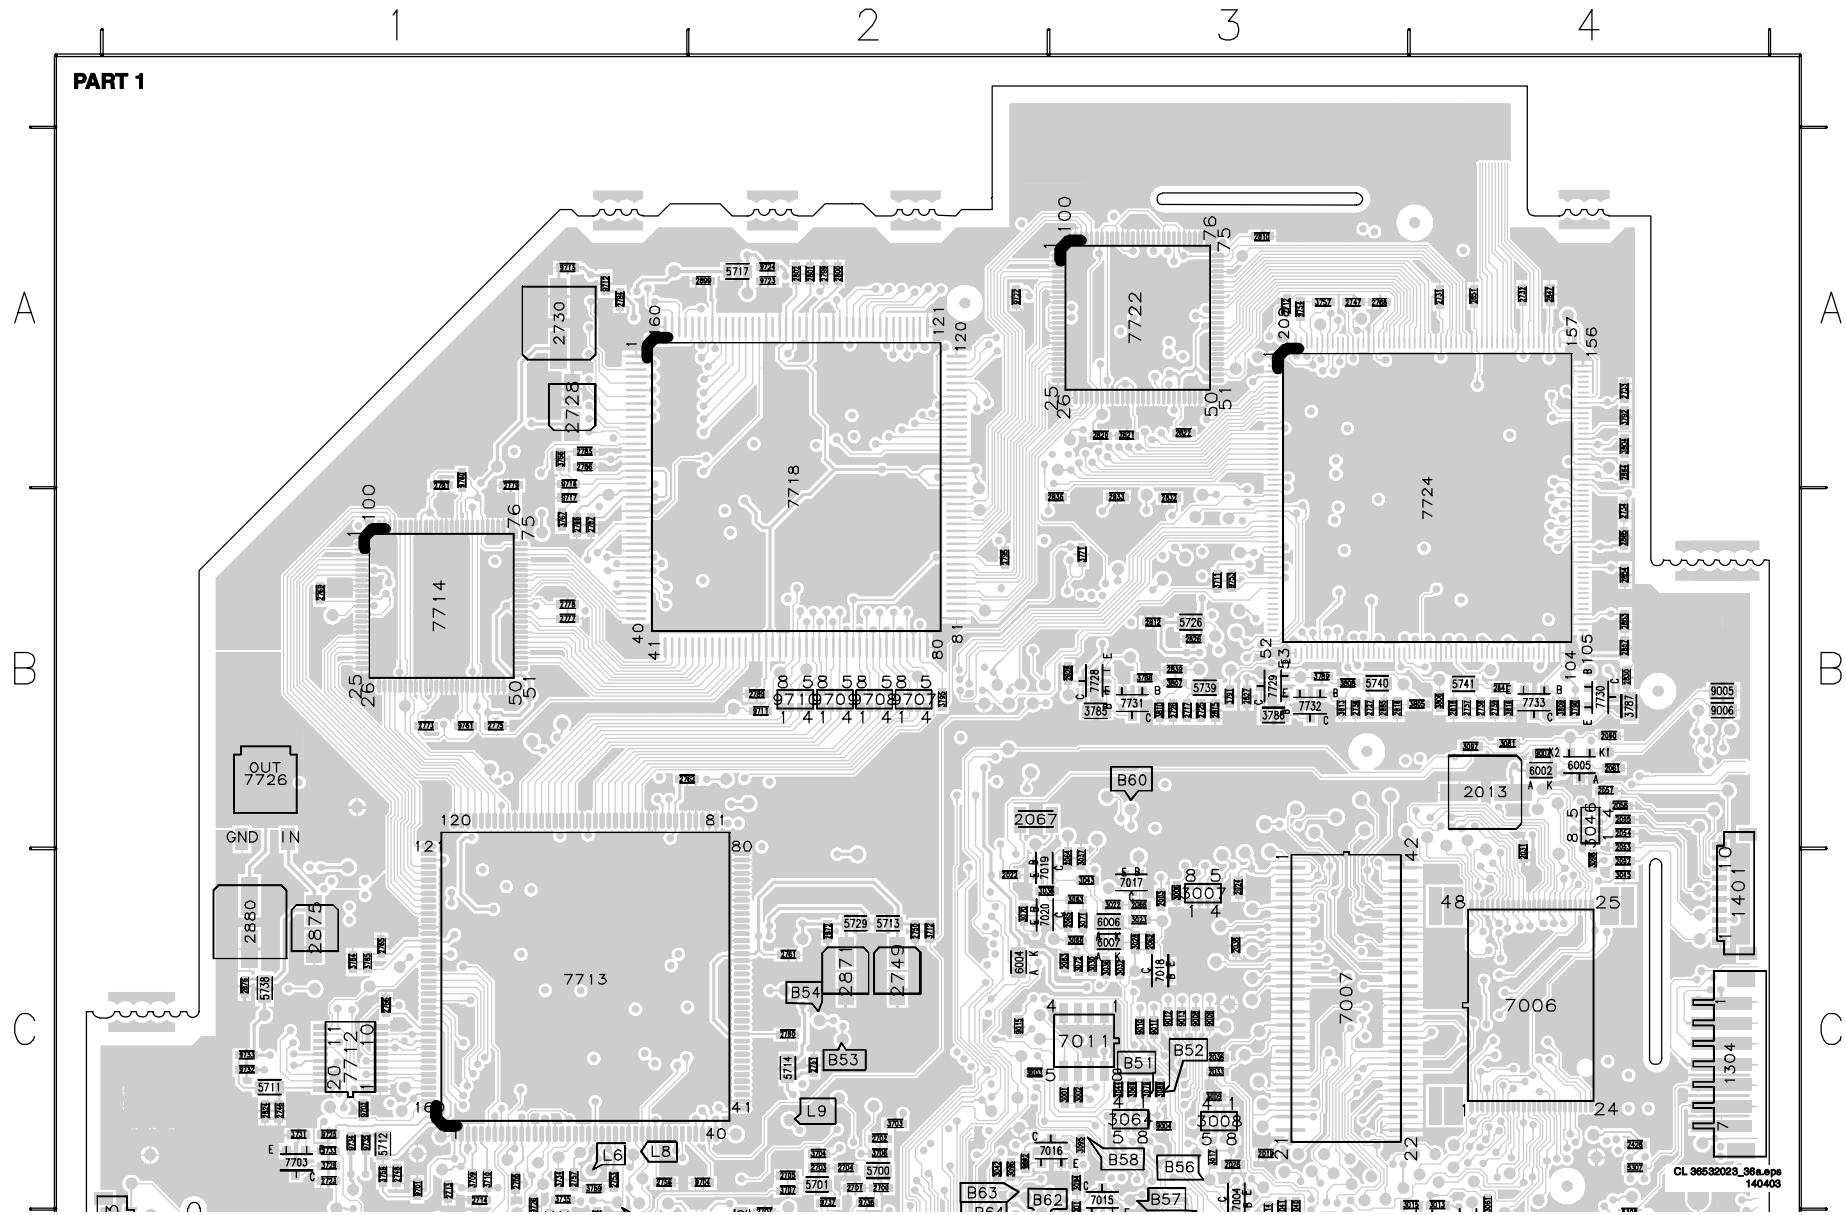

Layout Small Signal Board (Part 2 Bottom Side)

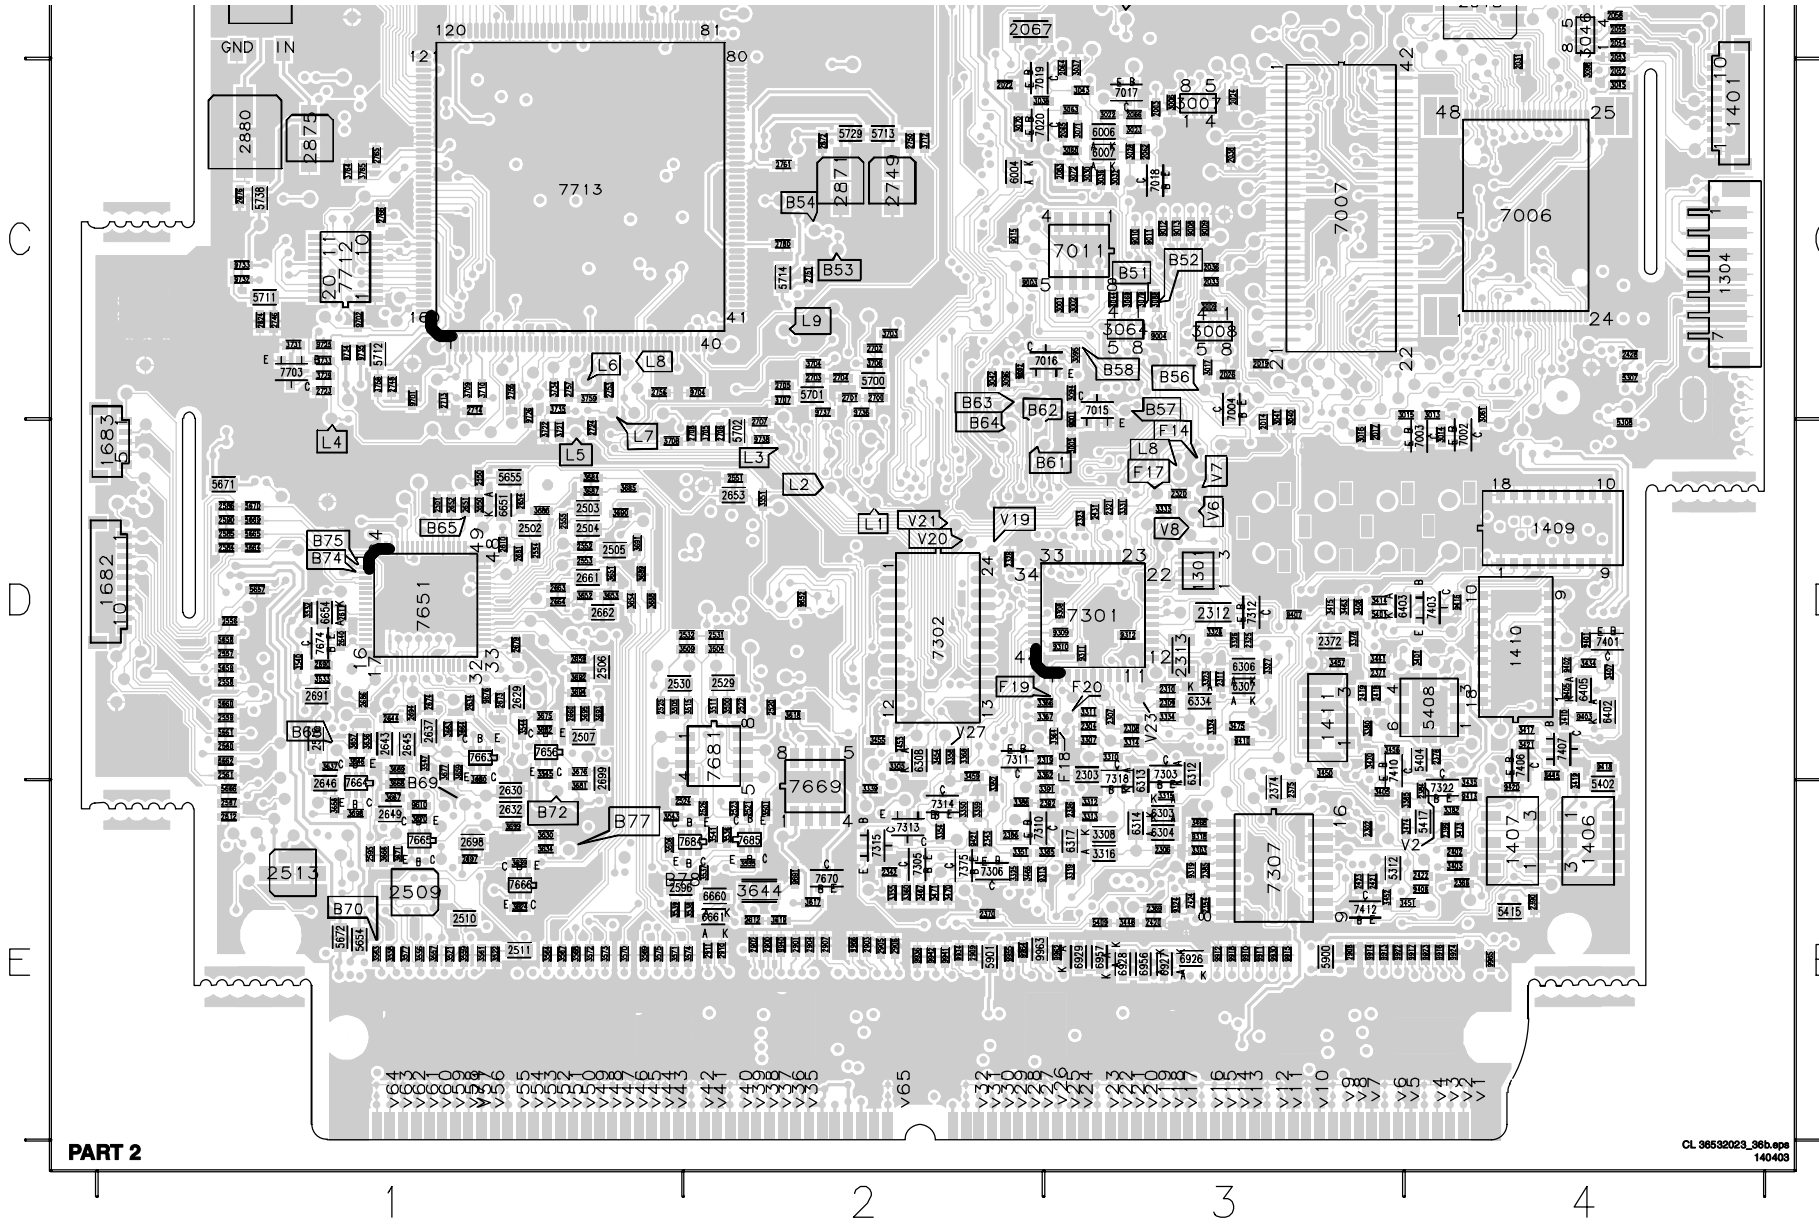

DW Panel: Multi PIP Controller

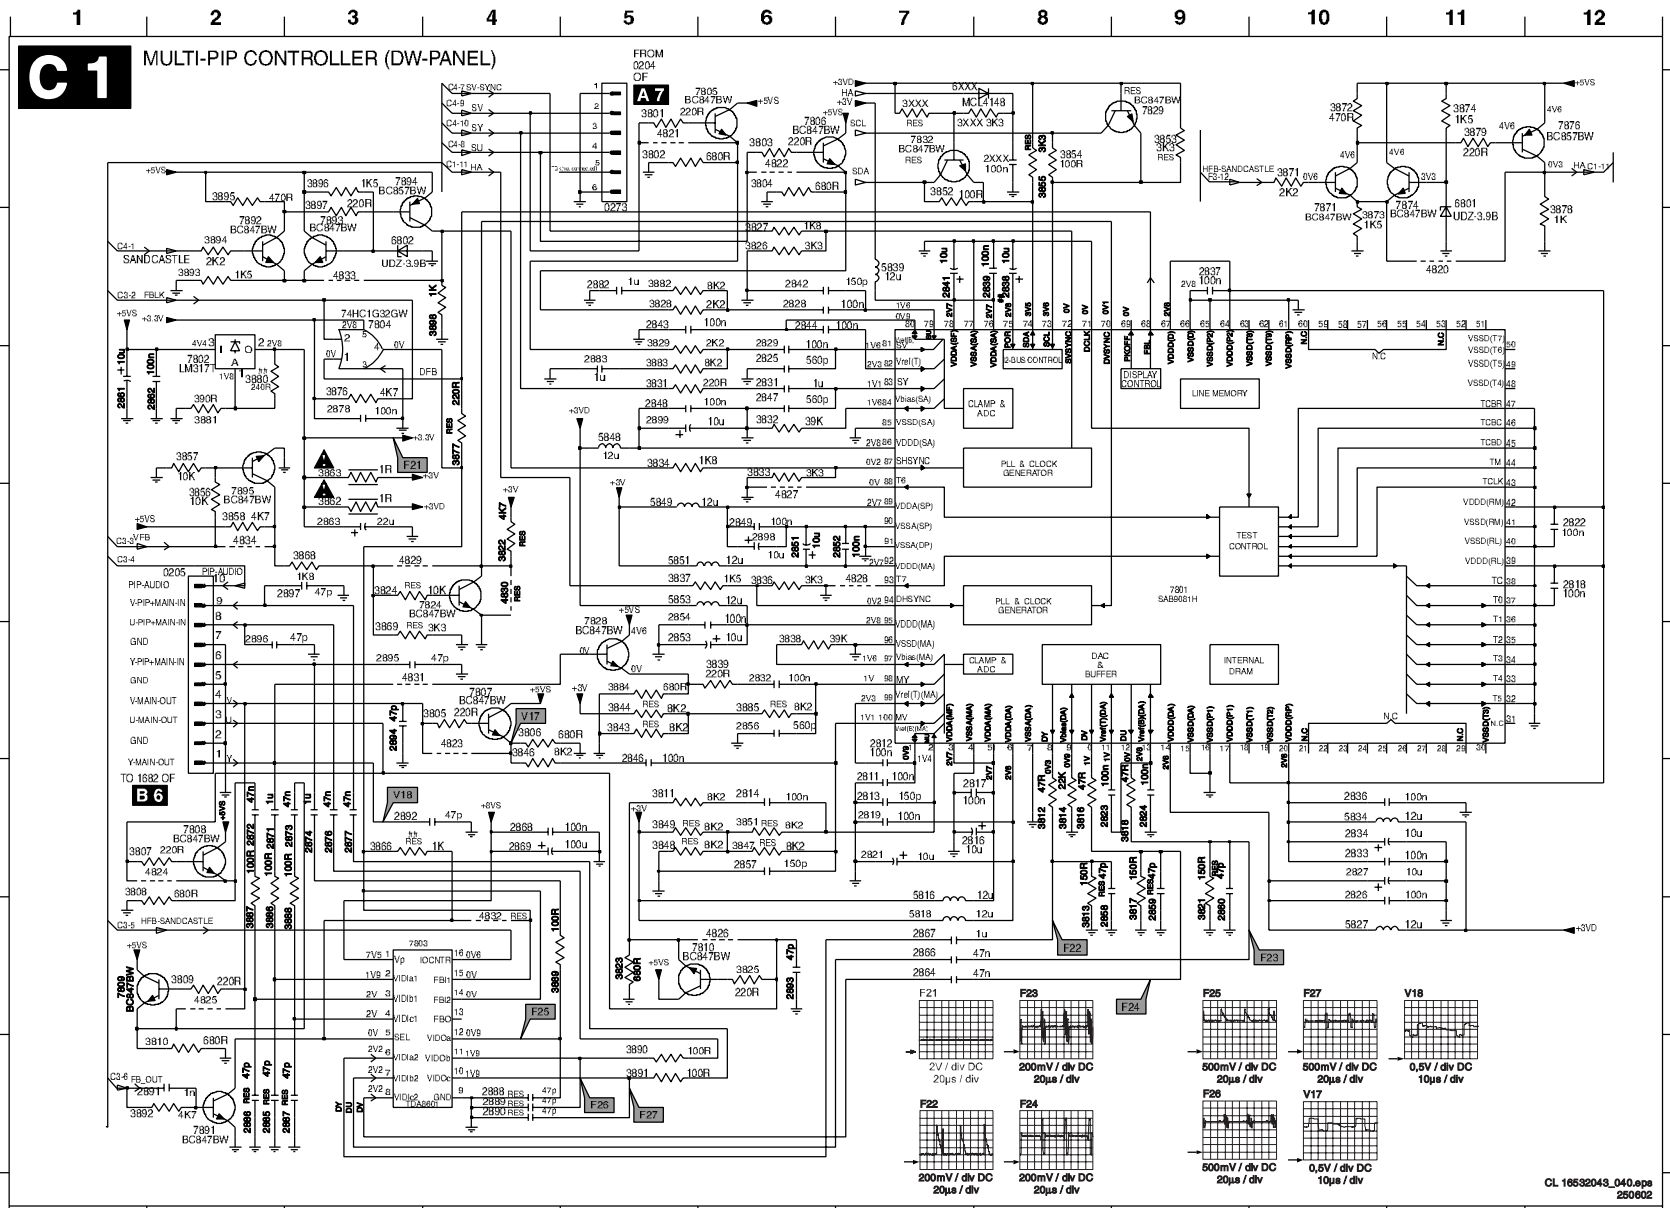

0205 D2 3828 B5 78
0273 B5 3829 C5 78
2811 F7 3831 C5 78
2812 E7 3832 C6 78
2813 F7 3833 C6 78
2814 F6 3834 C5 78
2816 F7 3836 D6
2817 F8 3837 D5
2818 D12 3838 E6
2819 F7 3839 E6
2821 F7 3843 E5
2822 D12 3844 E5
2823 F8 3846 E4
2824 F9 3847 F6
2825 C6 3848 F5
2826 G10 3849 F5
2827 F10 3851 F6
2828 B6 3852 A7
2829 C6 3853 A9
2831 C6 3854 A8
2832 E6 3855 A8
2833 F10 3856 D2
2834 F10 3857 C2
2836 F10 3858 D2
2837 B9 3862 D3
2838 B8 3863 C3
2839 B8 3866 F3
2841 B7 3868 D3
2842 B6 3869 E3
2843 B5 3871 A10
2844 B6 3872 A10
2846 F5 3873 B10
2847 C6 3874 A11
2848 C5 3876 C3
2849 D6 3877 C4
2851 D6 3878 B12
2852 D7 3879 A11
2853 E5 3880 C2
2854 D5 3881 C2
2856 E6 3882 B5
2857 F6 3883 C5
2858 G8 3884 E5
2859 G9 3885 E6
2860 G9 3886 G2
2861 C1 3887 G2
2862 C2 3888 G3
2863 D3 3889 G4
2864 G7 3890 H5
2866 G7 3891 H5
2867 G7 3892 H1
2868 F4 3893 B2
2869 F4 3894 B2
2871 F2 3895 A2
2872 F2 3896 A3
2873 F3 3897 B3
2874 F3 3898 B4
2876 F3 3XXX A7
2877 F3 3XXX A7
2878 C3 4820 B11
2882 B5 4821 A5
2883 C5 4822 A6
2885 H2 4823 E4
2886 H2 4824 F2
2887 H2 4825 G2
2888 H4 4826 G6
2889 H4 4827 D6
2890 H4 4828 D7
2891 H2 4829 D3
2892 F3 4830 D4
2893 G6 4831 E3
2894 E3 4832 G4
2895 E3 4833 B3
2896 E2 4834 D2
2897 D3 5816 G7
2898 D6 5818 G7
2899 C5 5827 G10
2XXX A8 5834 F10
3801 A5 5839 B7
3802 A5 5848 C5
3803 A6 5849 D5
3804 A6 5851 D5
3805 E4 5853 D5
3806 E4 6801 A11
3807 F1 6802 B3
3808 F1 6XXX A7
3809 G2 7801 D9
3810 H2 7802 C2
3811 F5 7803 G3
3812 F8 7804 B3
3813 G8 7805 A5
3814 F8 7806 A6
3816 F8 7807 E4
3817 G9 7808 F2
3818 F9 7809 G1
3821 G9 7810 G5
3822 D4 7824 D3
3823 G5 7828 D5
3824 D3 7829 A9
3825 G6 7832 A7
3826 B6 7871 B10
3827 B6 7874 B11

DW Panel: Tuner

0255 C5 2261 C1 2262 C2 2265 A3 2269 D5 3263 A2 3264 A2 3265 B2 3267 D3 3268 D3 3270 C2 5261 B1 7201 B4

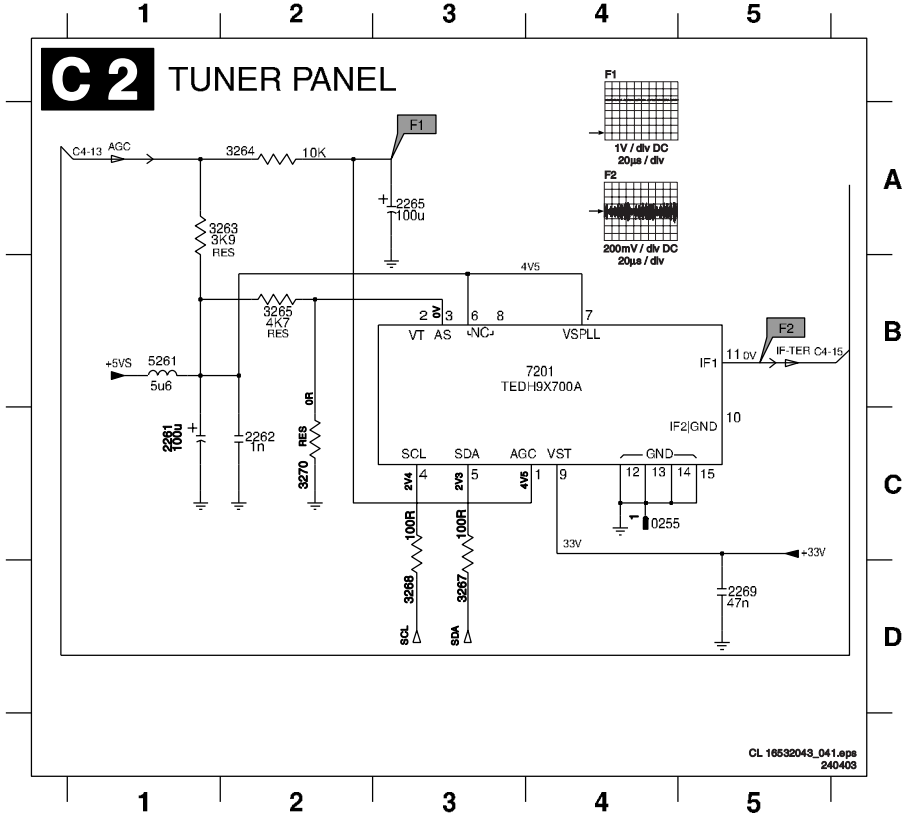

1 2 3 4 5

A B C D

Personal Notes:

DW Panel: I/O Processing

C 3 I/O PROCESSING

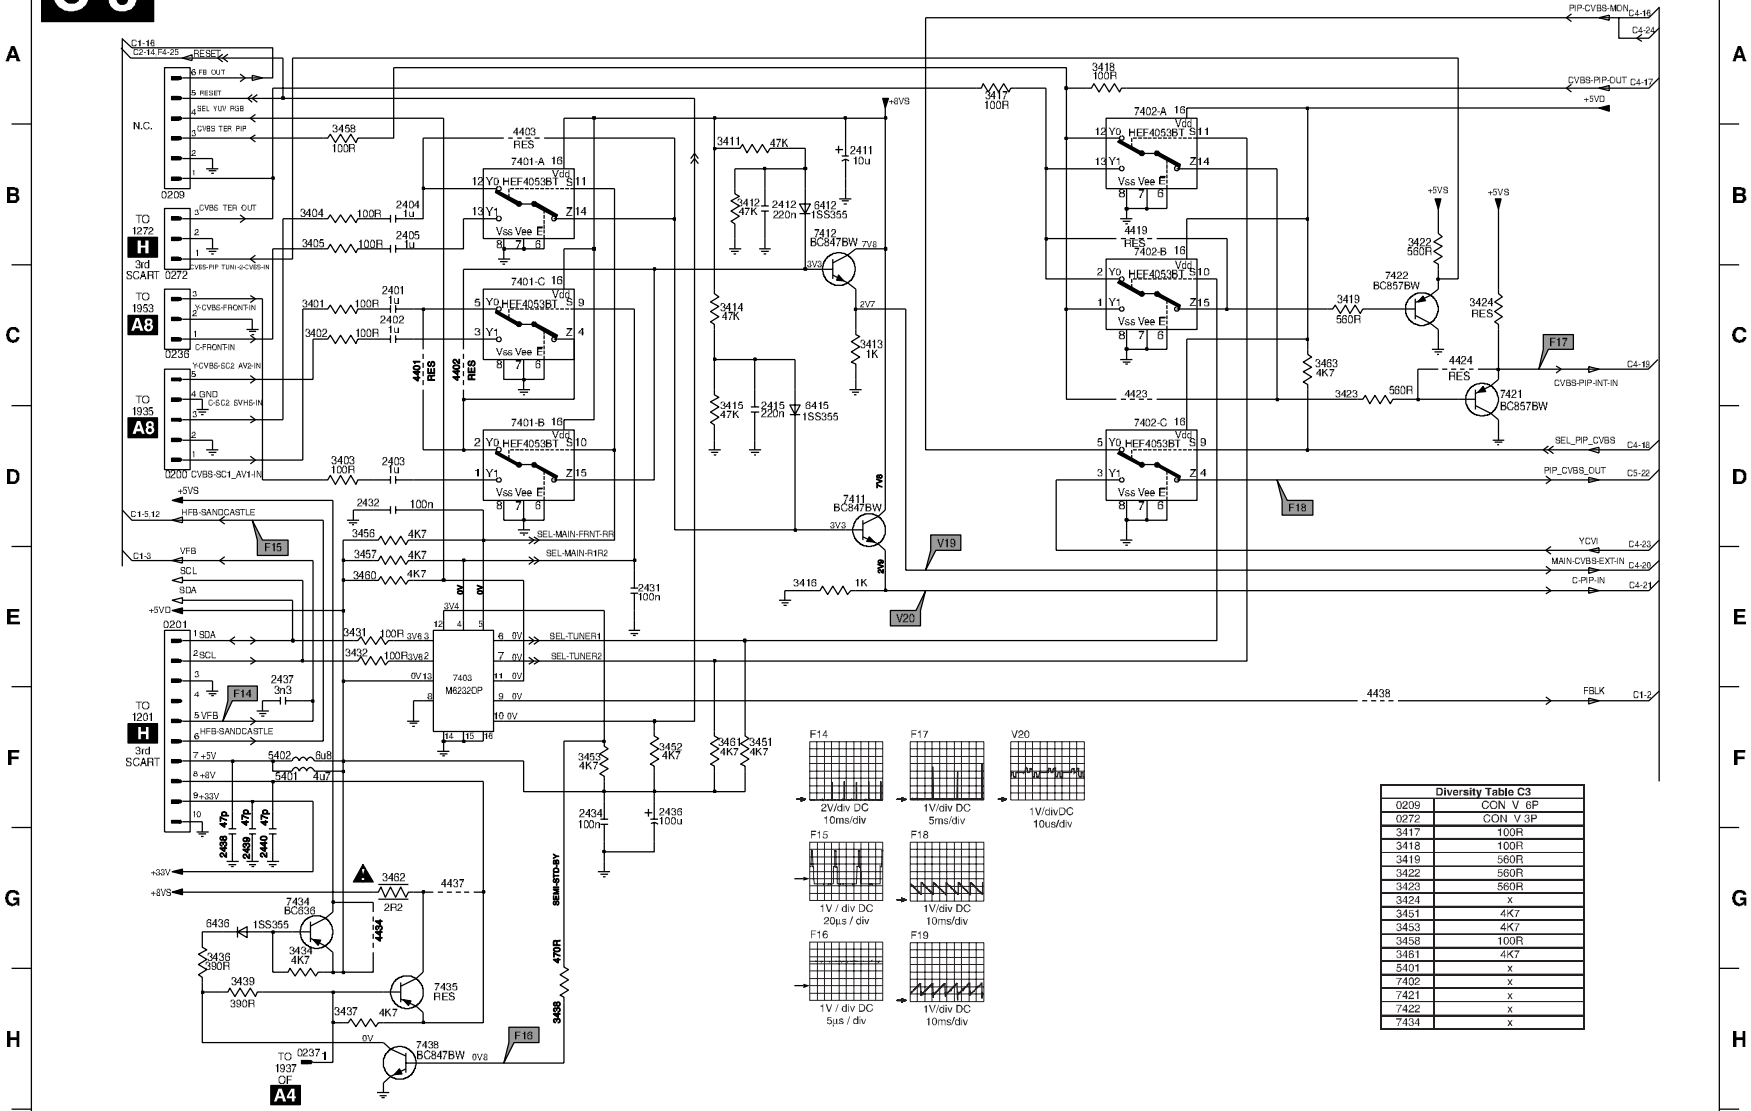

Diversity Table C3	
0209	CON V 6P
0272	CON V 3P
3417	100R
3418	100R
3419	560R
3422	560R
3423	560R
3424	x
3451	4K7
3453	4K7
3458	100R
3461	4K7
5401	x
7402	x
7421	x
7422	x
7434	x

0200 D2
0201 E2
0209 B2
0236 C2
0237 H2
0272 C1
2401 C3
2402 C3
2403 D3
2404 B3
2405 B3
2411 B6
2412 B6
2415 C6
2431 E5
2432 D3
2434 F4
2436 F5
2437 E2
2438 G2
2439 G2
2440 G2
3401 C3
3402 C3
3403 D3
3404 B2
3405 B2
3411 B5
3412 B6
3413 C6
3414 C5
3415 C5
3416 E6
3417 A7
3418 A8
3419 C10
3422 B10
3423 C10
3424 C11
3431 E3
3432 E3
3434 G2
3436 G2
3437 H3
3438 H4
3439 H2
3451 F6
3452 F5
3453 F4
3458 D3
3457 E3
3458 B3
3460 E3
3461 F5
3462 G3
3463 C10
4401 C3
4402 C4
4403 B4
4419 B8
4423 C8
4424 C11
4434 G3
4437 G3
4438 F10
5401 F2
5402 F2
6412 B6
6415 C6
6436 G2
7401-A B4
7401-B D4
7401-C C4
7402-A A8
7402-B B8
7402-C D8
7403 E4
7411 D6
7412 B6
7421 C11
7422 C10
7434 G2
7435 H3
7438 H3

DW Panel: IF Video Sync

C 4 IF-VIDEO-SYNC

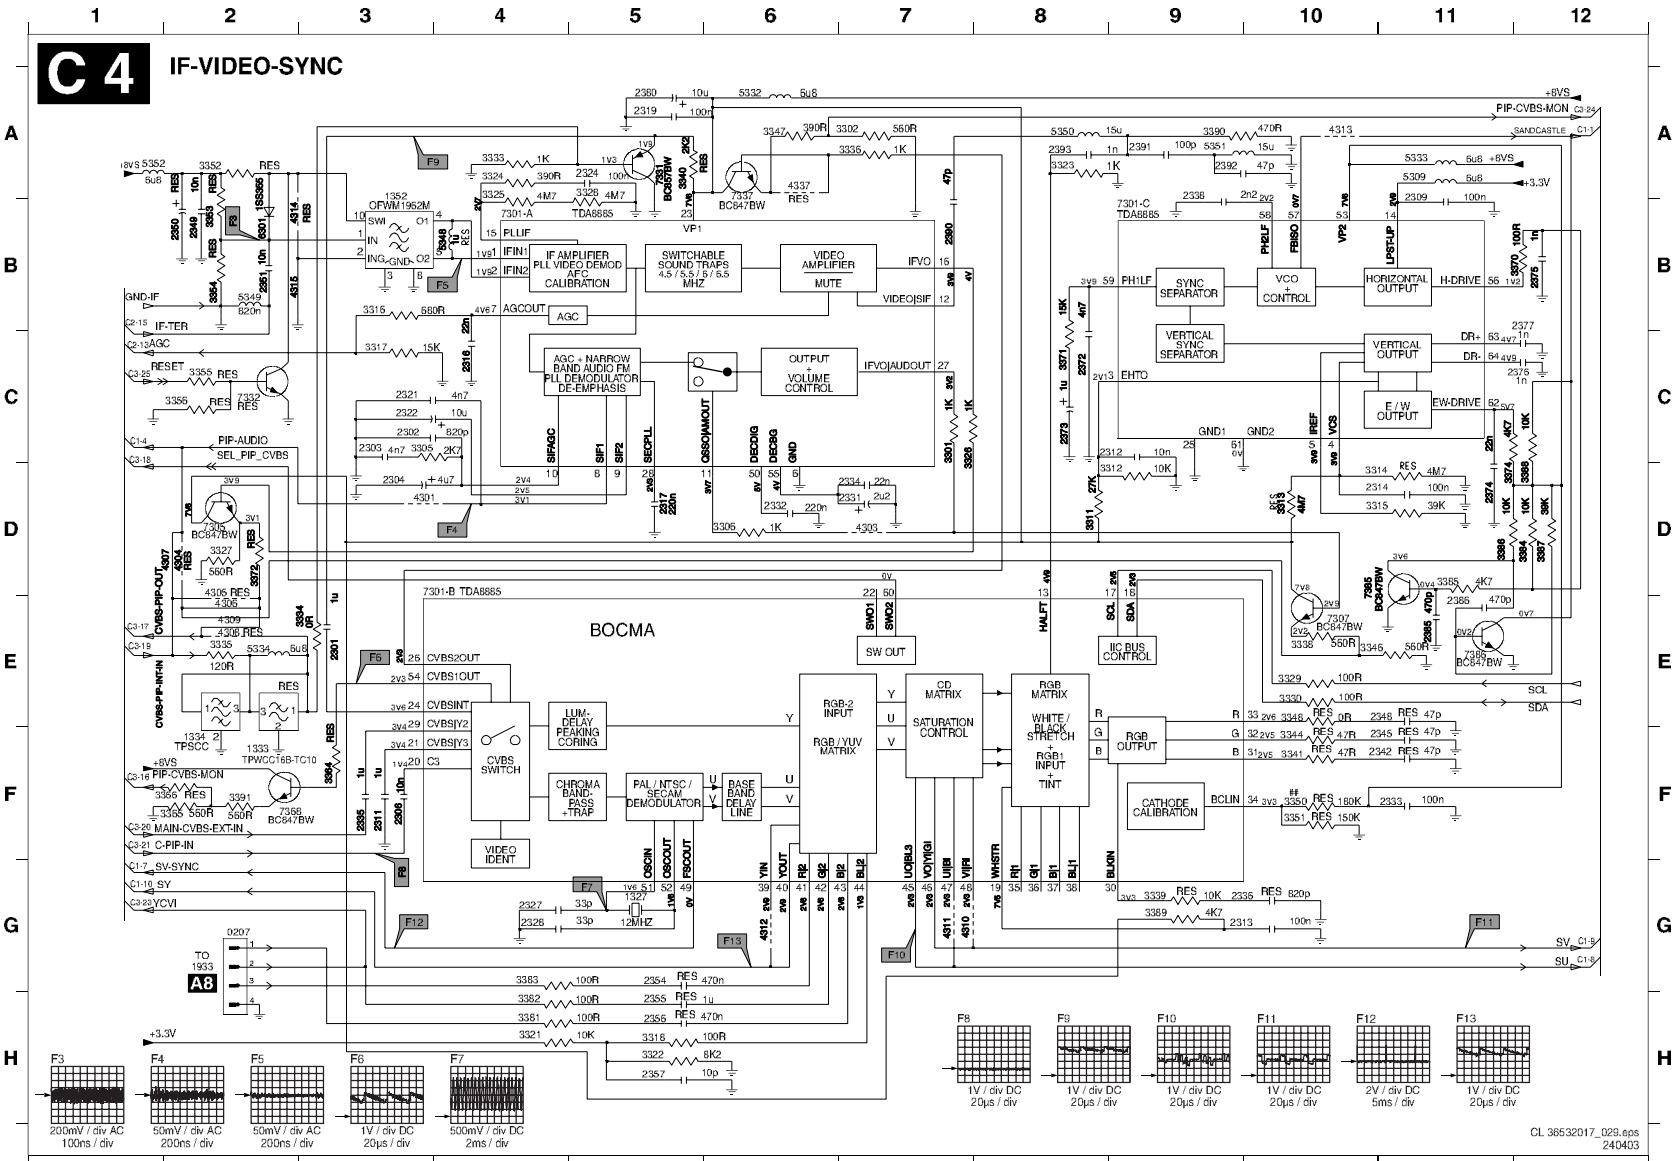

0207 G2	3301 C7	3386 D11
1327 G5	3302 A7	3387 D12
1333 F2	3305 C3	3388 D12
1334 F2	3306 D6	3389 G9
1352 B3	3311 D8	3390 A9
2301 E3	3312 D9	3391 F2
2302 C3	3313 D10	4301 D3
2303 C3	3314 D10	4303 D7
2304 D3	3315 D10	4304 D2
2306 F3	3316 B3	4305 D2
2309 B11	3317 C3	4306 E2
2311 F3	3318 H5	4307 D2
2312 C9	3321 H4	4308 E2
2313 G9	3322 H5	4309 E2
2314 D10	3323 A8	4310 G7
2316 C4	3324 A4	4311 G7
2317 D5	3325 A4	4312 G6
2319 A5	3326 C7	4313 A10
2321 C3	3327 D2	4314 B2
2322 C3	3328 A5	4315 B2
2324 A5	3329 E10	4337 A6
2327 G4	3330 E10	5309 A11
2328 G4	3333 A4	5332 A6
2331 D7	3334 E3	5333 A11
2332 D6	3335 E2	5334 E2
2333 F11	3336 A7	5348 B4
2334 D7	3338 E10	5349 B2
2335 F3	3339 G9	5350 A8
2336 G9	3340 A5	5351 A9
2338 A9	3341 F10	5352 A1
2342 F11	3344 F10	6301 B2
2345 F11	3345 E10	7301-A B4
2348 E11	3347 A6	7301-B D3
2349 B2	3348 E10	7301-C B9
2350 B2	3350 F10	7305 D2
2351 B2	3351 F10	7307 E10
2354 G5	3352 A2	7331 A5
2355 H5	3353 B2	7332 C2
2356 H5	3354 B2	7337 A6
2357 H5	3355 C2	7368 F3
2372 C8	3356 C2	7385 D10
2373 C8	3364 F3	7386 E11
2374 D11	3365 F2	
2375 B12	3366 F1	
2376 C12	3370 B12	
2377 B12	3371 C8	
2380 A5	3372 D2	
2385 E11	3374 D11	
2386 E11	3381 H4	
2390 B7	3382 H4	
2391 A9	3383 G4	
2392 A9	3384 D12	
2393 A8	3385 D11	

Layout Double Window Panel (Top View)

0200 A4 2328 A2 2434 B3 2838 B6 2885 A4 3348 A3 3416 A3 3813 A5 3864 C5 3897 B5 5332 A3 7801 B5
0201 A6 2331 A2 2436 B4 2841 B6 2886 A4 3352 B1 3431 C3 3814 A5 3865 B5 3898 B5 5333 A2 7802 C4
0205 A5 2333 A2 2437 A6 2842 B5 2887 A4 3353 B2 3432 C3 3816 A5 3866 A4 4301 B2 5334 A3 7803 A4
0207 A1 2348 A2 2438 A6 2843 B5 2888 A4 3354 B2 3433 C3 3817 A5 3868 B4 4303 B3 5350 B2 7804 B4
0209 A3 2349 B1 2439 A6 2844 B5 2889 A5 3355 B1 3451 C3 3818 A5 3869 B4 4304 B3 5351 B2 7805 A4
0236 A2 2350 A1 2440 A6 2851 B6 2890 B4 3356 B1 3452 B3 3821 A4 3871 C6 4306 B3 5352 B1 7806 B6
0237 C5 2351 B2 2502 A1 2853 A6 2892 A5 3362 B1 3453 C3 3822 B4 3872 C6 4307 B3 5401 B6 7807 A6
0255 C2 2355 A2 2503 A1 2857 A5 2893 A5 3366 A2 3456 C3 3824 B4 3873 C6 4308 B3 5402 B6 7808 A5
0272 A3 2373 A1 2504 A1 2858 A5 2894 A5 3372 B3 3457 C3 3825 A5 3874 C6 4309 B3 5501 A1 7809 A5
0273 A6 2380 B2 2505 A1 2859 A5 2897 A5 3373 A2 3458 A4 3826 B4 3877 B4 4310 A2 6801 C6 7810 A5
1327 A2 2385 A1 2506 A1 2860 A4 2898 A5 3384 A5 3460 B3 3827 B4 3878 C6 4311 A2 6802 B6 7824 B4
1332 B3 2386 A2 2507 A1 2861 B4 2899 A5 3385 A2 3461 B3 3828 B5 3879 C6 4312 A3 6803 C6 7829 C4
1334 B4 2390 B2 2508 A1 2862 C4 3301 A3 3386 A2 3462 C4 3829 A4 3880 C4 4337 B2 7201 C1 7832 B5
1352 B2 2391 B2 2509 A1 2863 B5 3306 B2 3387 A1 3463 A2 3831 A4 3881 B4 4403 A3 7501 A2 7871 C6
1501 A1 2392 B2 2811 A5 2864 A5 3316 B2 3388 A1 3502 A1 3832 B5 3882 B5 4438 B5 7307 A3 7874 C6
2261 C3 2393 B2 2812 A5 2866 A5 3317 B2 3389 B3 3503 A1 3833 A4 3883 A4 4825 B6 7331 A3 7876 C6
2265 B1 2401 A3 2813 A5 2867 A5 3318 A2 3390 B2 3504 A1 3834 B5 3886 A4 4833 A6 7332 B1 7891 A4
2301 A3 2402 A3 2816 A5 2868 A4 3321 A2 3391 A2 3506 A1 3836 B5 3887 A4 4835 A5 7335 B3 7892 B6
2304 B3 2403 A3 2821 A5 2869 A4 3322 A2 3401 A3 3507 A1 3837 B5 3888 A4 4836 B6 7368 A3 7893 B6
2306 B3 2404 A3 2823 A5 2871 A4 3327 B2 3402 A3 3508 A1 3838 B5 3889 A5 4838 B5 7385 A2 7894 B5
2311 B3 2405 A3 2824 A5 2872 A5 3331 A3 3404 A4 3509 A1 3839 B5 3890 A5 4839 B4 7390 A2
2316 B2 2411 A3 2827 A5 2873 A5 3334 A3 3411 A3 3806 A6 3852 B5 3891 A5 4840 B4 7401 A3
2317 A3 2412 A3 2828 B5 2874 A5 3336 A3 3412 A3 3807 A5 3854 B5 3893 B5 4841 A5 7403 B3
2319 A3 2415 A2 2833 A6 2876 A5 3340 B3 3413 A2 3809 A5 3855 C5 3894 B6 4842 A4 7434 C5
2322 C3 2431 A3 2834 A5 2877 B4 3346 A3 3414 A3 3810 A5 3862 C5 3895 B6 4843 B5 7435 C5
2327 A2 2432 A3 2836 A4 2879 C6 3347 B3 3415 A3 3812 A5 3863 B5 3896 B6 5309 B3 7501 A1

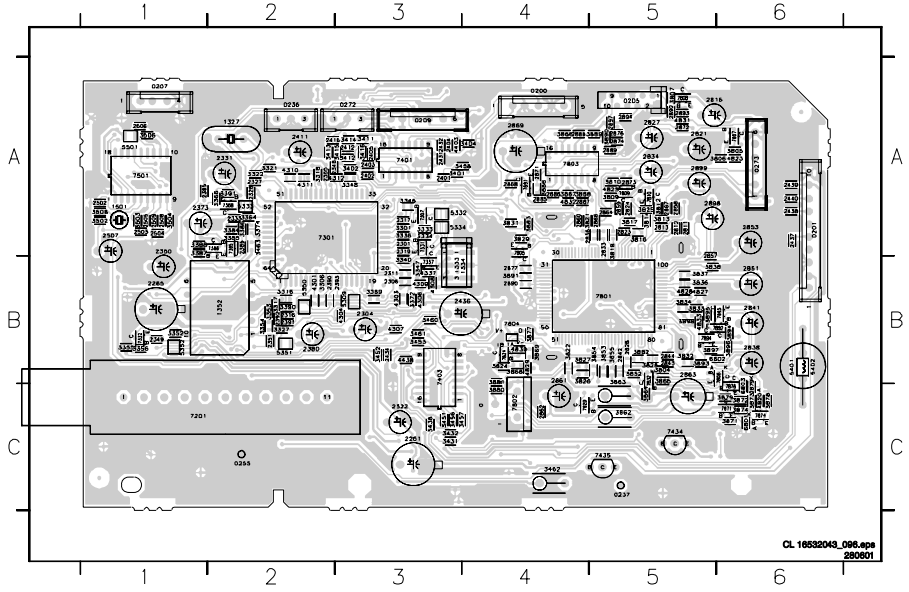

Layout Double Window Panel (Bottom View)

2262 C5 2338 A5 2814 A2 2848 B2 3267 B6 3328 A4 3382 A5 3501 A6 3844 A2 4305 B4 4826 A2 6301 B5
2269 C5 2342 A4 2817 A2 2849 B2 3268 B6 3329 B4 3383 A5 3507 A6 3846 A1 4313 A5 4834 C3 6412 A4
2302 B4 2345 A4 2818 B3 2852 B2 3270 C6 3330 B4 3403 A5 3509 A6 3847 A2 4314 B5 5261 B5 6415 A4
2303 B4 2354 A5 2819 A2 2854 B2 3302 A4 3335 B4 3404 A5 3510 A6 3848 A2 4315 B5 5346 C3 9336 C3
2309 B4 2356 A5 2822 B3 2856 A1 3305 B4 3338 A4 3417 B3 3512 A6 3849 A5 4401 A4 5348 B5 7305 B5
2312 B5 2357 A5 2825 B2 2878 B3 3311 B5 3339 A4 3418 B4 3513 A6 3851 A2 4402 A4 5816 A2 7402 B4
2313 B4 2372 A5 2826 B3 2882 B2 3312 B5 3340 A4 3419 C4 3801 A3 3856 C3 4419 C4 5818 A2 7411 A4
2314 B5 2374 B5 2829 B2 2883 B5 3313 A5 3344 A4 3422 C3 3802 B3 3857 C3 4423 B4 5827 B2 7412 A4
2321 A4 2375 A5 2831 B2 2891 A3 3314 A5 3350 A5 3423 C3 3803 B2 3858 C3 4424 C4 5834 A2 7421 C4
2324 A4 2376 A5 2832 A1 2895 A2 3315 A5 3351 A5 3424 C4 3808 A2 3870 B2 4434 C2 5838 B2 7422 C3
2332 A5 2379 A5 2837 B2 2896 A5 3323 A4 3365 A5 3425 C4 3811 A2 3876 B5 4437 C5 5848 B2 7438 C3
2334 A5 2501 A6 2839 B2 3263 B6 3324 A4 3369 A5 3436 C3 3823 A2 3884 A1 4821 B3 5849 B2 7502 A6
2335 A4 2511 A6 2846 B2 3264 B6 3325 B4 3370 A5 3437 C3 3839 A1 3885 A2 4822 B1 5851 B2 7828 A1
2336 A4 2512 A6 2847 B2 3265 B6 3326 B5 3381 A5 3439 C3 3843 A1 3892 A3 4824 A2 5853 B1 7895 C3

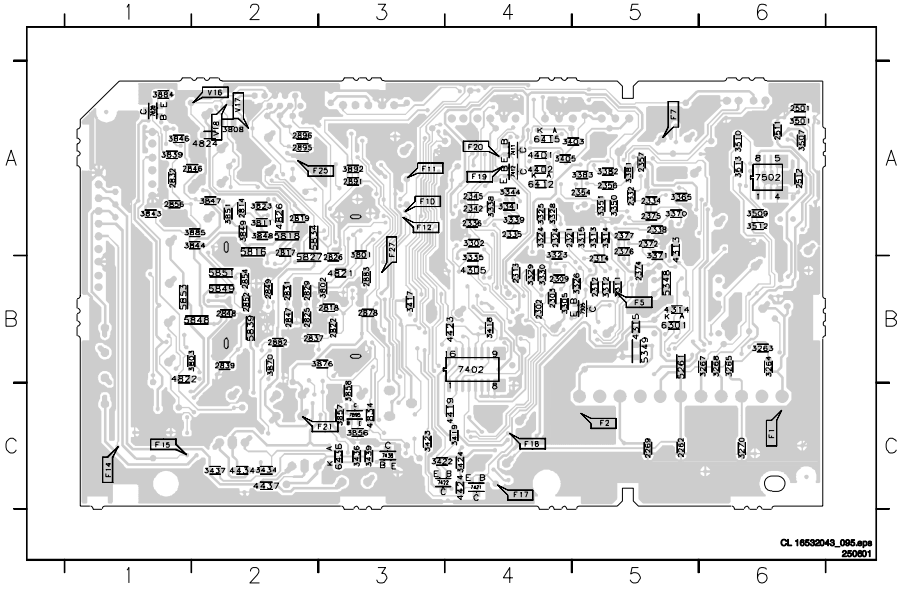

Mains Switch Panel (FL11 Styling)

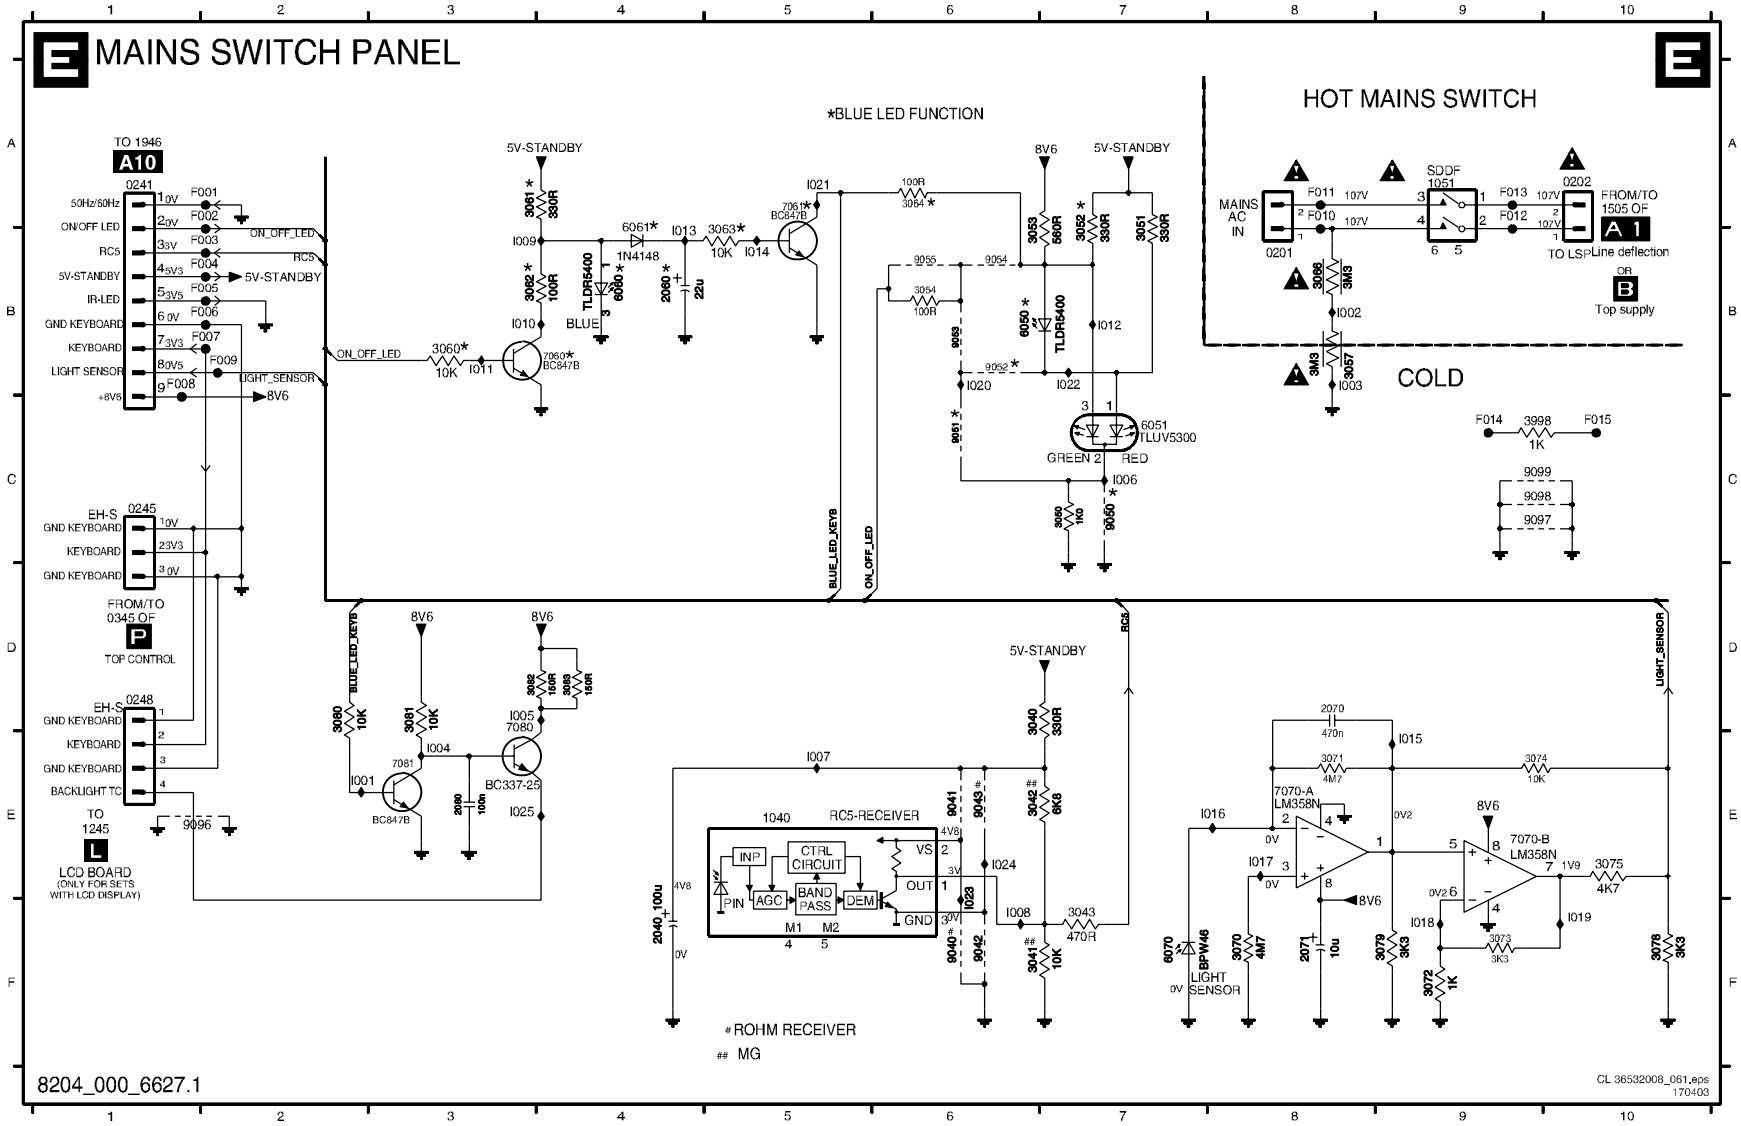

0201 B8 I005 D3
0202 A10 I006 C7
0241 A1 I007 E5
0245 C1 I008 F6
0248 D1 I009 B3
1040 E5 I010 B3
1051 A9 I011 B3
2040 F4 I012 B7
2060 B4 I013 B4
2070 D8 I014 B5
2071 F8 I015 E9
2080 E3 I016 E8
3040 D6 I017 E8
3041 F6 I018 F9
3042 E6 I019 F10
3043 F7 I020 B6
3050 C7 I021 A5
3051 B7 I022 B7
3052 B7 I023 E6
3053 B6 I024 E6
3054 B6 I025 E3
3057 B8
3060 B3
3061 A3
3062 B3
3063 B5
3064 A6
3066 B8
3070 F8
3071 E8
3072 F9
3073 F9
3074 E9
3075 E10
3078 F10
3079 F9
3080 D2
3081 D3
3082 D3
3083 D4
3998 C9
6050 B6
6051 C7
6060 B4
6061 B4
7070 F7
7060 B4
7061 A5
7070-A E8
7070-B E9
7080 E2
7081 E3
9040 F6
9041 E6
9042 F6
9043 E6
9050 C7
9051 C6
9052 B6
9053 B6
9054 B6
9055 B6
9096 E1
9097 C9
9098 C9
9099 C9
F001 A2
F002 A2
F003 B2
F004 B2
F005 B2
F006 B2
F007 B2
F008 B1
F009 B2
F010 A8
F011 A8
F012 A9
F013 A9
F014 C9
F015 C10
I001 E2
I002 B8
I003 B8
I004 E3

Layout Mains Switch Panel (FL11 Styling) (Top Side)

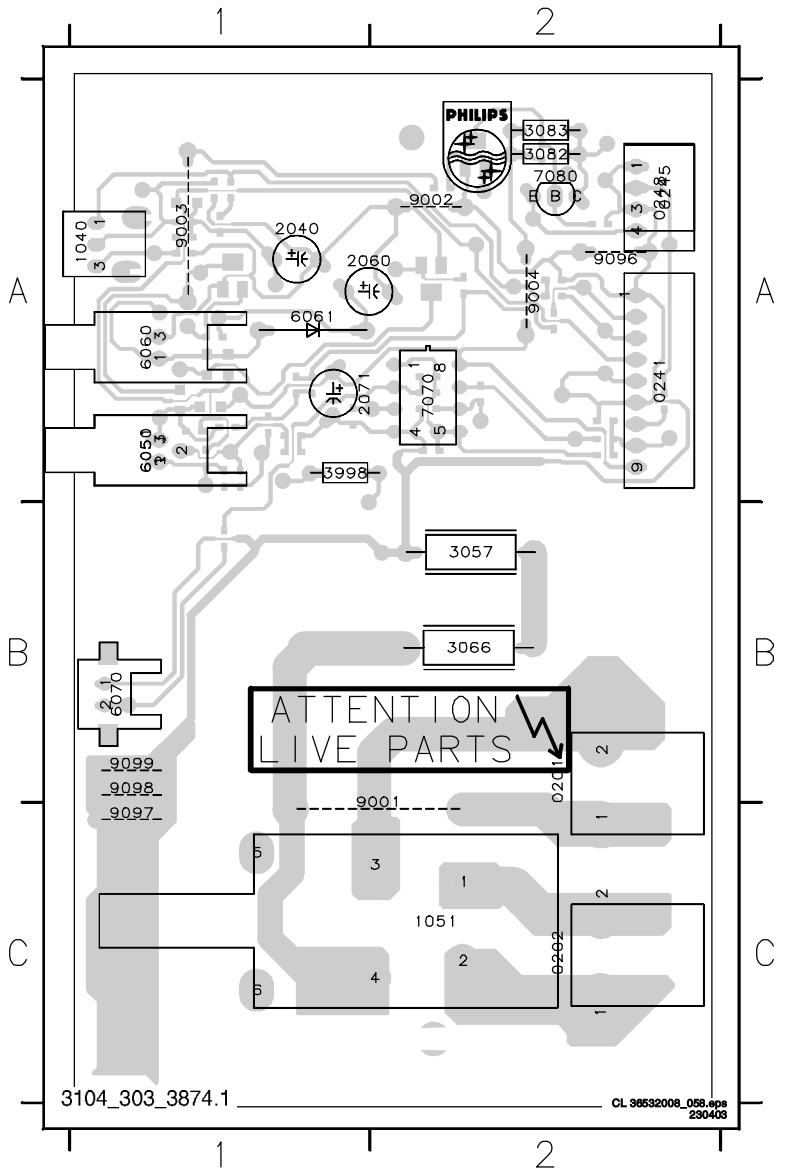

0201 B2
0202 C2
0241 A2
0245 A2
0248 A2
1040 A1
1051 C2
2040 A1
2060 A1
2071 A1
3057 B2
3066 B2
3082 A2
3083 A2
3998 A1
6050 A1
6051 A1
6060 A1
6061 A1
6070 B1
7070 A2
7080 A2
9001 B2
9002 A2
9003 A1
9004 A2
9096 A2
9097 C1
9098 B1
9099 B1

Layout Mains Switch Panel (FL11 Styling) (Bottom Side)

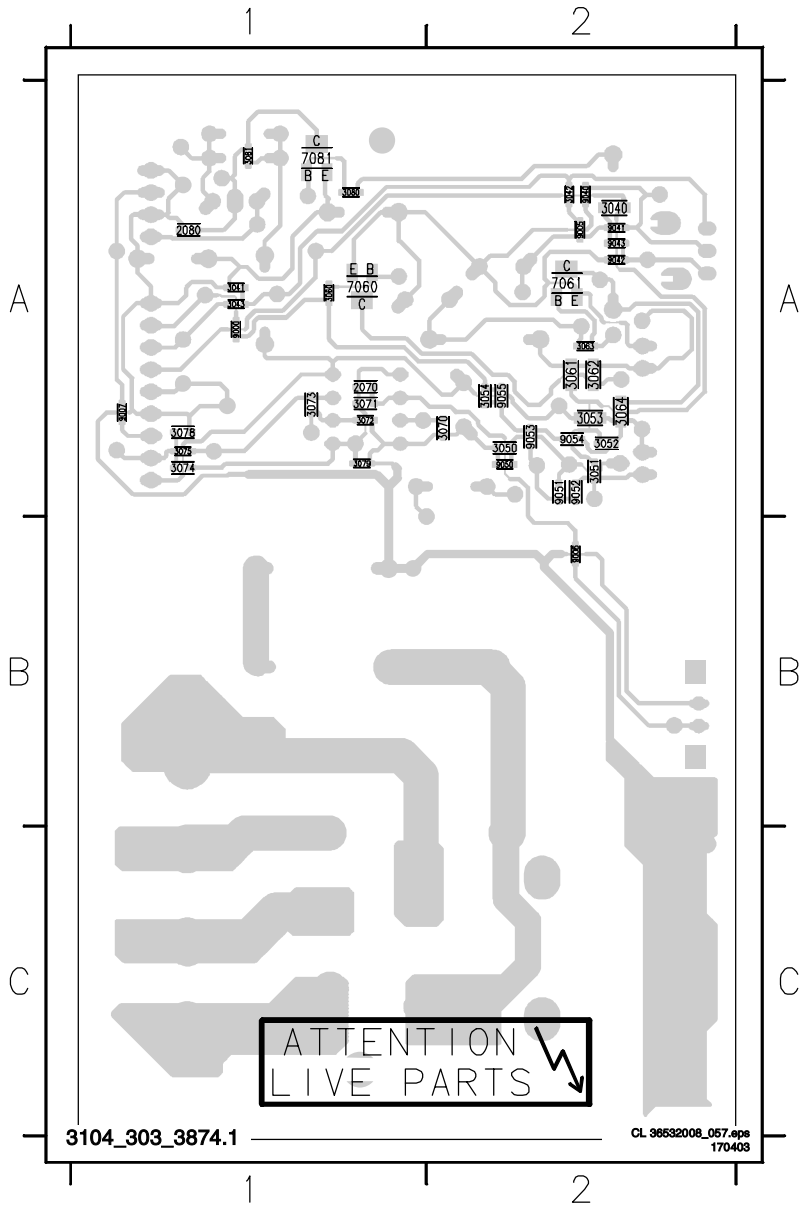

2070 A1
2080 A1
3040 A2
3041 A1
3042 A2
3043 A1
3050 A2
3051 A2
3052 A2
3053 A2
3054 A2
3060 A1
3061 A2
3062 A2
3063 A2
3064 A2
3070 A2
3071 A1
3072 A1
3073 A1
3074 A1
3075 A1
3078 A1
3079 A1
3080 A1
3081 A1
7060 A1
7061 A2
7081 A1
9000 A1
9005 A2
9006 B2
9007 A1
9040 A2
9041 A2
9042 A2
9043 A2
9050 A2
9051 A2
9052 A2
9053 A2
9054 A2
9055 A2

Main Switch Panel (PV2 Styling)

0201 A7 0245 D1 1040 E3 2071 E8 3037 A8 3042 E5 3051 B5 3054 A4 3072 E9 3075 E10 3999 A9 6070 E7 9010 C8 9042 E5 9051 C4 9054 A4
0202 A10 1010 C8 2040 E2 3010 C8 3040 D2 3043 E5 3052 A5 3070 E8 3073 E9 3078 E10 6050 B4 7070-A D8 9040 E4 9043 E5 9052 B4 9055 A4
0241 B1 1031 A8 2070 D8 3030 A7 3041 E5 3050 C4 3053 A4 3071 D8 3074 D9 3079 E9 6051 B5 7070-B E9 9041 E4 9050 C5 9053 B4

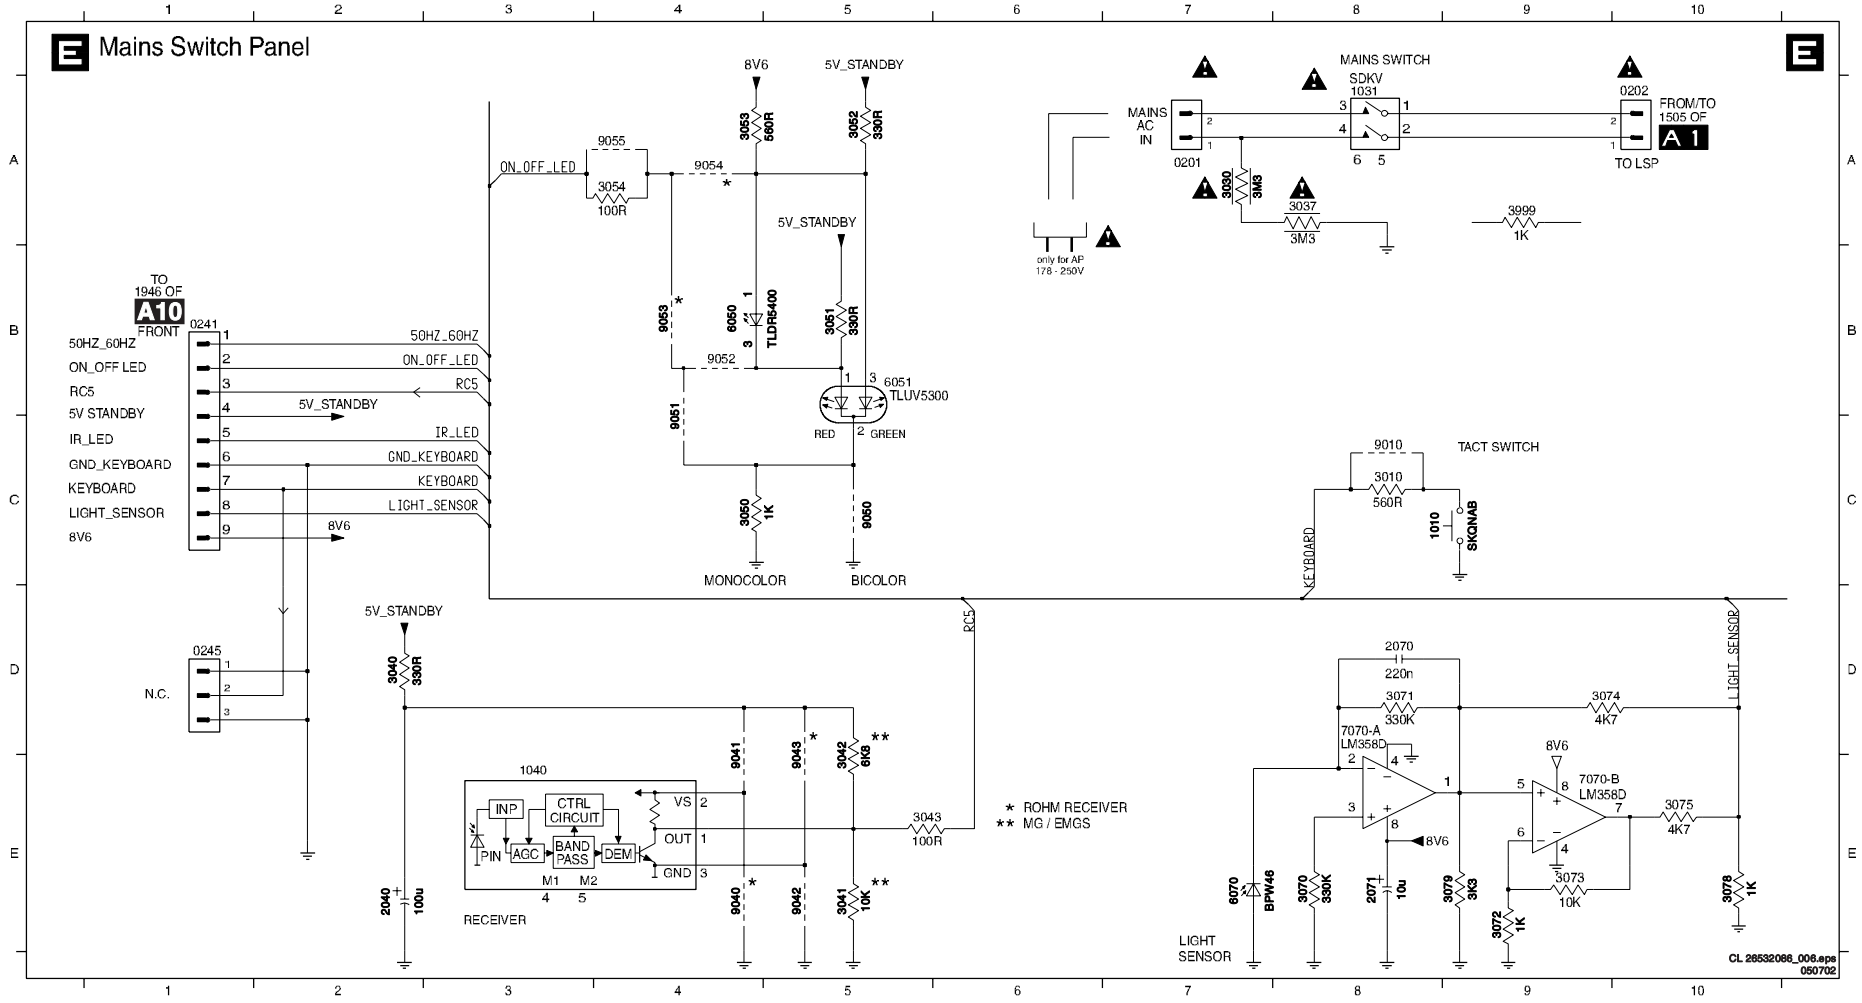

Layout Main Switch Panel (PV2 Styling) (Top Side)

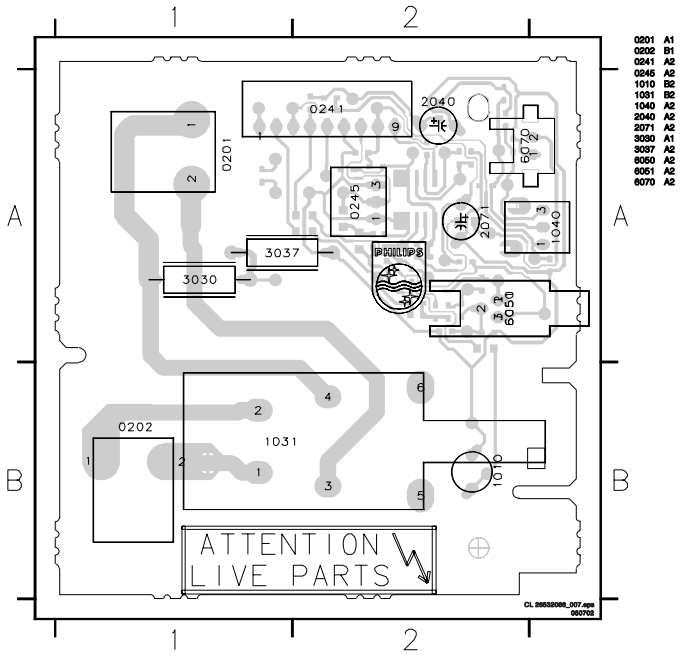

0201 A1
0202 B1
0241 A2
0245 A2
1010 B2
1031 B2
1040 A2
2040 A2
2071 A2
3030 A1
3037 A2
6050 A2
6051 A2
6070 A2

Layout Main Switch Panel (PV2 Styling) (Bottom Side)

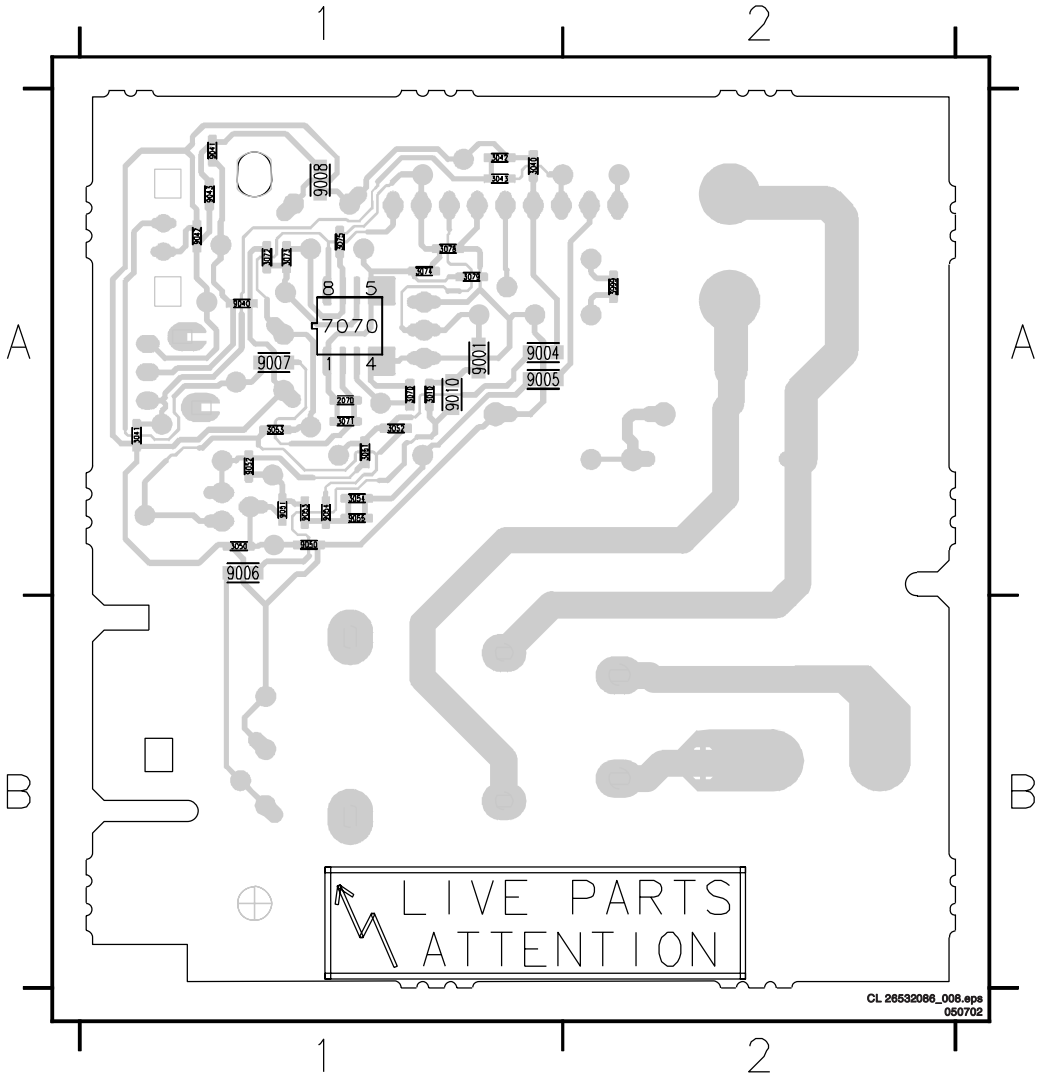

0201 A2
0202 B2
0241 A2
0245 A1
1010 B1
1031 B1
1040 A1
2040 A1
2070 A1
2071 A1
3010 A1
3030 A2
3037 A2
3040 A1
3041 A1
3042 A1
3043 A1
3050 A1
3051 A1
3052 A1
3053 A1
3054 A1
3070 A1
3071 A1
3072 A1
3073 A1
3074 A1
3075 A1
3078 A1
3079 A1
3999 A2
6050 A1
6051 A1
6070 A1
7070 A1
9001 A1
9004 A1
9005 A1
9006 A1
9007 A1
9008 A1
9010 A1
9040 A1
9041 A1
9042 A1
9043 A1
9050 A1
9051 A1
9052 A1
9053 A1
9054 A1
9055 A1

CRT Panel (FL11 Styling)

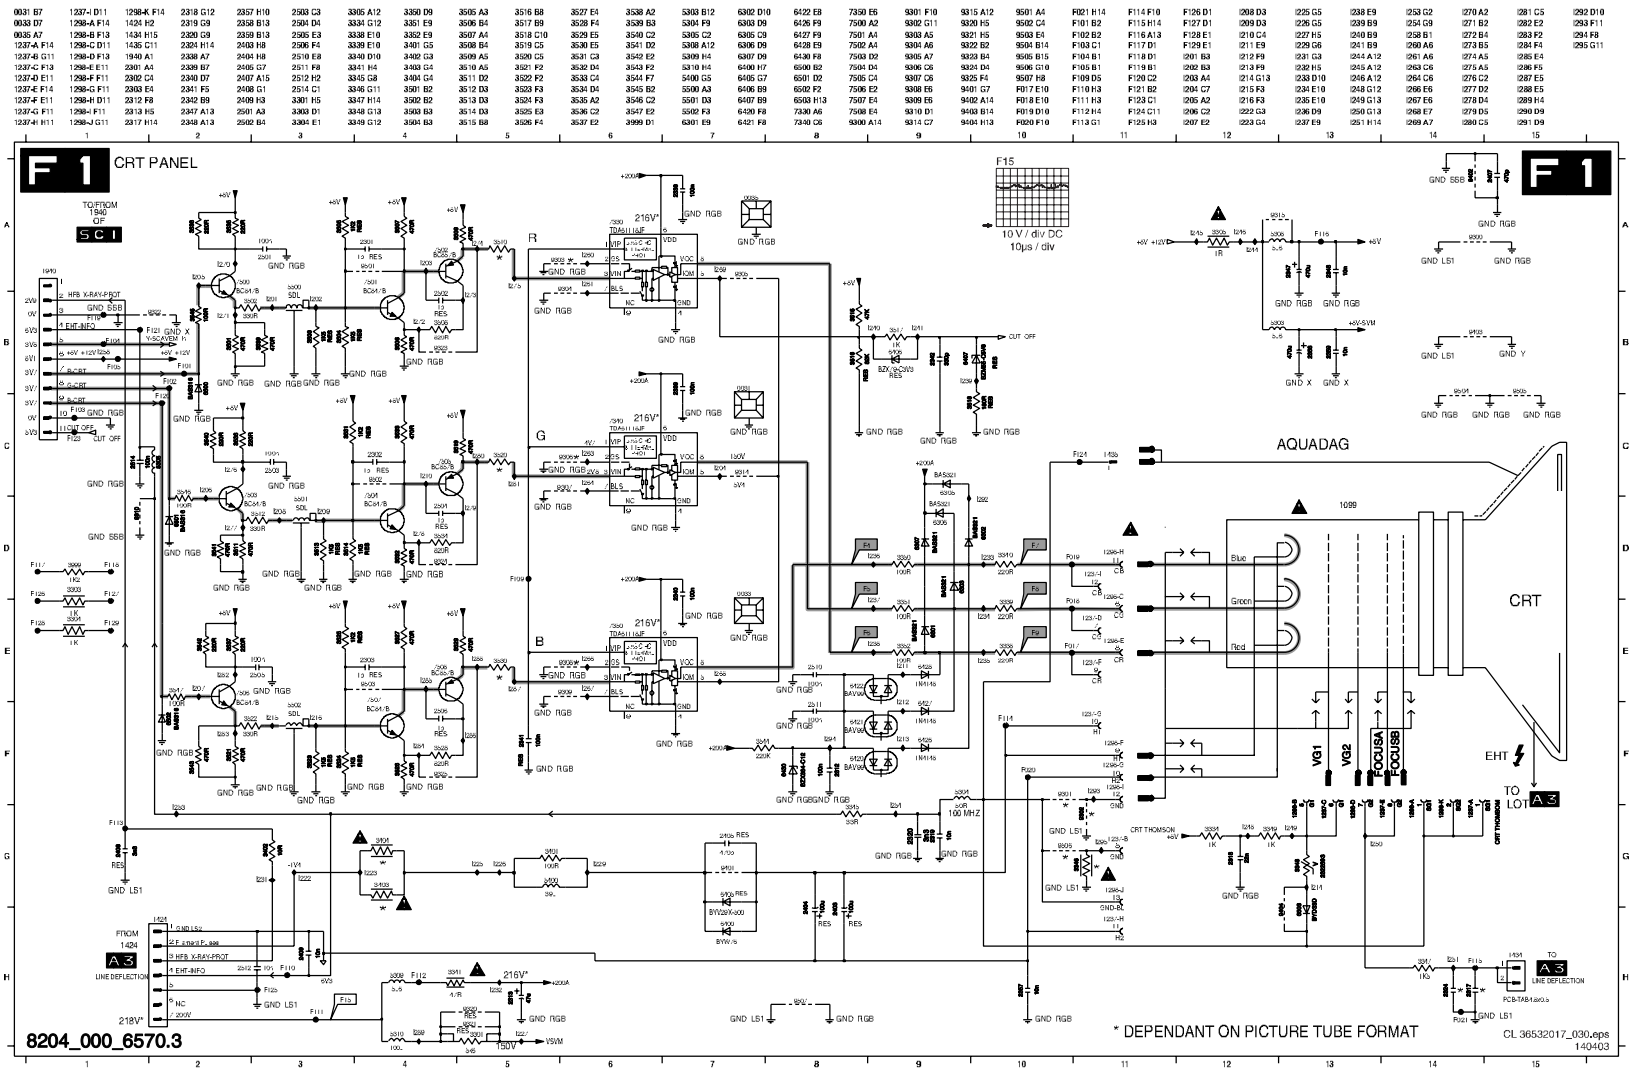

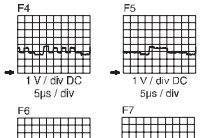

[F1] CRT panel						
Item	28" WSRF	28" RF	32" WSRF	34" RF	36" WSRF	DESCRIPTION
1237				X		CRT socket 9p female
1298	X	X			X	CRT socket 10p female
1298			X			CRT socket 11p female
2324	X					1N
2324			X			1N5
2324		X		X	X	4N7
2403		X		X	X	100U
2404		X		X	X	100U
2405		X		X	X	470P
3303				X		FUSE 1K
3304	X	X	X		X	FUSE 1K
3402	X		X		X	10R
3402		X		X		150R
3403		X			X	FUSE 1R
3403				X		FUSE 1R5
3403	X		X			FUSE 1R
3404		X			X	FUSE 1R
3404				X		FUSE 1R5
3510					X	100R
3510	X		X			150R
3510				X		220R
3510		X				560R
3520	X				X	150R
3520				X		220R
3520			X			390R
3520		X				560R
3530	X					150R
3530				X		220R
3530			X			390R
3530		X				560R
3899				X		1K5
3999	X					1K8
3999		X				2K2
3999					X	2K7
3999			X			3K9
5400	X		X			33U
5400				X		18U
5400		X				27U
5400					X	39U
6405		X		X	X	BYV29X-500
9301	X	X		X	X	Jumper
9302			X			Jumper
9303	X	X	X		X	Jumper
9306	X	X	X		X	Jumper
9308	X	X	X		X	Jumper
9401	X		X			Jumper

CRT/ Auto SCAVEM Panel (FL11 Styling)

1483 C9	2430 C1	2438 B4	3410 A5	3417 C6	3448 B6	3456 B3	3471 C6	3489 C3	6402 E7	7414 A7	7429 C7	9407 E1	I128 C8	I133 B2	I138 C6	I143 D7	I149 B3	I155 E1	I163 E7	I179 A5	I184 B4	I189 E1
2410 C2	2431 C2	2439 B6	3411 B5	3422 D4	3449 C6	3458 B5	3473 A7	3492 B4	6403 C7	7415 D7	7430 C7	9408 E1	I129 D8	I134 C6	I139 B5	I144 C6	I150 A7	I157 E4	I167 D7	I180 B3	I185 C3	I190 D8
2411 B2	2435 D7	2445 C8	3412 D5	3423 B4	3451 C2	3459 B2	3474 D3	5300 D8	6404 C7	7422 B2	9311 D8	9409 C3	I130 A7	I135 C3	I140 D3	I145 D6	I151 A7	I158 B4	I175 C7	I181 B3	I186 C3		
2420 B4	2436 A5	3310 C9	3413 E5	3424 B4	3453 B3	3460 D5	3478 E7	5301 C8	6431 C1	7427 B3	9312 C8	9410 E1	I131 B7	I136 A5	I141 D5	I147 E5	I152 E7	I161 A7	I177 B3	I182 B3	I187 C3		
2428 D6	2437 D4	3356 C8	3416 C6	3425 B4	3454 D6	3465 C7	3488 C3	6401 B7	6432 B1	7428 C3	9406 C8	I127 E1	I132 B6	I137 B1	I142 C5	I148 C8	I153 E7	I162 E7	I178 C3	I183 B4	I188 D1		

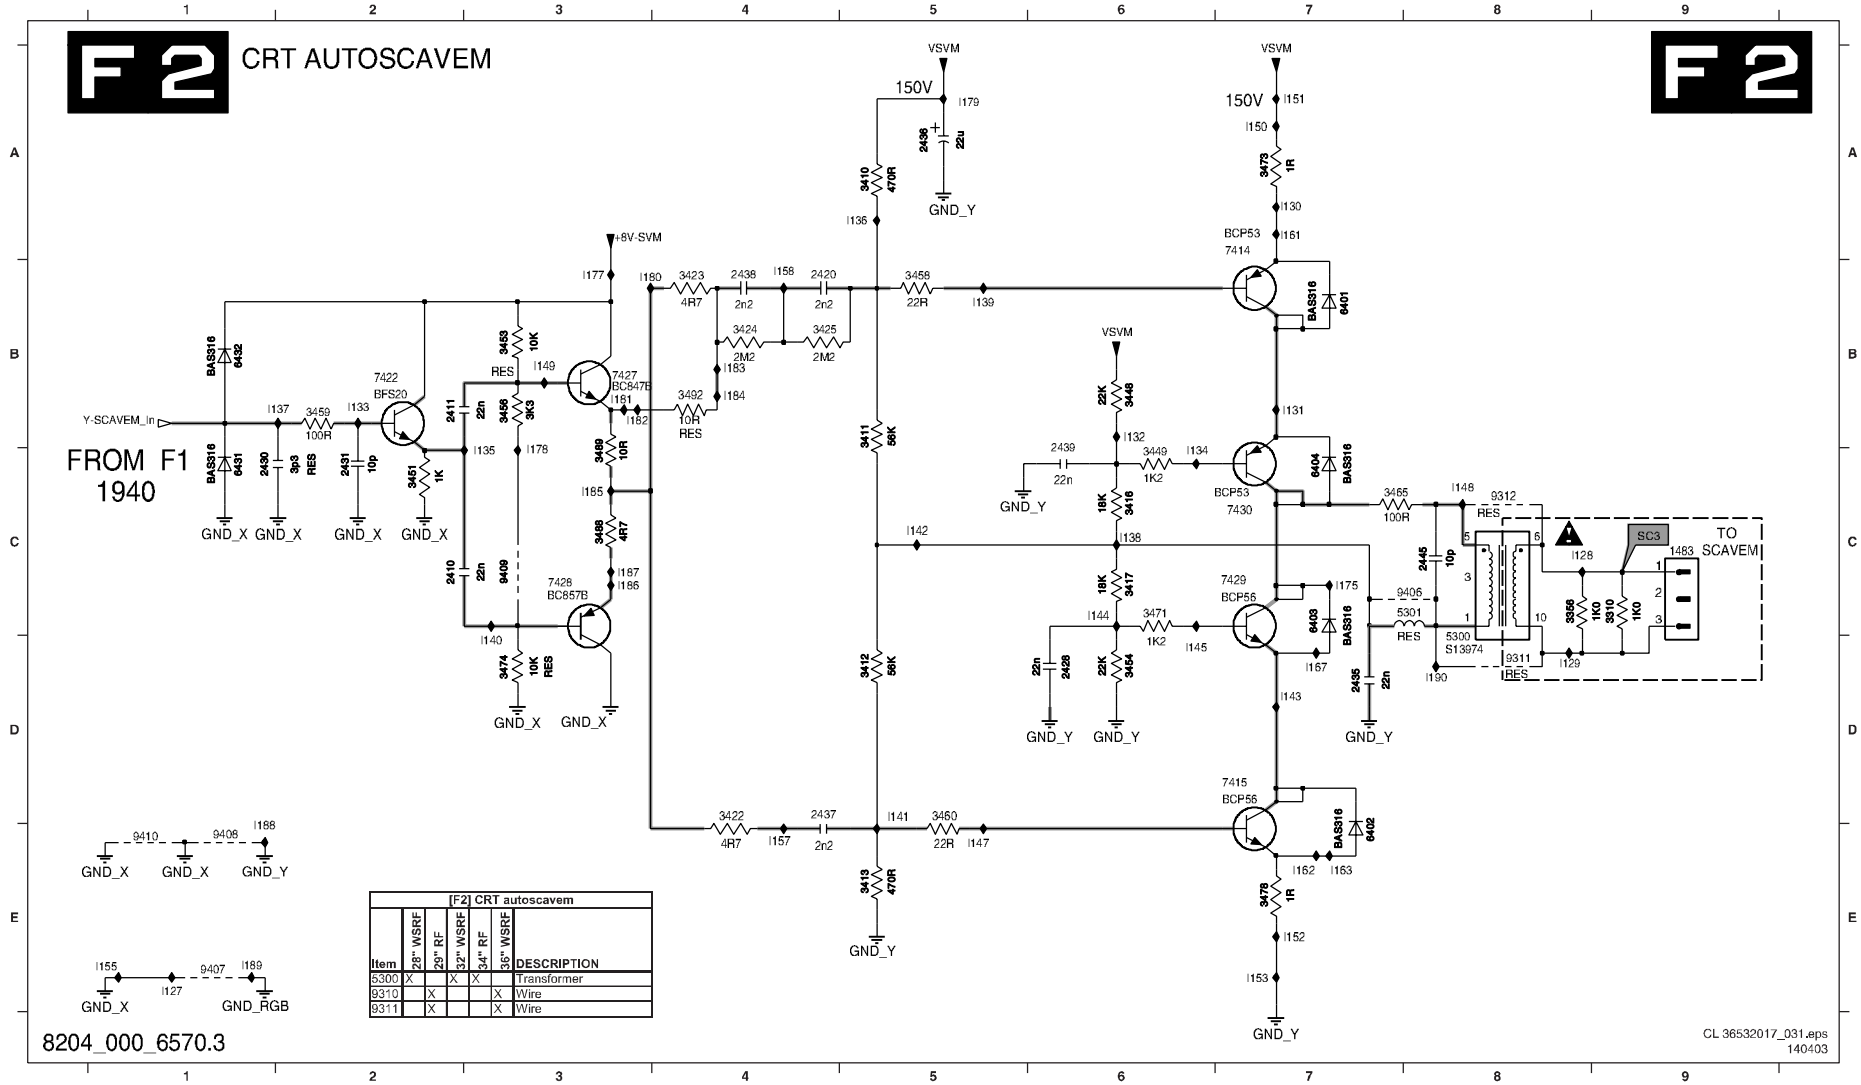

[F2] CRT autoscavem						
Item	28" WSRF	29" RF	32" WSRF	34" RF	36" WSRF	DESCRIPTION
5300	X		X	X		Transformer
9310		X			X	Wire
9311		X			X	Wire

Layout CRT / Auto SCAVEM Panel (FL11 Styling) (Top Side)

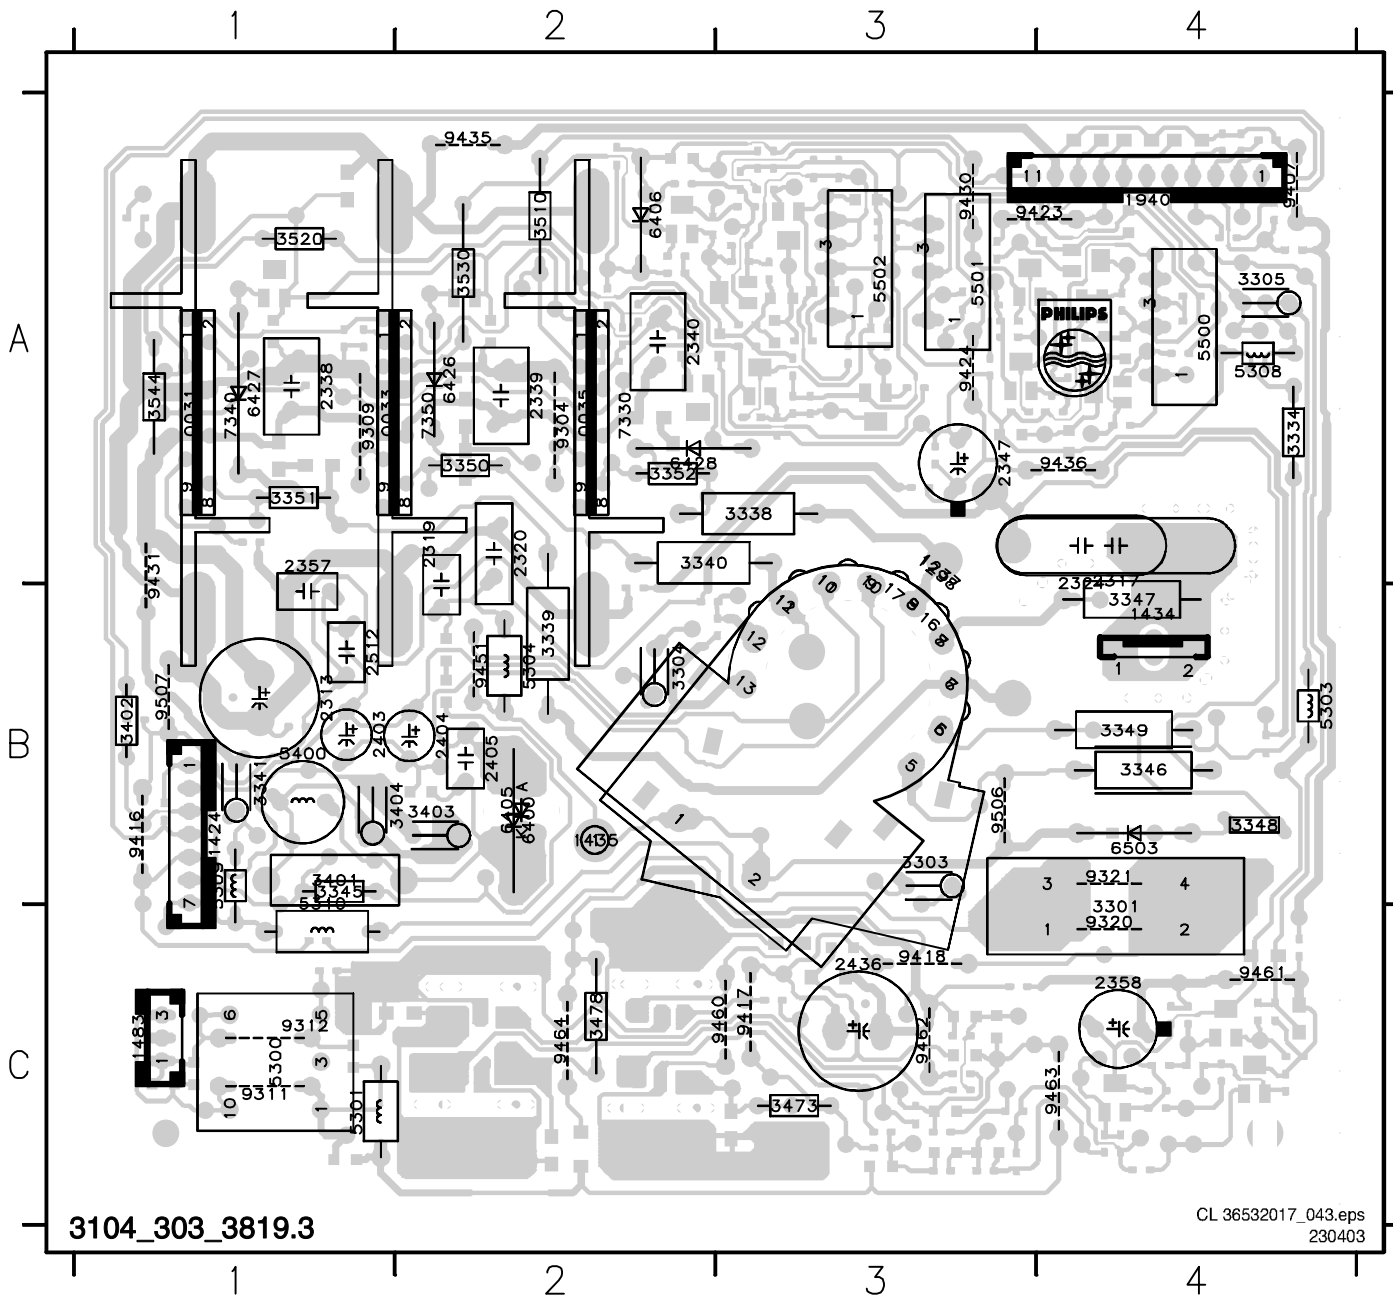

0031	A1	5301	C2
0033	A1	5303	B4
0035	A2	5304	B2
1237	A3	5308	A4
1298	C3	5309	C1
1424	B1	5310	C1
1434	B4	5400	B1
1435	B2	5500	A4
1483	C1	5501	A3
1940	A4	5502	A3
2313	B1	6400	B2
2317	A4	6405	B2
2319	B2	6406	A2
2320	A2	6426	A2
2324	A4	6427	A1
2338	A1	6428	A2
2339	A2	6503	B4
2340	A2	7330	A2
2347	A3	7340	A1
2357	A1	7350	A2
2358	C4	9304	A2
2403	B1	9309	A1
2404	B2	9311	C1
2405	B2	9312	C1
2436	C3	9320	C4
2512	B1	9321	B4
3301	C4	9407	A4
3303	C3	9416	B1
3304	B2	9417	C3
3305	A4	9418	C3
3334	A4	9423	A4
3338	A3	9424	A3
3339	B2	9430	A3
3340	B2	9431	A1
3341	B1	9435	A2
3345	B1	9436	A4
3346	B4	9451	B2
3347	B4	9460	C2
3348	B4	9461	C4
3349	B4	9462	C3
3350	A2	9463	C4
3351	A1	9464	C2
3352	A2	9506	B3
3401	B2	9507	B1
3402	B1		
3403	B2		
3404	B1		
3473	C3		
3478	C2		
3510	A2		
3520	A1		
3530	A2		
3544	A1		
5300	C1		

Layout CRT / Auto SCAVEM Panel (FL11 Styling) (Bottom Side)

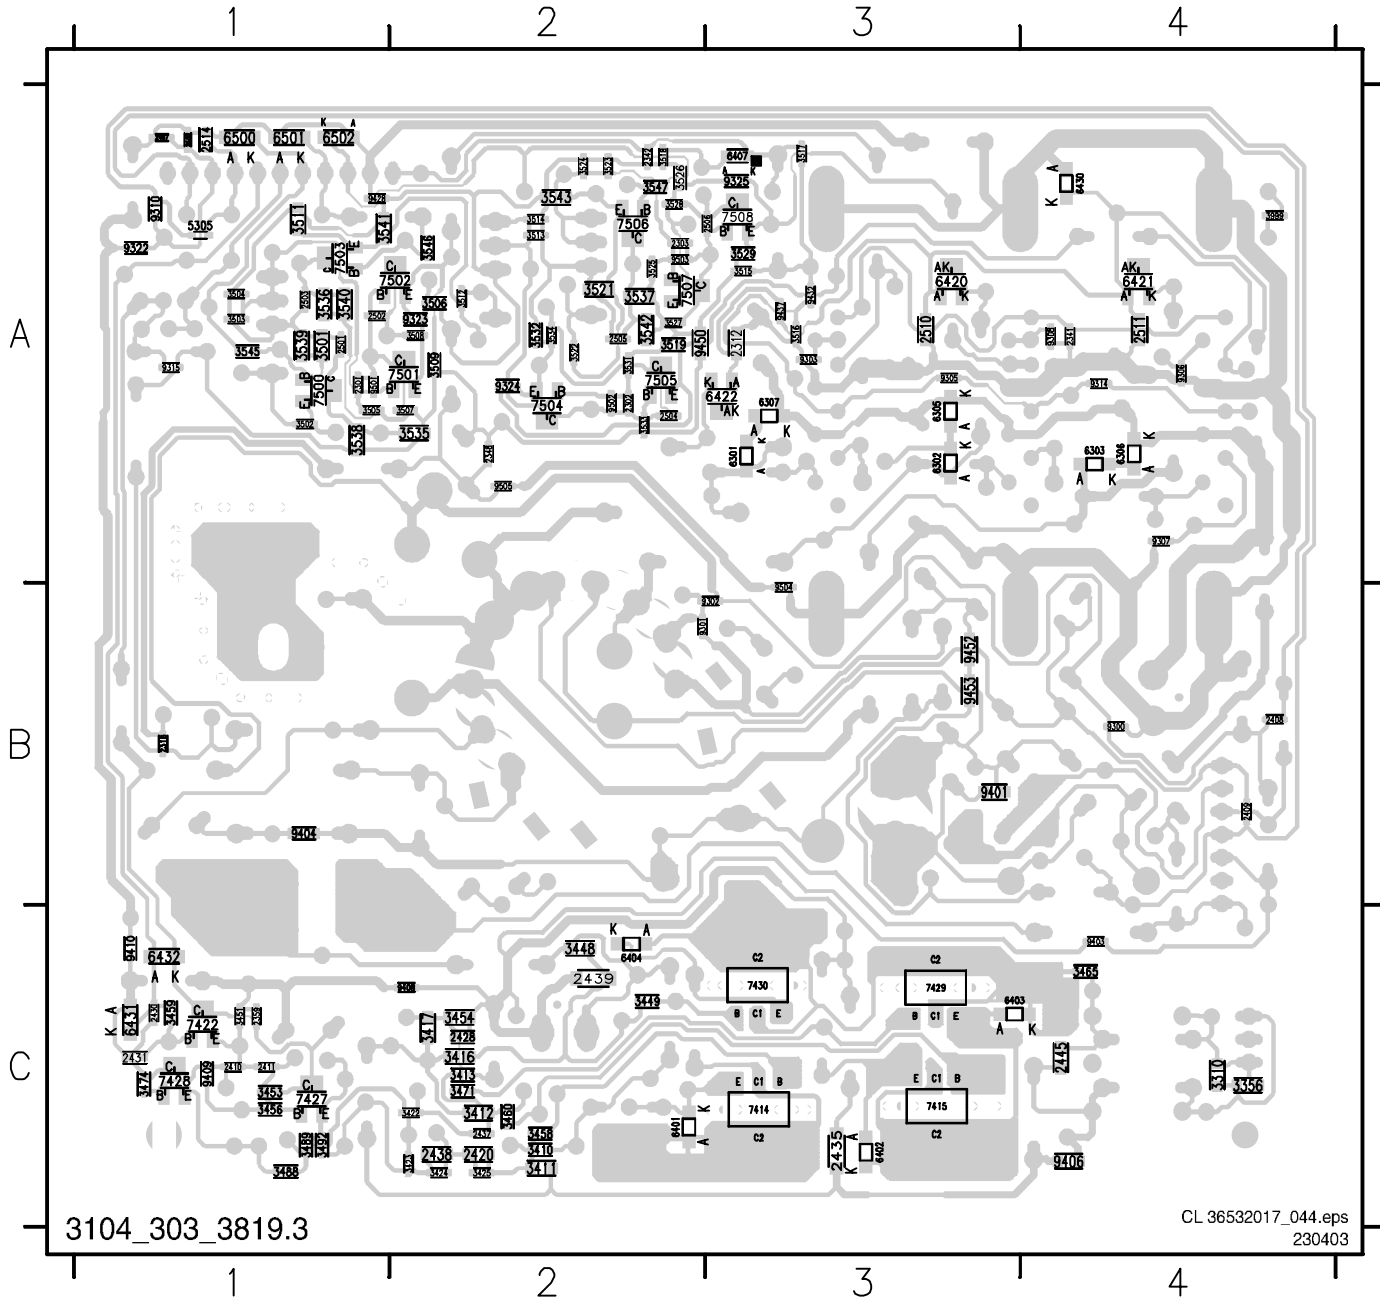

2301	A1	3501	A1	6430	A4
2302	A2	3502	A1	6431	C1
2303	A2	3503	A1	6432	C1
2312	A3	3504	A1	6500	A1
2318	B1	3505	A1	6501	A1
2341	A4	3506	A2	6502	A1
2342	A2	3507	A2	7414	C3
2348	A2	3508	A2	7415	C3
2359	C1	3509	A2	7422	C1
2407	A1	3511	A1	7427	C1
2408	B4	3512	A2	7428	C1
2409	B4	3513	A2	7429	C3
2410	C1	3514	A2	7430	C2
2411	C1	3515	A3	7500	A1
2420	C2	3516	A3	7501	A2
2428	C2	3517	A3	7502	A1
2430	C1	3518	A2	7503	A1
2431	C1	3519	A2	7504	A2
2435	C3	3521	A2	7505	A2
2437	C2	3522	A2	7506	A2
2438	C2	3523	A2	7507	A3
2439	C2	3524	A2	7508	A3
2445	C4	3525	A2	9300	B4
2501	A1	3526	A2	9301	B2
2502	A1	3527	A2	9302	B3
2503	A1	3528	A2	9303	A3
2504	A2	3529	A3	9305	A3
2505	A2	3531	A2	9306	A4
2506	A3	3532	A2	9307	A4
2510	A3	3533	A2	9308	A4
2511	A4	3534	A2	9310	A1
2514	A1	3535	A2	9314	A4
3310	C4	3536	A1	9315	A1
3356	C4	3537	A2	9322	A1
3410	C2	3538	A1	9323	A2
3411	C2	3539	A1	9324	A2
3412	C2	3540	A1	9325	A3
3413	C2	3541	A1	9401	B3
3416	C2	3542	A2	9402	A1
3417	C2	3543	A2	9403	C4
3422	C2	3545	A1	9404	B1
3423	C2	3546	A2	9406	C4
3424	C2	3547	A2	9408	C2
3425	C2	3999	A4	9409	C1
3448	C2	5305	A1	9410	C1
3449	C2	6301	A3	9428	A1
3451	C1	6302	A3	9432	A3
3453	C1	6303	A4	9437	A3
3454	C2	6305	A3	9450	A2
3456	C1	6306	A4	9452	B3
3458	C2	6307	A3	9453	B3
3459	C1	6401	C2	9501	A1
3460	C2	6402	C3	9502	A2
3465	C4	6403	C4	9503	A2
3471	C2	6404	C2	9504	B3
3474	C1	6407	A3	9505	A2
3488	C1	6420	A3		
3489	C1	6421	A4		
3492	C1	6422	A2		

CRT Panel (PV2 Styling)

0031 F7	1298-A G12	1298-K H9	2306 C6	2321 E5	2403 H6	2420 A7	3304 A8	3323 B7	3340 E8	3355 A9	3404 G3	3419 A8	5300 B11	6401 H5	9310 A12	9405 E2	9415 G1		
1237-A G13	1298-B G12	1424 H2	2307 B8	2322 E5	2404 H6	2421 D11	3306 B7	3324 B8	3341 F4	3356 B12	3405 C7	3420 A10	5302 A11	7300 A6	9311 B12	9406 G6			
1237-B G9	1298-C G11	1434 H13	2309 C8	2323 F5	2405 H5	2422 C9	3307 B6	3325 B5	3342 D5	3357 C9	3410 B3	3421 A10	5303 B11	7301 A7	9317 B11	9407 G4			
1237-C G11	1298-D E9	1435 D9	2313 F4	2324 H13	2406 H6	2423 B9	3308 B8	3329 B7	3345 G7	3358 C2	3411 B3	3422 A10	5400 H4	7302 A10	9318 B11	9408 G4			
1237-D E9	1298-E G12	1483 B13	2315 B5	2325 A8	2407 G6	2424 A10	3310 B13	3334 H10	3347 H12	3359 C2	3412 A4	3423 B10	6300 B7	7303 C10	9320 F2	9409 C4			
1237-E G12	1298-F F9	1940 D2	2316 F5	2330 B8	2408 H7	2425 G2	3311 C6	3335 E5	3349 H11	3360 D2	3413 C4	3424 B10	6301 B7	7304 C7	9400 G7	9410 B4			
1237-F F9	1298-G G9	2300 A8	2317 H13	2332 C2	2409 C7	3300 A5	3312 C6	3336 F5	3350 E7	3370 H11	3414 B4	3425 B10	6305 E7	7307 E6	9401 H5	9411 G3			
1237-G F9	1298-H G9	2301 A5	2318 H11	2333 C2	2410 B3	3301 A8	3316 C8	3337 E5	3351 E7	3401 G4	3416 A7	3426 C10	6306 E7	7308 B4	9402 A11	9412 G9			
1237-H H9	1298-I E9	2302 A5	2319 G7	2334 D2	2411 B5	3302 A7	3318 C8	3338 F8	3352 F7	3402 G7	3417 G2	3427 D10	6307 F7	7309 A10	9403 C11	9413 G9			
1237-I E9	1298-J G9	2304 A8	2320 F6	2336 H7	2412 C4	3303 A6	3319 C8	3339 E8	3354 F6	3403 H3	3418 B5	3999 F2	6310 F6	7310 B10	9404 A8	9414 G1			

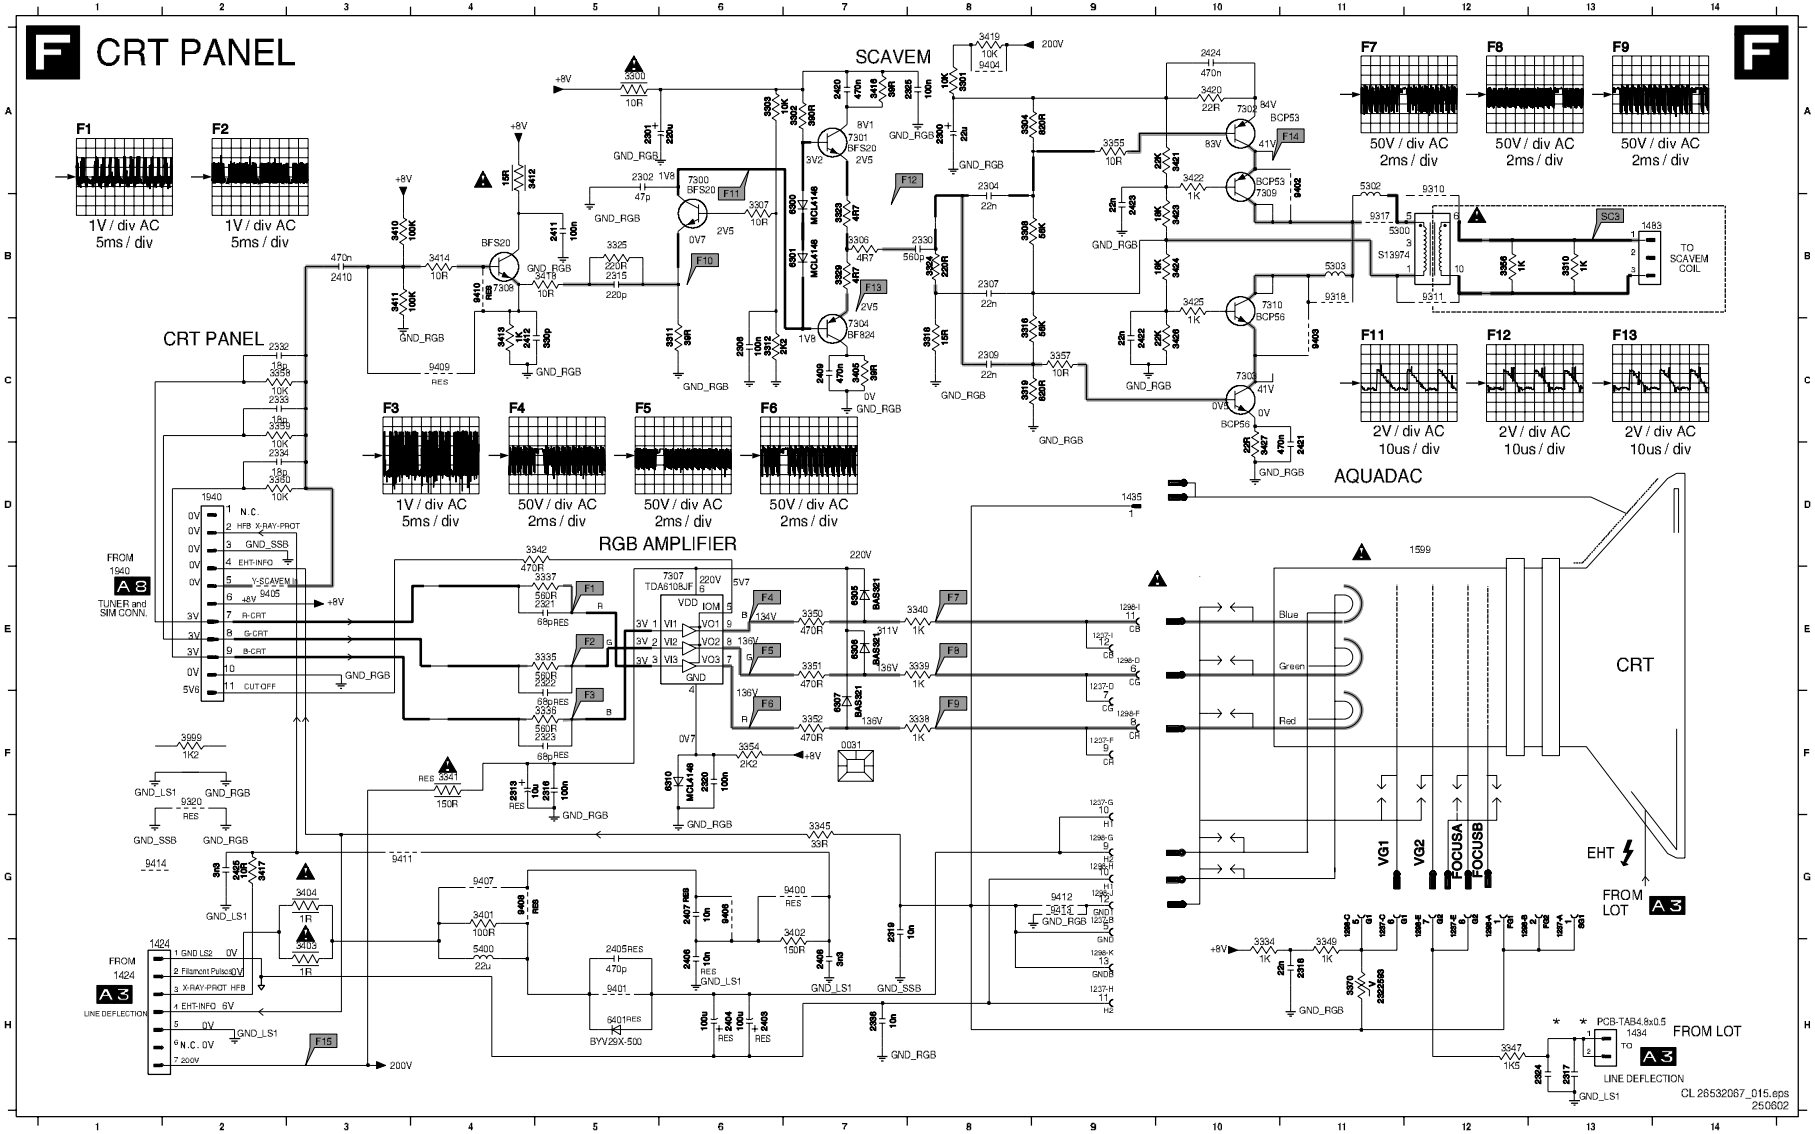

Layout CRT Panel (PV2 Styling) (Top Side)

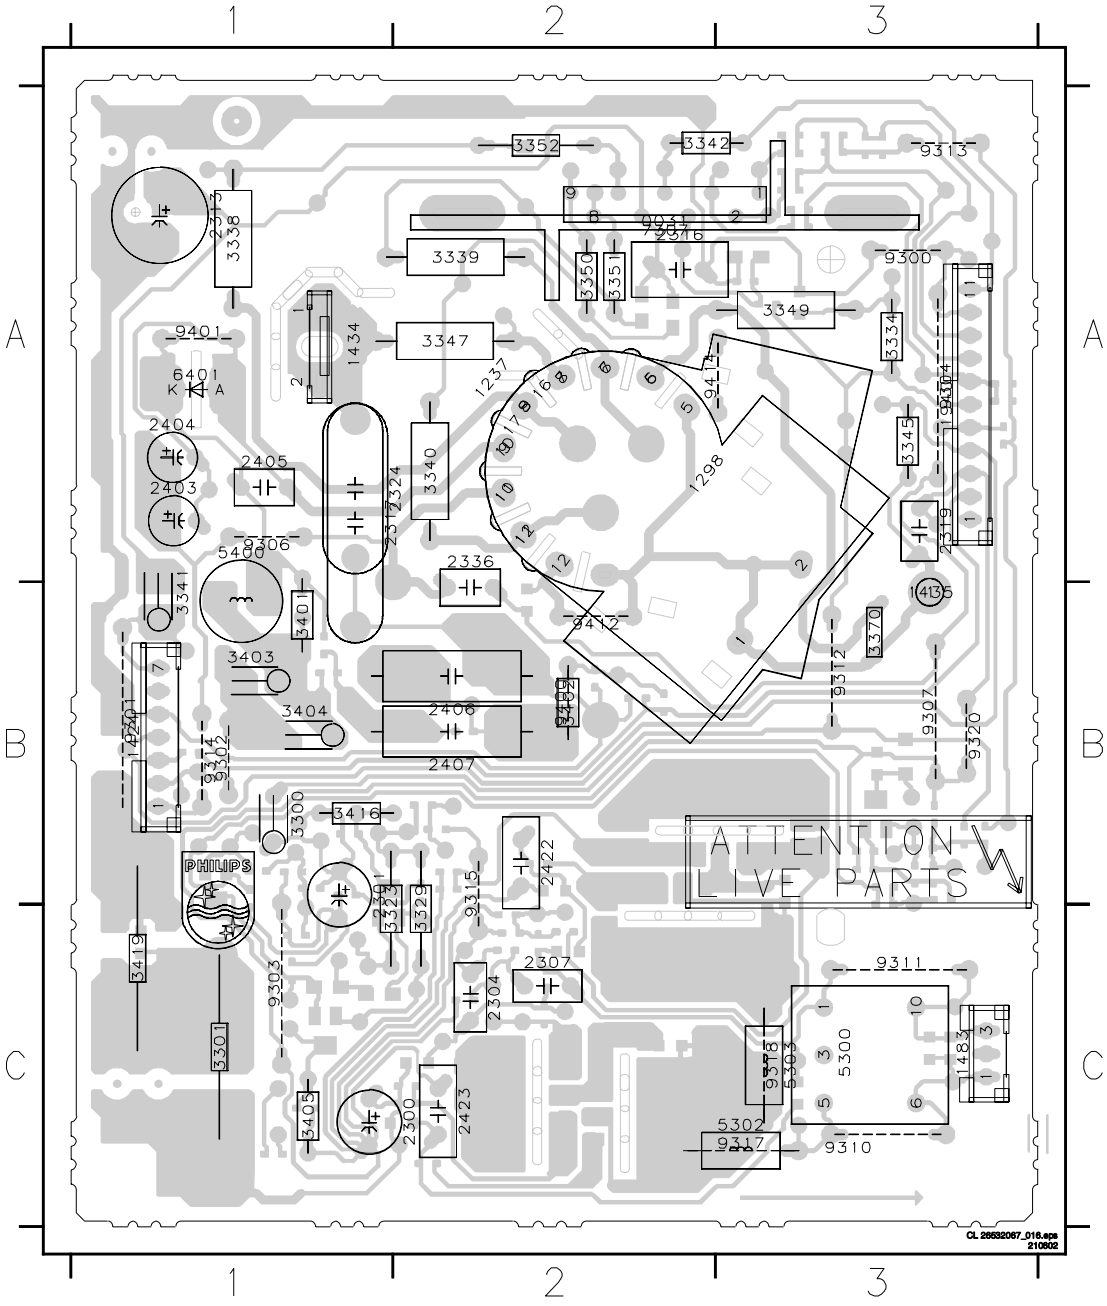

0031 A2
1237 A2
1298 A2
1424 B1
1434 A1
1435 A3
1483 C3
1940 A3
2300 C1
2301 B1
2304 C2
2307 C2
2313 A1
2316 A2
2317 B2
2319 A3
2324 A2
2336 A2
2403 A1
2404 A1
2405 A1
2406 B2
2407 B2
2422 B2
2423 C2
3300 B1
3301 C1
3323 C1
3329 C2
3334 A3
3338 A1
3339 A2
3340 A2
3341 A1
3342 A2
3345 A3
3347 A2
3349 A3
3350 A2
3351 A2
3352 A2
3370 B3
3401 B1
3402 B2
3403 B1
3404 B1
3405 C1
3416 B1
3419 C1
5300 C3
5302 C3
5303 C3
5400 A1
6401 A1
7307 A2
9300 A3
9301 B1
9302 B1
9303 C1
9304 A3
9306 A1
9307 B3
9310 C3
9311 C3
9312 B3
9313 A3
9314 B1
9315 B2
9317 C3
9318 C3
9320 B3
9400 B2
9401 A1
9412 B2
9414 A2

Layout CRT Panel (PV2 Styling) (Bottom Side)

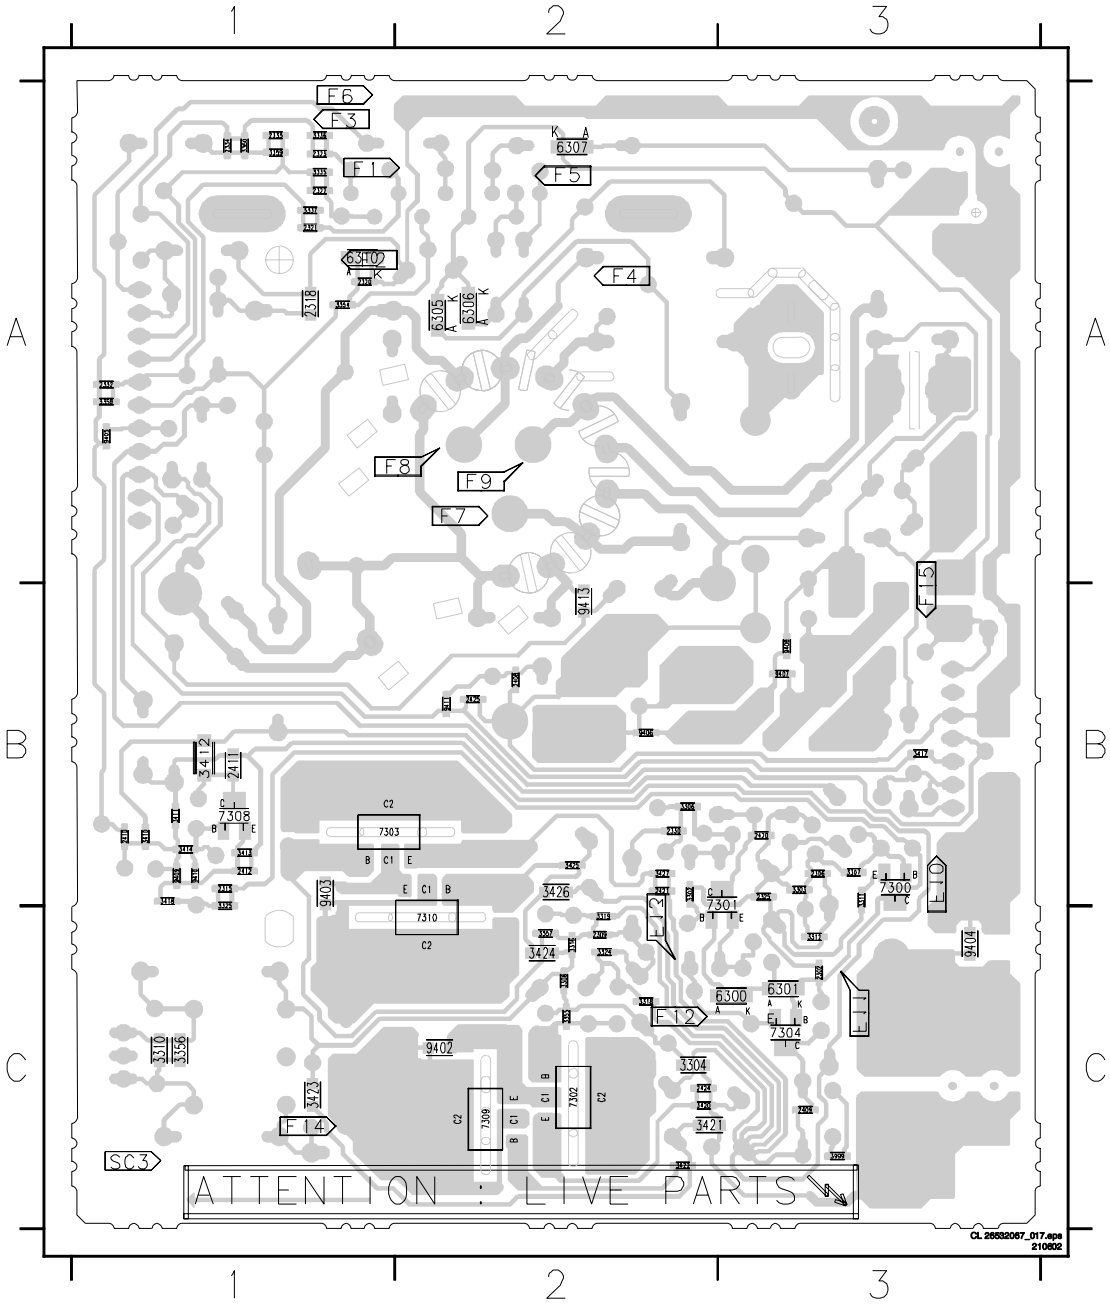

2302	C3
2306	B3
2309	C2
2315	B1
2318	A1
2320	A1
2321	A1
2322	A1
2323	A1
2325	B3
2330	B2
2332	A1
2333	A1
2334	A1
2408	B2
2409	C3
2410	B1
2411	B1
2412	B1
2420	B3
2421	B2
2424	C2
2425	B2
3302	B2
3303	B3
3304	C2
3306	B2
3307	B3
3308	C2
3310	C1
3311	B3
3312	C3
3316	C2
3318	C2
3319	C2
3324	C2
3325	B1
3335	A1
3336	A1
3337	A1
3354	A1
3355	C2
3356	C1
3357	C2
3358	A1
3359	A1
3360	A1
3410	B1
3411	B1
3412	B1
3413	B1
3414	B1
3417	B3
3418	B1
3420	C2
3421	C2
3422	C2
3423	C1
3424	C2
3425	B2
3426	B2
3427	B2
3999	C3
6300	C3
6301	C3
6305	A2
6306	A2
6307	A2
6310	A1
7300	C3
7301	B3
7302	C2
7303	B1
7304	C3
7308	B1
7309	C2
7310	C1
9402	C2
9403	B1
9404	C3
9405	A1
9406	B2
9407	B3
9408	B3
9409	B1
9410	B1
9411	B2
9413	B2

DC Shift Panel

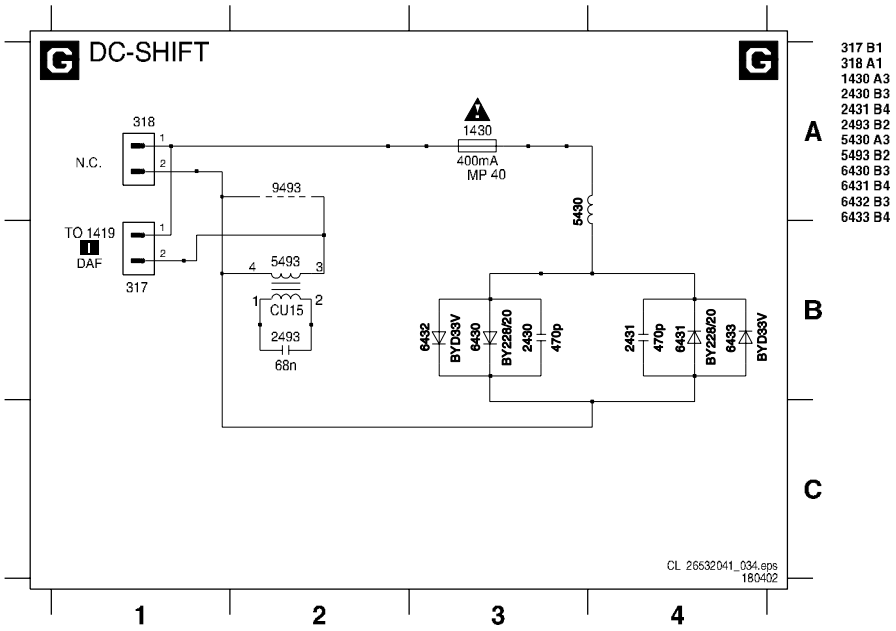

Layout DC Shift Panel

317 A3	2430 A2	5430 A1	6431 A2	9493 A3
318 A2	2431 A1	5493 A3	6432 A2	
1430 A2	2493 A3	6430 A2	6433 A2	

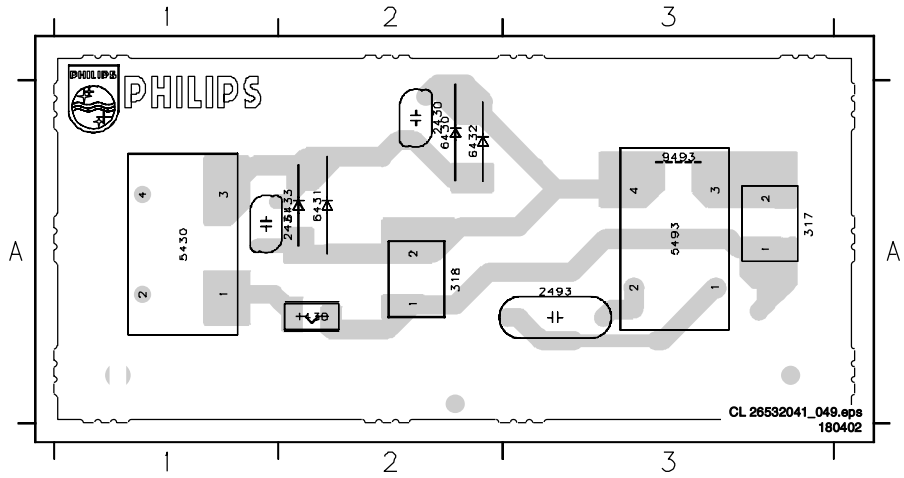

Personal Notes:

I/O 3rd Scart

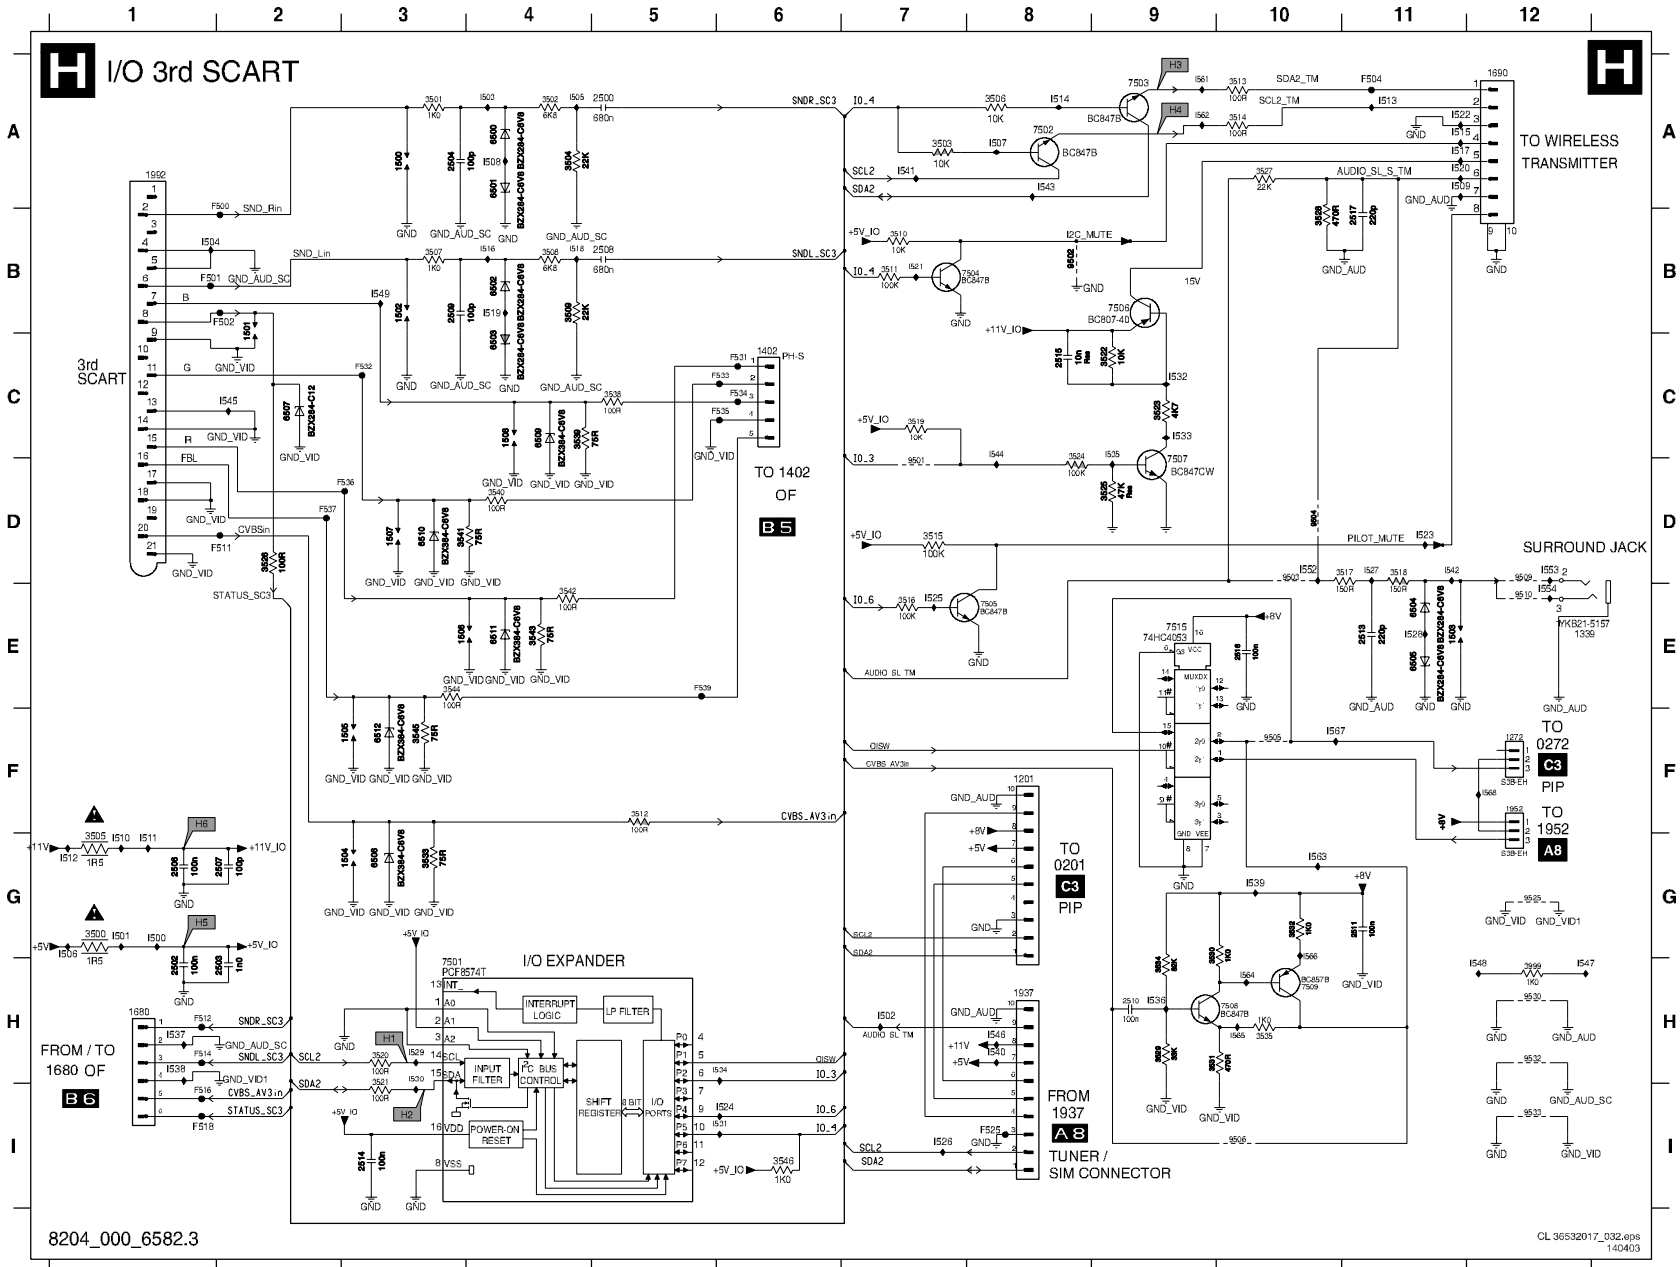

1201 F8	F511 D2	
1272 F12	F512 H1	
1339 E12	F514 H1	
1402 C6	F516 I1	
1500 A3	F518 I1	
1501 B2	F525 I8	
1502 B3	F531 C6	
1503 E11	F532 C3	
1504 G3	F533 C6	
1505 F3	F534 C6	
1506 E3	F535 C6	
1507 D3	F536 D3	
1508 C4	F537 D2	
1680 H1	F539 E5	
1690 A12	I500 G1	
1937 H8	I501 G1	
1952 F12	I502 H7	
1992 A1	I503 A4	
2500 A5	I504 B1	
2502 H1	I505 A4	
2503 H2	I506 G1	
2504 A3	I507 A8	
2506 G1	I508 A4	
2507 G2	I509 A11	
2508 B5	I510 G1	
2509 B3	I511 G1	
2510 H9	I512 G1	
2511 G11	I513 A11	
2513 E11	I514 A8	
2514 I3	I515 A11	
2515 C8	I516 B4	
2516 E10	I517 A11	
2517 B11	I518 B4	
3500 G1	I519 B4	
3501 A3	I520 A11	
3502 A4	I521 B7	
3503 A7	I522 A11	
3504 A4	I523 D11	
3505 G1	I524 I6	
3506 A8	I525 E7	
3507 B3	I526 I7	
3508 B4	I527 D11	
3509 B4	I528 E11	
3510 B7	I529 H3	
3511 B7	I530 H3	
3512 F5	I531 I6	
3513 A10	I532 C9	
3514 A10	I533 C9	
3515 D7	I534 H6	
3516 E7	I535 C9	
3517 D11	I536 H9	
3518 D11	I537 H1	
3519 C7	I538 H1	
3520 H3	I539 G10	
3521 I3	I540 H8	
3522 C9	I541 A7	
3523 C9	I542 D11	
3524 D8	I543 A8	
3525 D9	I544 C8	
3526 D2	I545 C2	
3527 A10	I546 H8	
3528 B10	I547 H12	
3529 H9	I548 H12	
3530 G9	I549 B3	
3531 H9	I552 D10	
3532 G10	I553 D12	
3533 G3	I554 E12	
3534 H9	I561 A9	
3535 H10	I562 A9	
3538 C5	I563 G10	
3539 C4	I564 H10	
3540 D4	I565 H10	
3541 D3	I566 G10	
3542 E4	I567 F10	
3543 E4	I568 F12	
3544 E3		
3545 F3		
3546 I6		
3999 H12		
6500 A4		
6501 A4		
6502 B4		
6503 C4		
6504 E11		
6505 E11		
6506 G3		
6507 C2		
6509 C4		
6510 D3		
6511 E4		
6512 F3		
7501 H3		
7502 A8		
7503 A9		
7504 B7		
7505 E8		
7506 B9		
7507 D9		
7508 H10		
7509 H10		
7515 E9		
9501 D7		
9502 B8		
9503 D10		
9504 D10		
9505 F10		
9506 I10		
9509 D12		
9510 E12		
9525 G12		
9530 H12		
9532 H12		
9533 I12		
F500 A2		
F501 B1		
F502 B2		
F504 A11		

Layout I/O 3rd Scart (Top Side)

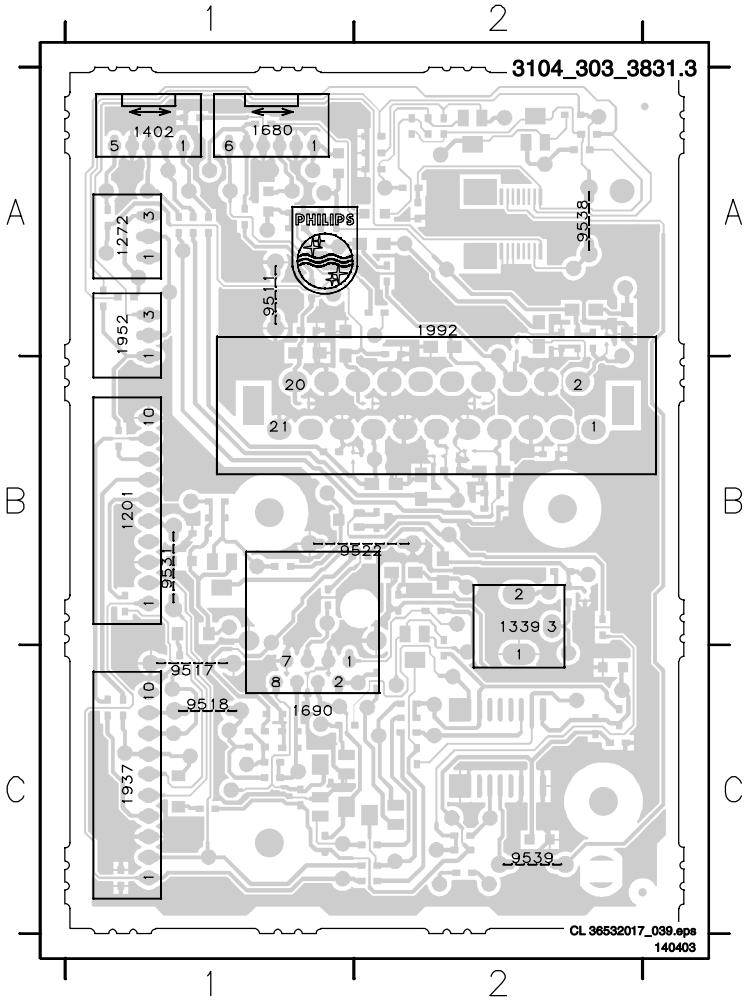

1201 B1
1272 A1
1339 B2
1402 A1
1680 A1
1690 B1
1937 C1
1952 A1
1992 A2
9511 A1
9517 C1
9518 C1
9522 B2
9531 B1
9538 A2
9539 C2

Layout I/O 3rd Scart (Bottom Side)

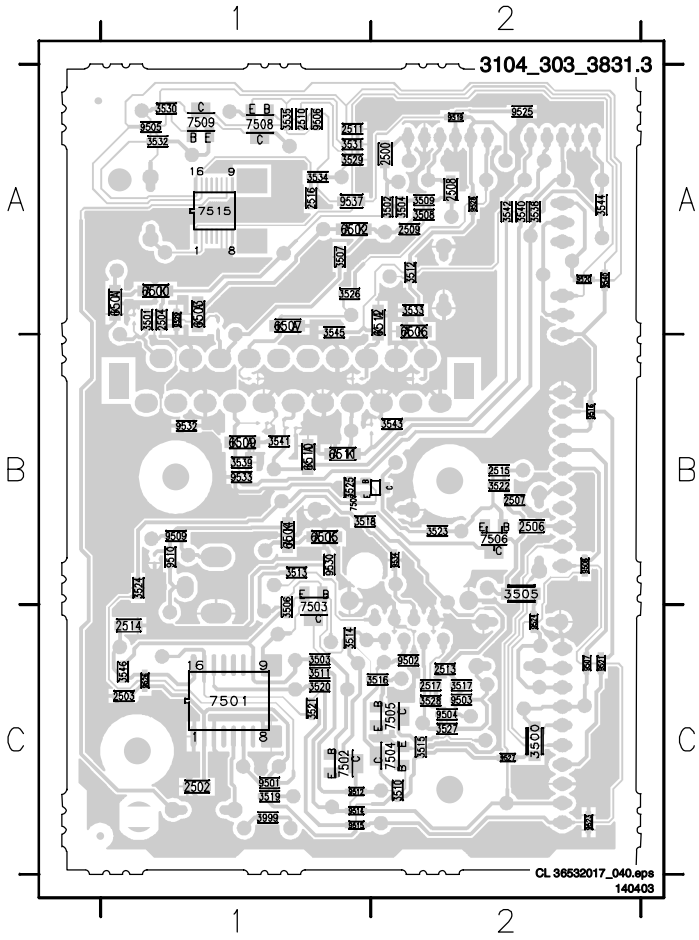

2500 A2
2502 C1
2503 C1
2504 A1
2506 B2
2507 B2
2508 A2
2509 A2
2510 A1
2511 A1
2513 C2
2514 C1
2515 B2
2516 A1
2517 C2
3500 C2
3501 A1
3502 A2
3503 C1
3504 A2
3505 B2
3506 C1
3507 A1
3508 A2
3509 A2
3510 C2
3511 C1
3512 A2
3513 B1
3514 C1
3515 C2
3516 C2
3517 C2
3518 B1
3519 C1
3520 C1
3521 C1
3522 B2
3523 B2
3524 B1
3525 B1
3526 A1
3527 C2
3528 C2
3529 A1
3530 A1
3531 A1
3532 A1
3533 A2
3534 A1
3535 A1
3538 A2
3539 B1
3540 A2
3541 B1
3542 A2
3543 B2
3544 A2
3545 A1
3546 C1
3999 C1
6500 A1
6501 A1
6502 A1
6503 A1
6504 B1
6505 B1
6506 A2
6507 B1
6509 B1
6510 B1
6511 B2
6512 A2
7501 C1
7502 C1
7503 C1
7504 C2
7505 C2
7506 B2
7507 B2
7508 A1
7509 A1
7515 A1
9501 C1
9502 C2
9503 C2
9504 C2
9505 A1
9506 A1
9507 C2
9508 B2
9509 B1
9510 B1
9512 C1
9514 C1
9515 C1
9516 B2
9519 A2
9520 A2
9521 C2
9523 C2
9524 C2
9525 A2
9526 C1
9527 C2
9528 A2
9529 A1
9530 B1
9532 B1
9533 B1
9534 B2
9537 A1
9540 A2

VDAF Panel + 2nd Orders

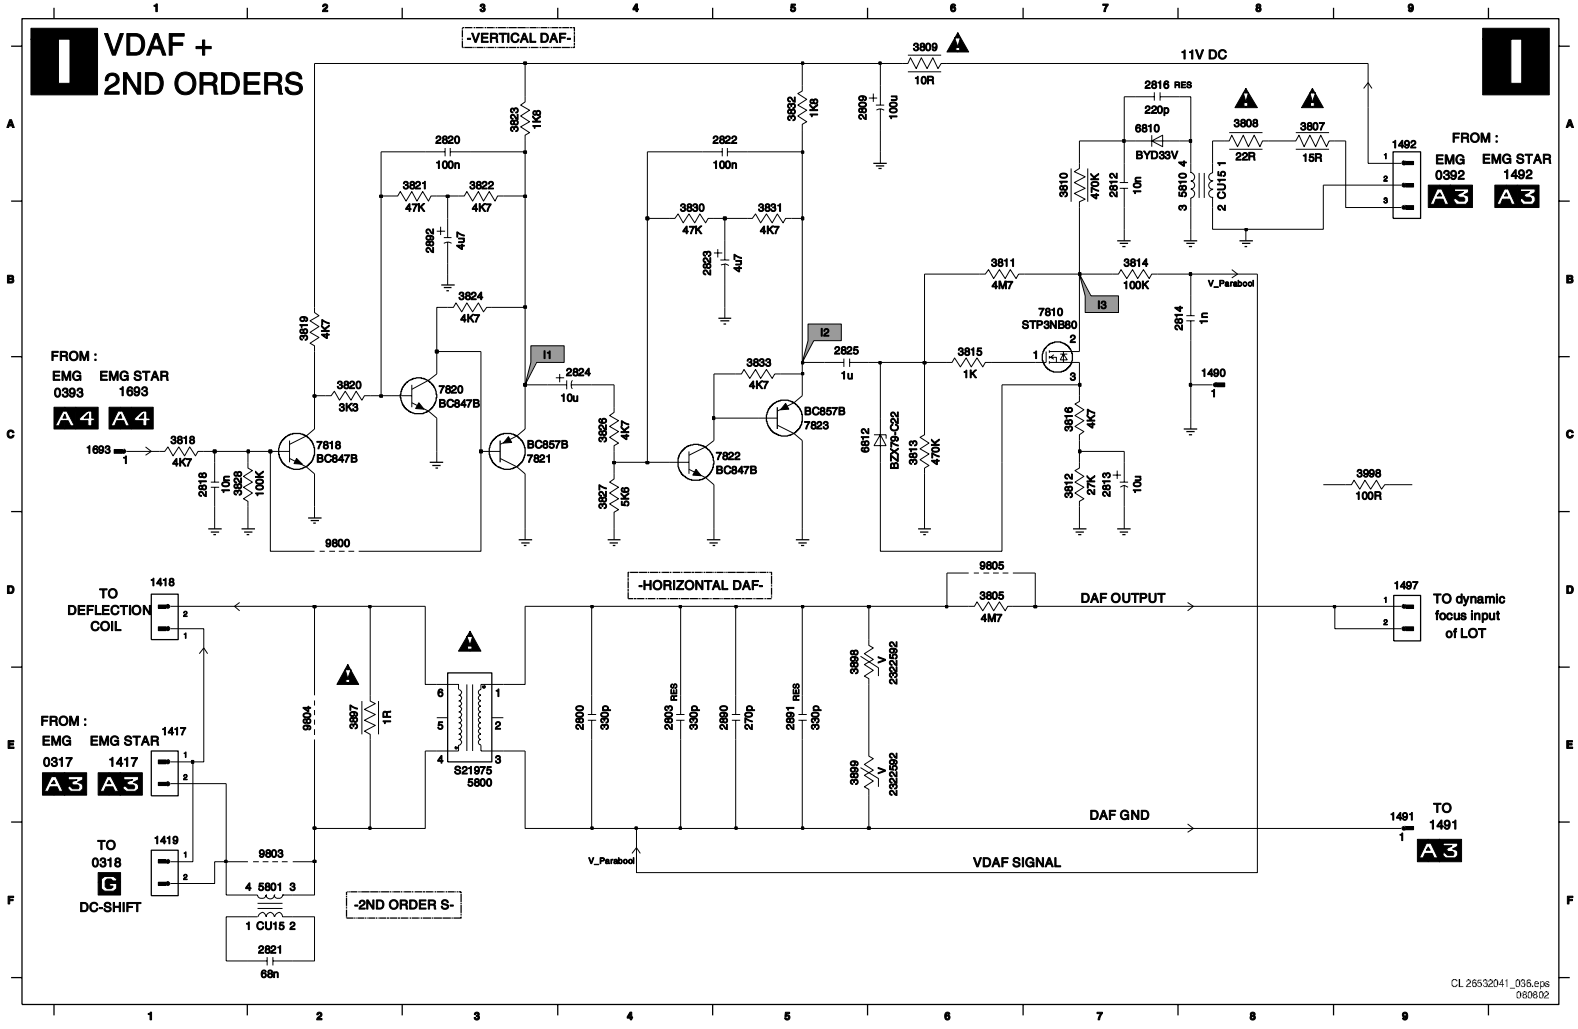

| | | |

Layout VDAF Panel (Top Side)

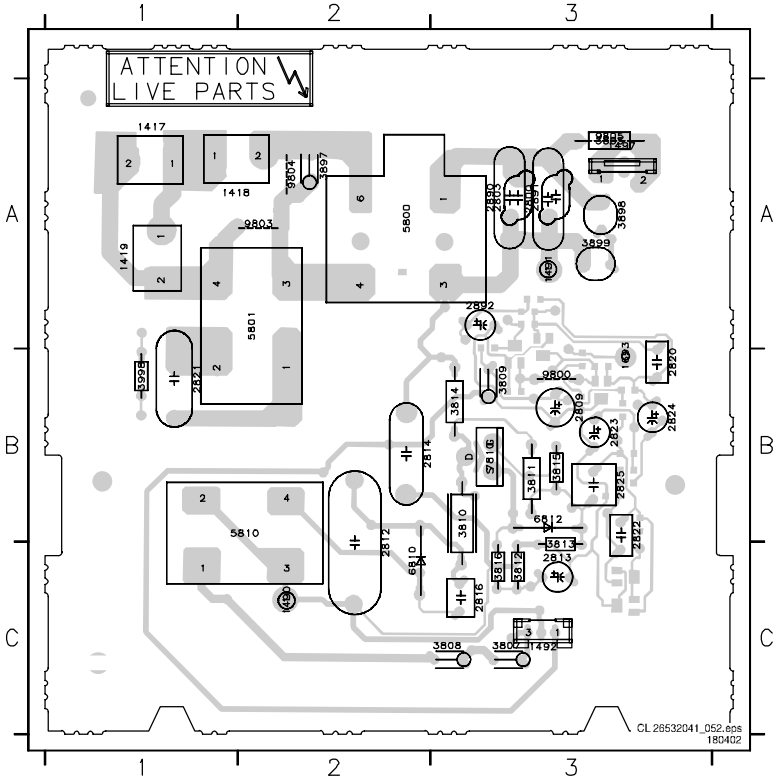

1417 A1
1418 A1
1419 A1
1490 C2
1491 A3
1492 C3
1497 A3
1693 B3
2800 A3
2803 A3
2809 B3
2812 C2
2813 C3
2814 B2
2816 C3
2820 B3
2821 B1
2822 B3
2823 B3
2824 B3
2825 B3
2890 A3
2891 A3
2892 A3
3805 A3
3807 C3
3808 C3
3809 B3
3810 B3
3811 B3
3812 C3
3813 C3
3814 B3
3815 B3
3816 C3
3897 A2
3898 A3
3899 A3
3998 B1
5800 A2
5801 A1
5810 B2
6810 C2
6812 B3
7810 B3
9800 B3
9803 A2
9804 A2
9805 A3

Layout VDAF Panel (Bottom Side)

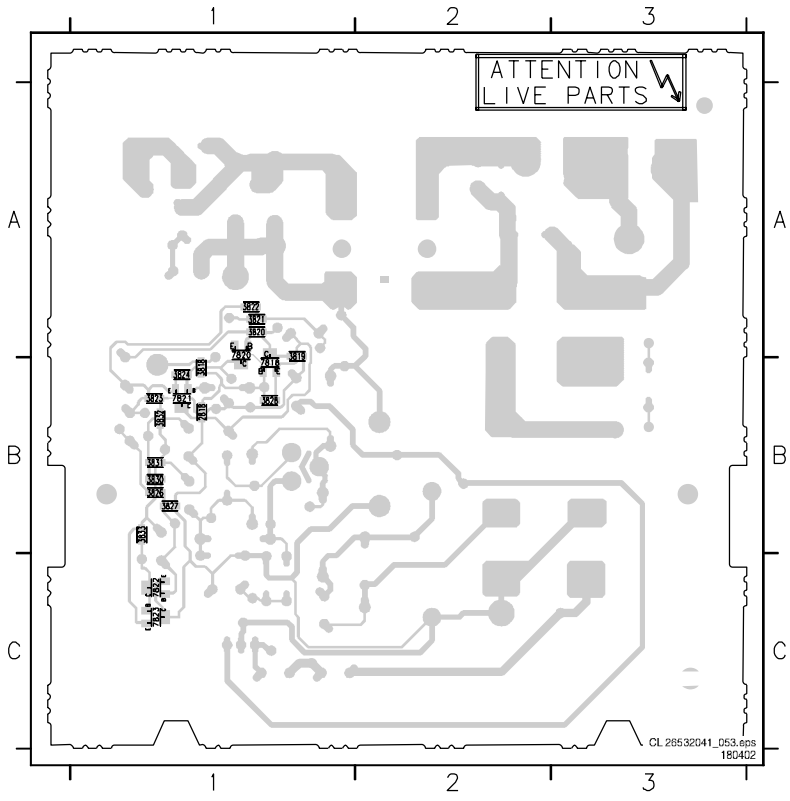

2818 B1
3818 B1
3819 A1
3820 A1
3821 A1
3822 A1
3823 B1
3824 B1
3826 B1
3827 B1
3828 B1
3830 B1
3831 B1
3832 B1
3833 B1
7818 B1
7820 A1
7821 B1
7822 C1
7823 C1

Side I/O Panel (FL11 Styling)

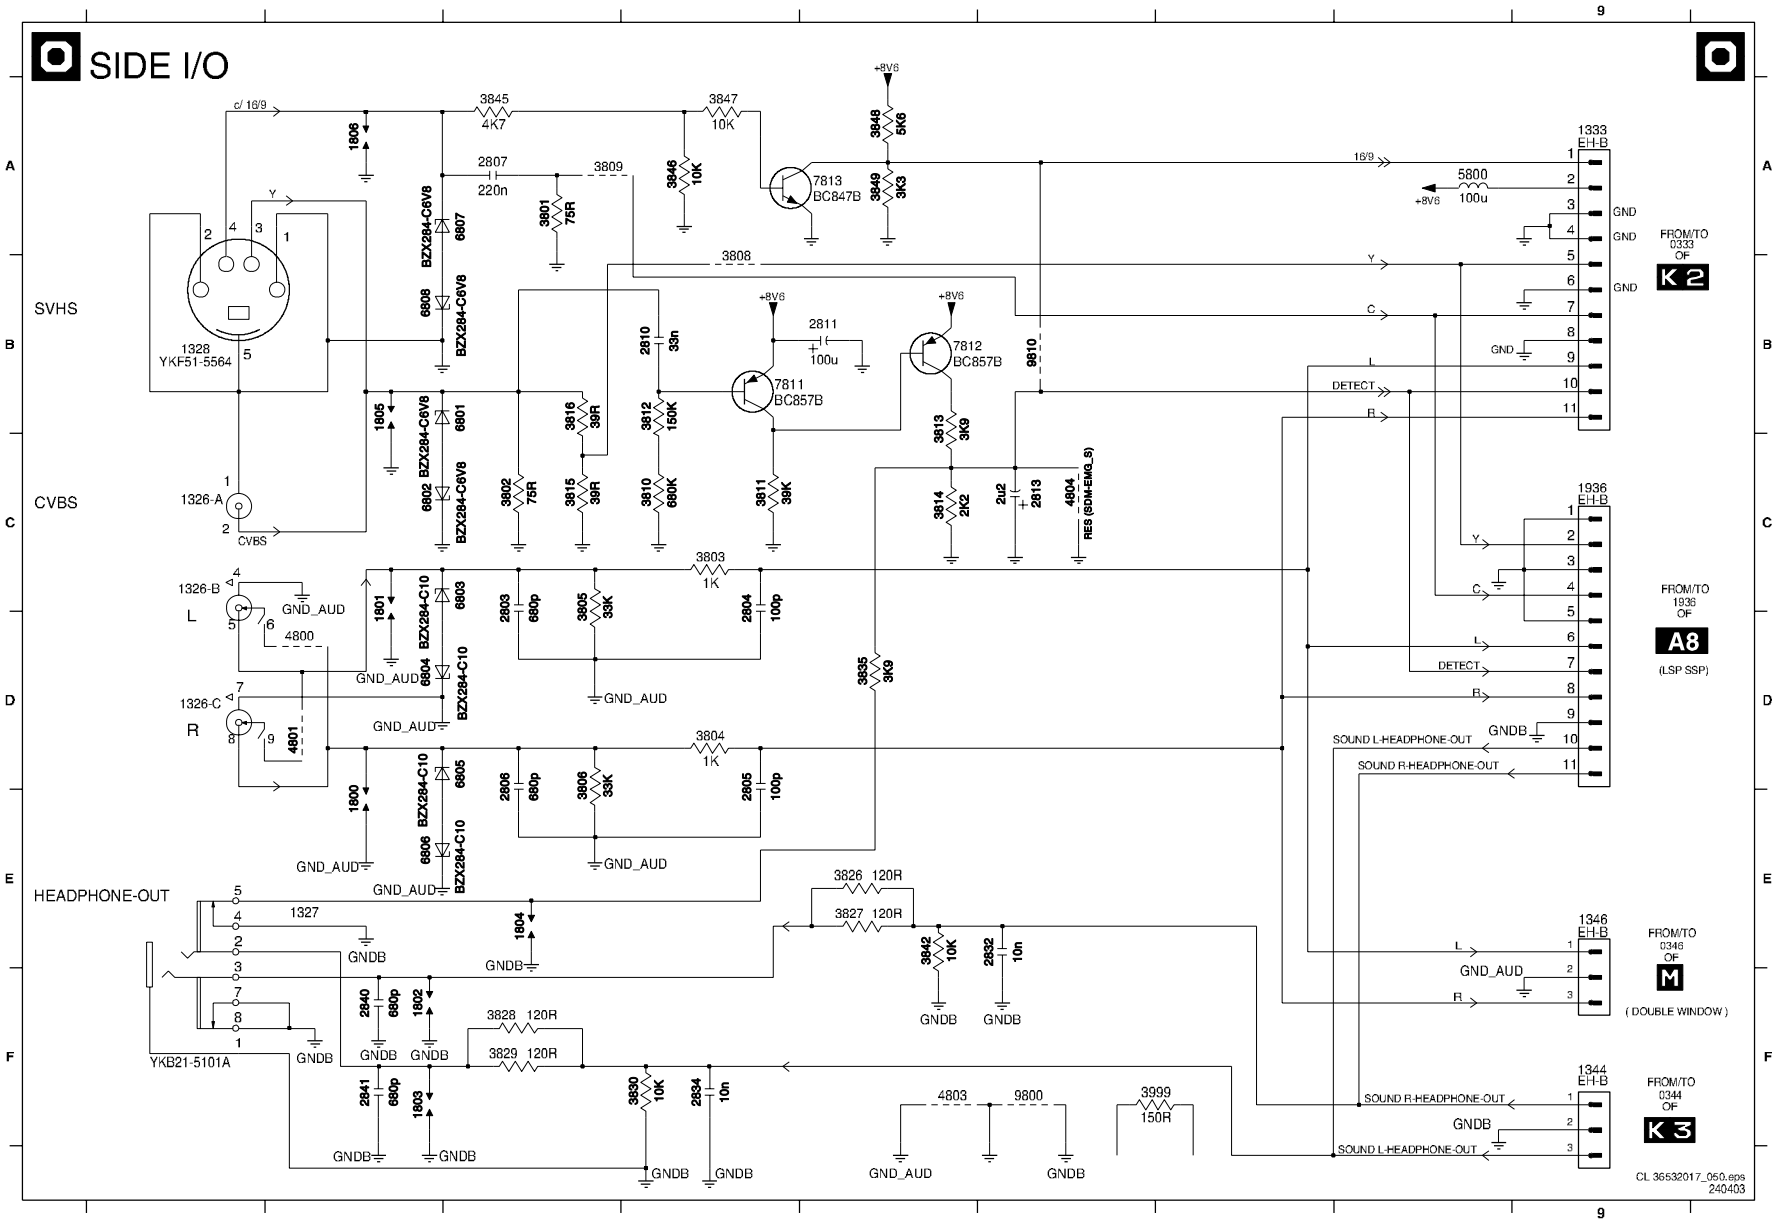

1326-A C1
1326-B C1
1326-C D1
1327 E2
1328 B1
1333 A9
1344 F9
1346 E9
1800 E2
1801 C2
1802 F2
1803 F2
1804 E3
1805 B2
1806 A2
1936 C9
2803 C3
2804 C4
2805 D4
2806 D3
2807 A3
2810 B4
2811 B5
2813 C6
2832 E6
2834 F4
2840 F2
2841 F2
3801 A3
3802 C3
3803 C4
3804 D4
3805 C3
3806 D3
3808 B4
3809 A3
3810 C4
3811 C4
3812 B4
3813 B5
3814 C5
3815 C3
3816 B3
3826 E5
3827 E5
3828 F3
3829 F3
3830 F4
3835 D5
3842 E5
3845 A3
3846 A4
3847 A4
3848 A5
3849 A5
3999 F7
4800 D2
4801 D2
4803 F5
4804 C6
5800 A8
6801 B3
6802 C2
6803 C3
6804 D2
6805 D3
6806 E2
6807 A3
6808 B2
7811 B4
7812 B5
7813 A5
9800 F6
9810 B6

Layout Side I/O Panel (FL11 Styling) (Top Side)

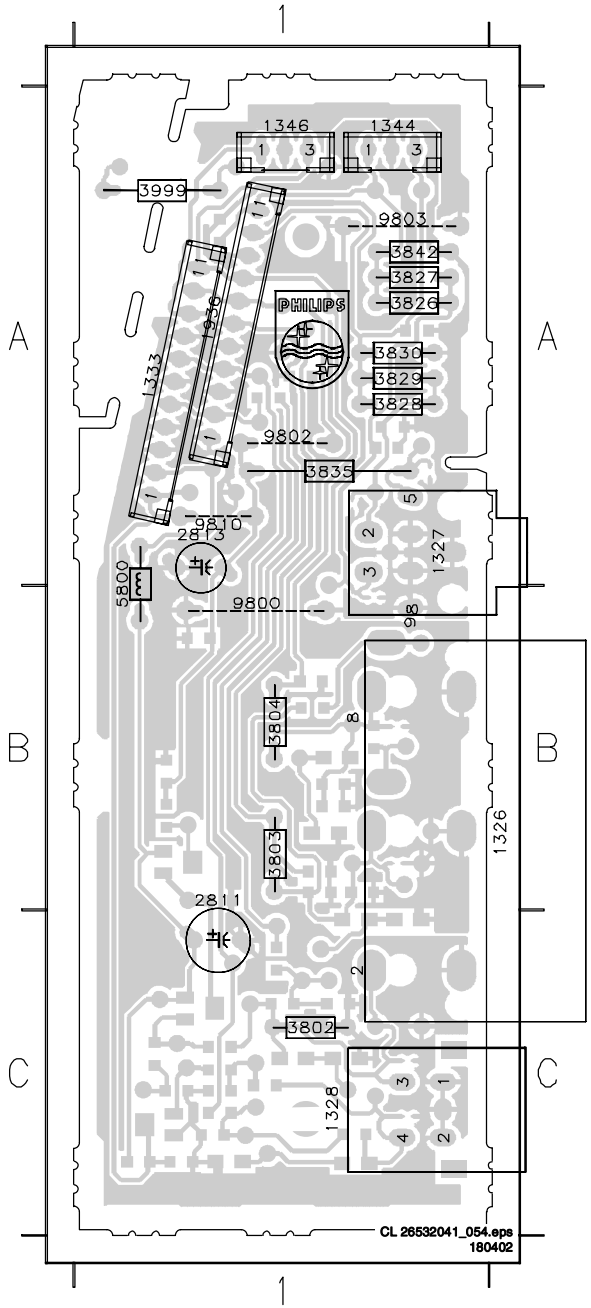

1326	B1
1327	A1
1328	C1
1333	A1
1344	A1
1346	A1
1936	A1
2811	B1
2813	A1
3802	C1
3803	B1
3804	B1
3826	A1
3827	A1
3828	A1
3829	A1
3830	A1
3835	A1
3842	A1
3999	A1
5800	A1
9800	B1
9802	A1
9803	A1
9810	A1

Layout Side I/O Panel (FL11 Styling) (Bottom Side)

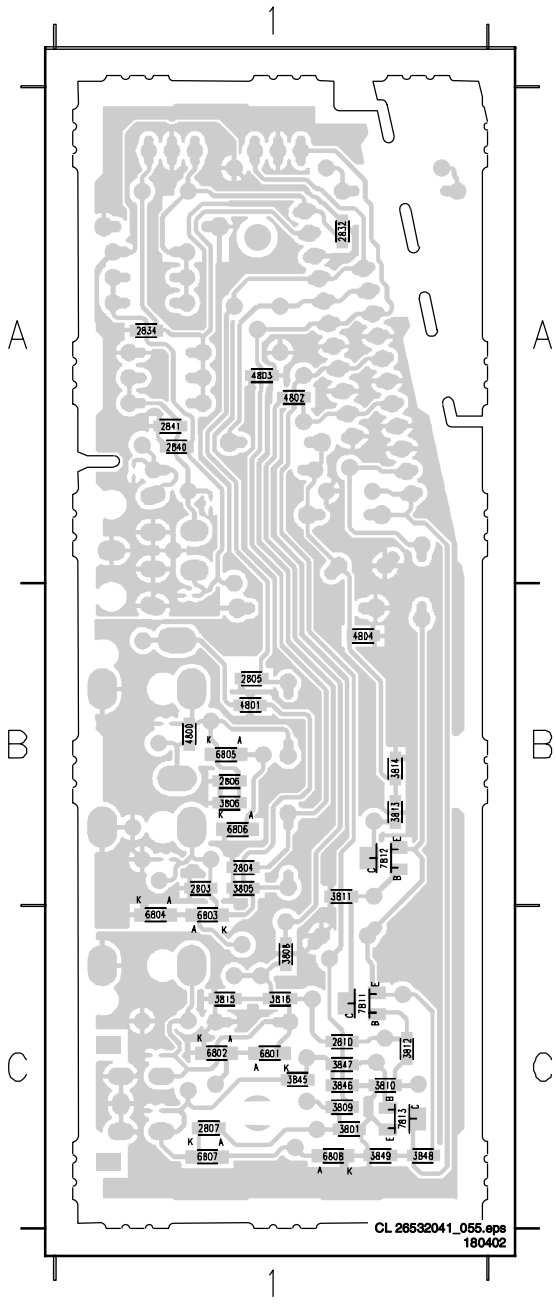

2803	B1
2804	B1
2805	B1
2806	B1
2807	C1
2810	C1
2832	A1
2834	A1
2840	A1
2841	A1
3801	C1
3805	B1
3806	B1
3808	C1
3809	C1
3810	C1
3811	B1
3812	C1
3813	B1
3814	B1
3815	C1
3816	C1
3845	C1
3846	C1
3847	C1
3848	C1
3849	C1
4800	B1
4801	B1
4802	A1
4803	A1
4804	B1
6801	C1
6802	C1
6803	B1
6804	C1
6805	B1
6806	B1
6807	C1
6808	C1
7811	C1
7812	B1
7813	C1

Side I/O Panel (PV2 Styling)

SIDE IO PANEL

0240 A4	1256-B A1	2297 E3	3291 B2	3297 E3	6294 E2	SG06 E1
1254 D1	2286 A3	3285 A3	3292 B2	4201 A1	SG01 B2	SG07 E1
1255-A D1	2288 A3	3286 A3	3293 C2	4202 A1	SG02 A2	SG08 B1
1255-B C1	2292 B3	3287 A3	3294 C3	6291 E2	SG03 C1	
1255-C B1	2294 C3	3288 A3	3295 D3	6292 E2	SG04 D1	
1256-A A1	2296 E2	3289 B2	3296 E2	6293 E2	SG05 D1	

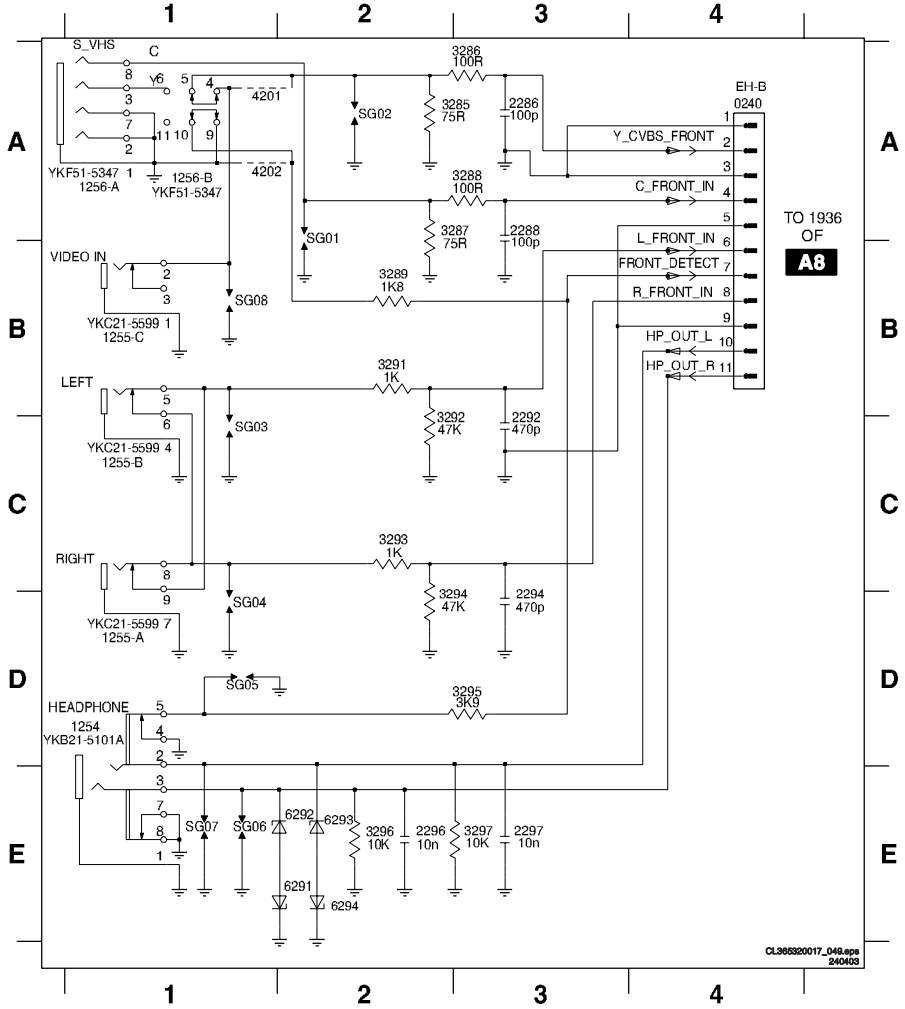

Personal Notes:

Layout Side I/O Panel (PV2 Styling) (Top Side)

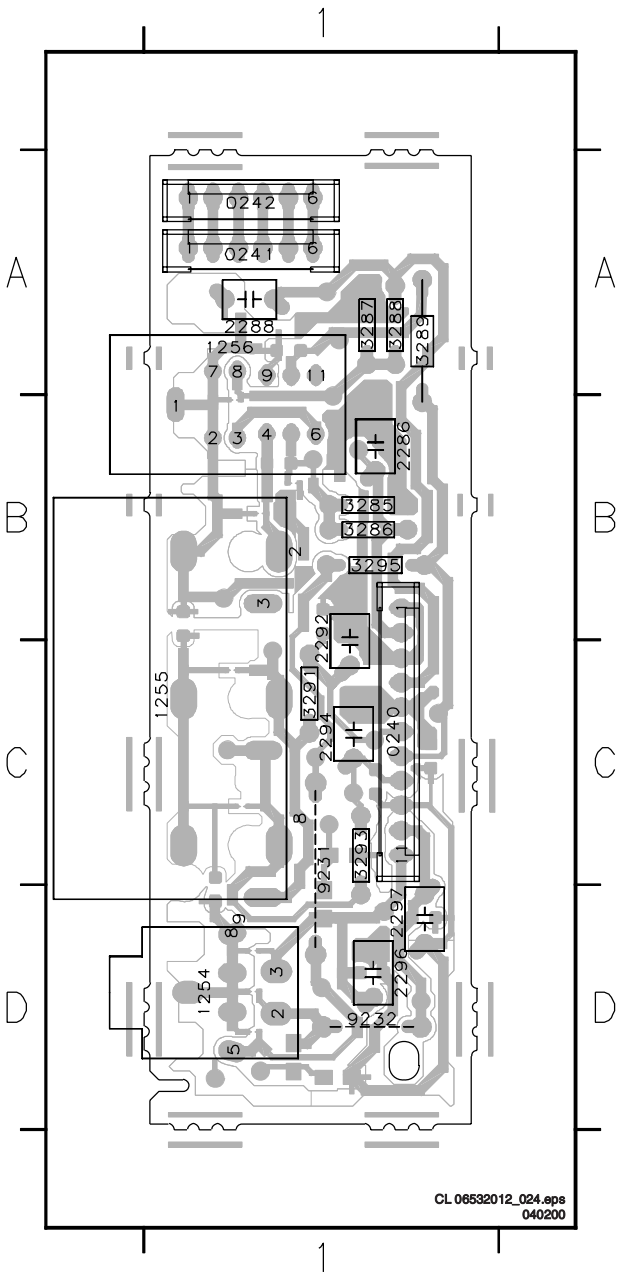

0240 C1
0241 A1
0242 A1
1254 D1
1255 C1
1256 A1
2286 B1
2288 A1
2292 B1
2294 C1
2296 D1
2297 D1
3285 B1
3286 B1
3287 A1
3288 A1
3289 A1
3291 C1
3293 C1
3295 B1
9231 C1
9232 D1

Layout Side I/O Panel (PV2 Styling) (Bottom Side)

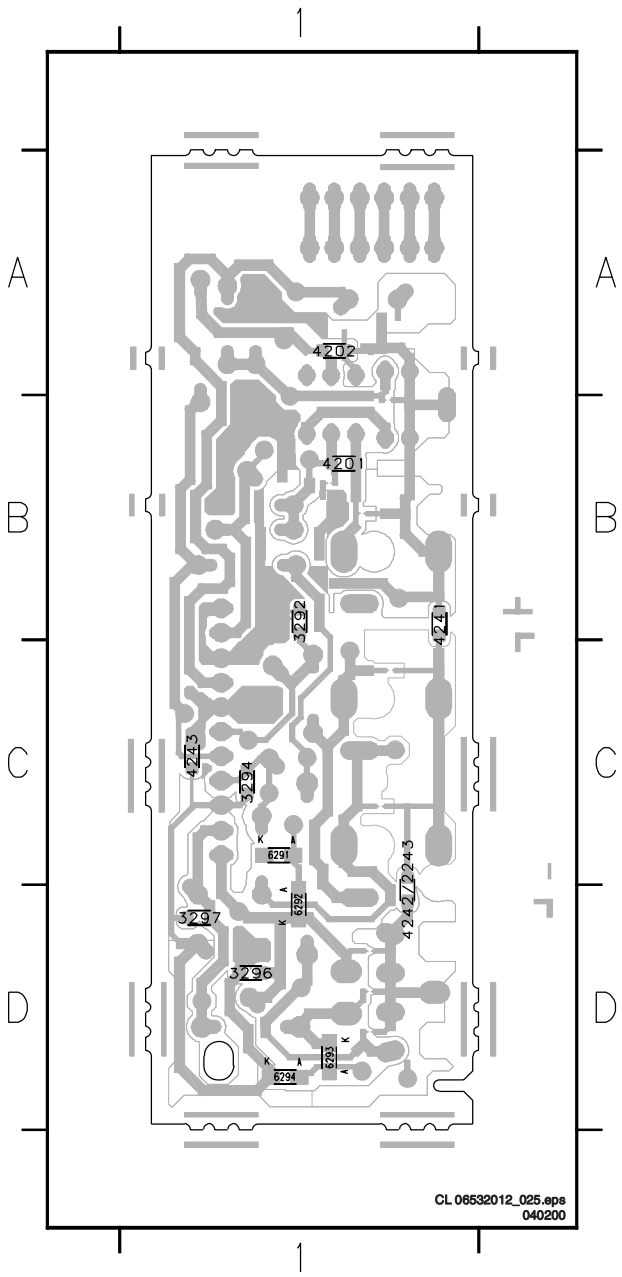

3292 B1
3294 C1
3296 D1
3297 D1
4201 B1
4202 A1
4241 B1
4242/2243 D1
4243 C1
6291 C1
6292 D1
6293 D1
6294 D1

Top Control Panel (FL11 Styling)

0345 A4	1703 D3	3002 E1	3006 E2	3010 D3	3999 D4	4004 E3
0346 B4	1704 D3	3003 E1	3007 E2	3011 E3	4001 D2	4005 C3
1701 D1	1705 D2	3004 E1	3008 D2	3012 C3	4002 E3	4006 C3
1702 D1	3001 E1	3005 E2	3009 E3	3013 C3	4003 D3	6005 E2

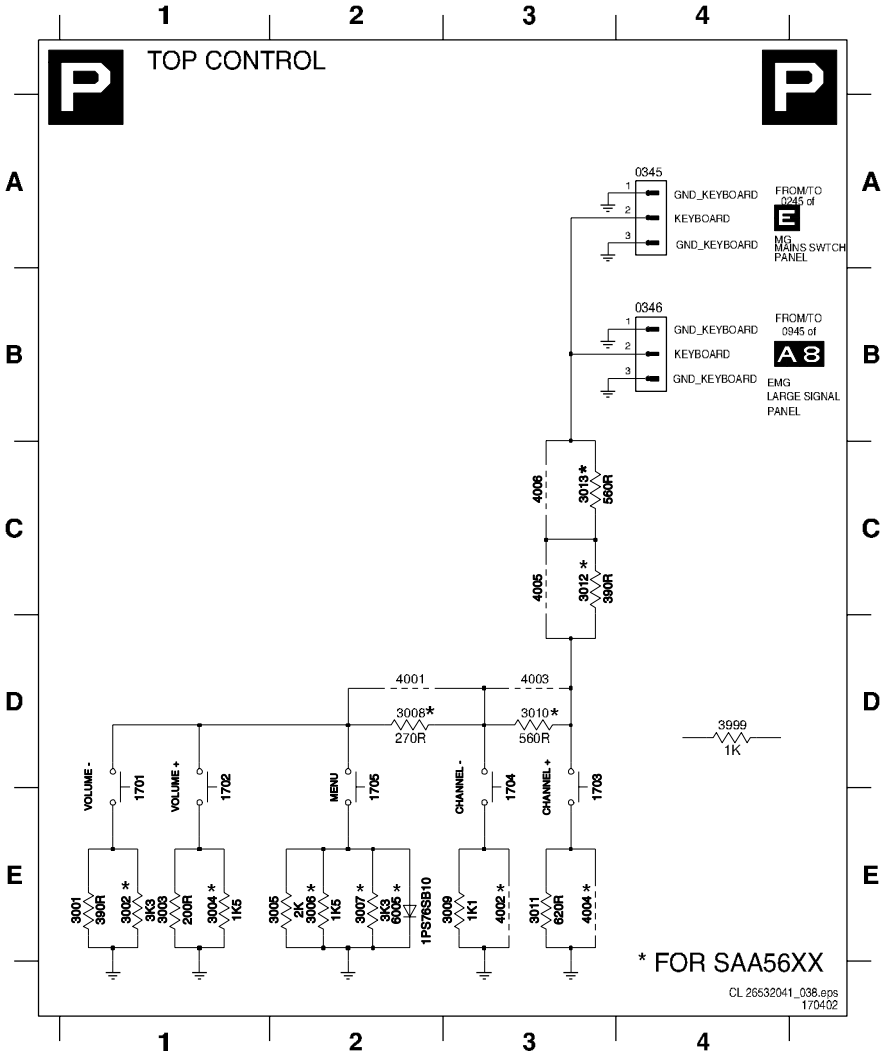

Top Control Panel (FL11 Styling) (Top Side)

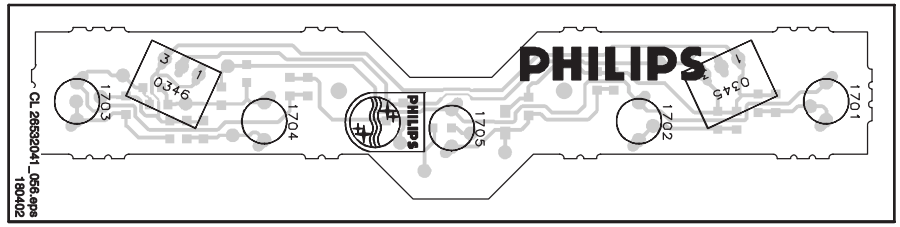

Top Control Panel (FL11 Styling) (Bottom Side)

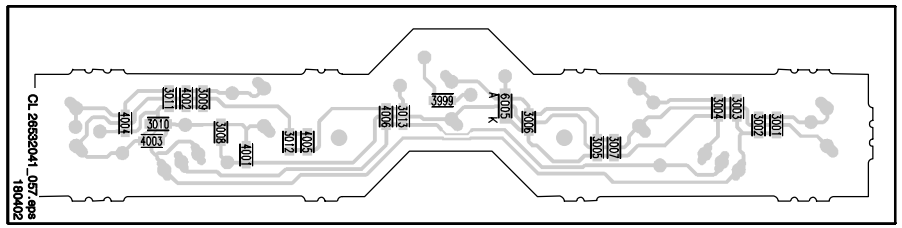

Top Control Panel (PV2 Styling)

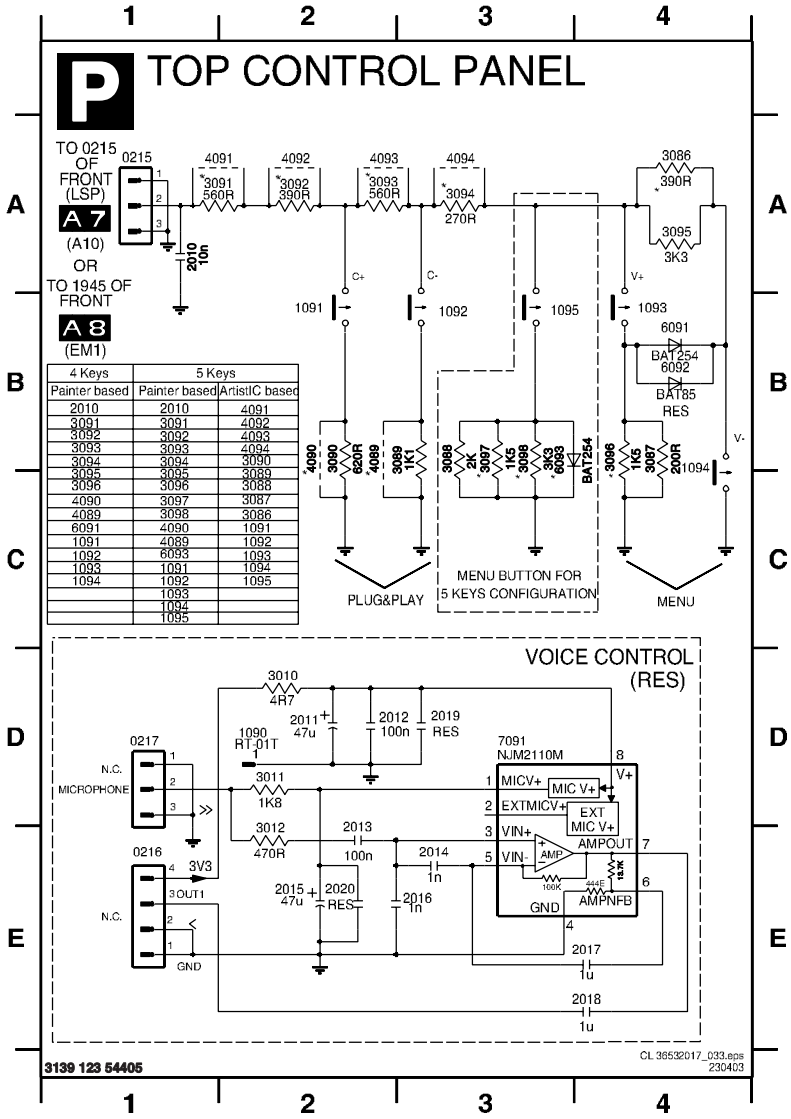

0215 A1
0216 E1
0217 D1
1090 D2
1091 B2
1092 B3
1093 B4
1094 B4
1095 B3
2010 A1
2011 D2
2012 D2
2013 E2
2014 E3
2015 E2
2016 E3
2017 E4
2018 E4
2019 D3
2020 E2
3010 D2
3011 D2
3012 E2
3086 A4
3087 B4
3088 B3
3089 B3
3090 B2
3091 A1
3092 A2
3093 A2
3094 A3
3095 A4
3096 B4
3097 B3
3098 B3
4089 B2
4090 B2
4091 A2
4092 A2
4093 A2
4094 A3
6091 B4
6092 B4
6093 B3
7091 D3

Layout Top Control Panel (PV2 Styling) (Top Side)

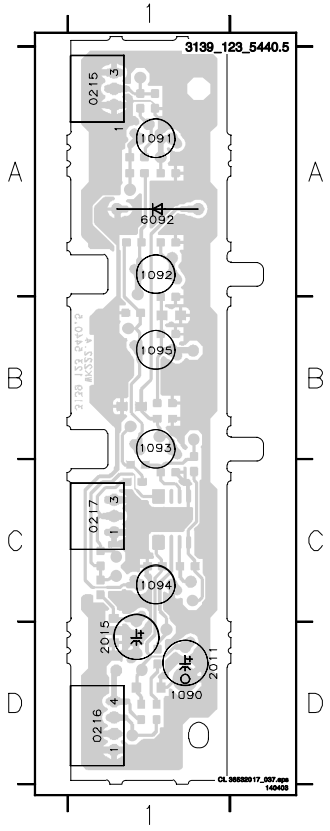

0215 A1
0216 D1
0217 C1
1090 D1
1091 A1
1092 A1
1093 B1
1094 C1
1095 B1
2011 D1
2015 D1
6092 A1

Layout Top Control Panel (PV2 Styling) (Bottom Side)

2010 A1 2018 D1 3086 B1 3092 A1 3098 B1 4092 A1
2012 C1 2019 D1 3087 B1 3093 A1 4010 C1 4093 A1
2013 C1 2020 D1 3088 A1 3094 A1 4011 D1 4094 A1
2014 C1 3010 D1 3089 A1 3095 B1 4089 A1 6091 B1
2016 C1 3011 C1 3090 A1 3096 B1 4090 A1 6093 B1
2017 C1 3012 C1 3091 A1 3097 B1 4091 A1 7091 C1

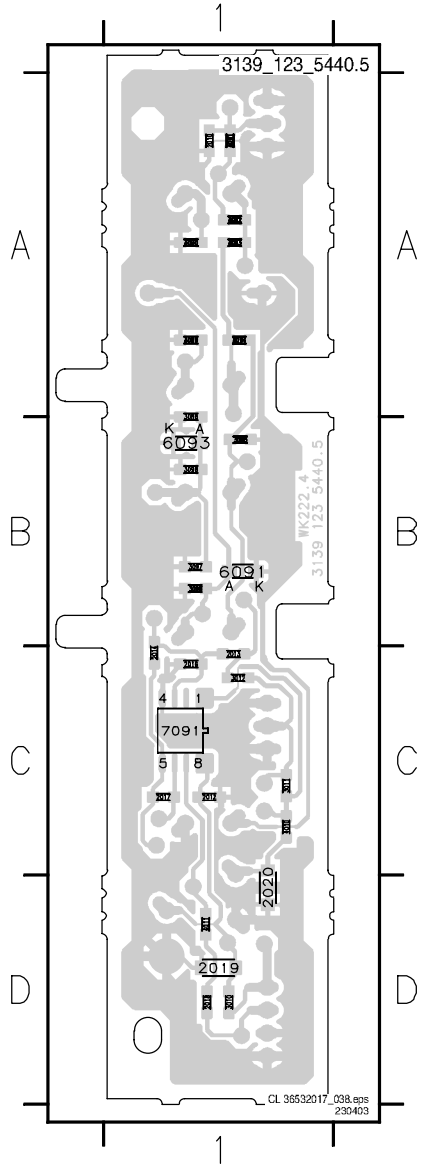

Auto SCAVEM Panel

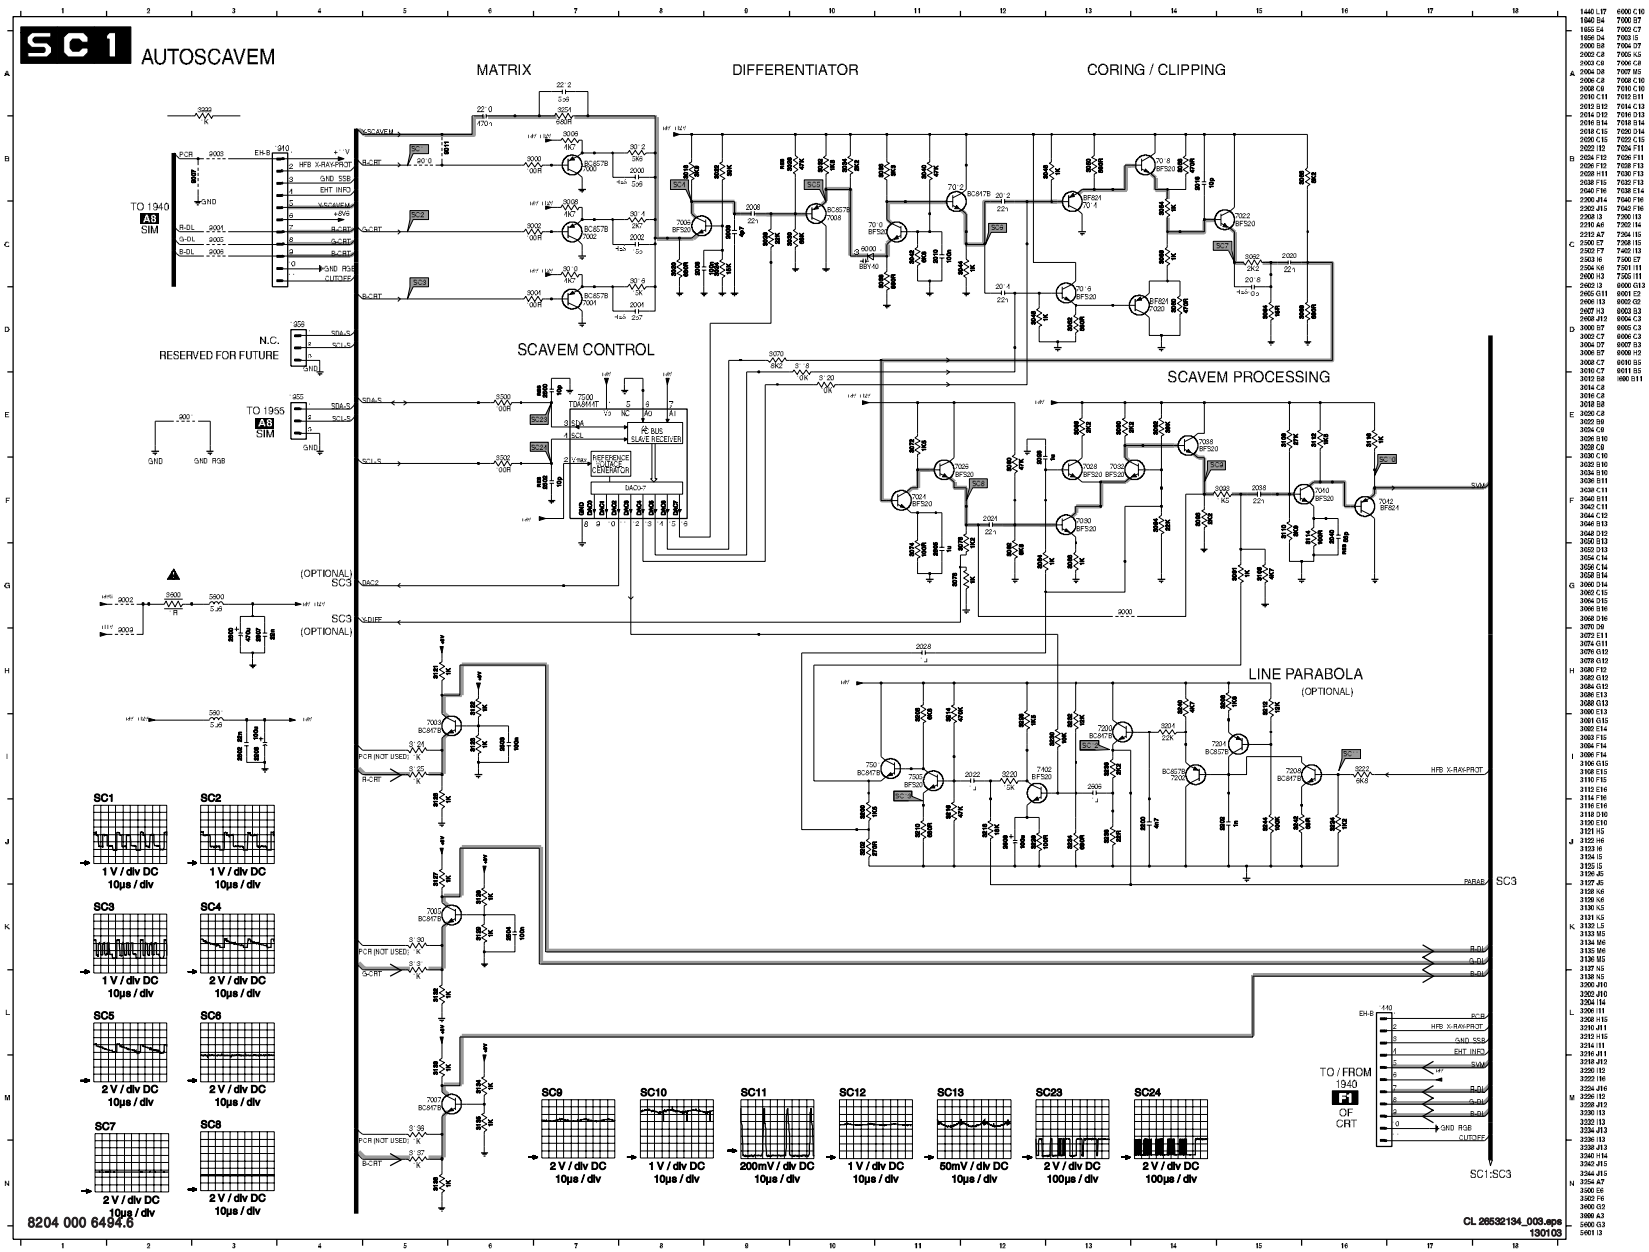

Layout Auto SCAVEM Panel (Top Side)

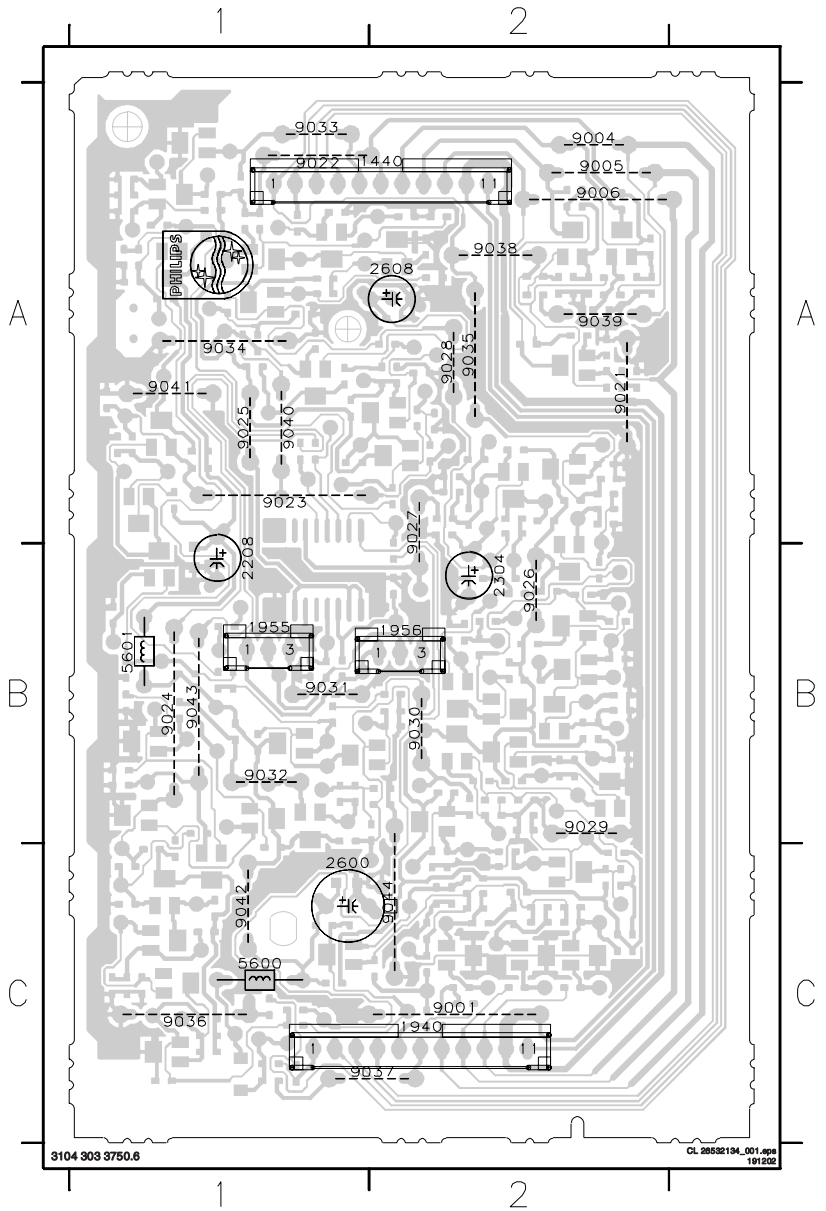

1440 A2
1940 C2
1955 B1
1956 B2
2208 B1
2304 B2
2600 C1
2608 A2
5600 C1
5601 B1
9001 C2
9004 A2
9005 A2
9006 A2
9021 A2
9022 A1
9023 A1
9024 B1
9025 A1
9026 B2
9027 A2
9028 A2
9029 B2
9030 B2
9031 B1
9032 B1
9033 A1
9034 A1
9035 A2
9036 C1
9037 C1
9038 A2
9039 A2
9040 A1
9041 A1
9042 C1
9043 B1
9044 C2

Layout Auto SCAVEM Panel (Bottom Side)

2000 C1 2036 A2 2500 B1 3012 C1 3044 C2 3076 B2 3112 A2 3132 A1 3216 A1 3302 B1 3404 A1 3442 B1 7002 C1 7026 A2 7414 B1 9010 C1
2002 C1 2040 A2 2502 B2 3014 C1 3046 C2 3078 B1 3114 A2 3133 A1 3220 A2 3304 B1 3406 B1 3444 C1 7003 A1 7030 B2 7416 B1 9011 C1
2003 C2 2200 A1 2503 A1 3016 C1 3048 B2 3080 B2 3116 A2 3134 A1 3222 A2 3306 B1 3408 A1 3446 B1 7004 C1 7032 A2 7418 B1 9020 A2
2004 C1 2202 A1 2504 A1 3018 C2 3050 C2 3082 B2 3118 A2 3135 A1 3224 A2 3308 B1 3410 A1 3448 C1 7005 A1 7036 A2 7420 C1 9045 A2
2006 C1 2210 C1 2802 B2 3020 C1 3052 B2 3084 A2 3120 A2 3136 A1 3226 A2 3310 B1 3418 B1 3450 B1 7006 C2 7040 A2 7422 B1 9046 C1
2008 C2 2212 C1 2803 B1 3022 C1 3054 B2 3086 A2 3121 A1 3137 A1 3228 A1 3312 A1 3420 B1 3452 C1 7007 A1 7042 A2 7500 A2 9047 C2
2010 C2 2300 B1 2804 A1 3024 C1 3056 B2 3088 B2 3122 A1 3138 A1 3230 A2 3316 A1 3422 B1 3454 C1 7008 C2 7200 A2 7501 A1
2012 C2 2400 A1 2805 B1 3026 C2 3058 C2 3090 A2 3123 A1 3200 A1 3232 A2 3318 A1 3424 B1 3456 C1 7010 C2 7202 A2 7502 A1
2014 B2 2410 B1 2806 A2 3028 C2 3060 B2 3091 A1 3124 A1 3202 A1 3234 A2 3320 A1 3426 B1 3458 B1 7012 C2 7204 A2 7503 B1
2016 B2 2412 B1 2807 C2 3030 C2 3062 B2 3092 A2 3125 A1 3204 A2 3236 A2 3322 A1 3428 B1 3460 C1 7014 B2 7208 A2 7504 A1
2018 B2 2414 B1 3000 C1 3032 C2 3064 B1 3093 A2 3126 A1 3206 A2 3238 A2 3324 A1 3430 B1 3600 B2 7016 C2 7300 B1 7505 A1
2020 B1 2416 B1 3002 C1 3034 C2 3066 B2 3094 A2 3127 A1 3208 A2 3240 A2 3326 A1 3432 B1 3602 B2 7018 B2 7400 A1 9000 B2
2022 A1 2418 C1 3004 C1 3036 C2 3068 B1 3096 A2 3128 A1 3210 A1 3242 A1 3328 A1 3434 B1 3800 C2 7020 B2 7402 A2 9002 C2
2024 B2 2420 B1 3006 C1 3038 C2 3070 B1 3106 A2 3129 A1 3212 A2 3244 A1 3330 A1 3436 B1 3999 B2 7022 C2 7406 B1 9003 C2
2026 A2 2422 C1 3008 C1 3040 C2 3072 B2 3108 A2 3130 A1 3214 A2 3354 C1 3400 A1 3438 B1 6000 C2 7024 B1 7410 B1 9007 C2
2028 A1 2424 B1 3010 C1 3042 C2 3074 B1 3110 A2 3131 A1 3218 A1 3300 B1 3402 A1 3440 B1 7000 C1 7026 B2 7412 B1 9008 C2

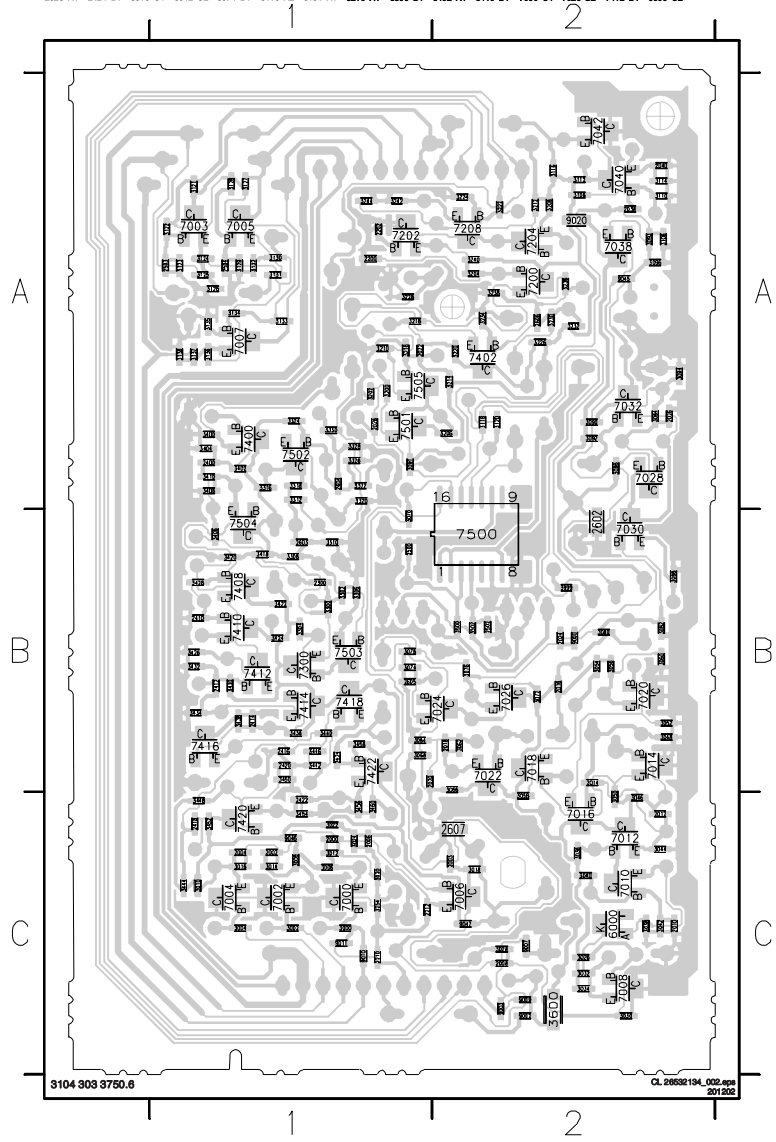

8. Electrical Alignments

Index of this chapter
1. General alignment conditions
2. Hardware alignments
3. Software alignments
4. Option settings

8.1 General Alignment Conditions

8.1.1 Start Conditions

Perform all electrical adjustments under the following conditions:
- Power supply voltage: 230 V_{AC}/50 Hz (± 10 %).
- Connect the set to the mains via an isolation transformer with low internal resistance.
- Allow the set to warm up for approximately 20 to 30 minutes.
- Measure the voltages and waveforms in relation to chassis ground (with the exception of the voltages on the primary side of the power supply).
  Caution: never use the cooling fins/plates as ground.
- Test probe: Ri > 10 MΩ, Ci < 20 pF.
- Use an isolated trimmer/screwdriver to perform the alignments.

Perform all electrical adjustments with the following start settings (for all CRTs):
- Set LIGHT SENSOR "off", by setting ACTIVE CONTROL to "off" with the remote control.
- Set CONTRAST to "75", BRIGHTNESS to "42" and COLOUR to "54" (via PICTURE menu).
- Set COLOUR ENHANCEMENT to "off" (via PICTURE menu).
- Set DIGITAL OPTIONS to "Pixel Plus" (via PICTURE menu), unless otherwise stated (for sets without "Pixel Plus" (= Eagle), set to "Natural Motion").
- Set DYNAMIC CONTRAST to "off" (via PICTURE menu).
- Set CATHODE DRIVE at "15" (via SAM - Alignments - General - Drive - Cathode).

8.1.2 Adjustment Sequence

Use the following adjustment sequence:
1. Set the correct TV-set "options" (after storing, restart the set!).
2. Rough adjustment of "Vg2" and "Focus".
3. Rough adjustment of "Geometry".
4. Allow the set to warm up.
5. Accurate adjustment of "Vg2" and "Focus".
6. Accurate adjustment of "Geometry".
7. Software alignments (cut-off, cathode drive, peak white, white drive, etc).

8.2 Hardware Alignments

Note: The Service Alignment Mode (SAM) is described in chapter 5 of the Service Manual. Menu navigation is done with the "CURSOR UP, DOWN, LEFT or RIGHT" keys of the remote control (RC) transmitter.

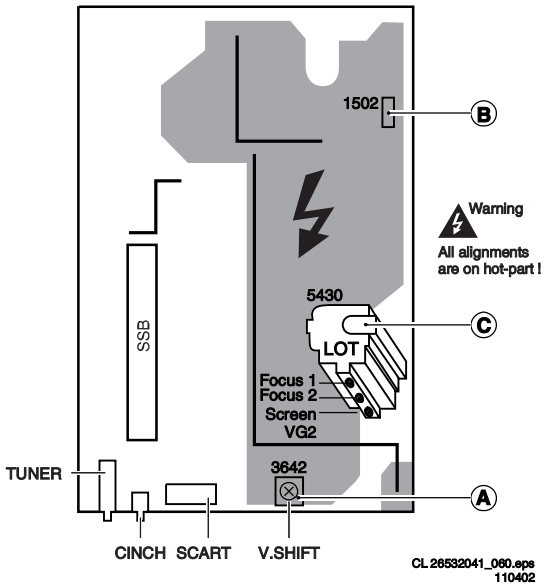

Figure 8-1 Top-view LSP

8.2.1 Vg2 Adjustment

In the frame-blanking period of the R, G, and B signals applied to the CRT, the "HOP" video processor inserts a measuring pulse with different DC levels. Measure the black level pulse during the vertical flyback at the RGB cathodes of the CRT.
1. Go, via the MENU key, to the normal user menu, select "PICTURE", and set "CONTRAST" and "BRIGHTNESS" to "0".
2. Activate the SAM.
3. Connect the RF output of a pattern generator to the antenna input. Test pattern is a "black" picture (blank screen on CRT without any OSD info).
4. Set the channel of the oscilloscope to 20 V/div and the time base to 20 us/div. Use external triggering on the vertical pulse
   (**caution**: use a trigger point at the **"cold"** side!).
5. Ground the scope at the CRT panel (**"cold"** side) and connect a 10:1 probe to one of the cathodes of the picture tube socket (see diagram F).
6. Measure the cut-off pulse during first full line after the frame blanking. You will see two pulses, one being the cut-off pulse and the other being the white drive pulse. Choose the one with the lowest value; this is the cut-off pulse.
7. Select the cathode with the highest V_dc value for the alignment. Adjust the V_CUTOFF of this gun with the SCREEN (lower) potentiometer on the LOT to the correct DC-value (tolerance is +/- 3 V_dc):
   - 28 inch: 160 V.
   - 29 inch: 160 V.
   - 32 inch (LPD - Philips): 160 V.
   - 32 inch (MEC - Panasonic): 170 V.
   - 36 inch: 170 V.
8. Restore "CONTRAST" to "75" and "BRIGHTNESS" to "42".

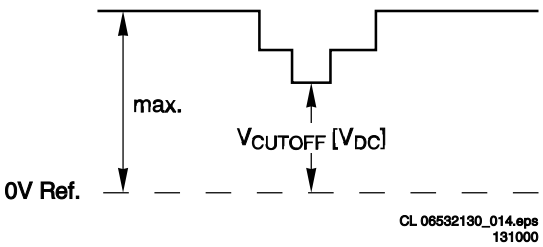

Figure 8-2 Waveform Vg2 alignment

8.2.2 Focus alignment

Notes:
- Tune the set to a "circle with crosshatch" test pattern (use an external video pattern generator).
- Choose picture mode "NATURAL" with the "SMART PICTURE" button on the remote control transmitter.
- **ELDOR** LOT outline:
  - Focus 1 (F1) = Static alignment (black wire).
  - Focus 2 (F2) = Dynamic alignment (red wire).

Focus method for Philips 32 inch tube with bleeder gun
You can recognize a CRT with bleeder gun by its type number:
- W76ERF**052**X044= with bleeder gun
- W76ERF**042**X044= with standard gun.

You can also recognize it by the **ceramic** rectangular plate (this is the bleeder resistance) you will see inside the gun (viewed from above).

1. Start the alignment with the STATIC focus (upper potmeter) turned to the **left** and the DYNAMIC focus (middle potmeter) to the **right**.
2. Adjust the DYNAMIC focus until the horizontal lines at the centre of the screen have minimum width, without introducing a visible haze.
3. Adjust the STATIC focus until the vertical lines at the sides of the screen have minimum width, without introducing a visible haze.
4. Adjust the DYNAMIC focus until the horizontal lines at the centre of the screen have minimum width, without introducing a visible haze.
5. Check overall spot performance and repeat steps 3 and 4 to achieve the best result.

Focus method for all other tubes
1. Start with the STATIC and DYNAMIC focus potentiometers on the LOT at **midway**.
2. Adjust the STATIC focus until the vertical lines at the sides of the screen have minimum width, without introducing a visible haze.
3. Adjust the DYNAMIC focus until the horizontal lines at the centre of the screen have minimum width, without introducing a visible haze.
4. Check overall spot performance and repeat steps 2 and 3 to achieve the best result: a compromise between minimal visible haze at the middle of the screen and sharp lines at the edges of the screen.

8.3 Software Alignments

8.3.1 Introduction

With the software alignments, it is possible to align the Geometry, White Tone, and Tuner IF settings.
Put the set in the SAM (see chapter 5). The SAM menu will now appear on the screen. Select, via **ALIGNMENTS**, one of the sub-menus. They are explained below in the sequence of the sub-menus.

Notes:
- All changes to menu items and alignments are stored automatically, except the option codes. They must be stored manually.
- If the OPTION CODES have been changed **and stored**, the set has to be switched "OFF" and "ON" using the mains switch to activate the new settings (when switching via Standby, the option code settings are NOT read by the microprocessor).
- If an empty EAROM (permanent memory) is detected, all settings are set to pre-programmed default values.

8.3.2 GENERAL

VG2 TEST PATTERN
In this sub-menu, you can turn "On" the OSD feedback for the Vg2 alignment (see chapter 8.2.1).

ADJUST PEAK WHITE LIMITER
Fixed setting: "9".

EHT COMPENSATION
Enter value "9" for the 28, 29 and 32 inch picture tubes
Enter value "10" for the 36 inch picture tubes.

SOFT CLIPPER
Fixed setting: Pwl + 0%

LUMA GAIN
Fixed setting: 2.

IF AFC
Supply, via an external video generator (e.g. PM5518), a TV signal with strength of at least 1 mV and a frequency of 475.25 MHz. Use system BG if possible, otherwise match the system of your generator with the received signal in the set.

Alignment procedure:
1. Go to the user "Installation" menu.
2. Select "Manual Installation".
3. Tune the TV-set to the system and frequency described above via "Search" - "475" - "OK".
4. If the frequency, showed in the line "Fine tune", is between 475.18 MHz and 475.31 MHz, you **do not** need to re-adjust the "IF AFC".
5. If not, adjust the frequency in the "Fine tune" line to 475.25 MHz and "Store" the program (this is **very important** because this will disable the AFC algorithm).
6. Now go to the SAM and select ALIGNMENTS - GENERAL - IF AFC.
7. During the IF AFC parameter adjustment, one can see OSD feedback in the top of the screen.
8. This OSD feedback can give 4 kind of messages:

Table 8-1 OSD feedback of AFC alignment

AFC-window	AFC-frequency vs. reference
Out	High
In	High
In	Low
Out	Low

1. The first item (IN or OUT) informs you whether you are in or out the AFC-window.
2. The second item (HIGH or LOW) informs you about whether the AFC-frequency is too high or too low.
3. First, you must align the IF AFC parameter such that you come into the AFC-window (= IN).
4. Then you must look for the point where the IF AFC parameter changes from HIGH to LOW. This level is the value you are looking for.

5. After adjustment, STORE the value.
6. Now return to the user "Installation" menu.
7. Select "Manual Installation" - "Search" - "475" - "OK" and "Store". This will set the AFC "ON" again.

Service tip: If you do not trust the frequency accuracy of your service generator, connect it to a "good" TV set and check it with the "Fine tune"-line.

IF LPRIME AFC
Use the same procedure as for the IF AFC alignment, but set the video generator to SECAM L/L' (only necessary for countries that have or can receive this system).

TUNER AGC
1. Set the external pattern generator to a colour bar video signal and connect the RF output to the aerial input. Set the amplitude to 10 mV and set the frequency to 475.25 MHz.
2. Connect a DC multimeter between pin 1 and the shielding of the Tuner (item 1200 on the LSP).
3. Adjust the TUNER AGC value (default value is 25) with the LEFT/RIGHT cursor keys until the voltage at pin 1 of the tuner lies between 3.8 and 2.3 V.
4. STORE the alignment.

TUNER AGC TUNER 2
Use the same procedure as described above (under TUNER AGC) with the set switched to the DW source. Measure on pin 1 of the DW Tuner (this is only applicable for sets with 2-tuner DW execution).

BLEND INTENSITY
Use this alignment when you replace the microcontroller or the HOP. It aligns the level of transparency of the menu-picture blended into the main-picture.
Position the "BRIGHTNESS", "CONTRAST", and "COLOUR" setting in the middle position (picture-menu).
1. Apply a signal with a 100 % white video-pattern.
2. Connect an oscilloscope to pin 8 of connector 1298 of the CRT panel and measure the Red output level.
3. Align the BLEND INTENSITY parameter such, that the blended signal is 65 % of the black-white amplitude. In practice, this is about 1.3 V (blended signal) versus 2 V (full white signal).
4. The parameter can be adjusted in between "0" and "31".

8.3.3 DRIVE

Method 1 (with colour analyser):
1. Select TEST PATTERN and turn it ON. During the following alignments, you will get a white block in middle of the screen.
2. Select CATHODE and adjust the set to the correct light output. This setting depends on the picture tube size and brand. See table "Cathode parameter" for the colour analyser readings.
3. Select a COLOUR TEMPERATURE (COOL, NORMAL, or WARM).
4. Adjust the white level (via RED, GREEN, and BLUE) according to the values in table "White levels".

Table 8-2 Cathode parameter

CRT	Light output (cd/m^2)
28" RF WS	400 (Mk1), 450 (Mk2)
29" RF 4:3	400
32" RF WS	380 (LPD), 370 (MEC)
36" RF WS	330

Table 8-3 White levels

ColourTemp. (K)	Cool (10200)	Normal (8700)	Warm (6500)
X	280	289	313
Y	287	299	329

Method 2 (without colour analyser):
Without having a colour-analyser, one can set some parameters. This is the next best solution. The setting-parameters are average values coming from production (statistics).
1. Select CATHODE and enter the value "15" (for all picture tubes).
2. Select a COLOUR TEMPERATURE (COOL, NORMAL, or WARM).
3. Set the RED, GREEN, and BLUE parameters according to the (delta) values in table "Tint settings".
4. RED BL OFFSET: herewith the black level can be aligned very precise (default value is "7").
5. GREEN BL OFFSET: herewith the black level can be aligned very precise (default value is "7").

Table 8-4 Tint settings

	Δ Cool	Normal	Δ Warm
R	-1	37	+3
G	0	30	0
B	+4	31	-10

8.3.4 LUM. DEL. (Luminance Delay)

With this alignment, you place the luminance information exactly on the chrominance information (brightness is pushed onto the colour). Use a colour bar/grey scale pattern as test signal.
- **LUM. DELAY PAL BG:** Apply a PAL BG colour bar/grey scale pattern as a test signal. Adjust this parameter until the transients of the colour part and black and white part of the test pattern are at the same position. Default value = 9.
- **LUM. DELAY PAL I:** Apply a PAL I colour bar/grey scale pattern as a test signal. Adjust this parameter until the transients of the colour part and black and white part of the test pattern are at the same position. Default value = 9.
- **LUM. DELAY SECAM:** Apply a SECAM colour bar/grey scale pattern as a test signal. Adjust this parameter until the transients of the colour part and black and white part of the test pattern are at the same position. Default value = 11.
- **LUM. DELAY BYPASS:** apply a NTSC colour bar/ greyscale pattern as a test signal. Adjust this value until the transients of the colour and black & white part of the test area are at the same position. Default value = 10.

8.3.5 GEO-NOR (Normal Geometry)

Note: Use for all geometry alignments an **external** pattern generator with a geometry pattern (e.g. crosshatch).

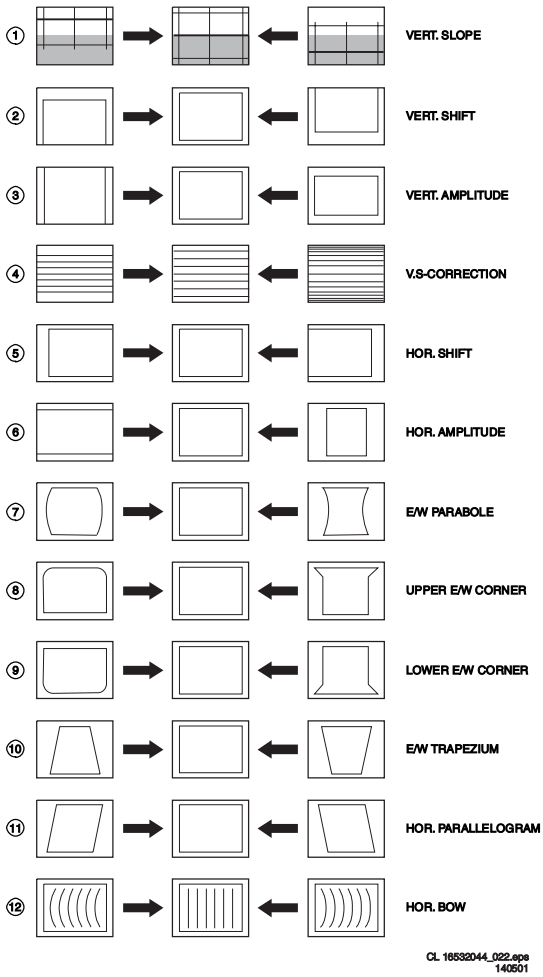

Figure 8-3 Geometry Alignments

Service tip: When the set is equipped with a rotation coil, use this menu item to check its correct alignment. If alignment is not correct, go to the INSTALLATION menu, choose SETUP, press OK, and choose PICTURE TILT. With the use of a crosshatch test pattern, align it to a correct horizontal picture.

V. SLOPE
Align the zero crossing of the frame deflection to the mechanical middle of the picture tube.
1. First set the start conditions for 16:9 sets: V. S-CORRECTION value on "16" for the 28 inch, "32" for the 29 inch, "16" for the 32 inch (LPD - Philips tube), "27" for the 32 inch (MEC - Panasonic tube), or "20" for the 36 inch sets. Position the boundary-stripes of the test pattern on the edges of the picture tube.
2. Align V. SLOPE (during alignment, the lower half of the picture is blanked) such, that the middle line of the test pattern is matched with the edge of the pattern transient in the middle of the picture.
3. Repeat the alignment if necessary.

V. SHIFT AND V. AMPLITUDE (vertical alignment)
Align the vertical centre and height of the picture.
1. Use V. AMPLITUDE to align the vertical amplitude so that the entire test pattern is visible.
2. Set V. SHIFT to value "32".
3. Connect a voltmeter (V_dc) between R3624 and "hot" ground.
4. Adjust the DC voltage to "0" with potmeter R3642 (see figure 8-1).
5. Use V. SHIFT again to align the test pattern roughly vertically in the middle.
6. Repeat the alignment if necessary.

V. S-CORRECTION
Align for equal blocks on top, middle, and bottom of the picture tube.
Align V. S-CORRECTION such that a block at the top (or bottom) of the picture has the same height as a block in the middle of the picture.

H. SHIFT AND H. AMPLITUDE (horizontal alignment)
1. Use H. AMPLITUDE to align the horizontal amplitude so that the entire test pattern is visible.
2. Use H. SHIFT to align the picture horizontally in the middle.
3. Repeat the H. AMPLITUDE alignment if necessary.

Note: In case the horizontal linearity in wide-screen mode is out of tolerance, add a "DC-shift correction" panel (3104 328 06230) to connector 1419 of the DAF-panel [diagram I]. On the DC-shift panel, cut diode **6433** for correction to the right or diode **6432** for correction to the left.
Caution: Be sure to switch "OFF" the set first. *Never* plug in a not pre-aligned module in a playing set!

EAST/WEST ALIGNMENT
1. Use EAST/WEST PARABOLA to align the vertical lines until straight.
2. Use UPPER EAST/WEST CORNER to align the vertical lines in the upper corners until straight.
3. Use LOWER EAST/WEST CORNER to align the vertical lines in the lower corners until straight.
4. Use EAST/WEST TRAPEZIUM to align for a rectangular.
5. Use HORIZONTAL BOW to correct the E/W parabola such, that it becomes symmetrical.
6. Use HORIZONTAL PARALLELOGRAM to align for straight vertical lines if necessary.

Repeat steps 1 to 6 if necessary.

8.3.6 GEO-4:3 (4:3 geometry alignment in 16:9 sets)

1. Use EAST/WEST PARABOLA to align the vertical lines until straight.
2. Use UPPER EAST/WEST CORNER to align the vertical lines in the upper corners until straight.
3. Use LOWER EAST/WEST CORNER to align the vertical lines in the lower corners until straight.

8.3.7 GEO-SW (Super Wide geometry alignment in 16:9 sets)

You only need to set the following values (if the normal geometry alignment has been performed correctly):
1. V. S-CORRECTION: enter value of the NORMAL GEOMETRY alignment.
2. H. AMPLITUDE: enter value of the NORMAL GEOMETRY alignment subtracted by "1".
3. EAST/WEST PARABOLA: enter value of the NORMAL GEOMETRY alignment.

8.3.8 GEO-100HZ (Digital Scan geometry alignment)

As all alignments are done in Pixel Plus mode (at 75 Hz), the 100 Hz mode needs an extra alignment:
- Select GEO-100HZ. The set automatically switches to 100 Hz mode.
- V. SLOPE: match the middle line of the test pattern with the upper edge of this blanking picture.
- After the alignment, return to the previous menu. The set automatically returns to "Pixel Plus" mode.

8.4 Option Settings

8.4.1 Introduction

The microprocessor communicates with a large number of I2C ICs in the set. To ensure good communication and to make digital diagnosis possible, the microprocessor has to know which ICs to address. The presence / absence of these specific ICs (or functions) is made known by the option codes.

- You can set the "hardware related" options via the SAM - ALIGNMENTS - OPTIONS or OPTION NUMBERS menu.
- You can set the "software related" options via the SAM - DEALER OPTIONS menu.

Notes:

- After changing the option(s), save them with the STORE command.
- The new option setting is only active after the TV is switched "off" and "on" again with the AC power switch (the EAROM is then read again).

8.4.2 DEALER OPTIONS

Select this sub-menu to set the initialisation codes (= options) of the set via text menu's.

Menu name	Subjects	Options	Physically in set
Personal Options	Picture Mute	Yes	Video mute active when there is no signal detected
		No	Noise when there is no signal detected
	Virgin Mode	Yes	TV starts up with language selection menu
		No	TV does not start up with language selection menu
	Auto Store Mode (for EU)	None	Auto Store mode disabled (not in installation menu)
		PDC-VPS	Auto Store mode via ATS (Automatic Tuning System) enabled
		TXT page	Auto Store mode via ACI (Automatic Channel Installation) enabled
		PDC-VPS-TXT	Auto Store mode via ATS or ACI enabled
	Txt Preference (for EU)	FLOF	Preference to FLOF (Full Level One Features) teletext
		TOP	Preference to TOP (Table Of Pages) teletext
Note: Above overview gives the menu items for all regions (EU/AP/US). The correct settings differs per region (see Option Numbers).			

CL 36532021_014.eps
310303

Figure 8-4 Dealer options overview

8.4.3 SERVICE OPTIONS

Select this sub-menu to set the initialisation codes (= options) of the set via text menu's.

Menu-Item	Subjects	Options	Description
Chassis/Region	Chassis	EMGS 2001	Service name = EM3
		EMGS 2002	Service name = EM5
		EMGS TOP 2003	Service name = EM6
	Region	AP NTSC	Only for AP
		US	Only for US
Dual screen	PIP/Dual Screen	Yes	Feature present.
		No	Feature not present.
	Text/EPG	Yes	Feature present.
		No	Feature not present.
	DS/PIP Tuner	Yes	Only selectable if Dual Screen option is "on"
		No	Feature not present.
Teletext	Flash RAM	Yes	Feature present.
		No	Feature not present.
	NexTView	None	Feature not present.
		Textguide only	Feature present, but only as text guide.
		Nextview 2c3	Feature present, for countries that support this.
Picture Tube	CRT Type	4 by 3	4:3 picture tube.
		16 by 9	16:9 picture tube.
	Picture Rotation	Yes	Frame rotation circuitry present.
		No	Frame rotation circuitry not present .
	CRT size	28 / 32 / 36 29 / 34 / 38	CRT size (in inches). MEC= Panasonic, II= Mark 2
	Anti MoirÈ filter	Yes	Feature present.
		No	Feature not present.
Video repro	Featurebox type	1050i/1250i	HD input
		Eagle	Eagle present (Pixel Plus).
	Lightsensor	Yes	Feature present.
		No	Feature not present.
	2D Combfilter	Yes	Feature present.
		No	Feature not present.
	Picture improvement	Yes	LTP (TOPIC) present.
		No	LTP (TOPIC) not present.
	Auto Scavem	Yes	Feature present.
		No	Feature not present.
	Signalling bits	Yes	For 16:9 sets
		No	For 4:3 sets
Audio Repro	Dolby	None	Set without Dolby.
		Pro Logic	Set with Dolby ProLogic.
		Virtual	Sets with Virtual Dolby
	Rear speakers	Speakerless	Virtual Dolby (without rear speakers).
		Cordless	Wireless active surroundbox present.
	Subwoofer present	Yes	Feature present.
		No	Feature not present.
	Acoustic system	None, FL9-DAS, FL11, FL12, PV02, FL13, Soft Designline, Tech Designline.	
	AVL	On	Automatic Volume Limiter 'on'.
		Off	Automatic Volume Limiter 'off'.
Source Selection	AV3 2fH (2002)	Yes	Not selectable yet
		No	Feature not present.
	AV4 2fH (2002)	Yes	Not selectable yet
		No	Feature not present.
	EXT3 2fH (2003)	Yes	Feature present.
		No	Feature not present.
	EXT4 2fH (2003)	Yes	Not selectable for this chassis
		No	Feature not present.
Miscellaneous	Home Cinema	Yes	Set with Home Cinema Link (EU only)
		No	Set without Home Cinema Link
	Integrated RC	Yes	Feature present.
		No	Feature not present.
	Tuner type	UV1316	Set with Philips tuner.
		TEDE9	Set with Alps tuner.
	Integrated Radio	Yes	Feature present.
		No	Feature not present.
	P50 DVD menu line	Yes	Feature present (only in sets with Home Cinema).
		No	Feature not present.
Option no.	Group 1		Group 1 option code overview (see CRT sticker).
	Group 2		Group 2 option code overview (see CRT sticker).

CL 36532017_051.eps
240403

Figure 8-5 Option overview

8.4.4 OPT. NO. (Option numbers)

Select this sub menu to set all options at once (expressed in two long strings of numbers).

An option number (or option byte) represents a number of different options. When you change these numbers directly, you can set all options very fast. All options are controlled via eight option numbers.
When the EAROM is replaced, all options will require a re-setting. To be certain that the factory settings are reproduced exactly, you must set both option number lines. You can find the correct option numbers on a CRT sticker inside the TV set.

Example: The CRT sticker gives the following option numbers:
04187 08526 50001 00000
04182 00001 00000 00070
The first line (group 1) indicates options 1 to 4, the second line (group 2) options 5 to 8 (see tables below).
Every 5-digit number represents 16 bits (so maximum number can be 65536 if all options are set).
When all the correct options are set, the sum of the decimal values of each Option Byte (OB) will give the option number.

OB	Bit	Option name	Settings (in decimal values) for EM5.1E chassis		Option number
1	0 1 2	Featurebox	0= None	2= Prozonic 3= Eagle 4= Falconic 5= Falconic 1050i 1250i	Sum OB1 (decimal)
	3	2D Comb Filter	0= Off	8= On	
	4	Auto-Scavem	0= Off	16= On	
	5	n.a. *	0		
	6	Light Sensor	0= Off	64= On	
	7	Luma Trans. Proc.	0= Off	128= On (for non-Eagle sets)	
	8	n.a. *	0		
	9	n.a. *	0		
	10	n.a. *	0		
	11	n.a. *	0		
	12	WSS	0= Off	4096= On	
	13	3D Comb Filter	0= Off	8192= On	
	14	Pixel Plus	0= Off	16384= On	
	15	n.a. *	0		
2	0	n.a. *	0		Sum OB2 (decimal)
	1	Dolby ProLogic	0= Off	2= On	
	2	Virtual Rear Spkrs	0= Off	4= On	
	3	Cordless Rear Spkrs	0= Off	8= On	
	4	Dolby Digital	0= Off	16= On	
	5	Virtual Dolby	0= Off	32= On	
	6	Subwoofer	0= No subwoofer present	64= Subwoofer present	
	7				
	8 9 10 11	Chassis	0= EM6	256= EM5 512= EM3 3840= Others	
	12	EPG Type	0= Off (US)	8192= On (EU)	
	13	Flash RAM	0= Off (US)	8192= On (EU)	
	14 15	EPG Version	0= Off (US)	16384= Text guide only 32768= NexTView 2C3 (EU) 49152= NexTView 2	
3	0	n.a. *	0		Sum OB3 (decimal)
	1	n.a. *	0		
	2	AV4 (2fH)	0= Off	4= On (not selectable)	
	3	AV3 (2fH)	0= Off	8= On (not selectable)	
	4	Dual Screen	0= Off	16= On	
	5	n.a. *	0		
	6	TXT/EPG/DS	0= Off	64= On	
	7	n.a. *	0		
	8	Aspect Ratio	0= 4:3	256= 16:9	
	9	Tilt	0= Off	512= On	
	10	Monitor	0= Off	1024= Reserved for FTV	
	11	Integrated Radio	0= Off	2048= On	
	12	Stand Alone	0= Off	4096= Reserved for FTV	
	13	Integrated DVD	0= Off	8192= On (not appl. for FTV)	
	14	Home Cinema	0= Off	16384= On	
	15	Integrated RC (P50)	0= Off	32768= On	
4	0	PIP/Aux. Tuner	0= Off	1= On	Sum OB4 (decimal)
	1	n.a. *	0		
	2	China IF	0= Off	4= On	
	3	Tuner	0= Philips	8= Alps	
	4	Teletext	0= Off	16= On	
	5	n.a. *	0		
	6	n.a. *	0		
	7	n.a. *	0		
	8	Digital Module (MILO)	0= Off	256= On	
	9	Integrated Harddisk	0= Off	512= On	
	10	n.a. *	0		
	11	n.a. *	0		
	12	Anti Aging	0= Off	4096= Reserved for FTV	
	13	DVD-door lock	0= Off	8192= On	
	14	n.a. *	0		
	15	n.a. *	0		

Note: Bits that are not used have a fixed value of "0", and are not mentioned in above overview.

CL 36532017_052.eps
240403

Figure 8-6 Option bytes Group 1

OB	Bit	Option name	Settings (in decimal values) for F22Rx_AA chassis		Option Number
5	0	n.a. *	0		Sum OB5 (decimal)
	1 2	Auto Store Mode	0= None	2= PDC/VPS 4= TXT Page 6= PDC/VPS/TXT Page	
	3	Korean Stereo	0= Off	8= On	
	4	Picture Mute	0= Off	16= On	
	5	n.a. *	0		
	6	Virgin	0= Off	64= On	
	7	n.a. *	0		
	8	n.a. *	0		
	9	n.a. *	0		
	10	n.a. *	0		
	11	n.a. *	0		
	12	TXT Preference	0= TOP	4096= FLOF	
	13	n.a. *	0		
	14	n.a. *	0		
	15	n.a. *	0		
6	0	P50 DVD menu-line	0= Off	1= On	Sum OB6 (decimal)
	1	n.a. *	0		
	2	n.a. *	0		
	3	n.a. *	0		
	4 5 6 7	Region	0= EU	16= AP PAL-multi 32= AP NTSC 48= US 64= LATAM 80= Australia	
	8	n.a. *	0		
	9	n.a. *	0		
	10	n.a. *	0		
	11	n.a. *	0		
	12	n.a. *	0		
	13	n.a. *	0		
	14	n.a. *	0		
	15	n.a. *	0		
7	0	EXT4 1fH (EU)	0= Off (EM5)	1= On	Sum OB7 (decimal)
	1	EXT 2fH 1 (EU)	0= Off (EM5)	2= On	
	2	EXT 2fH 2 (EU)	0= Off	4= On	
	3	EXT VGA (EU)	0= Off	8= On	
	4	EXT DVI (EU)	0= Off	16= On	
	5	EXT3 (EU)	0= Off	32= On	
	6	n.a. *	0		
	7	n.a. *	0		
	8	n.a. *	0		
	9	AV 2fH 1 (non-EU)	0= Off	512= On	
	10	AV 2fH 2 (non-EU)	0= Off	1024= On	
	11	AV VGA (non-EU)	0= Off	2048= On	
	12	AV DVI (non-EU)	0= Off	4096= On	
	13	n.a. *	0		
	14	n.a. *	0		
	15	n.a. *	0		
8	0 1 2 3	Cabinet	0= FL6	1= FL7 2= FL8 3= FL9 DAS 4= FL9 Monitor 5= FL10 6= FL11 7= FL12 8= FL14 (n.a.) 9= PV02 10= FL13 11= Soft Design Line 12= Tech Design Line	Sum OB8 (decimal)
	4	n.a. *	0		
	5	n.a. *	0		
	6	AVL	0= Off	64= On	
	7	n.a. *	0		
	8 9 10 11	Picture tube size	0= 28 inch	256= 32 inch 512= 36 inch 768= 29 inch 1024= 34 inch 1280= 38 inch 1536= 32 inch MEC 1792= 28 inch Mk2 2048= 36 inch FP 3840= Other	
	12	Anti MoirÈ	0= Off	4096= On	
	13	n.a. *	0		
	14	n.a. *	0		
	15	n.a. *	0		

Note: Bits that are not used have a fixed value of "0", and are not mentioned in above overview.

CL 36532017_053.eps
240403

Figure 8-7 Option bytes Group 2

9. Circuit Descriptions, Abbreviation List, and IC Data Sheets

Index of this chapter

1. Introduction
2. Block diagram
3. Double Window
4. Abbreviation list
5. IC Data Sheets

Note:

- Only **new** circuits (compared to the EM5E) are described. For the other circuit descriptions, see the manual of the EM5E. This manual is available in different languages:
  - 3122 785 12560 = English.
  - 3122 785 12571 = German.
  - 3122 785 12581 = French.
- Figures can deviate slightly from the actual situation, due to different set executions.
- For a good understanding of the following circuit descriptions, please use the diagrams in chapter 6 and 7. Where necessary, you will find a separate drawing for clarification.

9.1 Introduction

For the EM5.1E chassis, there are three ranges foreseen, with the following delta's (compared to the EM5E):

- 93xx: No NexTView level 3, No 3rd SCART, No PIP, Eco Scavem, Virtual Dolby Surround.
- 94xx: New RC, 2-tuner PIP/DW, 3rd SCART with PIP/DW input, Auto Scavem, Virtual Dolby Surround.
- 95xx: New RC, 1-tuner PIP/DW, 3rd SCART with PIP/DW input, Auto Scavem, Dolby ProLogic.

The chassis consists of a full sized LSP/SSP combination and a smaller double sided four layer SSB, which is mounted on the SSP using a SIMM connector. The main functionalities are:

- LSP: supply, deflection, and sound amplification.
- SSP: tuner input, SIMM interface, I/O, and interface provisions for extended functions such as PIP.
- SSB: core TV functionalities, being TXT/control, video and audio decoding, feature box, video featuring, and sync/ geometry control.

The LSP (single sided) is built up very conventional, with hardly any surface mounted components on the copper side. Similar with the EM3 (but different as with the MG-chassis), the EM5 LSP has a very large 'hot' part, including both deflection coils.

The SSB is a high tech module (four layer, 2 sides reflow technology, full SMC) with very high component density and complete shielding for EMC-reasons. Despite this, it is designed in such a way, that repair on component level is possible. To achieve this, attention was paid to:

- The position of service test lands: most of them are at the Tuner side.
- Accessibility (Tuner side). If there are still problems with the accessibility, one can order an extension board (see parts list).
- Clearance around surface mounted ICs (for replacing).
- Detailed diagnostics and fault finding is possible via ComPair.

In the architecture, provisions are made for more features/ extensions like:

- Wireless surround sound.
- Integrated DVD-player.

The availability of Double Window (DW) or Picture In Picture (PIP) depends on the model range. There are 2 different executions, depending on the number of tuners:

- One Tuner: The TV has only one tuner (on the LSP), so the PIP-picture can be either from this tuner or from an external AV-source.
- Two Tuners: In this case there are 2 separate tuners, so the main picture and the DW picture are independently selectable. The IF signal from the main tuner is processed on the SSB, while the IF signal from the 2nd tuner is processed by a 2nd BOCMA video processor on the DW-panel. The source selection is done via an I/O expander.

9.2 Block Diagram

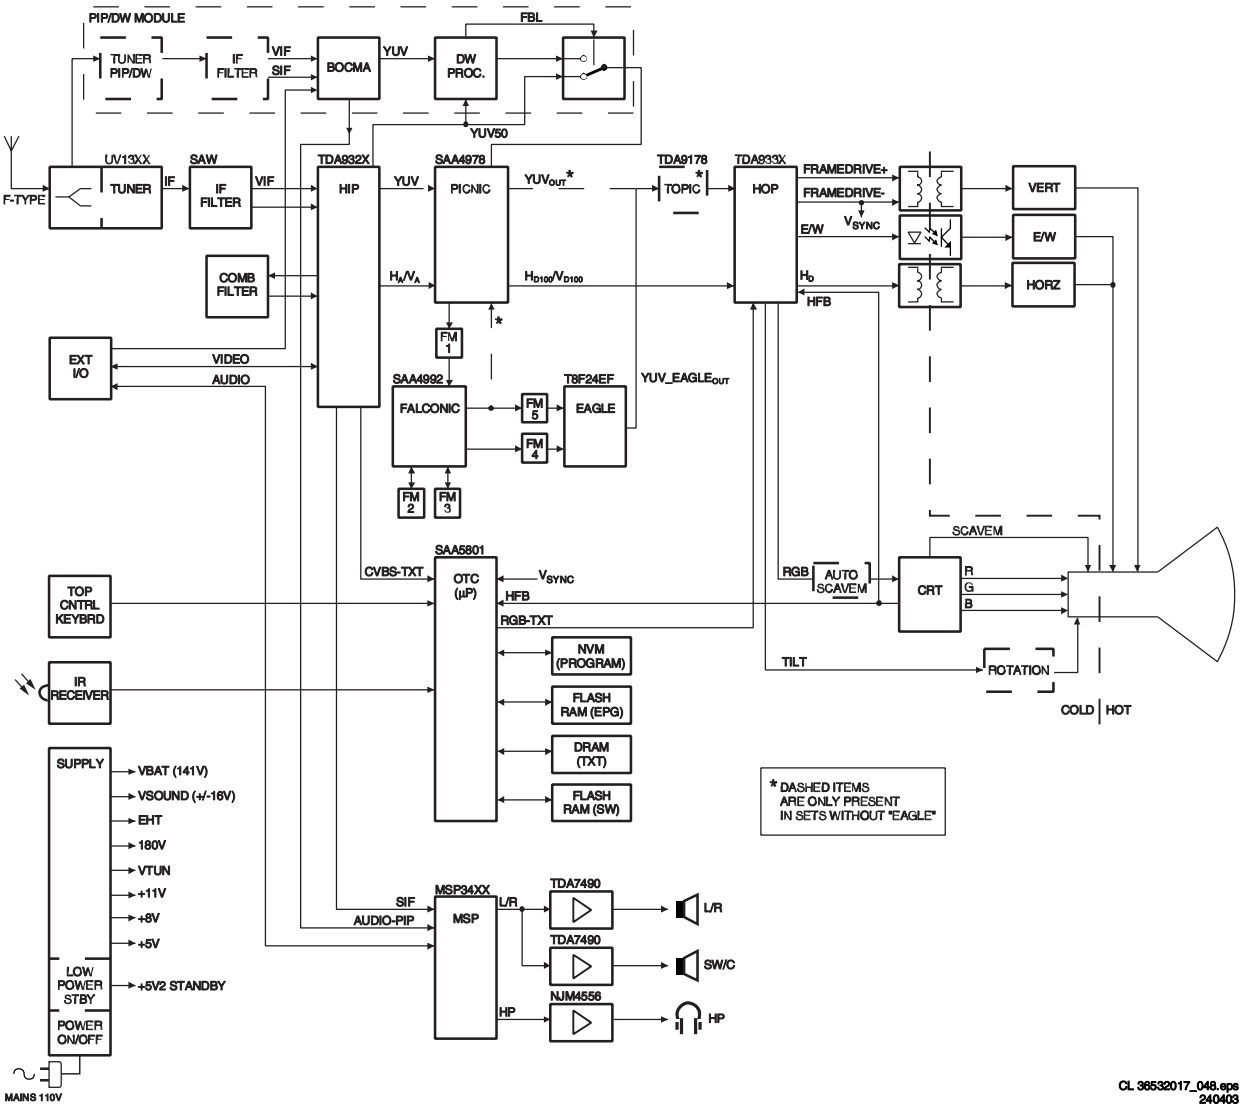

Figure 9-1 Block diagram

The Tuner (item 1200) is a PLL tuner and delivers the IF-signal, via audio & video SAW-filters, to the HIP (High-end Input Processor). The HIP has the following functions:

- IF modulation.
- Video source- and record select.
- Colour decoder.
- Synchronisation.

Three SCART-connectors can be used:

- SCART1 is fully equipped,
- SCART2 is meant for VCR. Pin 10 is used for Easylink (P50) and there is a possibility for Y/C in. The CVBS-out on pin 19 is meant for WYSIWYR (What You See Is What You Record).
- SCART3 is a RGB/CVBS and audio L/R input. It can be used as 2nd tuner input, in case of a 1-Tuner DW/PIP set.

The HIP delivers YUV and sync signals to the PICNIC. This IC takes care of:

- Analogue to Digital conversion and vice versa.
- 50 to 100 Hz conversion.
- Panorama mode.
- Noise reduction.
- Dynamic contrast.

The '2fH features'-block in the diagram gives several options:

- For Digital Scan, the PICNIC is required.
- For Natural Motion, the FALCONIC is required.
- For Pixel Plus, the EAGLE is required.

After the PICNIC the, now 100 Hz, YUV-signals are fed to the FALCONIC for 'Natural Motion', followed by the Eagle for 'Pixel Plus' enhancement (if present). The processed YUV signals (from Eagle or PICNIC) are, together with the sync-signals from the PICNIC, then fed to the HOP (High-end Output Processor). This IC handles the video control and geometry part. The RGB-signals for TXT/OSD (from the microprocessor) are also inserted via the HOP. The video part delivers the RGB signals to the CRT-panel and the geometry part delivers the H-drive, V-drive, and a drive-signal for rotation.

Both deflection circuits are 'hot' and located on the LSP. They are driven by the HOP. To make a galvanic separation, the Line Drive is driven via transformer 5410 and the Frame Drive via transformer 5621.The horizontal output stage generates some supply voltages and the EHT-, focus- and Vg2-voltages.

The RGB amplifiers on the CRT-panel are supplied with 200 V from the LOT.

The Scavem circuit modulates transitions of the Luminance (Y) signal on the horizontal deflection current, giving a sharper picture.

The sound part is built around the MSP34xx (Multi-channel Sound Processor) for IF sound detection, sound control and source selection. Dolby decoding is also done by the MSP. Amplification is done via a 'class D' integrated power amplifier IC, the TDA7490.

The microprocessor, called OTC (OSD, Teletext and Control) takes care of the analogue TXT input- and output processing. The OTC, ROM, and RAM are supplied with 3.3 V, which is derived from the +5V2.
The NVM (Non Volatile Memory) is used to store the settings, one Flash-RAM contains the set software, the other Flash-RAM (7012) is for EPG, and the DRAM is used for storing the Teletext pages.

There is a separate Standby Supply, in order to reduce the Standby power consumption. During Standby, the Main Supply is switched 'off' (via TS7529).
A relay (1550) is used to switch the degaussing circuit. It is switched 'on' after set start-up and switched 'off' by the P after 12 s.
The Main Supply, an SMPS based on the 'down-converter' principle, generates the 141 V (V_BAT) and the +/- 16 V for the audio part.
Note: Voltage V_BAT is not mains isolated ('hot'), but is alignment free.

9.3 Double Window

9.3.1 Introduction

The Double Window (DW) panel provides the option for viewer to see two pictures or programs on the displayed area of a TV screen. The displayed pictures can be in PIP or DW mode. The viewer can also select the size and position of the "second" picture.
There are basically two types of configurations. One with one (main) tuner and one with an additional tuner on the DW panel.

9.3.2 Block Diagram

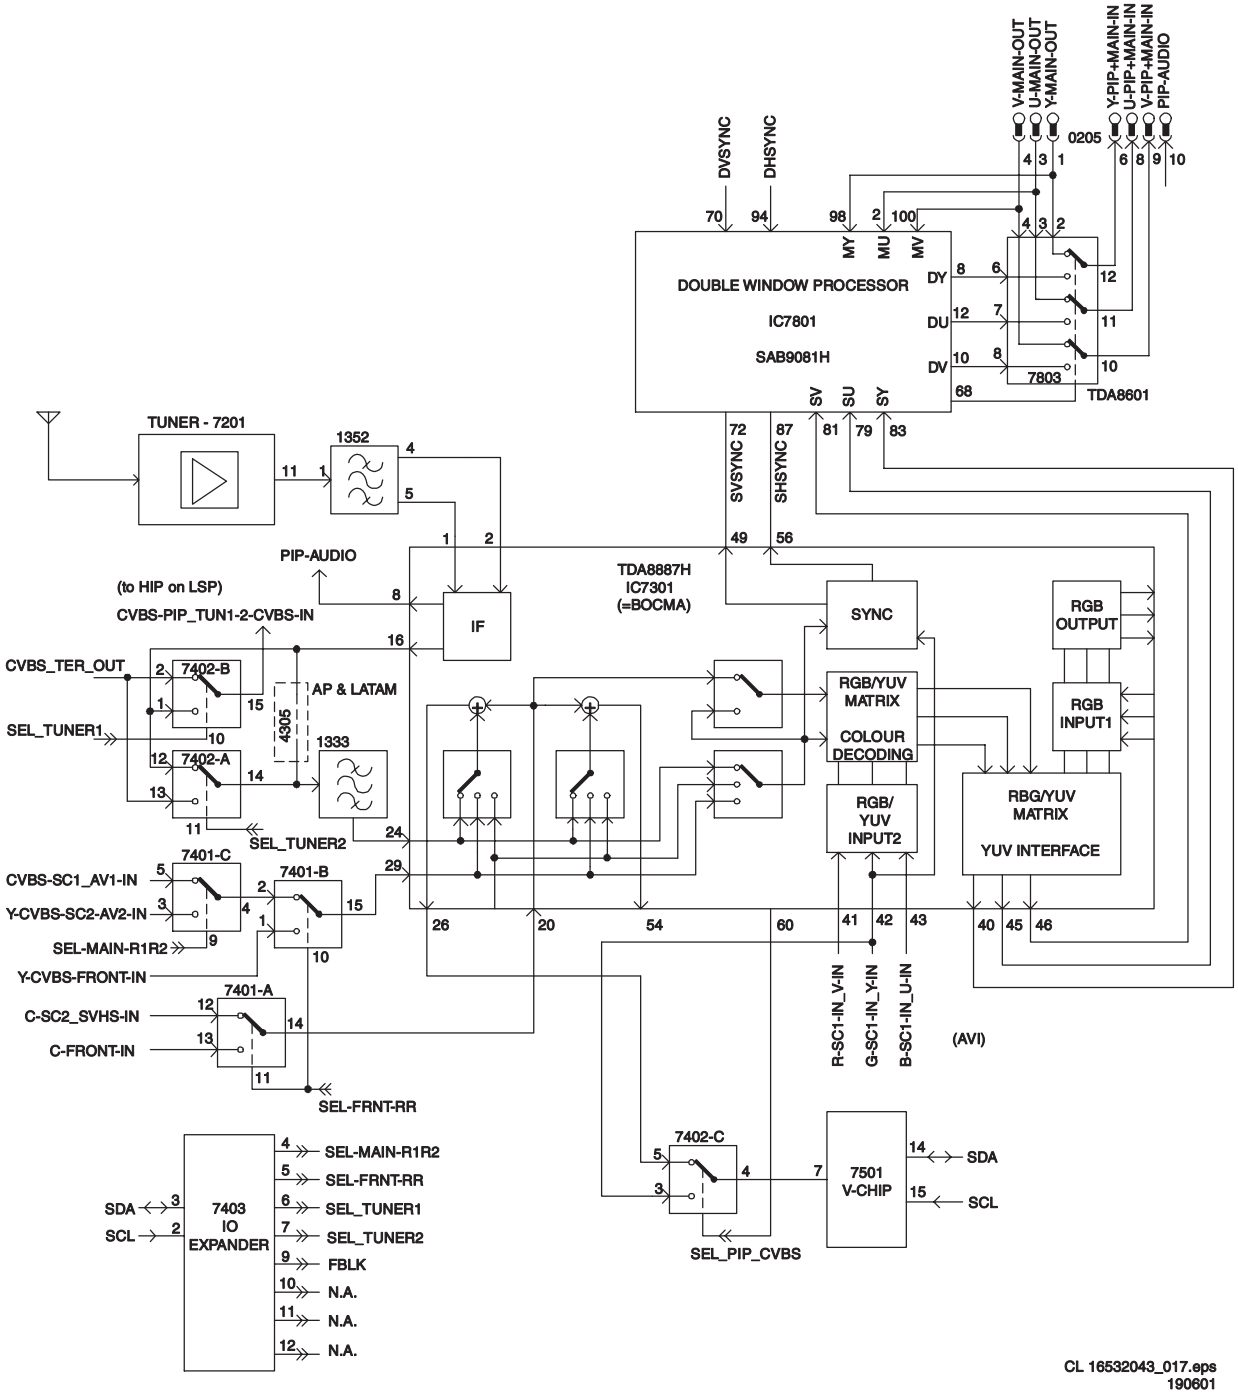

Figure 9-2 Double Window circuitry

9.3.3 IF and Video section

Basically the "IF and video" processing part is quite similar to the circuits used on the main board, except that it has a multi standard PIP processor. The processing in the DW module is performed by the TDA8887H BOCMA IC (in the set by the HIP IC).

One tuner versions

In order to display the external AV sources by the DW panel, a source selection circuit is incorporated on the panel. Three external AV sources are possible. The selection between the sources is performed by IC7401 (HEF4053).

Two tuner versions

The TV uses one RF input to the DWs tuner via a splitter. The tuner on the main board receives RF from the splitter. Due to this configuration, the main board tuner always processes the Main picture while the DW tuner always processes the Sub picture. If the picture between the two tuners needs to be swapped, then the tuners' RF frequencies are swapped.

Signal IF-TER from the tuner is fed to pin 1 and 2, IF circuits of TDA8887H IC7301 via SAW filter 1352. The AGC voltage for the tuner can be adjusted in the SAM tuner menu (2nd AGC).

Source selection
After IF demodulation, the CVBS-PIP-OUT is fed back to TDA888x pin 24 with or without video switching circuit comprises of 7402 (HEF4053). Due to this construction, two independent RF signal pictures can be selectively displayed on the CRTs screen. See table.

Table 9-1 Switching logic for Main and DW Picture

SEL-TUNER1(Pin 6 IC7403)	SEL TUNER2 (Pin 7 IC7403)	Selected CVBS signals
0	0	Main = Tuner 1 DW/PIP = Tuner 2
0	1	Main = Tuner 1 DW/PIP = Tuner 1
1	0	Main = Tuner 2 DW/PIP = Tuner 2
1	1	Main = Tuner 2 DW/PIP = Tuner 1

The source signals are fed directly to video processor IC7301. The IC performs the source selection internally.
The video processor IC7301 decodes the CVBS at pin 24 or pin 29 into YC signals and further process it into YUV signal. Output is at pins 40, 45, and 46.
The PIP-AUDIO signal is fed to pin 47 of the audio demodulator MSP34xx on the SSB.

Note: When S-VHS is inserted from the rear, the AV2 source will be disabled. Likewise, when S-VHS is inserted from the side-AV.

9.3.4 DW/PIP processing

The SAB908x (IC7801) is a multi-standard PIP controller, which can be used in double window or PIP applications. The YUV signals from the video processor IC7301 are fed to pin 79, 81, and 83. The PIP controller will insert the YUV signals from IC7301 with reduced size into the main picture. The main picture YUV signals (50 Hz) are fed to pins 100, 2, and 98, respectively. These signals are used during the DW mode.

Inside IC7801, the conversion to the digital environment is done with ADCs. Processing and storage (1 MB DRAM) of the video data is done entirely in the digital domain. The conversion back to the analogue domain is done by DACs. Internal clocks are generated by PLLs, which lock on to the applied horizontal and vertical syncs from the main and sub pictures. The main picture syncs are applied to pin 70 (V) and pin 94 (H) and the sub picture syncs are applied to pin 72 (V) and pin 87 (H).
For DW mode, the main picture is compressed horizontally by a factor of two and fed directly to the output. After compression, a horizontal expansion of two is possible for the main picture. The sub picture is also compressed horizontally by a factor two, but is stored in memory before it is fed to the outputs.

Post-processed YUV signals are fed to the "fast switching" IC7803 (TDA8601 pins 6, 7, and 8). In normal operation (without DW), the main picture YUV signals (at pins 2, 3 and 4) are bypassed by IC7803, and returned back to the main video processor. When DW mode is active, the compressed YUV signals (main and sub pictures) are used and fed to the main video processor. During the PIP mode, only sub-picture YUV signals are used. The insertion control is made possible by a fast blanking signal from pin 68 of IC7801.

9.3.5 Power supplies

The power supplies used by the DW panel are from the main board 5 V, 8 V, and 33 V (for tuner only). IC7802 LM317T regulates the 5V to +3.3V, +3V, and +3VD. These voltages are mainly used by the DW processor circuitry. The 8V is mainly supplied to the IF + video processing circuitry (IC7301 TDA888x), and to fast switching IC7803.

9.4 Abbreviation list

2DNR	Spatial (2D) Noise Reduction
3DNR	Temporal (3D) Noise Reduction
AARA	Automatic Aspect Ratio Adaptation: algorithm that adapts aspect ratio to remove horizontal black bars; keeping up the original aspect ratio
ACI	Automatic Channel Installation: algorithm that installs TV sets directly from cable network by means of a predefined TXT page
ADC	Analogue to Digital Converter
AFC	Automatic Frequency Control: control signal used to tune to the correct frequency
AGC	Automatic Gain Control: algorithm that controls the video input of the feature-box
AM	Amplitude Modulation
ANR	Automatic Noise Reduction: one of the algorithms of Auto TV
AR	Aspect Ratio: 4 by 3 or 16 by 9
Artistic	See OTC 2.5: main processor
ASF	Auto Screen Fit: algorithm that adapts aspect ratio to remove horizontal black bars but without throwing away video information
ATV	See Auto TV
AUDIO_C	Audio Centre
AUDIO_L	Audio Left
AUDIO_R	Audio Right
AUDIO_SL	Audio Surround Left
AUDIO-SR	Audio surround right
AUDIO_SW	Audio Subwoofer
Auto TV	A hardware and software control system that measures picture content, and adapts image parameters in a dynamic way
BC-PROT	Protection signal to the uP for a too high Beam Current.
BG	System B and G
BLC-INFO	Black Current Info
B-SC1-IN	Blue SCART1 in
B-SC2-IN	Blue SCART2 in
B-TXT	Blue teletext
BOCMA	BiMOS One Chip Mid-end Architecture: integrated video and chroma decoder
CL	Constant Level: audio output to connect with an external amplifier
ComPair	Computer aided rePair
CRT	Cathode Ray Tube or picture tube
CSM	Customer Service Mode
CTI	Colour Transient Improvement: manipulates steepness of chroma transients
CVBS	Composite Video Blanking and Synchronisation
CVBS-TER	CVBS terrestrial
DAC	Digital to Analogue Converter
DBE	Dynamic Bass Enhancement: extra low frequency amplification
DC-filament	Filament supply voltage

DFU	Direction For Use: description for the end user
DNR	Digital Noise Reduction: noise reduction feature of the box
DPL	Dolby ProLogic
DSP	Digital Signal Processing
DST	Dealer Service Tool: special remote control designed for dealers to enter e.g. service mode
DVD	Digital Versatile Disc
DYN-FASE-COR	Dynamic phase correction, to correct the phase of the H-drive
Eagle	Feature box IC performing peaking, zooming and sub pixel LTI in both horizontal and vertical direction, CTI and other colour features
EHT	Extra High Tension
EHT-INFO	Extra High Tension information, used for contrast reduction, vertical and horizontal amplitude correction, beam current protection, and flash detection.
EPG	Electronic Program Guide: system used by broadcasters to transmit TV guide information (= NexTView)
EW	East West, related to horizontal deflection of the set
EW-DRIVE	The drive signal for the EW-transistor
EXT	External (source), entering the set via SCART or via cinches
FALCONIC	Feature box IC performing Digital Natural Motion, 3DNR, and vertical zoom and vertical peaking
FBL	Fast Blanking: DC signal accompanying RGB signals
FBL-PIP	The fast blanking signal for PIP
FBL-TXT	The fast blanking signal for TXT. It has a higher priority than FBL-PIP
FBSCO	Fixed Beam Current Switch Off, a 140 V dip detection to activate the black switch off circuit
FBX	Feature Box: part of small signal / separate module which contains 100 Hz processing, extra featuring and AutoTV algorithms (FBX6= based on PICNIC, FBX7= based on PICNIC and Eagle)
FDS	Full Dual Screen
FILAMENT	Filament of CRT
FLASH	Flash memory
FM	Field Memory or Frequency Modulation
G-TXT	Green teletext
GND-DRIVE	A separate ground for the line drive towards the line driver
HA50	Horizontal Acquisition 1fH: horizontal sync pulse coming out of the HIP
HD100	Horizontal Drive 2fH: horizontal sync pulse coming out of the feature-box
HD at HOME	A signal from the OTC, to switch the HOP to the Pixel Plus standard (75 Hz frame)
HFB	Horizontal Flyback Pulse: horizontal sync pulse from large signal deflection
HIP	High-end video Input Processor: video and chroma decoder of EM5E
HOP	High-end video Output Processor: video, sync, and geometry controller of
HP	Headphone
Interlaced	Scan mode where two fields are used to form one frame. Each field contains half the number of the total amount of lines. The fields are written in 'pairs', causing line flicker
Last Status	The settings last chosen by the customer, read, and stored in RAM or in the NVM. They are called at start-up of the set to configure it according the customers wishes
LDP	Line Deflection Protection signal, derived from the EW-current and voltage
LED	Light Emitting Diode
LINE DRIVE	Line drive signal (for the Line transistor)
LNA	Low Noise Adapter
LSP	Large signal panel
MSP	Multi-standard Sound Processor: ITT sound decoder of EM5E
MUTE	Mute-Line
NC	Not Connected
NVM	Non Volatile Memory: IC containing TV related data e.g. alignments
O/C	Open Circuit
ON/OFF LED	On/Off control signal for the LED
OSD	On Screen Display
OTC	On screen display Teletext and Control; also named Artistic
P50	Project 50 communication: protocol between TV and peripherals
PCB	Printed Circuit Board
PICNIC	Peripheral Integrated Combined Network IC: main IC for 100 Hz featuring and feature processing
PIP	Picture In Picture
Progressive Scan	Scan mode where all scan lines are displayed in one frame at the same time, creating a double vertical resolution.
PTP	Picture Tube Panel
RAM	Random Access Memory
R-TXT	Red teletext
RC	Remote Control
RC5 / RC6	Signal protocol from the remote control receiver
RESET	Reset signal
RGB-PIP	RGB-input for PIP
RGB-TXT	RGB-input for Teletext and OSD
RGB-VC	RGB-input to the Picture Tube Panel
ROM	Read Only Memory
SAM	Service Alignment Mode
SC	Sandcastle: two-level pulse derived from sync signals
S/C	Short Circuit
SCAVEM	Scan Velocity Modulation
SCL-F	Clock signal on fast I2C bus
SD	Standard Definition
SDA-F	Data signal on fast I2C bus
SIF	Sound Intermediate Frequency
SIMM	80-fold connector between LSP and SSB
SNERT	Synchronous No parity Eight bit Reception and Transmit
SSB	Small Signal Board
STBY	Standby
SW	Subwoofer
TXT	Teletext
TXT-DS	Teletext Dual Screen
TXT-KILL	To kill the TXT picture to insert a PIP. It has a higher priority than FBL-TXT.
uP	Microprocessor
U100	U from Feature Box
V100	V from Feature Box
VA50	Vertical Acquisition 1Fh
VBAT	Main supply for deflection (mostly 141 V)
VD100	Vertical Drive 2fh: vertical sync pulse from deflection
VDPOS	One of the symmetrical drive signals for the DC frame output stage.

VDNEG	One of the symmetrical drive signals for the DC frame output stage.
VDS	Virtual Dolby Surround
VFB	Vertical Flyback Pulse: vertical sync pulse coming from the feature box
VL	Variable Level out: processed audio output towards external amplifier
WYSIWYR	What You See Is What You Record: record selection that follows main picture and sound
X-RAY-PROT	A protection signal for too high X-ray radiation
XTAL	Quartz crystal
Y100	Y from Feature Box
Y-OUT	Luminance-signal to HOP IC
YUV-Feat	The YUV input for the main picture, coming from the Feature box or the HIP

9.5 IC Data Sheets

In this paragraph, the internal block diagrams and pinning are given of ICs that are drawn as a 'black box' in the electrical diagrams (with the exception of 'memory' and 'logic' ICs).

9.5.1 Diagram B3c, T8F24EF (IC7724)

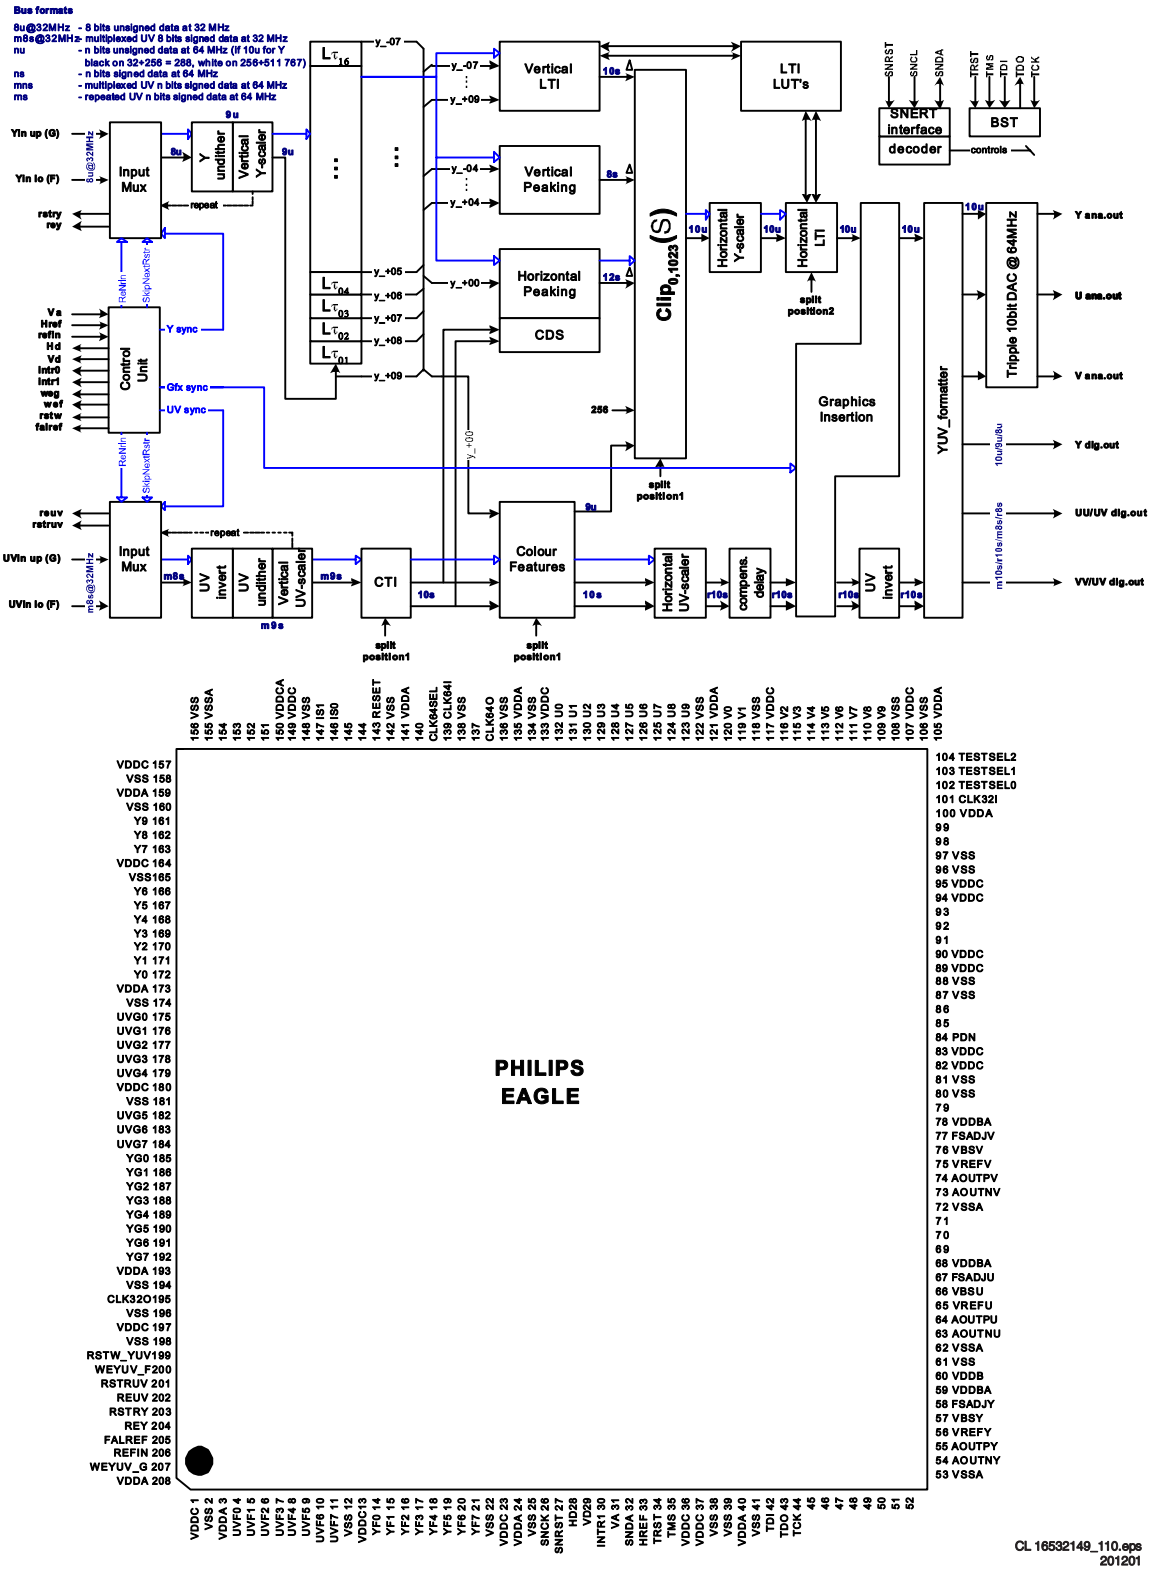

Figure 9-3 Internal Block Diagram and Pin Layout.

10. Spare Parts List

Large Signal Panel [A]

Various

0011	3104 308 78231	Transistor cooling clip
0020	4822 492 70789	Transistor clamp
0030	3104 304 23001	LSP chassisframe
0037	3104 304 24131	LOT bracket
0050	4822 466 93461	Insulating plate 20 X 25
0065	3104 304 22031	LOT spacer
0066	3104 304 23051	Conn. support EMGS
0067	3104 304 23061	Conn. part EMGS
0072	3104 304 24141	SSB bracket bottom
0080	4822 492 70789	Transistor clamp
0085	4822 701 13088	Transistor clamp
0086	4822 256 91879	Plastic holder
0090	4822 256 91879	Plastic holder
0091	4822 701 13088	Transistor clamp
0092	4822 256 91879	Plastic holder
0124	3104 300 40441	PT screw K40 X 30
0125	3104 304 90361	Insulating plate
0320	4822 255 41371	Transistor clamp
0341	4822 492 63524	Transistor clamp
0342	4822 492 63524	Transistor clamp
0395	4822 492 70789	Transistor clamp
0396	4822 492 70789	Transistor clamp
0505	4822 492 62076	Transistor clamp
1158	3104 328 13391	DAF + DC-shift assy
1158	3104 328 19401	DAF+DC-Shift assy 36"
1200⚠	3139 147 18141	Tuner UV1316T/A I X-3
1200	3139 147 19341	Tuner UV1318S/A I-3
1205	2422 025 17242	Connector SIMM 80p f
1417	4822 265 20723	Connector 2p m
1424	2422 025 11244	Connector 7p m
1491	4822 267 10973	Connector 1P m
1492	4822 267 10735	Connector 3p m
1498	2422 025 04849	Connector 2p m
1499	2422 025 04849	Connector 2p m
1501⚠	4822 070 35002	218005.(5A)
1502	4822 267 10774	2P male red
1503⚠	4822 070 12502	21702.5(2.5A)
1505	2422 025 16374	Connector 2p m
1511	4822 265 11253	Fuse holder 2p
1512	4822 265 11253	Fuse holder 2p
1520	3104 301 24181	Spring for Bracket
1521	3104 301 24181	Spring for Bracket
1522	4822 255 41371	Transistor clamp
1550⚠	2422 132 07411	Relay 1P 5V 5A
1590	4822 252 60151	Sparkgap DSP-501N-A21F
1601⚠	2422 086 10919	Fuse 65V 125mA
1620	4822 267 10735	Connector 3p m
1625	2422 025 16382	Connector 3p m
1693	4822 267 10676	Connector 1P
1735	4822 267 10565	Connector 4p
1737	2422 025 16382	Connector 3p m
1738	2422 025 16383	Connector 3p m
1901	4822 267 10771	Socket 2 x SCART
1902	4822 267 10982	Connector 2p
1933	4822 267 10565	Connector 4p
1935	4822 267 10734	Connector 5p m
1936	2422 025 12485	Connector 11p m
1937	4822 267 10557	Connector 10p
1940	2422 025 12485	Connector 11p m
1943	4822 267 10748	Connector 3p m
1945	4822 267 10735	Connector 3p m
1946	4822 265 41391	Connector 9p m
1948	2422 025 10768	Connector 3p m
1952	4822 267 10735	Connector 3p m
1953	4822 267 10735	Connector 3p m
1955	4822 267 10735	Connector 3p m
8000	3104 311 03272	Eht cable 640 mm
8000	3104 311 03721	Eht cable 820 mm
8192	3104 301 08351	Cable phono-phono 120mm
8193⚠	4822 320 20216	Focus cable 364 mm
8194⚠	4822 320 20189	Cable HT-focus 44cm Rd
8400	2422 025 16691	3P male
8417	3104 311 04561	Cable 2P3/400/2P3
8424	3104 311 02991	Cable 7P/560/7P Wh
8492	3104 311 05291	Cable 3P/400/3P
8498	3104 311 04531	Cable 2P/400/2P
8625	3104 311 03101	Cable 3P/560/3P Bk
8625	3104 311 03331	Cable 2P/560/3P
8625	3104 311 04741	Cable 3P/180/3P
8693	3104 311 03791	Wire 1P/480/4P
8737	3104 311 04682	Cable 2P3/680/2XPOSI
8933	3104 311 05091	Cable tree 09572 + ferrite
8936	3104 311 05271	Cable 11P/820/11P UL
8937	3104 301 09841	Cable 10P/340/10P Wh
8940	3104 311 04651	Cable 11P/140/11P
8940	3104 311 04761	Cable 11P/400/11P
8940	3104 311 05131	Cable 11P/480/11P
8948	3104 311 05021	Cable 3P/220/3P
8952	3104 311 05291	Cable 3P/400/3P
8955	3104 311 01211	Cable 3P/140/3P Wh UL

⊣⊢

2100	2252 811 95021	1nF 20% 250V
2100	4822 126 13841	1nF 20% 250V
2101	4822 121 51598	2.2nF 5% 400V
2102	4822 124 40248	10µF 20% 63V
2103	2020 552 94427	100pF 5% 50v 0603
2104	4822 123 14025	2200µF 20% 16V
2105	2020 552 94427	100pF 5% 50v 0603
2106	4822 126 13751	47nF 10% 63V
2107	4822 121 43855	3.3nF 5% 400V
2108	4822 121 70162	10nF 5% 400V
2109	4822 126 14472	1µF 10% 10V 0805
2110	4822 126 14472	1µF 10% 10V 0805
2111	4822 121 43526	47nF 5% 250V
2112	5322 126 11583	10nF 10% 50V 0603
2114	2222 338 23104	100nF 20% 275V
2114	4822 121 10711	100nF 20% 275V
2115	4822 124 40764	22µF 100 V
2116	4822 126 13682	100pF 5% 1kV
2118	4822 124 80061	1000µF 20% 25V
2119	4822 123 14025	2200µF 20% 16V
2120	4822 126 11524	1.5 nF 10% 1KV
2126	4822 123 14025	2200µF 20% 16V
2130	5322 126 11583	10nF 10% 50V 0603
2131	4822 126 13881	470pF 5% 50V
2140	4822 124 40248	10µF 20% 63V
2141	4822 124 40248	10µF 20% 63V
2144	4822 126 14472	1µF 10% 10V 0805
2145	4822 126 13881	470pF 5% 50V
2147	3198 017 31530	15nF 50V 0603
2148	4822 126 10206	2.2nF 10% 500V
2149	4822 126 14472	1µF 10% 10V 0805
2150	5322 126 11583	10nF 10% 50V 0603
2152	4822 121 70162	10nF 5% 400V
2154	4822 126 14549	33nF 16V 0603
2200	4822 124 40248	10µF 20% 63V
2201	4822 126 13879	220nF 20% 16V
2202	4822 126 13473	220nF 80-20% 50V
2203	4822 124 80195	470µF 20% 10V
2400	4822 124 11575	47µF 20% 160V
2401	4822 121 42077	6.8nF 10% 400V
2402	2020 012 93596	22µF 20% 250V
2402	2020 012 93771	33µF 20% 250V
2402	4822 124 12373	47µF 20% 250V
2403	2238 916 15641	22nF 10% 25V 0603
2403	4822 126 14494	22nF 10% 25V 0603
2404	2238 916 15641	22nF 10% 25V 0603
2404	4822 126 14494	22nF 10% 25V 0603
2412	3198 024 44730	47nF 50V 0603
2413	4822 124 12255	10µF 20% 50V
2414	3198 024 44730	47nF 50V 0603
2415	4822 126 13883	220pF 5% 50V
2417	4822 126 14076	220nF 25V. 20%
2419	4822 126 14237	470pF 10% R 2kV
2420	4822 121 70581	1.5nF 5% 2kV
2420	4822 121 70584	1,8nF 5% 2KV
2420	4822 121 70595	1.2nF 5% 2kV
2421	2022 333 00091	680nF 10% 250V
2421	2038 301 00312	1.2µF 5% 250V
2425	4822 121 10526	9.1nF 5% 2kV
2425	4822 121 70435	10nF 5% 2kV
2426	2222 375 90345	20nF 5% 630V
2426	4822 121 10653	22nF 5% 630V
2426	4822 121 10658	24nF 5% 630V
2430	4822 126 10206	2.2nF 10% 500V
2431	4822 126 10206	2.2nF 10% 500V
2433	2022 333 00163	360nF 5% 250V
2433	2222 479 90022	430nF 5% 250V
2433	4822 121 10518	390nF 5% 250V
2433	4822 121 42634	560nF 5% 250V
2440	2020 552 96448	1µF 10% 16V
2441	5322 122 32654	22nF 10% 63V
2442	5322 122 31866	6.8nF 10% 63V
2443	9965 000 09661	470pF 50V 10%
2445	5322 122 32654	22nF 10% 63V
2448	5322 122 32268	470pF 5% 63V
2450	5322 121 42578	100nF 5% 250V
2451	2020 012 93757	1000µF 20% 10V
2454	3198 017 31530	15nF 50V 0603
2455	5322 126 11578	1nF 10% 50V 0603
2457	2020 552 96699	15nF 5% 25V
2457	2020 552 96804	15nF 10% 50V 0805
2458	4822 126 14241	330pF 50V 0603
2460	4822 124 81144	1000µF 16V
2461	4822 122 31169	1.5nF 10% 500V
2462	4822 124 80061	1000µF 20% 25V
2463	4822 122 31177	470pF 10% 500V
2464	4822 124 80061	1000µF 20% 25V
2465	4822 122 31177	470pF 10% 500V
2466	2238 586 59812	100nF 20-80% 50V 0603
2468	4822 122 31177	470pF 10% 500V
2469	4822 126 13599	3.3nF 10% 500V
2480	5322 126 11582	6.8nF 10% 63V
2482	3198 017 34730	47nF 16V 0603
2483	4822 126 14238	2.2nF 50V 0603
2483	5322 126 11579	3.3nF 10% 63V
2490	2020 021 91773	100µF 20% 10V
2491	4822 124 81151	22µF 50V
2492	4822 124 23432	100µF 20% 10V
2493	5322 126 11579	3.3nF 10% 63V
2494	2238 780 15654	220nF 10% 16V
2495	2238 780 15654	220nF 10% 16V
2497	4822 126 12105	33nF 5% 50V
2499	5322 126 11579	3.3nF 10% 63V
2501	4822 126 14053	1nF 10% 2kV
2503	5322 121 42489	33nF 5% 250V
2504	2238 916 15641	22nF 10% 25V 0603
2504	4822 126 14494	22nF 10% 25V 0603
2505	2020 554 90173	2.2nF 20% 250V
2505	2252 811 95018	2.2nF 20% 250V
2506	5322 121 42386	100nF 5% 63V
2507	2222 338 22474	470nF 20% 275V
2507	4822 126 13589	470nF 275V
2508	4822 124 11913	22nF 20% 275V
2509	4822 124 11913	22nF 20% 275V
2510	4822 126 14053	1nF 10% 2kV
2511	4822 124 12417	2200µF 20% 25V
2512	4822 124 12417	2200µF 20% 25V
2513	4822 126 13881	470pF 5% 50V
2514	4822 126 14238	2.2nF 50V 0603
2515	4822 124 80096	47µF 200V
2516	2020 024 90743	220µF 20% 400V
2516	4822 124 12415	220µF 20% 400V
2517	4822 121 70162	10nF 5% 400V
2518	4822 122 31211	100pF 10% 500V
2519	4822 126 10206	2.2nF 10% 500V
2520	2222 338 23104	100nF 20% 275V
2520	4822 121 10711	100nF 20% 275V
2522	4822 126 10206	2.2nF 10% 500V
2525	4822 126 14247	1.5nF 50V 0603
2528	4822 126 14472	1µF 10% 10V 0805
2530	4822 126 14472	1µF 10% 10V 0805
2531	4822 122 31177	470pF 10% 500V
2535	4822 126 13193	4.7nF 10% 63V
2537	4822 124 11913	22nF 20% 275V
2538	4822 122 33177	10nF 20% 50V
2540	4822 124 40248	10µF 20% 63V
2541	4822 122 31211	100pF 10% 500V
2542	4822 124 80061	1000µF 20% 25V
2543	4822 124 80061	1000µF 20% 25V
2544	4822 126 14238	2.2nF 50V 0603
2601	2238 586 59812	100nF 20-80% 50V 0603
2603	4822 126 13883	220pF 5% 50V
2604	4822 126 13473	220nF 80-20% 50V
2605	4822 126 13883	220pF 5% 50V
2620	4822 126 13473	220nF 80-20% 50V
2621	2238 586 59812	100nF 20-80% 50V 0603
2622	4822 124 40255	100µF 20% 63V
2623	4822 126 14238	2.2nF 50V 0603
2624	4822 121 51319	1µF 10% 63V
2625	4822 121 51319	1µF 10% 63V
2627	5322 124 40641	10µF 20% 100V
2628	4822 124 40255	100µF 20% 63V
2630	4822 126 14491	2.2µF -20+80% 10V 0805
2631	4822 126 14491	2.2µF -20+80% 10V 0805
2633	5322 126 11579	3.3nF 10% 63V
2635	2238 586 59812	100nF 20-80% 50V 0603
2642	4822 124 40255	100µF 20% 63V
2653	2238 586 15628	2.7nF 10% 50V 0603
2653	5322 126 11579	3.3nF 10% 63V
2656	2238 916 15641	22nF 10% 25V 0603
2656	4822 126 14494	22nF 10% 25V 0603
2657	2238 916 15641	22nF 10% 25V 0603
2657	4822 126 14494	22nF 10% 25V 0603
2659	2238 916 15641	22nF 10% 25V 0603
2659	4822 126 14494	22nF 10% 25V 0603
2660	5322 126 11578	1nF 10% 50V 0603
2702	3198 016 31020	1nF 25V 0603
2704	3198 016 31020	1nF 25V 0603
2705	4822 126 13482	470nF 80/20% 16V
2706	4822 126 14585	100nF 10% 50V

2707	4822 126 14076	220nF 25V. 20%
2708	4822 126 14076	220nF 25V. 20%
2709	4822 126 13881	470pF 5% 50V
2710	4822 126 13881	470pF 5% 50V
2711	3198 016 31020	1nF 25V 0603
2712	2020 552 96683	220nF 10% 50V
2713	4822 126 14076	220nF 25V. 20%
2714	4822 126 14549	33nF 16V 0603
2715	3198 016 31020	1nF 25V 0603
2716	4822 126 14241	330pF 50V 0603
2717	5322 121 42498	680nF 5% 63V
2718	2222 867 15339	33pF 5% 50V 0603
2719	3198 016 31020	1nF 25V 0603
2720	4822 126 14076	220nF 25V. 20%
2721	4822 126 13881	470pF 5% 50V
2722	4822 126 13881	470pF 5% 50V
2723	3198 016 31020	1nF 25V 0603
2724	2020 552 96683	220nF 10% 50V
2725	3198 016 31020	1nF 25V 0603
2726	4822 126 14549	33nF 16V 0603
2727	3198 016 31020	1nF 25V 0603
2728	4822 126 14241	330pF 50V 0603
2729	5322 121 42498	680nF 5% 63V
2740	4822 121 51252	470nF 5% 63V
2741	2222 867 15339	33pF 5% 50V 0603
2742	4822 126 14241	330pF 50V 0603
2743	4822 126 12105	33nF 5% 50V
2744	4822 126 12105	33nF 5% 50V
2745	4822 126 14241	330pF 50V 0603
2746	3198 016 31020	1nF 25V 0603
2747	4822 126 13881	470pF 5% 50V
2748	2020 552 96683	220nF 10% 50V
2749	2020 552 95447	2.2µF 20% 16V
2750	2238 586 59812	100nF 20-80% 50V 0603
2751	4822 126 14585	100nF 10% 50V
2753	4822 126 14076	220nF 25V. 20%
2754	2020 552 95447	2.2µF 20% 16V
2755	3198 016 31020	1nF 25V 0603
2756	4822 126 13881	470pF 5% 50V
2757	2020 552 96683	220nF 10% 50V
2758	5322 121 42498	680nF 5% 63V
2759	5322 126 10511	1nF 5% 50V
2760	5322 122 32268	470pF 5% 63V
2761	4822 126 13881	470pF 5% 50V
2762	4822 126 14076	220nF 25V. 20%
2763	4822 126 14076	220nF 25V. 20%
2777	2020 552 96684	470nF 10% 25V
2778	4822 124 41751	47µF 20% 50V
2779	2020 552 96684	470nF 10% 25V
2780	2020 552 96684	470nF 10% 25V
2781	2020 552 96684	470nF 10% 25V
2782	2020 552 96684	470nF 10% 25V
2783	2020 552 96684	470nF 10% 25V
2784	2020 552 96684	470nF 10% 25V
2785	2020 552 96684	470nF 10% 25V
2786	2238 916 15641	22nF 10% 25V 0603
2786	4822 126 14494	22nF 10% 25V 0603
2787	2238 916 15641	22nF 10% 25V 0603
2791	2020 552 96684	470nF 10% 25V
2792	2020 552 96684	470nF 10% 25V
2914	4822 124 40248	10µF 20% 63V
2915	4822 124 12255	10µF 20% 50V
2917	4822 126 14585	100nF 10% 50V
2929	4822 126 13879	220nF 20% 16V
2930	2020 552 93683	1.2nF 10% 50V 0603
2931	2020 552 93683	1.2nF 10% 50V 0603
2940	4822 124 23432	100µF 20% 10V
2941	4822 126 14585	100nF 10% 50V
2942	4822 126 14585	100nF 10% 50V
2943	4822 126 14585	100nF 10% 50V
2944	4822 126 13879	220nF 20% 16V
2945	4822 126 14491	2.2µF -20+80% 10V 0805
2946	4822 126 14491	2.2µF -20+80% 10V 0805
2947	2020 021 90141	4.7µF 20% 50V
2948	4822 124 23432	100µF 20% 10V
2949	4822 124 23432	100µF 20% 10V
2950	5322 126 11583	10nF 10% 50V 0603
2951	5322 126 11583	10nF 10% 50V 0603
2952	5322 126 11578	1nF 10% 50V 0603
2985	4822 126 14315	390pF 5% 50V 0603
2987	5322 122 31863	330pF 5% 63V
2989	5322 122 31863	330pF 5% 63V
2990	5322 122 31863	330pF 5% 63V
2991	5322 122 32531	100pF 5% 50V
2992	5322 122 31863	330pF 5% 63V
2993	5322 122 32531	100pF 5% 50V
2994	5322 122 31863	330pF 5% 63V
2995	5322 122 31863	330pF 5% 63V
2996	5322 122 31863	330pF 5% 63V
2997	5322 122 31863	330pF 5% 63V
2998	5322 122 32531	100pF 5% 50V
2999	5322 122 32531	100pF 5% 50V

-WW-

3101	4822 053 20106	10M 5% 0,25W
3102	4822 050 21002	1kΩ 1% 0.6W
3103	4822 050 21002	1kΩ 1% 0.6W
3104	4822 116 52195	47Ω 5% 0.5W
3105	4822 050 11002	1k 1% 0.4W
3106	4822 116 52249	1k8 5% 0.5W
3106	4822 116 52256	2k2 5% 0.5W
3107	4822 116 52249	1k8 5% 0.5W
3107	4822 116 52256	2k2 5% 0.5W
3108	2122 101 02083	1.5Ω 5% 0,5W
3108	4822 116 80676	1Ω5 5% 0.5W
3111	4822 053 10152	1k5 5% 1W
3113	4822 116 52186	22Ω 5% 0.5W
3114	4822 116 83872	220Ω 5% 0.5W
3115	4822 116 52257	22kΩ 5% 0.5W
3116	4822 116 52251	18kΩ 5% 0.5W
3116	4822 116 52257	22kΩ 5% 0.5W
3117	4822 116 52195	47Ω 5% 0.5W
3118	2122 101 02083	1.5Ω 5% 0,5W
3118	4822 116 80676	1Ω5 5% 0.5W
3120	4822 051 20109	10Ω 5% 0.1W
3123	4822 051 30109	10Ω 5% 0.062W
3124	4822 116 52199	68Ω 5% 0.5W
3125	4822 116 52182	15Ω 5% 0.5W
3126	4822 050 21003	10kΩ 1% 0.6W
3127	4822 116 52289	5k6 5% 0.5W
3130	4822 051 30479	47Ω 5% 0.062W
3131	4822 051 30471	470Ω 5% 0.062W
3132	4822 051 20479	47Ω 5% 0.1W
3133	4822 117 10834	47kΩ 1% 0.1W
3134	4822 051 30102	1kΩ 5% 0.062W
3135	4822 051 30101	100Ω 5% 0.062W
3136	4822 051 30109	10Ω 5% 0.062W
3137	4822 050 24702	4k7 1% 0.6W
3140	4822 051 20223	22kΩ 5% 0.1W
3140	4822 117 10837	100kΩ 1% 0.1W
3141	4822 116 52263	2k7 5% 0.5W
3142	4822 051 30332	3.3kΩ 5% 0.062W
3143	4822 051 30101	100Ω 5% 0.062W
3144	4822 116 83883	470Ω 5% 0.5W
3150	4822 117 11373	100Ω 1% 0805
3151	4822 051 30109	10Ω 5% 0.062W
3152	4822 051 30102	1kΩ 5% 0.062W
3153	4822 051 20472	4.7kΩ 5% 0.1W
3155	4822 051 30101	100Ω 5% 0.062W
3156	5322 117 13017	100Ω 1% 0.063W 0603
3157	4822 051 30103	10kΩ 5% 0.062W
3158	5322 117 13021	47Ω 1% 0.063W 0603
3159	4822 051 30103	10kΩ 5% 0.062W
3160	4822 051 30102	1kΩ 5% 0.062W
3161	4822 052 10221	220Ω 5% 0.33W
3162	4822 116 83883	470Ω 5% 0.5W
3164	4822 117 13632	100kΩ 1% 0603 0.62W
3165	4822 051 30331	330Ω 5% 0.062W
3168	4822 051 20472	4.7kΩ 5% 0.1W
3170	4822 116 52291	56kΩ 5% 0.5W
3200	4822 117 11373	100Ω 1% 0805
3201	4822 117 11373	100Ω 1% 0805
3210	4822 051 30102	1kΩ 5% 0.062W
3211	4822 051 30222	2.2kΩ 5% 0.062W
3212	4822 051 30101	100Ω 5% 0.062W
3213	4822 116 52182	15Ω 5% 0.5W
3250	4822 051 20223	22kΩ 5% 0.1W
3261	4822 117 11373	100Ω 1% 0805
3262	4822 117 11373	100Ω 1% 0805
3400	4822 052 11108	1Ω 5% 0.5W
3401	2120 105 93473	27Ω 5% 3W
3402	4822 053 10121	120Ω 5% 1W
3403	4822 116 52175	100Ω 5% 0.5W
3404	4822 051 30471	470Ω 5% 0.062W
3406	4822 117 11373	100Ω 1% 0805
3407	4822 051 30103	10kΩ 5% 0.062W
3409	4822 050 11002	1k 1% 0.4W
3410	4822 051 20479	47Ω 5% 0.1W
3411	2122 101 02111	39Ω 5% 0,5W
3411	4822 116 52193	39Ω 5% 0.5W
3412	4822 117 11817	1.2kΩ 1% 1/16W
3414	4822 051 30331	330Ω 5% 0.062W
3415	3198 012 31590	15Ω 5% 3W
3417	4822 116 52176	10Ω 5% 0.5W
3418	2312 915 16803	68K 1% 0,5W
3418	4822 050 25603	56k 1% 0.6W
3419	4822 051 30474	470kΩ 5% 0.062W
3420	4822 051 30332	3.3kΩ 5% 0.062W
3421	4822 051 30474	470kΩ 5% 0.062W
3422	4822 051 30332	3.3kΩ 5% 0.062W
3423	4822 053 10688	6Ω8 5% 1W
3425	4822 116 52176	10Ω 5% 0.5W
3426	4822 116 52176	10Ω 5% 0.5W
3427	4822 051 30105	1MΩ 5% 0.062W

3427	4822 051 30334	330kΩ 5% 0.062W
3427	4822 051 30684	680kΩ 5% 0.062W
3429	3198 021 32250	2M2 5% 0603
3429	4822 051 30105	1MΩ 5% 0.062W
3431	2306 207 03151	150Ω 5% 0.5W
3437	4822 051 20109	10Ω 5% 0.1W
3440	4822 051 30102	1kΩ 5% 0.062W
3441	4822 051 30223	22kΩ 5% 0.062W
3442	4822 051 30474	470kΩ 5% 0.062W
3443	4822 051 30684	680kΩ 5% 0.062W
3444	4822 051 20108	1Ω 5% 0.1W
3447	4822 117 11373	100Ω 1% 0805
3449	4822 052 10101	100Ω 5% 0.33W
3450	4822 050 21003	10kΩ 1% 0.6W
3450	4822 116 52238	12kΩ 5% 0.5W
3451	4822 050 21003	10kΩ 1% 0.6W
3454	4822 051 20108	1Ω 5% 0.1W
3455	4822 117 12902	8.2kΩ 1% 0.063W 0603
3456	4822 117 12903	1.8kΩ 1% 0.063W 0603
3457	4822 051 30152	1.5kΩ 5% 0.062W
3458	4822 051 30471	470Ω 5% 0.062W
3459	4822 051 30272	2.7kΩ 5% 0.062W
3460	4822 052 10108	1Ω 5% 0.33W
3461	4822 052 10108	1Ω 5% 0.33W
3462	4822 052 11108	1Ω 5% 0.5W
3463	4822 052 11108	1Ω 5% 0.5W
3464	4822 052 11108	1Ω 5% 0.5W
3465	4822 052 11108	1Ω 5% 0.5W
3466	4822 051 30472	4.7kΩ 5% 0.062W
3467	4822 117 13632	100kΩ 1% 0603 0.62W
3472	4822 051 30393	39kΩ 5% 0.062W
3474	4822 051 30563	56kΩ 5% 0.062W
3475	4822 051 30472	4.7kΩ 5% 0.062W
3476	4822 116 83874	220k 5% 0.5W
3478	4822 116 52175	100Ω 5% 0.5W
3479	4822 052 10478	4Ω7 5% 0.33W
3480	4822 052 10478	4Ω7 5% 0.33W
3480	4822 052 10688	6Ω8 5% 0.33W
3481	2322 750 61001	100Ω 5% 1206
3482	4822 051 30221	220Ω 5% 0.062W
3483	4822 117 12903	1.8kΩ 1% 0.063W 0603
3485	4822 051 30471	470Ω 5% 0.062W
3486	2120 108 94004	7k5 1% 0603
3486	2322 704 67502	7.5K 1% 0,5W
3487	4822 117 12902	8.2kΩ 1% 0.063W 0603
3487	5322 117 13056	8.2K 1% 0.063W 0603
3488	4822 050 21005	1MΩ 1% 0.6W
3488	4822 050 26804	680k 1% 0.6W
3489	4822 051 30103	10kΩ 5% 0.062W
3490	4822 051 30332	3.3kΩ 5% 0.062W
3491	4822 117 12925	47kΩ 1% 0.063W 0603
3492	4822 116 52175	100Ω 5% 0.5W
3493	4822 050 21504	150kΩ 1% 0.6W
3496	4822 051 30272	2.7kΩ 5% 0.062W
3497	4822 051 30333	33kΩ 5% 0.062W
3501	4822 116 83872	220Ω 5% 0.5W
3504	4822 051 30222	2.2kΩ 5% 0.062W
3505	4822 116 52257	22kΩ 5% 0.5W
3506	4822 051 30562	5.6kΩ 5% 0.063W 0603
3507	4822 050 21604	160kΩ 1% 0.6W
3508	4822 116 52182	15Ω 5% 0.5W
3509⚠	2122 550 00158	VDR 1mA 612V
3510	4822 117 11454	820Ω 1% 0,1W
3511	4822 053 11222	2k2 5% 2W
3512	4822 117 12891	220kΩ 1% 0.063W 0603
3513	4822 116 52272	330k 5% 0.5W
3514	2322 193 53397	0.39Ω 5% 0.6W
3515	2322 193 53397	0.39Ω 5% 0.6W
3517	4822 117 10834	47kΩ 1% 0.1W
3518	4822 116 52245	150kΩ 5% 0.5W
3519	4822 051 30102	1kΩ 5% 0.062W
3520	4822 053 11333	33k 5% 2W
3521	4822 053 21475	4M7 5% 0,5W
3522	4822 117 11507	6.8kΩ 1% 0.1W
3523	4822 051 20105	1MΩ 5% 0.1W
3524	4822 051 30333	33kΩ 5% 0.062W
3525	4822 051 30479	47Ω 5% 0.062W
3526	4822 116 83303	0.1Ω 2W
3527	4822 117 11951	2kΩ 1% 0.1W
3528	4822 051 30103	10kΩ 5% 0.062W
3529	4822 051 30472	4.7kΩ 5% 0.062W
3530	4822 051 30102	1kΩ 5% 0.062W
3531	4822 117 11507	6.8kΩ 1% 0.1W
3532	4822 117 12925	47kΩ 1% 0.063W 0603
3533	4822 116 52182	15Ω 5% 0.5W
3534	4822 117 12925	47kΩ 1% 0.063W 0603
3535	4822 051 30479	47Ω 5% 0.062W
3536	4822 052 10102	1k 5% 0.33W
3537	4822 116 52182	15Ω 5% 0.5W
3540	4822 050 23303	33k 1% 0.6W
3543	4822 050 24708	4Ω7 1% 0.6W
3547	4822 051 30008	Jumper 0603
3549	5322 117 13039	220K 1% 0.063W 0603
3550⚠	2122 663 00018	PTC 4.7Ω 20%

3550⚠	2322 662 96858	PTC 276V 4.5Ω 20%
3551	4822 116 83872	220Ω 5% 0.5W
3552	4822 051 30222	2.2kΩ 5% 0.062W
3553	4822 051 30103	10kΩ 5% 0.062W
3610	4822 051 30223	22kΩ 5% 0.062W
3611	4822 051 30222	2.2kΩ 5% 0.062W
3620	4822 050 21808	1.8Ω 1% 0,6W
3620	4822 116 80176	1Ω 5% 0.5W
3620	4822 116 80676	1Ω5 5% 0.5W
3621	4822 116 80176	1Ω 5% 0.5W
3621	4822 116 80676	1Ω5 5% 0.5W
3622	2122 101 02083	1.5Ω 5% 0,5W
3622	4822 116 80176	1Ω 5% 0.5W
3622	4822 116 81039	1.8Ω 5% 0.5W
3623	4822 116 52251	18kΩ 5% 0.5W
3623	4822 116 52257	22kΩ 5% 0.5W
3624	4822 052 10158	1Ω5 5% 0.33W
3625	4822 050 15609	56Ω 1% 0.4W
3625	4822 053 10121	120Ω 5% 1W
3625	4822 116 52219	330Ω 5% 0.5W
3625	4822 116 83872	220Ω 5% 0.5W
3626	4822 050 15609	56Ω 1% 0.4W
3626	4822 116 52199	68Ω 5% 0.5W
3626	4822 116 52219	330Ω 5% 0.5W
3626	4822 116 80176	1Ω 5% 0.5W
3626	4822 116 83872	220Ω 5% 0.5W
3627	4822 051 20223	22kΩ 5% 0.1W
3630	4822 051 30333	33kΩ 5% 0.062W
3631	4822 051 30222	2.2kΩ 5% 0.062W
3632	4822 051 30393	39kΩ 5% 0.062W
3633	4822 051 30563	56kΩ 5% 0.062W
3634	4822 116 83882	39k 5% 0.5W
3635	4822 116 52219	330Ω 5% 0.5W
3636	4822 051 30223	22kΩ 5% 0.062W
3637	4822 051 30103	10kΩ 5% 0.062W
3638	4822 051 30474	470kΩ 5% 0.062W
3639	4822 051 30563	56kΩ 5% 0.062W
3640	4822 051 30222	2.2kΩ 5% 0.062W
3641	4822 116 83883	470Ω 5% 0.5W
3642	4822 101 11193	47k 30% 0.1W
3643	4822 051 30334	330kΩ 5% 0.062W
3644	4822 051 30221	220Ω 5% 0.062W
3645	4822 116 52245	150kΩ 5% 0.5W
3646	4822 117 12925	47kΩ 1% 0.063W 0603
3647	4822 051 20228	2.2Ω 5% 0.1W
3649	4822 051 30103	10kΩ 5% 0.062W
3653	4822 051 20223	22kΩ 5% 0.1W
3654	4822 051 30472	4.7kΩ 5% 0.062W
3655	4822 051 30123	12kΩ 5% 0.062W
3656	4822 117 11817	1.2kΩ 1% 1/16W
3657	4822 051 30223	22kΩ 5% 0.062W
3658	4822 051 30223	22kΩ 5% 0.062W
3659	4822 051 30222	2.2kΩ 5% 0.062W
3660	4822 051 30562	5.6kΩ 5% 0.063W 0603
3661	4822 116 52206	120Ω 5% 0.5W
3661	4822 116 52219	330Ω 5% 0.5W
3661	4822 116 83883	470Ω 5% 0.5W
3662	4822 051 30152	1.5kΩ 5% 0.062W
3665	4822 051 30479	47Ω 5% 0.062W
3681	4822 116 52207	1k2 5% 0.5W
3682	4822 117 13632	100kΩ 1% 0603 0.62W
3683	4822 051 30103	10kΩ 5% 0.062W
3684	4822 051 30682	6.8kΩ 5% 0.062W
3685	4822 051 30273	27kΩ 5% 0.062W
3686	4822 051 30563	56kΩ 5% 0.062W
3687	4822 116 52207	1k2 5% 0.5W
3688	4822 051 20684	680kΩ 5% 0.1W
3689	4822 050 11002	1k 1% 0.4W
3690	4822 051 30109	10Ω 5% 0.062W
3701	4822 051 30103	10kΩ 5% 0.062W
3702	4822 051 30682	6.8kΩ 5% 0.062W
3703	4822 051 30333	33kΩ 5% 0.062W
3703	4822 051 30472	4.7kΩ 5% 0.062W
3704	4822 117 10833	10kΩ 1% 0.1W
3705	4822 051 20828	8.2Ω 5% 0.1W
3706	2322 704 65102	5.1kΩ 1% 0603
3707	4822 051 30683	68kΩ 5% 0.062W
3708	4822 051 30563	56kΩ 5% 0.062W
3709	4822 117 11503	220Ω 1% 0.1W
3710	4822 051 30223	22kΩ 5% 0.062W
3711	4822 050 11204	120k 1% 0.4W
3711	4822 050 21204	120KΩ 1% 0,6W
3712	4822 117 12706	10kΩ 1% 0.063W 0603
3713	4822 116 83884	47k 5% 0.5W
3714	4822 117 12925	47kΩ 1% 0.063W 0603
3715	4822 117 12925	47kΩ 1% 0.063W 0603
3716	4822 117 12925	47kΩ 1% 0.063W 0603
3717	4822 117 13632	100kΩ 1% 0603 0.62W
3718	4822 117 13632	100kΩ 1% 0603 0.62W
3719	4822 117 11503	220Ω 1% 0.1W
3720	4822 117 11503	220Ω 1% 0.1W
3721	2322 704 65102	5.1kΩ 1% 0603
3722	4822 051 30683	68kΩ 5% 0.062W
3723	4822 051 30563	56kΩ 5% 0.062W
3724	4822 117 11503	220Ω 1% 0.1W
3725	4822 051 30223	22kΩ 5% 0.062W
3726	4822 117 11503	220Ω 1% 0.1W
3727	4822 117 11503	220Ω 1% 0.1W
3728	4822 116 52234	100kΩ 5% 0,5W
3729	4822 117 10837	100kΩ 1% 0.1W
3730	4822 117 11503	220Ω 1% 0.1W
3731	4822 117 11503	220Ω 1% 0.1W
3732	4822 051 30223	22kΩ 5% 0.062W
3733	4822 051 30223	22kΩ 5% 0.062W
3734	4822 051 20124	120kΩ 5% 0.1W
3735	4822 051 30683	68kΩ 5% 0.062W
3736	4822 051 30563	56kΩ 5% 0.062W
3737	2322 704 65102	5.1kΩ 1% 0603
3738	4822 051 20828	8.2Ω 5% 0.1W
3739	4822 051 30683	68kΩ 5% 0.062W
3740	2322 704 65102	5.1kΩ 1% 0603
3741	2322 704 61243	12k4 1% 0603
3742	4822 051 30563	56kΩ 5% 0.062W
3743	4822 117 11449	2.2kΩ 5% 0.1W 0805
3744	4822 117 12891	220kΩ 1% 0.063W 0603
3745	4822 051 30102	1kΩ 5% 0.062W
3746	4822 051 30223	22kΩ 5% 0.062W
3748	4822 051 30008	Jumper 0603
3749	4822 116 83883	470Ω 5% 0.5W
3750	4822 117 11449	2.2kΩ 5% 0.1W 0805
3751	4822 117 11449	2.2kΩ 5% 0.1W 0805
3752	4822 117 11449	2.2kΩ 5% 0.1W 0805
3760	4822 117 12891	220kΩ 1% 0.063W 0603
3790	4822 051 30272	2.7kΩ 5% 0.062W
3791	4822 051 30272	2.7kΩ 5% 0.062W
3792	4822 051 30103	10kΩ 5% 0.062W
3793	4822 051 30103	10kΩ 5% 0.062W
3794	4822 051 30103	10kΩ 5% 0.062W
3795	4822 051 30103	10kΩ 5% 0.062W
3796	4822 051 30272	2.7kΩ 5% 0.062W
3797	4822 051 30272	2.7kΩ 5% 0.062W
3798	4822 051 30153	15kΩ 5% 0.062W
3903	4822 051 20561	560Ω 5% 0.1W
3904	4822 052 10688	6Ω8 5% 0.33W
3907	4822 051 20479	47Ω 5% 0.1W
3910	4822 117 12521	68Ω 1% 0.1W
3928	4822 051 30008	Jumper 0603
3938	4822 117 11373	100Ω 1% 0805
3939	4822 051 30103	10kΩ 5% 0.062W
3940	4822 051 20561	560Ω 5% 0.1W
3941	4822 052 10688	6Ω8 5% 0.33W
3942	4822 117 11373	100Ω 1% 0805
3943	4822 051 30103	10kΩ 5% 0.062W
3945	4822 117 12955	2.7kΩ 1% 0.1W 0805
3959	4822 117 10353	150Ω 1% 0.1W
3960	4822 117 10353	150Ω 1% 0.1W
3961	4822 117 10353	150Ω 1% 0.1W
3962	4822 117 10353	150Ω 1% 0.1W
3965	4822 117 10353	150Ω 1% 0.1W
3966	4822 117 10353	150Ω 1% 0.1W
3967	4822 116 52201	75Ω 5% 0.5W
3968	4822 116 52201	75Ω 5% 0.5W
3969	4822 051 20008	Jumper 0805
3970	4822 051 20008	Jumper 0805
3971	4822 116 52201	75Ω 5% 0.5W
3972	2122 101 02073	82Ω 5% 0,5W
3972	4822 116 52202	82Ω 5% 500mW
3973	4822 116 52201	75Ω 5% 0.5W
3974	4822 116 52201	75Ω 5% 0.5W
3975	4822 116 52201	75Ω 5% 0.5W
3976	4822 117 11373	100Ω 1% 0805
3977	4822 117 11373	100Ω 1% 0805
3978	4822 117 11373	100Ω 1% 0805
3979	4822 116 52201	75Ω 5% 0.5W
3980	4822 117 11373	100Ω 1% 0805
3981	4822 051 20822	8.2kΩ 5% 0,1W
3982	4822 051 20392	3.9kΩ 5% 0.1W
3983	4822 116 52175	100Ω 5% 0.5W
3984	4822 051 20822	8.2kΩ 5% 0,1W
3985	4822 116 52201	75Ω 5% 0.5W
3986	4822 116 52276	3.9kΩ 5% 0.5W
3987	4822 116 52175	100Ω 5% 0.5W
3988	4822 051 10102	1kΩ 2% 0.25W
3989	4822 050 11002	1k 1% 0.4W
3990	4822 117 10353	150Ω 1% 0.1W
3991	4822 117 10353	150Ω 1% 0.1W
3992	4822 117 10353	150Ω 1% 0.1W
3993	4822 116 83868	150Ω 5% 0.5W
3994	4822 051 10102	1kΩ 2% 0.25W
3995	4822 051 10102	1kΩ 2% 0.25W
3996	4822 117 10353	150Ω 1% 0.1W
3997	4822 117 10353	150Ω 1% 0.1W
9103	4822 051 20008	Jumper 0805
9105	4822 051 20008	Jumper 0805
9107	4822 051 30008	Jumper 0603
9108	4822 051 30008	Jumper 0603
9128	4822 051 30008	Jumper 0603
9200	4822 051 20008	Jumper 0805
9202	4822 051 30008	Jumper 0603
9203	4822 051 30008	Jumper 0603
9204	4822 051 30008	Jumper 0603
9205	4822 051 20008	Jumper 0805
9207	4822 051 30008	Jumper 0603
9208	4822 051 20008	Jumper 0805
9209	4822 051 20008	Jumper 0805
9210	4822 051 30008	Jumper 0603
9211	4822 051 30008	Jumper 0603
9212	4822 051 20008	Jumper 0805
9214	4822 051 20008	Jumper 0805
9215	4822 051 20008	Jumper 0805
9216	4822 051 20008	Jumper 0805
9217	4822 051 20008	Jumper 0805
9218	4822 051 20008	Jumper 0805
9219	4822 051 20008	Jumper 0805
9221	4822 051 20008	Jumper 0805
9222	4822 051 20008	Jumper 0805
9226	4822 051 30008	Jumper 0603
9251	4822 051 30008	Jumper 0603
9261	4822 051 20008	Jumper 0805
9262	4822 051 20008	Jumper 0805
9263	4822 051 20008	Jumper 0805
9264	4822 051 20008	Jumper 0805
9418	4822 051 20008	Jumper 0805
9421	4822 051 20008	Jumper 0805
9422	4822 051 30008	Jumper 0603
9424	4822 051 30008	Jumper 0603
9427	4822 051 30008	Jumper 0603
9428	4822 051 30008	Jumper 0603
9429	4822 051 30008	Jumper 0603
9430	4822 051 30008	Jumper 0603
9431	4822 051 30008	Jumper 0603
9432	4822 051 30008	Jumper 0603
9433	4822 051 30008	Jumper 0603
9434	4822 051 30008	Jumper 0603
9435	4822 051 30008	Jumper 0603
9436	4822 051 30008	Jumper 0603
9437	4822 051 30008	Jumper 0603
9438	4822 051 30008	Jumper 0603
9440	4822 051 30008	Jumper 0603
9441	4822 051 30008	Jumper 0603
9443	4822 051 30008	Jumper 0603
9481	4822 051 30008	Jumper 0603
9483	4822 051 30008	Jumper 0603
9499	4822 051 30008	Jumper 0603
9505	4822 051 20008	Jumper 0805
9560	4822 051 30008	Jumper 0603
9561	4822 051 20008	Jumper 0805
9621	4822 051 30008	Jumper 0603
9624	4822 051 30008	Jumper 0603
9676	4822 051 30008	Jumper 0603
9677	4822 051 20008	Jumper 0805
9702	4822 051 30008	Jumper 0603
9704	4822 051 20008	Jumper 0805
9705	4822 051 20008	Jumper 0805
9706	4822 051 30471	470Ω 5% 0.062W
9707	4822 051 30008	Jumper 0603
9711	4822 051 30008	Jumper 0603
9713	4822 051 30008	Jumper 0603
9714	4822 051 20008	Jumper 0805
9716	4822 051 20008	Jumper 0805
9717	4822 051 30008	Jumper 0603
9908	4822 051 30008	Jumper 0603
9927	4822 051 20008	Jumper 0805
9928	4822 051 20008	Jumper 0805
9960	4822 051 30008	Jumper 0603
9962	4822 051 30008	Jumper 0603
9966	4822 051 30008	Jumper 0603
9979	4822 051 20008	Jumper 0805
9981	4822 051 20008	Jumper 0805
9985	4822 051 30008	Jumper 0603
9986	4822 051 20008	Jumper 0805
9987	4822 051 20008	Jumper 0805
9988	4822 051 20008	Jumper 0805
9989	4822 051 20008	Jumper 0805
9990	4822 051 20008	Jumper 0805
9991	4822 051 20008	Jumper 0805
9992	4822 051 20008	Jumper 0805
9993	4822 051 20008	Jumper 0805
9994	4822 051 20008	Jumper 0805
9997	4822 051 20008	Jumper 0805

⏦

5100⚠	3104 308 20431	Transformer BS25126-03
5100⚠	3104 308 20561	TFM BS25125-04 B
5102	2422 535 94639	10µH 20%
5103	4822 526 10704	Bead 45Ω at 50MHz
5104	4822 157 11411	Bead 83Ω at 100MHz
5105	2422 535 94632	1µH 30%
5106	4822 526 10704	Bead 45Ω at 50MHz
5111	4822 157 11411	Bead 83Ω at 100MHz

5113	4822 157 11411	Bead 83Ω at 100MHz
5130	4822 157 11411	Bead 83Ω at 100MHz
5400	4822 157 11869	33µH 10% LHL08
5401	2422 536 00059	12µH 10%
5402	3198 018 21510	150µH 10%
5410⚠	3128 138 39091	Transformer CE165T
5411	4822 157 71097	0.56µH 10%
5421	3104 308 20471	Coil BL15131-00 Y
5421	3104 308 20591	Linearity coil 5µH
5421	3104 308 20611	Linearity coil 5µH 30"
5421	3104 308 20691	Linearity coil 5µH 34"
5422	3104 308 20671	Bridge coil BC21215-01
5422⚠	3104 308 20752	Bridge coil BC21237-01 Y
5423	4822 157 71097	0.56µH 10%
5425	4822 157 11411	Bead 83Ω at 100MHz
5426	4822 157 70826	2.4µH
5430⚠	3104 308 20491	LOT 1392.9014A
5430⚠	3104 308 20521	LOT 1392.9005C 30"
5430⚠	3104 308 20741	Trans. 1392.9010B Y
5461	4822 157 11411	Bead 83Ω at 100MHz
5463	4822 157 11411	Bead 83Ω at 100MHz
5465	4822 157 11411	Bead 83Ω at 100MHz
5466	2422 535 94996	18µH 10%
5467	4822 157 11411	Bead 83Ω at 100MHz
5469	4822 157 11411	Bead 83Ω at 100MHz
5503⚠	2422 549 44877	Filter 45mH DMF2845H
5505	4822 157 11411	Bead 83Ω at 100MHz
5506⚠	2422 531 02501	Transformer S30940-04
5507	4822 157 11411	Bead 83Ω at 100MHz
5509	4822 157 11411	Bead 83Ω at 100MHz
5511	3104 308 20511	FIL MAINS HARM 40MH Y
5513	4822 157 11869	33µH 10% LHL08
5514	4822 157 11869	33µH 10% LHL08
5515	4822 157 11869	33µH 10% LHL08
5620	4822 157 11771	0.09µH 10%
5621⚠	3104 308 20571	Transformer S13974-03 34'
5701	2422 536 00385	68µH 10%
5702	2422 536 00385	68µH 10%
5703	4822 157 11716	Bead 30Ω at 100MHz
5707	4822 157 11411	Bead 83Ω at 100MHz
5708	4822 157 11411	Bead 83Ω at 100MHz
5711	4822 157 11411	Bead 83Ω at 100MHz
5712	4822 157 11411	Bead 83Ω at 100MHz
5715	4822 157 11411	Bead 83Ω at 100MHz
5716	4822 157 11411	Bead 83Ω at 100MHz
5720	2422 536 00385	68µH 10%
5721	2422 536 00385	68µH 10%
5722	4822 157 11411	Bead 83Ω at 100MHz
5723	4822 157 11411	Bead 83Ω at 100MHz
5725	4822 157 11411	Bead 83Ω at 100MHz
5901	4822 157 11299	10µH 5%
5902	4822 157 11869	33µH 10% LHL08
5903	4822 157 10359	33µH 10%
5904	4822 157 11411	Bead 83Ω at 100MHz

6080	4822 130 11397	BAS316
6082	4822 130 11528	1PS76SB10
6084	4822 130 11522	UDZ15B
6103	4822 130 41601	BYV95A
6103	4822 130 42488	BYD33D
6103	5322 130 31938	BYV27-200
6105	4822 130 34281	BZX79-B15
6106	3198 010 52290	BZX79-B22
6107	4822 130 11572	STPS8H100F
6108	4822 130 11528	1PS76SB10
6109	4822 130 31083	BYW55
6110	9340 418 70133	BYV27-600
6111	9322 161 78682	SB360L-7024
6112	4822 130 11551	UDZS10B
6115	4822 130 11528	1PS76SB10
6118	4822 130 11397	BAS316
6119	4822 130 11397	BAS316
6120	4822 130 30621	1N4148
6121	4822 130 30621	1N4148
6122	3198 010 53980	BZX79-B3V9
6130	4822 130 11596	BYW29EX-200
6132	9322 171 80685	BZX384-B6V8
6133	4822 130 11397	BAS316
6134	4822 130 11397	BAS316
6141	9322 129 42685	BZM55-C15
6142	4822 130 11528	1PS76SB10
6144	4822 130 11397	BAS316
6147	4822 130 34278	BZX79-B6V8
6148	5322 130 31938	BYV27-200
6149	4822 130 11397	BAS316
6200	9340 548 71115	SM PDZ33B
6201	4822 130 11397	BAS316
6202	4822 130 11397	BAS316
6400	4822 130 70055	BYV27-400
6405	4822 130 34383	BZX79-B47
6406	4822 130 11397	BAS316
6407	4822 130 11397	BAS316
6408	4822 130 41601	BYV95A
6408	4822 130 42488	BYD33D
6421	4822 130 10753	BY359X-1500
6422	4822 130 10218	BY229X-800
6442	4822 130 11522	UDZ15B
6455	4822 130 11397	BAS316
6456	5322 130 34337	BAV99
6457	9322 102 64685	UDZ2.7B
6458	3198 020 55680	BZX384-C5V6
6460	4822 130 41487	BYV95C
6462	9322 127 32682	BYW76-RAS15/10
6464	9322 127 32682	BYW76-RAS15/10
6465	3139 120 52021	BYV29X-500
6480	4822 130 41601	BYV95A
6480	4822 130 42488	BYD33D
6481	4822 130 11522	UDZ15B
6482	4822 130 11397	BAS316
6483	4822 130 11528	1PS76SB10
6493	4822 130 11528	1PS76SB10
6505	4822 130 34281	BZX79-B15
6506	4822 130 10654	BAT254
6506	4822 130 80622	BAT54
6509	4822 130 11397	BAS316
6510	4822 130 61219	BZX79-B10
6511	4822 130 11397	BAS316
6512	4822 130 11397	BAS316
6514	5322 130 31932	BZT03-C200
6515	4822 130 33657	BZV85-C6V8
6516	4822 130 11397	BAS316
6517	4822 130 11528	1PS76SB10
6525⚠	3198 010 10640	Bridge cell GBU4K
6530	4822 130 41487	BYV95C
6534	9322 165 72687	DTV1500MFP
6535	4822 130 11572	STPS8H100F
6536	4822 130 11572	STPS8H100F
6537	4822 130 11397	BAS316
6614	4822 130 11528	1PS76SB10
6615	4822 130 11397	BAS316
6616	4822 130 11397	BAS316
6617	4822 130 11397	BAS316
6618	4822 130 11397	BAS316
6619	4822 130 41601	BYV95A
6619	4822 130 42488	BYD33D
6620	5322 130 31938	BYV27-200
6621	4822 130 41601	BYV95A
6621	4822 130 42488	BYD33D
6622	5322 130 32296	BZV85-C10
6622	5322 130 33635	BZV85-C8V2
6623	4822 130 11397	BAS316
6624	4822 130 11397	BAS316
6625	4822 130 11397	BAS316
6626	4822 130 11397	BAS316
6627	4822 130 11397	BAS316
6701	4822 130 11397	BAS316
6745	4822 130 11551	UDZS10B
6950	4822 130 11416	PDZ6.8B
6951	4822 130 11416	PDZ6.8B
6953	4822 130 11416	PDZ6.8B
6954	4822 130 11416	PDZ6.8B
6955	4822 130 11416	PDZ6.8B
6956	4822 130 11416	PDZ6.8B
6957	4822 130 11416	PDZ6.8B
6958	4822 130 11416	PDZ6.8B
6959	4822 130 11416	PDZ6.8B
6960	9340 548 61115	PDZ12B
6961	4822 130 11416	PDZ6.8B
6962	4822 130 11416	PDZ6.8B

7100	4822 130 44568	BC557B
7101	4822 130 40981	BC337-25
7102	4822 130 11417	STP3NB60FP
7103⚠	9322 149 04682	TCET1102
7130	5322 130 60159	BC846B
7131	4822 130 11336	STP16NE06FP
7132	5322 130 60159	BC846B
7133	4822 130 60373	BC856B
7140	5322 130 60159	BC846B
7141	4822 130 11336	STP16NE06FP
7210	5322 130 60159	BC846B
7211	4822 130 42804	BC817-25
7408	5322 130 44647	BC368
7409	5322 130 60159	BC846B
7421	9340 210 30127	BU2520DX
7440	4822 209 70672	LM358N SEL.
7441	4822 130 60373	BC856B
7442	4822 130 60373	BC856B
7443	5322 130 60159	BC846B
7445	5322 130 60159	BC846B
7450	5322 209 61472	LM393M
7455	4822 209 73852	PMBT2369
7480	4822 130 11417	STP3NB60FP
7482⚠	4822 130 11418	TCDT1102G
7486	5322 130 60159	BC846B
7487	5322 130 60159	BC846B
7501	5322 130 60159	BC846B
7502	4822 130 40959	BC547B
7504	9322 126 65687	STP5NB60FP
7506	4822 209 14933	TL431IZ
7507	9322 149 04682	TCET1102
7528	4822 130 40981	BC337-25
7529	4822 130 44461	BC546B
7530	5322 130 60159	BC846B
7611	5322 130 60159	BC846B
7612	5322 130 60159	BC846B
7613	4822 209 81397	TL431CLPST
7614	5322 130 60159	BC846B
7620	4822 209 90009	TDA8177
7641	5322 130 60159	BC846B
7653	5322 130 60159	BC846B
7654	4822 130 60373	BC856B
7680	4822 209 60956	TDA7052/N2
7681	5322 130 60159	BC846B
7682	5322 130 44647	BC368
7700	9322 163 86682	TDA7490L
7701	5322 130 60159	BC846B
7702	9322 163 86682	TDA7490L
7703	5322 130 60159	BC846B
7704	5322 130 60159	BC846B
7705	5322 130 60159	BC846B
7706	4822 130 60373	BC856B
7707	5322 130 60159	BC846B
7902	5322 130 60159	BC846B
7908	5322 130 60159	BC846B
7910	9322 166 03682	LD1085V36
7911	4822 209 72042	L78L05ACZ

Small Signal Panel [B]

Various

0072	3104 301 24191	Frame SSB A-side
0073	3104 301 24211	Cover SSB A-side
0074	3104 301 24221	Cover SSB Z-side
0075	3104 301 24201	Frame SSB Z-side
0265	3104 304 22841	FFC relieve
1001	2422 543 89022	Crystal 6MHz 20pF CX5F
1301	2422 540 98456	Resonator 12MHz CSTCV
1305	2422 543 01184	Crystal 4.433619MHz 20pF
1308	2422 543 01183	Crystal 3.579545MHz 16pF
1402	2422 025 16966	Connector 5P m v 2.00 SMD
1403⚠	2422 086 11031	Fuse SMD 500mA 63V
1403⚠	2422 086 11092	Fuse F0.5A 50V 1206
1407	2422 549 44324	Filt.5M5/5M74TPWCC04BS
1408	2422 549 44372	Filt. SAW 38.9MHz K3953L
1409	2422 549 44369	Filt. SAW 38.9MHz K9656L
1651	2422 543 89019	Crystal 18.432MHz 12pF
1680	2422 025 16961	Connector 6p m
1681	2422 025 17103	Connector 3p m
1682	2422 025 16729	Connector FFC 10p m
1702	2422 540 98456	Resonator 12MHz CSTCV
8402	3104 311 04711	Cable 5P/180/5P
8680	3104 311 04991	Cable 6P/400/6P
8682	3104 311 02951	Cable foil 10P/280/10P

2001	2222 867 15339	33pF 5% 50V 0603
2002	4822 126 11669	27pF 5% 50V 0603
2003	4822 126 13879	220nF 20% 16V
2004	4822 126 13879	220nF 20% 16V
2005	2238 586 59812	100nF 20-80% 50V 0603
2006	2238 586 59812	100nF 20-80% 50V 0603
2007	2238 586 59812	100nF 20-80% 50V 0603
2008	2238 586 59812	100nF 20-80% 50V 0603
2010	4822 126 11785	47pF 5% 50V 0603
2011	4822 126 11785	47pF 5% 50V 0603
2012	4822 126 11785	47pF 5% 50V 0603
2013	4822 124 12095	100µF 20% 16V
2016	4822 124 12095	100µF 20% 16V
2017	2238 586 59812	100nF 20-80% 50V 0603
2019	2238 586 59812	100nF 20-80% 50V 0603
2020	4822 126 13883	220pF 5% 50V
2022	2238 586 59812	100nF 20-80% 50V 0603
2023	2238 586 59812	100nF 20-80% 50V 0603
2024	2238 586 59812	100nF 20-80% 50V 0603
2025	2238 586 59812	100nF 20-80% 50V 0603
2026	2238 586 59812	100nF 20-80% 50V 0603
2027	2238 586 59812	100nF 20-80% 50V 0603
2028	2238 586 59812	100nF 20-80% 50V 0603
2029	2238 586 59812	100nF 20-80% 50V 0603
2031	2238 586 59812	100nF 20-80% 50V 0603

2033	4822 126 14226	82pF 5% 50V 0603
2034	4822 126 14226	82pF 5% 50V 0603
2035	4822 126 14226	82pF 5% 50V 0603
2036	4822 126 14226	82pF 5% 50V 0603
2037	4822 126 14226	82pF 5% 50V 0603
2038	2238 586 59812	100nF 20-80% 50V 0603
2039	2238 586 59812	100nF 20-80% 50V 0603
2040	2238 586 59812	100nF 20-80% 50V 0603
2302	2238 586 59812	100nF 20-80% 50V 0603
2303	2020 552 96448	1µF 10% 16V
2304	4822 122 33741	10pF 10% 50V
2305	2238 586 59812	100nF 20-80% 50V 0603
2306	4822 126 13881	470pF 5% 50V
2307	2238 586 59812	100nF 20-80% 50V 0603
2308	4822 122 33741	10pF 10% 50V
2312	2020 552 96659	33nF 5% 50V 1206
2313	2020 552 96685	100nF 5% 25V 1206
2314	4822 124 12095	100µF 20% 16V
2315	2238 586 59812	100nF 20-80% 50V 0603
2316	2238 586 59812	100nF 20-80% 50V 0603
2317	2020 552 96448	1µF 10% 16V
2318	2238 916 15641	22nF 10% 25V 0603
2318	4822 126 14494	22nF 10% 25V 0603
2319	4822 126 14247	1.5nF 50V 0603
2320	4822 122 33741	10pF 10% 50V
2321	2238 586 59812	100nF 20-80% 50V 0603
2322	2238 586 59812	100nF 20-80% 50V 0603
2323	2238 586 59812	100nF 20-80% 50V 0603
2324	5322 126 11583	10nF 10% 50V 0603
2325	2238 586 59812	100nF 20-80% 50V 0603
2326	5322 126 11583	10nF 10% 50V 0603
2327	4822 051 30759	75Ω 5% 0.062W
2328	4822 122 33761	22pF 5% 50V
2329	2238 586 59812	100nF 20-80% 50V 0603
2330	2238 586 59812	100nF 20-80% 50V 0603
2331	2238 586 59812	100nF 20-80% 50V 0603
2332	2238 586 59812	100nF 20-80% 50V 0603
2333	4822 126 14491	2.2µF -20+80% 10V 0805
2334	4822 126 14491	2.2µF -20+80% 10V 0805
2336	4822 126 14491	2.2µF -20+80% 10V 0805
2340	4822 124 12095	100µF 20% 16V
2350	2238 586 59812	100nF 20-80% 50V 0603
2351	2238 586 59812	100nF 20-80% 50V 0603
2352	2238 586 59812	100nF 20-80% 50V 0603
2353	2238 586 59812	100nF 20-80% 50V 0603
2354	2238 586 59812	100nF 20-80% 50V 0603
2355	4822 051 30759	75Ω 5% 0.062W
2356	2238 586 59812	100nF 20-80% 50V 0603
2357	2238 586 59812	100nF 20-80% 50V 0603
2358	5322 126 11579	3.3nF 10% 63V
2359	4822 122 33752	15pF 5% 50V
2360	3198 016 31280	1.2pF 50V 0603
2361	3198 016 31280	1.2pF 50V 0603
2362	4822 126 11663	12pF 5% 50V 0603
2363	4822 126 13881	470pF 5% 50V
2364	4822 051 30759	75Ω 5% 0.062W
2365	2238 586 59812	100nF 20-80% 50V 0603
2366	2238 586 59812	100nF 20-80% 50V 0603
2367	2238 586 59812	100nF 20-80% 50V 0603
2368	2238 586 59812	100nF 20-80% 50V 0603
2369	2238 586 59812	100nF 20-80% 50V 0603
2370	2238 586 59812	100nF 20-80% 50V 0603
2371	4822 126 13193	4.7nF 10% 63V
2372	4822 126 14043	1µF 20% 16V
2373	2238 586 59812	100nF 20-80% 50V 0603
2374	4822 126 14491	2.2µF -20+80% 10V 0805
2375	2238 916 15641	22nF 10% 25V 0603
2375	4822 126 14494	22nF 10% 25V 0603
2376	2238 586 59812	100nF 20-80% 50V 0603
2377	4822 124 12095	100µF 20% 16V
2378	2238 586 59812	100nF 20-80% 50V 0603
2383	4822 051 30759	75Ω 5% 0.062W
2384	2238 586 59812	100nF 20-80% 50V 0603
2385	2238 586 59812	100nF 20-80% 50V 0603
2386	4822 126 13883	220pF 5% 50V
2390	2238 586 59812	100nF 20-80% 50V 0603
2391	2238 586 59812	100nF 20-80% 50V 0603
2392	4822 126 13193	4.7nF 10% 63V
2394	4822 126 14491	2.2µF -20+80% 10V 0805
2404	2020 552 96448	1µF 10% 16V
2405	4822 126 13193	4.7nF 10% 63V
2406	4822 126 13883	220pF 5% 50V
2407	4822 126 13956	68pF 5% 63V 0603
2408	3198 016 32780	2.7pF 50V 0603 NP0
2409	4822 126 14491	2.2µF -20+80% 10V 0805
2411	2238 586 59812	100nF 20-80% 50V 0603
2412	4822 126 13193	4.7nF 10% 63V
2417	3198 017 44740	470nF 10V 0603
2418	4822 126 13956	68pF 5% 63V 0603
2420	4822 122 33753	150pF 5% 50V
2422	2238 586 59812	100nF 20-80% 50V 0603
2424	2238 586 59812	100nF 20-80% 50V 0603
2425	4822 124 12095	100µF 20% 16V
2431	2238 586 59812	100nF 20-80% 50V 0603
2501	4822 126 11785	47pF 5% 50V 0603
2502	4822 126 14107	330nF +-80/20% 25V
2503	4822 126 14107	330nF +-80/20% 25V
2504	4822 126 14107	330nF +-80/20% 25V
2505	4822 126 14107	330nF +-80/20% 25V
2506	4822 126 14107	330nF +-80/20% 25V
2507	4822 126 14107	330nF +-80/20% 25V
2508	4822 124 12095	100µF 20% 16V
2509	4822 124 23002	10µF 20% 16V
2510	2020 552 96448	1µF 10% 16V
2511	2020 552 96448	1µF 10% 16V
2512	4822 126 13879	220nF 20% 16V
2513	3198 030 74780	4u7 20% 35V
2513	4822 124 12084	1µF 20% 50V SMD
2515	2020 552 94427	100pF 5% 50v 0603
2516	2020 552 96221	10µF 20% 6.3V 0805
2516	2020 552 96448	1µF 10% 16V
2516	4822 126 14491	2.2µF -20+80% 10V 0805
2520	2238 586 59812	100nF 20-80% 50V 0603
2521	2238 586 59812	100nF 20-80% 50V 0603
2522	4822 126 13881	470pF 5% 50V
2523	3198 016 31020	1nF 25V 0603
2524	2238 586 59812	100nF 20-80% 50V 0603
2525	4822 126 13881	470pF 5% 50V
2526	3198 016 31020	1nF 25V 0603
2528	4822 126 14585	100nF 10% 50V
2529	4822 126 14472	1µF 10% 10V 0805
2530	4822 126 14472	1µF 10% 10V 0805
2546	4822 124 23002	10µF 20% 16V
2547	4822 124 23002	10µF 20% 16V
2548	4822 124 23002	10µF 20% 16V
2549	4822 124 23002	10µF 20% 16V
2550	4822 126 14241	330pF 50V 0603
2552	4822 126 13881	470pF 5% 50V
2553	4822 126 13881	470pF 5% 50V
2554	4822 126 13881	470pF 5% 50V
2555	4822 126 13881	470pF 5% 50V
2562	3198 016 31020	1nF 25V 0603
2563	3198 016 31020	1nF 25V 0603
2564	3198 016 31020	1nF 25V 0603
2565	3198 016 31020	1nF 25V 0603
2566	3198 016 31020	1nF 25V 0603
2567	3198 016 31020	1nF 25V 0603
2568	3198 016 31020	1nF 25V 0603
2569	3198 016 31020	1nF 25V 0603
2570	3198 016 31020	1nF 25V 0603
2571	2020 552 94427	100pF 5% 50v 0603
2571	4822 051 30759	75Ω 5% 0.062W
2572	3198 016 31020	1nF 25V 0603
2573	3198 016 31020	1nF 25V 0603
2574	3198 016 31020	1nF 25V 0603
2575	3198 016 31020	1nF 25V 0603
2576	3198 016 31020	1nF 25V 0603
2577	3198 016 31020	1nF 25V 0603
2578	2020 552 94427	100pF 5% 50v 0603
2579	2020 552 94427	100pF 5% 50v 0603
2580	3198 016 31020	1nF 25V 0603
2581	3198 016 31020	1nF 25V 0603
2582	3198 016 31020	1nF 25V 0603
2583	3198 016 31020	1nF 25V 0603
2592	5322 126 11578	1nF 10% 50V 0603
2593	3198 016 31020	1nF 25V 0603
2594	3198 016 31020	1nF 25V 0603
2595	3198 016 31020	1nF 25V 0603
2600	2020 552 96448	1µF 10% 16V
2601	2020 552 96448	1µF 10% 16V
2602	2020 552 96448	1µF 10% 16V
2603	2020 552 96448	1µF 10% 16V
2604	2020 552 96448	1µF 10% 16V
2609	3198 016 31020	1nF 25V 0603
2610	4822 126 14238	2.2nF 50V 0603
2611	3198 016 31020	1nF 25V 0603
2629	4822 126 14107	330nF +-80/20% 25V
2630	4822 126 14491	2.2µF -20+80% 10V 0805
2632	4822 126 14107	330nF +-80/20% 25V
2634	3198 016 31020	1nF 25V 0603
2637	4822 126 14107	330nF +-80/20% 25V
2640	4822 126 13879	220nF 20% 16V
2643	4822 126 14107	330nF +-80/20% 25V
2644	3198 016 31020	1nF 25V 0603
2645	4822 126 14107	330nF +-80/20% 25V
2646	4822 126 14491	2.2µF -20+80% 10V 0805
2649	4822 126 14491	2.2µF -20+80% 10V 0805
2651	2238 586 59812	100nF 20-80% 50V 0603
2652	4822 126 11785	47pF 5% 50V 0603
2653	4822 126 14107	330nF +-80/20% 25V
2654	4822 126 13881	470pF 5% 50V
2659	4822 126 13881	470pF 5% 50V
2660	4822 126 13881	470pF 5% 50V
2661	4822 126 14107	330nF +-80/20% 25V
2662	4822 126 14107	330nF +-80/20% 25V
2663	4822 126 13881	470pF 5% 50V
2664	4822 126 13881	470pF 5% 50V
2665	4822 124 12095	100µF 20% 16V
2666	4822 124 12095	100µF 20% 16V
2667	3198 016 33380	3.3pF 50V 0603
2668	3198 016 33380	3.3pF 50V 0603
2670	2238 586 59812	100nF 20-80% 50V 0603
2673	3198 016 31020	1nF 25V 0603
2674	3198 016 31020	1nF 25V 0603
2677	4822 124 23002	10µF 20% 16V
2678	4822 124 23002	10µF 20% 16V
2679	2238 586 59812	100nF 20-80% 50V 0603
2680	4822 124 23002	10µF 20% 16V
2681	2238 586 59812	100nF 20-80% 50V 0603
2682	4822 124 23002	10µF 20% 16V
2686	3198 016 31020	1nF 25V 0603
2687	3198 016 31020	1nF 25V 0603
2690	2238 586 59812	100nF 20-80% 50V 0603
2691	4822 126 14491	2.2µF -20+80% 10V 0805
2693	4822 126 13883	220pF 5% 50V
2694	3198 016 31020	1nF 25V 0603
2695	4822 124 12095	100µF 20% 16V
2697	2238 586 59812	100nF 20-80% 50V 0603
2698	4822 126 14491	2.2µF -20+80% 10V 0805
2699	4822 126 14491	2.2µF -20+80% 10V 0805
2701	4822 122 33752	15pF 5% 50V
2704	4822 126 14507	18pF 5% 50V 0603
2707	4822 126 14507	18pF 5% 50V 0603
2709	2238 586 59812	100nF 20-80% 50V 0603
2710	2238 586 59812	100nF 20-80% 50V 0603
2711	2238 586 59812	100nF 20-80% 50V 0603
2712	2238 586 59812	100nF 20-80% 50V 0603
2713	4822 122 33761	22pF 5% 50V
2714	4822 122 33761	22pF 5% 50V
2716	2238 586 59812	100nF 20-80% 50V 0603
2717	4822 126 11663	12pF 5% 50V 0603
2718	4822 122 33752	15pF 5% 50V
2719	4822 122 33752	15pF 5% 50V
2720	4822 122 33752	15pF 5% 50V
2721	2020 552 94427	100pF 5% 50v 0603
2722	2020 552 94427	100pF 5% 50v 0603
2723	4822 126 14225	56pF 5% 50V 0603
2724	2020 552 94427	100pF 5% 50v 0603
2725	4822 126 11663	12pF 5% 50V 0603
2726	4822 126 11669	27pF 5% 50V 0603
2727	4822 126 11663	12pF 5% 50V 0603
2728	2020 021 91554	10µF 20% 16V
2729	2238 586 59812	100nF 20-80% 50V 0603
2730	2020 021 91557	100µF 20% 16V
2731	2238 586 59812	100nF 20-80% 50V 0603
2732	2238 586 59812	100nF 20-80% 50V 0603
2733	2238 586 59812	100nF 20-80% 50V 0603
2734	2238 586 59812	100nF 20-80% 50V 0603
2735	2238 586 59812	100nF 20-80% 50V 0603
2736	4822 126 11669	27pF 5% 50V 0603
2737	4822 126 11663	12pF 5% 50V 0603
2738	4822 126 11663	12pF 5% 50V 0603
2739	4822 126 11669	27pF 5% 50V 0603
2740	2238 916 15641	22nF 10% 25V 0603
2740	4822 126 14494	22nF 10% 25V 0603
2741	2238 916 15641	22nF 10% 25V 0603
2741	4822 126 14494	22nF 10% 25V 0603
2742	2238 916 15641	22nF 10% 25V 0603
2742	4822 126 14494	22nF 10% 25V 0603
2743	2238 586 59812	100nF 20-80% 50V 0603
2744	2238 586 59812	100nF 20-80% 50V 0603
2745	2238 586 59812	100nF 20-80% 50V 0603
2746	2238 586 59812	100nF 20-80% 50V 0603
2747	2238 586 59812	100nF 20-80% 50V 0603
2748	2238 586 59812	100nF 20-80% 50V 0603
2749	2020 021 91554	10µF 20% 16V
2750	2238 586 59812	100nF 20-80% 50V 0603
2751	2238 586 59812	100nF 20-80% 50V 0603
2752	2238 586 59812	100nF 20-80% 50V 0603
2753	2238 586 59812	100nF 20-80% 50V 0603
2754	2238 586 59812	100nF 20-80% 50V 0603
2755	2238 586 59812	100nF 20-80% 50V 0603
2756	2238 586 59812	100nF 20-80% 50V 0603
2757	2238 916 15641	22nF 10% 25V 0603
2757	4822 126 14494	22nF 10% 25V 0603
2760	2238 586 59812	100nF 20-80% 50V 0603
2761	2238 586 59812	100nF 20-80% 50V 0603
2762	2238 586 59812	100nF 20-80% 50V 0603
2763	2238 586 59812	100nF 20-80% 50V 0603
2764	2238 586 59812	100nF 20-80% 50V 0603
2765	2238 586 59812	100nF 20-80% 50V 0603
2766	2238 586 59812	100nF 20-80% 50V 0603
2767	2238 586 59812	100nF 20-80% 50V 0603
2768	2238 586 59812	100nF 20-80% 50V 0603
2769	2238 586 59812	100nF 20-80% 50V 0603
2770	2020 021 91554	10µF 20% 16V
2771	2238 586 59812	100nF 20-80% 50V 0603
2772	2020 021 91557	100µF 20% 16V
2773	2238 586 59812	100nF 20-80% 50V 0603
2774	2238 586 59812	100nF 20-80% 50V 0603
2774	3198 017 44740	470nF 10V 0603
2775	2238 586 59812	100nF 20-80% 50V 0603

2776	2238 586 59812	100nF 20-80% 50V 0603
2777	2238 586 59812	100nF 20-80% 50V 0603
2778	2238 586 59812	100nF 20-80% 50V 0603
2779	2238 586 59812	100nF 20-80% 50V 0603
2780	2238 586 59812	100nF 20-80% 50V 0603
2781	2238 586 59812	100nF 20-80% 50V 0603
2782	2238 586 59812	100nF 20-80% 50V 0603
2783	2238 586 59812	100nF 20-80% 50V 0603
2784	2238 586 59812	100nF 20-80% 50V 0603
2785	2238 586 59812	100nF 20-80% 50V 0603
2786	2238 586 59812	100nF 20-80% 50V 0603
2787	2238 586 59812	100nF 20-80% 50V 0603
2788	2238 586 59812	100nF 20-80% 50V 0603
2789	2238 586 59812	100nF 20-80% 50V 0603
2790	2238 586 59812	100nF 20-80% 50V 0603
2791	2238 586 59812	100nF 20-80% 50V 0603
2792	2020 021 91554	10µF 20% 16V
2793	2238 586 59812	100nF 20-80% 50V 0603
2794	2020 021 91554	10µF 20% 16V
2795	2238 586 59812	100nF 20-80% 50V 0603
2796	2238 586 59812	100nF 20-80% 50V 0603
2797	2238 586 59812	100nF 20-80% 50V 0603
2798	2238 586 59812	100nF 20-80% 50V 0603
2799	2238 586 59812	100nF 20-80% 50V 0603
2800	2238 586 59812	100nF 20-80% 50V 0603
2801	2238 586 59812	100nF 20-80% 50V 0603
2802	2238 586 59812	100nF 20-80% 50V 0603
2803	2238 586 59812	100nF 20-80% 50V 0603
2804	2238 586 59812	100nF 20-80% 50V 0603
2805	2238 586 59812	100nF 20-80% 50V 0603
2807	2238 586 59812	100nF 20-80% 50V 0603
2808	2020 021 91554	10µF 20% 16V
2809	2238 586 59812	100nF 20-80% 50V 0603
2810	2238 586 59812	100nF 20-80% 50V 0603
2811	2238 586 59812	100nF 20-80% 50V 0603
2812	2238 586 59812	100nF 20-80% 50V 0603
2813	2238 586 59812	100nF 20-80% 50V 0603
2814	2238 586 59812	100nF 20-80% 50V 0603
2815	4822 126 14223	2.2pF +-0.25pF 50V 0603
2816	4822 126 14223	2.2pF +-0.25pF 50V 0603
2817	2238 586 59812	100nF 20-80% 50V 0603
2818	4822 126 14223	2.2pF +-0.25pF 50V 0603
2819	2238 586 59812	100nF 20-80% 50V 0603
2820	2238 586 59812	100nF 20-80% 50V 0603
2821	2238 586 59812	100nF 20-80% 50V 0603
2822	2238 586 59812	100nF 20-80% 50V 0603
2823	5322 126 11578	1nF 10% 50V 0603
2824	5322 126 11578	1nF 10% 50V 0603
2825	2238 586 59812	100nF 20-80% 50V 0603
2826	2238 586 59812	100nF 20-80% 50V 0603
2827	2238 586 59812	100nF 20-80% 50V 0603
2828	2238 586 59812	100nF 20-80% 50V 0603
2829	2238 586 59812	100nF 20-80% 50V 0603
2830	2238 586 59812	100nF 20-80% 50V 0603
2831	4822 126 13956	68pF 5% 63V 0603
2832	2238 586 59812	100nF 20-80% 50V 0603
2833	2238 586 59812	100nF 20-80% 50V 0603
2835	2238 586 59812	100nF 20-80% 50V 0603
2838	2238 586 59812	100nF 20-80% 50V 0603
2843	2238 586 59812	100nF 20-80% 50V 0603
2845	2238 586 59812	100nF 20-80% 50V 0603
2846	2238 586 59812	100nF 20-80% 50V 0603
2847	2238 586 59812	100nF 20-80% 50V 0603
2848	2238 586 59812	100nF 20-80% 50V 0603
2851	2238 586 59812	100nF 20-80% 50V 0603
2853	2238 586 59812	100nF 20-80% 50V 0603
2854	2238 586 59812	100nF 20-80% 50V 0603
2855	2238 586 59812	100nF 20-80% 50V 0603
2857	2238 586 59812	100nF 20-80% 50V 0603
2859	2238 586 59812	100nF 20-80% 50V 0603
2860	2238 586 59812	100nF 20-80% 50V 0603
2861	2238 586 59812	100nF 20-80% 50V 0603
2864	2238 586 59812	100nF 20-80% 50V 0603
2865	2238 586 59812	100nF 20-80% 50V 0603
2866	2238 586 59812	100nF 20-80% 50V 0603
2867	2238 586 59812	100nF 20-80% 50V 0603
2870	2020 021 91554	10µF 20% 16V
2871	2020 021 91554	10µF 20% 16V
2872	2238 586 59812	100nF 20-80% 50V 0603
2874	2020 021 91554	10µF 20% 16V
2875	2020 021 91554	10µF 20% 16V
2876	2238 586 59812	100nF 20-80% 50V 0603
2878	2020 552 94427	100pF 5% 50v 0603
2880	2020 021 91557	100µF 20% 16V
2881	4822 126 11669	27pF 5% 50V 0603
2884	2238 586 59812	100nF 20-80% 50V 0603
2885	4822 126 11663	12pF 5% 50V 0603
2886	2238 586 59812	100nF 20-80% 50V 0603
2887	2238 586 59812	100nF 20-80% 50V 0603
2888	2238 586 59812	100nF 20-80% 50V 0603
2889	2238 586 59812	100nF 20-80% 50V 0603
2890	2238 586 59812	100nF 20-80% 50V 0603
2891	2238 586 59812	100nF 20-80% 50V 0603
2892	2238 586 59812	100nF 20-80% 50V 0603
2893	2238 586 59812	100nF 20-80% 50V 0603
2894	2238 586 59812	100nF 20-80% 50V 0603
2895	2238 586 59812	100nF 20-80% 50V 0603
2896	2238 586 59812	100nF 20-80% 50V 0603
2897	2238 586 59812	100nF 20-80% 50V 0603
2898	2238 586 59812	100nF 20-80% 50V 0603
2899	2238 586 59812	100nF 20-80% 50V 0603
2908	2238 586 59812	100nF 20-80% 50V 0603
2909	2238 586 59812	100nF 20-80% 50V 0603
2910	2238 586 59812	100nF 20-80% 50V 0603
2911	2238 586 59812	100nF 20-80% 50V 0603
2912	2238 586 59812	100nF 20-80% 50V 0603
2912	3198 017 44740	470nF 10V 0603

3001	4822 051 30472	4.7kΩ 5% 0.062W
3002	4822 051 30472	4.7kΩ 5% 0.062W
3003	4822 117 13525	24kΩ 1% 0.62W 0603
3005	4822 051 30103	10kΩ 5% 0.062W
3006	4822 051 30471	470Ω 5% 0.062W
3007	3198 031 14710	4 x 470Ω 5% 1206
3008	4822 117 13526	150Ω 5% 0.63W
3009	4822 117 13501	82Ω 5% 0.62W 0603
3011	4822 051 30471	470Ω 5% 0.062W
3012	3198 031 11010	4 x 100Ω 5% 1206
3013	4822 051 30103	10kΩ 5% 0.062W
3014	4822 051 30682	6.8kΩ 5% 0.062W
3015	4822 051 30474	470kΩ 5% 0.062W
3016	4822 051 30152	1.5kΩ 5% 0.062W
3017	4822 051 30472	4.7kΩ 5% 0.062W
3018	4822 051 30103	10kΩ 5% 0.062W
3019	4822 051 30472	4.7kΩ 5% 0.062W
3020	4822 051 30103	10kΩ 5% 0.062W
3021	4822 051 30103	10kΩ 5% 0.062W
3024	4822 051 30273	27kΩ 5% 0.062W
3025	4822 051 30221	220Ω 5% 0.062W
3026	4822 051 30472	4.7kΩ 5% 0.062W
3027	4822 117 12925	47kΩ 1% 0.063W 0603
3029	4822 051 30103	10kΩ 5% 0.062W
3031	4822 051 30103	10kΩ 5% 0.062W
3033	4822 051 30103	10kΩ 5% 0.062W
3034	3198 031 11010	4 x 100Ω 5% 1206
3035	3198 031 11010	4 x 100Ω 5% 1206
3039	4822 051 30181	180Ω 5% 0.062W
3040	4822 051 30472	4.7kΩ 5% 0.062W
3042	4822 051 30472	4.7kΩ 5% 0.062W
3044	4822 051 30272	2.7kΩ 5% 0.062W
3048	3198 031 11010	4 x 100Ω 5% 1206
3049	3198 031 11010	4 x 100Ω 5% 1206
3050	3198 031 11010	4 x 100Ω 5% 1206
3051	3198 031 11010	4 x 100Ω 5% 1206
3052	3198 031 11010	4 x 100Ω 5% 1206
3053	4822 051 30101	100Ω 5% 0.062W
3054	3198 031 11010	4 x 100Ω 5% 1206
3055	3198 031 11010	4 x 100Ω 5% 1206
3056	3198 031 11010	4 x 100Ω 5% 1206
3057	3198 031 11010	4 x 100Ω 5% 1206
3059	2322 704 66201	620Ω 1% 0603
3061	4822 051 30103	10kΩ 5% 0.062W
3062	4822 051 30103	10kΩ 5% 0.062W
3064	3198 031 11010	4 x 100Ω 5% 1206
3065	4822 051 30472	4.7kΩ 5% 0.062W
3066	4822 117 12925	47kΩ 1% 0.063W 0603
3067	4822 051 30474	470kΩ 5% 0.062W
3068	4822 051 30272	2.7kΩ 5% 0.062W
3069	4822 051 30272	2.7kΩ 5% 0.062W
3073	3198 031 14710	4 x 470Ω 5% 1206
3074	3198 031 14710	4 x 470Ω 5% 1206
3076	3198 031 14710	4 x 470Ω 5% 1206
3078	3198 031 14710	4 x 470Ω 5% 1206
3079	4822 051 30472	4.7kΩ 5% 0.062W
3080	4822 051 30472	4.7kΩ 5% 0.062W
3081	4822 051 30008	Jumper 0603
3088	4822 051 30472	4.7kΩ 5% 0.062W
3090	3198 031 14710	4 x 470Ω 5% 1206
3093	4822 051 30103	10kΩ 5% 0.062W
3094	4822 117 12925	47kΩ 1% 0.063W 0603
3095	4822 117 12925	47kΩ 1% 0.063W 0603
3096	4822 117 12925	47kΩ 1% 0.063W 0603
3097	4822 051 30008	Jumper 0603
3099	3198 031 14710	4 x 470Ω 5% 1206
3301	4822 117 13632	100kΩ 1% 0603 0.62W
3302	4822 051 30102	1kΩ 5% 0.062W
3303	4822 117 13632	100kΩ 1% 0603 0.62W
3304⚠	2322 750 63908	3.9Ω 5% Fuse 1206
3306	4822 051 30221	220Ω 5% 0.062W
3307	4822 051 30183	18kΩ 5% 0.062W
3308	4822 051 20154	150kΩ 5% 0.1W
3310	4822 051 30563	56kΩ 5% 0.062W
3311	4822 117 13632	100kΩ 1% 0603 0.62W
3312	4822 117 13632	100kΩ 1% 0603 0.62W
3313	4822 117 13632	100kΩ 1% 0603 0.62W
3314	4822 051 30103	10kΩ 5% 0.062W
3315	4822 051 30102	1kΩ 5% 0.062W
3316	4822 117 10834	47kΩ 1% 0.1W
3317	4822 051 30221	220Ω 5% 0.062W
3318	4822 051 30102	1kΩ 5% 0.062W
3319	4822 051 30102	1kΩ 5% 0.062W
3320	4822 051 30101	100Ω 5% 0.062W
3321	4822 051 30101	100Ω 5% 0.062W
3322	4822 051 10102	1kΩ 2% 0.25W
3323	4822 117 12925	47kΩ 1% 0.063W 0603
3324	4822 051 30472	4.7kΩ 5% 0.062W
3327	4822 117 13632	100kΩ 1% 0603 0.62W
3328	4822 051 30393	39kΩ 5% 0.062W
3329	4822 117 13568	6.8Ω 5% 1206
3331	4822 051 30102	1kΩ 5% 0.062W
3333	4822 051 30102	1kΩ 5% 0.062W
3334	4822 051 30102	1kΩ 5% 0.062W
3336	4822 051 30102	1kΩ 5% 0.062W
3340	4822 051 30101	100Ω 5% 0.062W
3341	4822 051 30101	100Ω 5% 0.062W
3342	4822 051 30101	100Ω 5% 0.062W
3343	4822 051 20683	68kΩ 5% 0.1W
3344	4822 051 30222	2.2kΩ 5% 0.062W
3345	4822 051 30103	10kΩ 5% 0.062W
3346	4822 051 30333	33kΩ 5% 0.062W
3347	4822 051 30223	22kΩ 5% 0.062W
3348	4822 051 30222	2.2kΩ 5% 0.062W
3349	4822 051 30472	4.7kΩ 5% 0.062W
3362	4822 051 30684	680kΩ 5% 0.062W
3363	4822 051 30102	1kΩ 5% 0.062W
3364	4822 051 30103	10kΩ 5% 0.062W
3365	4822 051 30103	10kΩ 5% 0.062W
3366	4822 051 30221	220Ω 5% 0.062W
3367	4822 051 30221	220Ω 5% 0.062W
3368	3198 021 32250	2M2 5% 0603
3370	4822 051 30101	100Ω 5% 0.062W
3371	4822 051 30479	47Ω 5% 0.062W
3372	4822 051 30471	470Ω 5% 0.062W
3373	4822 051 30008	Jumper 0603
3374	4822 051 30008	Jumper 0603
3375	4822 051 30008	Jumper 0603
3376	4822 051 30101	100Ω 5% 0.062W
3377	4822 051 30101	100Ω 5% 0.062W
3378	4822 051 30153	15kΩ 5% 0.062W
3379	4822 051 30008	Jumper 0603
3380	4822 051 30101	100Ω 5% 0.062W
3382	4822 051 30561	560Ω 5% 0.062W
3385	4822 051 30471	470Ω 5% 0.062W
3386	4822 051 30223	22kΩ 5% 0.062W
3390	4822 051 30221	220Ω 5% 0.062W
3391	4822 051 30472	4.7kΩ 5% 0.062W
3393	4822 117 13632	100kΩ 1% 0603 0.62W
3394	4822 051 30472	4.7kΩ 5% 0.062W
3400	4822 117 11152	4.7Ω 5% 0.062W
3402⚠	2322 750 63908	3.9Ω 5% Fuse 1206
3403	4822 051 30101	100Ω 5% 0.062W
3404	4822 051 30561	560Ω 5% 0.062W
3405	4822 051 30102	1kΩ 5% 0.062W
3406	2322 702 60279	27Ω 5% 0.1W 0603
3408	4822 051 30101	100Ω 5% 0.062W
3411	4822 051 30272	2.7kΩ 5% 0.062W
3412	4822 051 30102	1kΩ 5% 0.062W
3414	4822 051 30472	4.7kΩ 5% 0.062W
3415	4822 051 30222	2.2kΩ 5% 0.062W
3418	4822 051 30391	390Ω 5% 0.062W
3419	4822 051 30339	33Ω 5% 0.062W
3435	4822 051 30472	4.7kΩ 5% 0.062W
3436	4822 051 30181	180Ω 5% 0.062W
3437	4822 051 30471	470Ω 5% 0.062W
3439	4822 051 30471	470Ω 5% 0.062W
3441	4822 051 30562	5.6kΩ 5% 0.063W 0603
3445	4822 051 30271	270Ω 5% 0.062W
3446	4822 051 30101	100Ω 5% 0.062W
3463	4822 051 30472	4.7kΩ 5% 0.062W
3468	4822 117 13632	100kΩ 1% 0603 0.62W
3472	4822 051 30223	22kΩ 5% 0.062W
3500	4822 051 30153	15kΩ 5% 0.062W
3501	4822 051 20479	47Ω 5% 0.1W
3501	4822 157 11716	Bead 30Ω at 100MHz
3504	4822 051 30123	12kΩ 5% 0.062W
3505	4822 051 30153	15kΩ 5% 0.062W
3506	4822 051 20479	47Ω 5% 0.1W
3506	4822 157 11716	Bead 30Ω at 100MHz
3509	4822 051 30123	12kΩ 5% 0.062W
3510	4822 117 12925	47kΩ 1% 0.063W 0603
3511	4822 117 13632	100kΩ 1% 0603 0.62W
3512	4822 051 30154	150k 5% 0.062W
3513	4822 117 12889	270kΩ 1% 0.063W 0603
3514	4822 117 12925	47kΩ 1% 0.063W 0603
3515	4822 117 13632	100kΩ 1% 0603 0.62W
3516	4822 051 30392	3.9kΩ 5% 0.063W 0603
3517	4822 051 30472	4.7kΩ 5% 0.062W
3519	4822 051 30103	10kΩ 5% 0.062W
3520	4822 117 12925	47kΩ 1% 0.063W 0603

3521	4822 117 13632	100kΩ 1% 0603 0.62W
3522	4822 117 13632	100kΩ 1% 0603 0.62W
3523	4822 117 13632	100kΩ 1% 0603 0.62W
3524	4822 117 13632	100kΩ 1% 0603 0.62W
3525	4822 051 30684	680kΩ 5% 0.062W
3526	4822 051 30105	1MΩ 5% 0.062W
3527	4822 051 30101	100Ω 5% 0.062W
3528	4822 051 30103	10kΩ 5% 0.062W
3529	4822 051 30103	10kΩ 5% 0.062W
3530	4822 051 30103	10kΩ 5% 0.062W
3531	4822 117 12902	8.2kΩ 1% 0.063W 0603
3532	4822 051 30102	1kΩ 5% 0.062W
3533	4822 051 30103	10kΩ 5% 0.062W
3540	4822 051 30103	10kΩ 5% 0.062W
3544	4822 117 12925	47kΩ 1% 0.063W 0603
3545	4822 117 11817	1.2kΩ 1% 1/16W
3546	4822 051 30102	1kΩ 5% 0.062W
3547	4822 117 12925	47kΩ 1% 0.063W 0603
3552	4822 051 30103	10kΩ 5% 0.062W
3553	4822 051 30223	22kΩ 5% 0.062W
3554	4822 051 30223	22kΩ 5% 0.062W
3555	4822 051 30223	22kΩ 5% 0.062W
3556	4822 051 30101	100Ω 5% 0.062W
3557	4822 051 30101	100Ω 5% 0.062W
3558	4822 051 30101	100Ω 5% 0.062W
3559	4822 051 30101	100Ω 5% 0.062W
3560	4822 051 30101	100Ω 5% 0.062W
3561	4822 051 30101	100Ω 5% 0.062W
3562	4822 051 30101	100Ω 5% 0.062W
3563	4822 051 30101	100Ω 5% 0.062W
3564	4822 051 30101	100Ω 5% 0.062W
3567	4822 051 30101	100Ω 5% 0.062W
3568	4822 051 30101	100Ω 5% 0.062W
3569	4822 051 30101	100Ω 5% 0.062W
3570	4822 051 30101	100Ω 5% 0.062W
3571	4822 051 30101	100Ω 5% 0.062W
3572	4822 051 30101	100Ω 5% 0.062W
3573	4822 051 30101	100Ω 5% 0.062W
3574	4822 051 30101	100Ω 5% 0.062W
3575	4822 051 30101	100Ω 5% 0.062W
3576	4822 051 30272	2.7kΩ 5% 0.062W
3577	4822 051 30101	100Ω 5% 0.062W
3578	4822 051 30103	10kΩ 5% 0.062W
3579	4822 051 30103	10kΩ 5% 0.062W
3601	4822 051 30223	22kΩ 5% 0.062W
3602	4822 051 30124	120kΩ 5% 0.062W
3603	4822 117 12891	220kΩ 1% 0.063W 0603
3604	4822 051 30124	120kΩ 5% 0.062W
3605	4822 117 12891	220kΩ 1% 0.063W 0603
3606	4822 051 30124	120kΩ 5% 0.062W
3607	4822 117 12891	220kΩ 1% 0.063W 0603
3608	4822 051 30124	120kΩ 5% 0.062W
3609	4822 117 12891	220kΩ 1% 0.063W 0603
3612	4822 117 12925	47kΩ 1% 0.063W 0603
3613	4822 117 12925	47kΩ 1% 0.063W 0603
3614	4822 117 12925	47kΩ 1% 0.063W 0603
3615	4822 117 12925	47kΩ 1% 0.063W 0603
3616	4822 051 30272	2.7kΩ 5% 0.062W
3624	4822 117 11817	1.2kΩ 1% 1/16W
3626	4822 051 30154	150k 5% 0.062W
3627	4822 051 30103	10kΩ 5% 0.062W
3628	4822 051 30223	22kΩ 5% 0.062W
3630	4822 051 30563	56kΩ 5% 0.062W
3634	4822 051 30121	120Ω 5% 0.062W
3636	4822 051 30271	270Ω 5% 0.062W
3637	4822 117 12864	82kΩ 5% 0.6W
3639	4822 051 30102	1kΩ 5% 0.062W
3640	4822 051 30101	100Ω 5% 0.062W
3641	4822 051 30101	100Ω 5% 0.062W
3642	4822 051 30101	100Ω 5% 0.062W
3643	4822 051 30101	100Ω 5% 0.062W
3644	4822 117 11152	4.7Ω 5% 0.062W
3653	4822 051 30008	Jumper 0603
3654	4822 051 30008	Jumper 0603
3655	4822 051 30101	100Ω 5% 0.062W
3656	4822 051 30101	100Ω 5% 0.062W
3657	4822 051 30563	56kΩ 5% 0.062W
3658	4822 051 30154	150k 5% 0.062W
3659	4822 051 30154	150k 5% 0.062W
3663	4822 051 30181	180Ω 5% 0.062W
3664	4822 051 30102	1kΩ 5% 0.062W
3666	4822 051 30154	150k 5% 0.062W
3667	4822 117 12864	82kΩ 5% 0.6W
3668	4822 051 30563	56kΩ 5% 0.062W
3669	4822 051 30271	270Ω 5% 0.062W
3670	4822 051 30102	1kΩ 5% 0.062W
3671	4822 117 11817	1.2kΩ 1% 1/16W
3673	4822 051 30103	10kΩ 5% 0.062W
3675	4822 051 30181	180Ω 5% 0.062W
3676	4822 117 13632	100kΩ 1% 0603 0.62W
3677	4822 117 13632	100kΩ 1% 0603 0.62W
3680	4822 117 11817	1.2kΩ 1% 1/16W
3681	4822 051 30154	150k 5% 0.062W
3682	4822 051 30102	1kΩ 5% 0.062W
3683	4822 051 30223	22kΩ 5% 0.062W
3684	4822 051 30008	Jumper 0603
3685	4822 051 30008	Jumper 0603
3688	4822 051 30008	Jumper 0603
3689	4822 051 30008	Jumper 0603
3692	4822 051 30008	Jumper 0603
3693	4822 051 30008	Jumper 0603
3698	4822 117 11817	1.2kΩ 1% 1/16W
3699	2322 702 60184	180k 5% 0603
3703	5322 117 13062	390R 1% 0.063W 0603
3704	5322 117 13047	330Ω 1% 0.063W 0603
3705	5322 117 13047	330Ω 1% 0.063W 0603
3709	4822 051 30101	100Ω 5% 0.062W
3710	4822 051 30101	100Ω 5% 0.062W
3711	4822 117 12925	47kΩ 1% 0.063W 0603
3712	4822 117 12925	47kΩ 1% 0.063W 0603
3713	4822 051 30181	180Ω 5% 0.062W
3714	4822 051 30181	180Ω 5% 0.062W
3715	4822 051 30181	180Ω 5% 0.062W
3716	4822 117 13632	100kΩ 1% 0603 0.62W
3717	4822 117 13632	100kΩ 1% 0603 0.62W
3718	4822 117 13632	100kΩ 1% 0603 0.62W
3719	4822 051 30332	3.3kΩ 5% 0.062W
3720	4822 051 30103	10kΩ 5% 0.062W
3721	4822 117 12917	1Ω 5% 0.062W 0603
3725	4822 051 30332	3.3kΩ 5% 0.062W
3726	4822 117 11817	1.2kΩ 1% 1/16W
3727	4822 051 30151	150Ω 5% 0.062W
3728	4822 051 30151	150Ω 5% 0.062W
3729	4822 051 30689	68Ω 5% 0.063W 0603
3730	4822 051 30681	680Ω 5% 0.062W
3731	4822 051 30472	4.7kΩ 5% 0.062W
3733	4822 051 30472	4.7kΩ 5% 0.062W
3735	4822 117 12917	1Ω 5% 0.062W 0603
3736	4822 051 30101	100Ω 5% 0.062W
3737	4822 051 30102	1kΩ 5% 0.062W
3738	4822 051 30102	1kΩ 5% 0.062W
3739	4822 051 30153	15kΩ 5% 0.062W
3740	4822 051 30102	1kΩ 5% 0.062W
3741	4822 051 30183	18kΩ 5% 0.062W
3742	4822 051 30183	18kΩ 5% 0.062W
3744	4822 051 30222	2.2kΩ 5% 0.062W
3745	4822 051 30102	1kΩ 5% 0.062W
3746	4822 051 30392	3.9kΩ 5% 0.063W 0603
3747	4822 051 30154	150k 5% 0.062W
3748	4822 117 12891	220kΩ 1% 0.063W 0603
3749	4822 051 30392	3.9kΩ 5% 0.063W 0603
3750	4822 051 30332	3.3kΩ 5% 0.062W
3751	4822 051 30472	4.7kΩ 5% 0.062W
3752	4822 117 12917	1Ω 5% 0.062W 0603
3753	4822 117 12917	1Ω 5% 0.062W 0603
3754	4822 051 30101	100Ω 5% 0.062W
3755	4822 051 30472	4.7kΩ 5% 0.062W
3756	4822 117 12902	8.2kΩ 1% 0.063W 0603
3757	4822 051 30479	47Ω 5% 0.062W
3758	4822 051 30472	4.7kΩ 5% 0.062W
3759	4822 051 30221	220Ω 5% 0.062W
3762	4822 051 30101	100Ω 5% 0.062W
3763	4822 051 30221	220Ω 5% 0.062W
3763	4822 117 12139	22Ω 5% 0.062W
3764	4822 051 30109	10Ω 5% 0.062W
3771	4822 117 12971	15Ω 5% 0.62W 0603
3772	4822 117 12971	15Ω 5% 0.62W 0603
3773	4822 117 12925	47kΩ 1% 0.063W 0603
3774	4822 117 12925	47kΩ 1% 0.063W 0603
3781	4822 117 12925	47kΩ 1% 0.063W 0603
3782	4822 117 12925	47kΩ 1% 0.063W 0603
3783	4822 117 12925	47kΩ 1% 0.063W 0603
3785	4822 117 13577	330Ω 1% 0805 1.25W
3786	4822 117 13577	330Ω 1% 0805 1.25W
3787	4822 117 13577	330Ω 1% 0805 1.25W
3788	5322 117 13034	1k5 1% 0.063W 0603
3789	5322 117 13043	220Ω 1% 0.063W 0603
3790	5322 117 13059	560Ω 1% 0.063W 0603
3791	5322 117 13049	470Ω 1% 0.063W 0603
3792	4822 051 30102	1kΩ 5% 0.062W
3793	4822 051 30222	2.2kΩ 5% 0.062W
3794	4822 117 12971	15Ω 5% 0.62W 0603
3795	4822 051 30339	33Ω 5% 0.062W
3800	5322 117 13058	150Ω 1% 0.063W 0603
3801	4822 051 30102	1kΩ 5% 0.062W
3802	5322 117 13058	150Ω 1% 0.063W 0603
3803	5322 117 13058	150Ω 1% 0.063W 0603
3804	4822 051 30102	1kΩ 5% 0.062W
3805	5322 117 13049	470Ω 1% 0.063W 0603
3806	5322 117 13049	470Ω 1% 0.063W 0603
3807	5322 117 13068	82Ω 1% 0.063W 0603
3808	5322 117 13057	820Ω 1% 0.063W 0603
3809	5322 117 13043	220Ω 1% 0.063W 0603
3810	4822 051 30391	390Ω 5% 0.062W
3811	4822 051 30759	75Ω 5% 0.062W
3812	4822 051 30759	75Ω 5% 0.062W
3813	4822 051 30391	390Ω 5% 0.062W
3814	4822 051 30759	75Ω 5% 0.062W
3815	4822 051 30759	75Ω 5% 0.062W
3816	4822 051 30391	390Ω 5% 0.062W
3817	4822 051 30759	75Ω 5% 0.062W
3818	4822 051 30759	75Ω 5% 0.062W
3819	4822 051 30759	75Ω 5% 0.062W
3820	4822 051 30759	75Ω 5% 0.062W
3821	4822 051 30759	75Ω 5% 0.062W
3822	4822 051 30759	75Ω 5% 0.062W
3823	4822 051 30759	75Ω 5% 0.062W
3824	4822 051 30759	75Ω 5% 0.062W
3825	5322 117 13058	150Ω 1% 0.063W 0603
3826	5322 117 13058	150Ω 1% 0.063W 0603
3827	5322 117 13058	150Ω 1% 0.063W 0603
9015	4822 051 30008	Jumper 0603
9302	4822 051 30008	Jumper 0603
9303	4822 051 30008	Jumper 0603
9304	4822 051 30008	Jumper 0603
9318	4822 051 30008	Jumper 0603
9322	4822 051 30008	Jumper 0603
9406	4822 051 30008	Jumper 0603
9407	4822 051 30008	Jumper 0603
9410	4822 051 30008	Jumper 0603
9413	4822 051 30008	Jumper 0603
9416	4822 051 30008	Jumper 0603
9417	4822 051 30008	Jumper 0603
9418	4822 051 30008	Jumper 0603
9419	4822 051 30008	Jumper 0603
9420	4822 051 30008	Jumper 0603
9520	4822 051 30008	Jumper 0603
9522	4822 051 30008	Jumper 0603
9603	4822 051 30008	Jumper 0603
9604	4822 051 30008	Jumper 0603
9607	4822 051 30008	Jumper 0603
9608	4822 051 30008	Jumper 0603
9609	4822 051 30008	Jumper 0603
9610	4822 051 30008	Jumper 0603
9642	4822 051 30008	Jumper 0603
9645	4822 051 30008	Jumper 0603
9652	4822 051 30008	Jumper 0603
9682	4822 051 30008	Jumper 0603
9683	4822 051 30008	Jumper 0603
9684	4822 051 30008	Jumper 0603
9685	4822 051 30008	Jumper 0603
9686	4822 051 30008	Jumper 0603
9687	4822 051 30008	Jumper 0603
9688	4822 051 30008	Jumper 0603
9689	4822 051 30008	Jumper 0603
9691	4822 051 30008	Jumper 0603
9692	4822 051 30008	Jumper 0603
9694	4822 051 30008	Jumper 0603
9702	4822 051 30008	Jumper 0603
9704	4822 051 30008	Jumper 0603
9713	4822 051 30008	Jumper 0603
9715	4822 051 30008	Jumper 0603
9716	4822 051 30008	Jumper 0603
9717	4822 051 30008	Jumper 0603
9718	4822 051 30008	Jumper 0603
9719	4822 051 30008	Jumper 0603
9722	4822 051 30008	Jumper 0603
9724	4822 051 30008	Jumper 0603
9725	4822 051 30008	Jumper 0603
9731	4822 051 30008	Jumper 0603
9733	4822 051 30008	Jumper 0603
9735	4822 051 30008	Jumper 0603
9736	4822 051 30008	Jumper 0603
9737	4822 051 30008	Jumper 0603
9738	4822 051 30008	Jumper 0603
9739	4822 051 30008	Jumper 0603
9740	4822 051 30008	Jumper 0603
9741	4822 117 12662	4 x 10Ω 5%
9744	4822 051 30008	Jumper 0603
9747	4822 051 30008	Jumper 0603
9754	4822 051 30008	Jumper 0603
9760	4822 051 30008	Jumper 0603
9761	4822 051 30008	Jumper 0603
9762	4822 051 30008	Jumper 0603
9763	4822 051 30008	Jumper 0603
9764	4822 051 30008	Jumper 0603
9765	4822 051 30008	Jumper 0603
9768	4822 051 30008	Jumper 0603
9769	4822 051 30008	Jumper 0603
9901	4822 051 30008	Jumper 0603
9902	4822 051 30008	Jumper 0603
9903	4822 051 30008	Jumper 0603
9904	4822 051 30008	Jumper 0603
9905	4822 051 30008	Jumper 0603
9906	4822 051 30008	Jumper 0603
9907	4822 051 30008	Jumper 0603
9908	4822 051 30008	Jumper 0603
9909	4822 051 30008	Jumper 0603
9919	4822 051 30008	Jumper 0603
9920	4822 051 30008	Jumper 0603
9921	4822 051 30008	Jumper 0603
9925	4822 051 30008	Jumper 0603

9927	4822 051 30008	Jumper 0603
9928	4822 051 30008	Jumper 0603
9929	4822 051 30008	Jumper 0603
9935	4822 051 30008	Jumper 0603
9937	4822 051 30008	Jumper 0603
9938	4822 051 30008	Jumper 0603
9939	4822 051 30008	Jumper 0603
9944	4822 051 30008	Jumper 0603
9945	4822 051 30008	Jumper 0603
9946	4822 051 30008	Jumper 0603
9947	4822 051 30008	Jumper 0603
9948	4822 051 30008	Jumper 0603
9949	4822 051 30008	Jumper 0603
9950	4822 051 30008	Jumper 0603
9951	4822 051 30008	Jumper 0603
9952	4822 051 30008	Jumper 0603
9953	4822 051 30008	Jumper 0603
9954	4822 051 30008	Jumper 0603

5301	4822 157 11876	6.8µH 10% 0805
5302	4822 157 11876	6.8µH 10% 0805
5401	3198 018 56880	6.8µH 10% 0603
5403	2422 549 44461	Coil trim. 40.4MHz 5CCE
5404	2422 535 95427	Bead 120Ω at 100MHz
5405	2422 535 95427	Bead 120Ω at 100MHz
5406	4822 157 10586	2.2µH 10% 0805
5408	2422 549 44983	Coil trim. 78MHz 5CCB SMD
5409	2422 549 42896	Bead 120Ω at 100MHz
5411	4822 157 11892	0.22µH 10% 0805
5415	4822 157 11716	Bead 30Ω at 100MHz
5416	4822 157 11716	Bead 30Ω at 100MHz
5651	2422 549 43769	Bead 30Ω at 100MHz
5652	2422 549 43769	Bead 30Ω at 100MHz
5653	2422 549 43769	Bead 30Ω at 100MHz
5654	4822 157 11716	Bead 30Ω at 100MHz
5655	4822 157 11828	22µH 20% 0805
5656	4822 157 11876	6.8µH 10% 0805
5657	4822 051 30008	Jumper 0603
5658	4822 051 30008	Jumper 0603
5659	4822 051 30008	Jumper 0603
5660	4822 051 30008	Jumper 0603
5661	4822 051 30008	Jumper 0603
5662	4822 051 30008	Jumper 0603
5663	4822 051 30008	Jumper 0603
5666	4822 051 30008	Jumper 0603
5667	4822 051 30008	Jumper 0603
5668	4822 051 30008	Jumper 0603
5671	4822 157 11716	Bead 30Ω at 100MHz
5672	4822 157 11716	Bead 30Ω at 100MHz
5700	4822 157 10586	2.2µH 10% 0805
5701	3198 018 31580	1.5µH 10% 0805
5702	3198 018 31580	1.5µH 10% 0805
5705	4822 156 21729	Bead 1kΩ at 100MHz
5706	4822 157 11716	Bead 30Ω at 100MHz
5710	4822 156 21729	Bead 1kΩ at 100MHz
5711	4822 156 21729	Bead 1kΩ at 100MHz
5712	4822 156 21729	Bead 1kΩ at 100MHz
5713	4822 157 11716	Bead 30Ω at 100MHz
5714	4822 157 71206	Bead 600Ω at 100MHz
5716	4822 156 21729	Bead 1kΩ at 100MHz
5717	4822 156 21729	Bead 1kΩ at 100MHz
5718	4822 157 11716	Bead 30Ω at 100MHz
5719	4822 156 21729	Bead 1kΩ at 100MHz
5721	4822 157 71206	Bead 600Ω at 100MHz
5722	4822 156 21729	Bead 1kΩ at 100MHz
5724	4822 156 21729	Bead 1kΩ at 100MHz
5725	4822 157 71206	Bead 600Ω at 100MHz
5726	4822 156 21729	Bead 1kΩ at 100MHz
5727	4822 156 21729	Bead 1kΩ at 100MHz
5728	4822 157 11716	Bead 30Ω at 100MHz
5729	4822 157 11716	Bead 30Ω at 100MHz
5731	4822 156 21729	Bead 1kΩ at 100MHz
5736	4822 157 11876	6.8µH 10% 0805
5737	4822 156 21729	Bead 1kΩ at 100MHz
5738	4822 157 11716	Bead 30Ω at 100MHz
5739	4822 157 10586	2.2µH 10% 0805
5740	4822 157 10586	2.2µH 10% 0805
5741	4822 157 10586	2.2µH 10% 0805
5742	4822 157 11716	Bead 30Ω at 100MHz
5743	4822 051 20229	22Ω 5% 0.1W
5743	4822 156 21729	Bead 1kΩ at 100MHz
5744	4822 157 11716	Bead 30Ω at 100MHz
5900	4822 157 11716	Bead 30Ω at 100MHz
5901	4822 157 11716	Bead 30Ω at 100MHz
5902	4822 157 11716	Bead 30Ω at 100MHz
5903	4822 157 11716	Bead 30Ω at 100MHz
5904	4822 157 11716	Bead 30Ω at 100MHz
5910	2422 549 43062	Bead 600Ω at 100MHz 0603
5911	2422 549 43062	Bead 600Ω at 100MHz 0603
5912	2422 549 43062	Bead 600Ω at 100MHz 0603
5913	2422 549 43062	Bead 600Ω at 100MHz 0603
5914	2422 549 43062	Bead 600Ω at 100MHz 0603
5915	2422 549 43062	Bead 600Ω at 100MHz 0603
5917	2422 549 43062	Bead 600Ω at 100MHz 0603
5918	2422 549 43062	Bead 600Ω at 100MHz 0603
5919	2422 549 43062	Bead 600Ω at 100MHz 0603
5920	2422 549 43062	Bead 600Ω at 100MHz 0603

6001	4822 130 80622	BAT54
6002	4822 130 11397	BAS316
6003	4822 130 80622	BAT54
6004	4822 130 80622	BAT54
6005	4822 130 11422	PLVA2650A
6303	4822 130 11594	BZX284-C47
6304	4822 130 11397	BAS316
6306	3198 020 55680	BZX384-C5V6
6307	4822 130 11528	1PS76SB10
6309	4822 130 11397	BAS316
6310	4822 130 11416	PDZ6.8B
6311	9340 548 67115	PDZ22B
6312	4822 130 11397	BAS316
6313	9322 149 08685	BZM55-C22
6314	4822 130 11397	BAS316
6317	4822 130 11397	BAS316
6319	4822 130 11397	BAS316
6334	4822 130 11397	BAS316
6403	9340 552 30115	BA591
6652	9322 129 40685	BZM55-C10
6657	4822 130 10838	UDZ3.3B
6657	4822 130 11564	UDZ3.9B
6658	4822 130 11397	BAS316
6659	4822 130 80622	BAT54
6926	4822 130 10837	UDZS8.2B
6926	4822 130 11397	BAS316
6927	4822 130 11397	BAS316
6928	4822 130 11397	BAS316
6929	4822 130 11397	BAS316
6956	4822 130 10837	UDZS8.2B
6956	4822 130 11397	BAS316
6957	4822 130 10837	UDZS8.2B
6957	4822 130 11397	BAS316

7001	9352 684 81557	SAA5801H/015
7002	3198 010 42320	BC857BW
7003	3198 010 42310	BC847BW
7004	3198 010 42310	BC847BW
7005	9322 116 74668	LD1117D33
7006	3104 300 50441	MR27V3202F-NETN-9
7007	9322 157 20668	MSM51V18165F-60J
7008	3198 010 42310	BC847BW
7009	3198 010 42310	BC847BW
7010	3198 010 42320	BC857BW
7011	9322 156 81668	M24C32-WMN6TNKSA
7012	9322 156 72668	M29W400BT-90N1
7013	3198 010 42310	BC847BW
7014	3198 010 42320	BC857BW
7015	4822 209 73852	PMBT2369
7016	4822 209 73852	PMBT2369
7301	9352 681 65518	TDA9330N3
7303	3198 010 42320	BC857BW
7304	9340 310 30215	PDTC144ET
7307	9352 630 99118	TDA9181T
7310	3198 010 42310	BC847BW
7311	3198 010 42320	BC857BW
7312	9340 310 30215	PDTC144ET
7318	3198 010 42320	BC857BW
7320	3198 010 42310	BC847BW
7322	3198 010 42310	BC847BW
7323	9352 625 24518	TDA9321H/N2
7402	3198 010 42310	BC847BW
7403	5322 130 60159	BC846B
7404	3198 010 42310	BC847BW
7407	4822 130 60373	BC856B
7410	3198 010 42310	BC847BW
7411	5322 130 60159	BC846B
7651	9322 180 61702	MSP3411G-FH-B8-V3
7651	9322 183 28702	MSP3412G-FH-B3
7652	9351 869 40118	74HC4053PW
7653	9351 869 40118	74HC4053PW
7654	9340 425 20115	BC847BS
7656	9340 425 30115	BC847BPN
7663	9340 425 30115	BC847BPN
7664	9340 425 30115	BC847BPN
7665	9340 425 30115	BC847BPN
7666	9340 425 30115	BC847BPN
7667	3198 010 42310	BC847BW
7668	3198 010 42320	BC857BW
7674	3198 010 42310	BC847BW
7675	9340 425 20115	BC847BS
7677	3198 010 42310	BC847BW
7678	9340 425 20115	BC847BS
7679	9340 425 20115	BC847BS
7680	3198 010 42310	BC847BW
7681	9322 060 73668	MC33178DR2
7682	5322 130 60159	BC846B
7703	4822 209 73852	PMBT2369
7706	9322 142 88668	LF25CDT
7707	5322 130 60159	BC846B
7708	5322 130 60159	BC846B
7709	5322 130 60159	BC846B
7710	5322 130 60159	BC846B
7711	2422 486 80938	Socket 32p f
7712	9351 870 00118	74HC573PW
7713	9352 688 09557	SAA4978H/V204 Y
7714	9965 000 02179	MS81V04160-25TB
7715	4822 209 73852	PMBT2369
7717	9352 498 00518	SAA4955TJ/V1
7718	9352 695 58557	SAA4993H/V1
7719	9352 498 00518	SAA4955TJ/V1
7722	9965 000 02179	MS81V04160-25TB
7723	9965 000 02179	MS81V04160-25TB
7724	9322 188 08702	T8F24EF-0002 EAGLE
7725	4822 209 73852	PMBT2369
7726	4822 209 17398	LD1117DT33
7727	9322 170 14668	LF15ABDT
7728	5322 130 42718	BFS20
7729	5322 130 42718	BFS20
7730	5322 130 42718	BFS20
7731	5322 130 42718	BFS20
7732	5322 130 42718	BFS20
7733	5322 130 42718	BFS20
7999	3104 317 43881	Software (check Prod.Surv.)

DW Panel [C]

Various

0200	4822 267 10734	Connector 5p m
0201	4822 267 10557	Connector 10p
0205	2422 025 16587	Connector FFC 10p f
0207	4822 267 10565	Connector 4p
0236	4822 267 10735	Connector 3p m
0237	4822 267 10676	Connector 1P
0272	2422 025 16382	Connector 3p m
1002	3139 188 01661	VIF/DEMOD. EUROPE1
1327	4822 242 10694	Resonator 12MHz
1333	2422 549 44311	Filter 5M8/6M5 TPWCC16B
1352	2422 549 44223	Filter SAW OFWK7260M

2261	4822 124 40207	100µF 20% 25V
2265	4822 124 40207	100µF 20% 25V
2269	4822 126 13751	47nF 10% 63V
2270	4822 126 13751	47nF 10% 63V
2271	4822 126 13751	47nF 10% 63V
2272	5322 126 11583	10nF 10% 50V 0603
2301	3198 017 41050	1µF 10V 0603
2302	5322 126 10184	820pF 5% 50V 3
2303	5322 126 10223	4.7nF 10% 63V
2306	5322 126 11583	10nF 10% 50V 0603
2309	4822 126 14585	100nF 10% 50V
2312	4822 122 33177	10nF 20% 50V
2313	4822 126 14585	100nF 10% 50V
2314	4822 126 14585	100nF 10% 50V
2316	2238 916 15641	22nF 10% 25V 0603
2317	4822 126 13879	220nF 20% 16V
2319	2238 586 59812	100nF 20-80% 50V 0603
2321	5322 126 10465	3.9nF 10% 50V
2322	4822 124 40248	10µF 20% 63V
2324	4822 126 14585	100nF 10% 50V
2327	2222 867 15339	33pF 5% 50V 0603
2328	2222 867 15339	33pF 5% 50V 0603
2331	4822 124 22652	2.2µF 20% 50V
2332	4822 126 14076	220nF 25V. 20%
2333	2238 586 59812	100nF 20-80% 50V 0603
2334	5322 122 32654	22nF 10% 63V
2335	4822 126 14043	1µF 20% 16V
2336	5322 126 10184	820pF 5% 50V 3
2338	4822 122 33127	2.2nF 10% 63V
2342	4822 126 13692	47pF 1% 63V
2345	4822 126 13692	47pF 1% 63V
2348	4822 126 11785	47pF 5% 50V 0603
2349	4822 122 33177	10nF 20% 50V
2350	4822 124 40248	10µF 20% 63V
2351	4822 122 33177	10nF 20% 50V
2354	4822 126 13482	470nF 80/20% 16V
2355	3198 017 41050	1µF 10V 0603
2356	4822 126 13482	470nF 80/20% 16V
2357	2238 861 18109	10pF 1% 50V

2372	5322 126 10223	4.7nF 10% 63V
2373	4822 124 21913	1µF 20% 63V
2374	5322 122 32654	22nF 10% 63V
2375	5322 126 10511	1nF 5% 50V
2376	5322 126 10511	1nF 5% 50V
2377	5322 126 10511	1nF 5% 50V
2380	4822 124 40248	10µF 20% 63V
2385	4822 126 13881	470pF 5% 50V
2386	4822 126 13881	470pF 5% 50V
2390	4822 126 11785	47pF 5% 50V 0603
2391	2020 552 94427	100pF 5% 50v 0603
2392	4822 126 14225	56pF 5% 50V 0603
2393	2020 552 94427	100pF 5% 50v 0603
2401	3198 017 41050	1µF 10V 0603
2402	3198 017 41050	1µF 10V 0603
2403	3198 017 41050	1µF 10V 0603
2404	3198 017 41050	1µF 10V 0603
2405	3198 017 41050	1µF 10V 0603
2411	4822 124 40248	10µF 20% 63V
2412	4822 126 13879	220nF 20% 16V
2415	4822 126 13879	220nF 20% 16V
2431	2238 586 59812	100nF 20-80% 50V 0603
2432	2238 586 59812	100nF 20-80% 50V 0603
2434	2238 586 59812	100nF 20-80% 50V 0603
2436	4822 124 40207	100µF 20% 25V
2438	3198 017 34730	47nF 16V 0603
2439	3198 017 34730	47nF 16V 0603
2440	3198 017 34730	47nF 16V 0603
2811	2238 586 59812	100nF 20-80% 50V 0603
2811	3198 023 41040	100nF 10% 100V 0603
2812	2238 586 59812	100nF 20-80% 50V 0603
2812	3198 023 41040	100nF 10% 100V 0603
2813	3198 016 31510	150pF 10% 50V 0603
2813	4822 122 33753	150pF 5% 50V
2814	3198 023 21040	100nF 10% 25V 0805
2814	4822 126 14585	100nF 10% 50V
2816	3198 025 51090	10µF 20% 50V
2816	4822 124 40248	10µF 20% 63V
2817	3198 023 21040	100nF 10% 25V 0805
2817	4822 126 14585	100nF 10% 50V
2818	3198 023 21040	100nF 10% 25V 0805
2818	4822 126 14585	100nF 10% 50V
2819	3198 023 21040	100nF 10% 25V 0805
2819	4822 126 14585	100nF 10% 50V
2821	3198 025 51090	10µF 20% 50V
2821	4822 124 40248	10µF 20% 63V
2822	3198 023 21040	100nF 10% 25V 0805
2822	4822 126 14585	100nF 10% 50V
2823	2238 586 59812	100nF 20-80% 50V 0603
2823	3198 023 41040	100nF 10% 100V 0603
2824	2238 586 59812	100nF 20-80% 50V 0603
2824	3198 023 41040	100nF 10% 100V 0603
2825	3198 016 01510	150pF 10% 50V 0805
2825	5322 122 33538	150pF 2% 63V
2826	3198 023 21040	100nF 10% 25V 0805
2826	4822 126 14585	100nF 10% 50V
2827	3198 025 31010	100µF 20% 25V
2827	4822 124 40207	100µF 20% 25V
2828	2238 586 59812	100nF 20-80% 50V 0603
2828	3198 023 41040	100nF 10% 100V 0603
2829	3198 023 21040	100nF 10% 25V 0805
2829	4822 126 14585	100nF 10% 50V
2831	3198 017 21050	1uF 5% 16V 0805
2831	4822 126 14043	1µF 20% 16V
2832	3198 017 21050	1uF 5% 16V 0805
2832	4822 126 14043	1µF 20% 16V
2833	2238 586 59812	100nF 20-80% 50V 0603
2833	3198 023 41040	100nF 10% 100V 0603
2834	3198 025 51090	10µF 20% 50V
2834	4822 124 40248	10µF 20% 63V
2836	2238 586 59812	100nF 20-80% 50V 0603
2836	3198 023 41040	100nF 10% 100V 0603
2837	3198 023 21040	100nF 10% 25V 0805
2837	4822 126 14585	100nF 10% 50V
2838	3198 025 02210	220µF 20% 6.3V
2838	4822 124 11912	220µF 20% 6.3V
2839	3198 023 21040	100nF 10% 25V 0805
2839	4822 126 14585	100nF 10% 50V
2841	3198 025 51090	10µF 20% 50V
2841	4822 124 40248	10µF 20% 63V
2842	3198 016 31510	150pF 10% 50V 0603
2842	4822 122 33753	150pF 5% 50V
2843	2238 586 59812	100nF 20-80% 50V 0603
2843	3198 023 41040	100nF 10% 100V 0603
2844	2238 586 59812	100nF 20-80% 50V 0603
2844	3198 023 41040	100nF 10% 100V 0603
2846	3198 023 21040	100nF 10% 25V 0805
2846	4822 126 14585	100nF 10% 50V
2847	3198 016 01510	150pF 10% 50V 0805
2847	5322 122 33538	150pF 2% 63V
2848	3198 023 21040	100nF 10% 25V 0805
2848	4822 126 14585	100nF 10% 50V
2849	3198 023 21040	100nF 10% 25V 0805
2849	4822 126 14585	100nF 10% 50V
2851	3198 025 51090	10µF 20% 50V
2851	4822 124 40248	10µF 20% 63V
2852	3198 017 01040	100nF 10% 16V 0805
2852	4822 126 14585	100nF 10% 50V
2853	3198 025 51090	10µF 20% 50V
2853	4822 124 40248	10µF 20% 63V
2854	3198 023 21040	100nF 10% 25V 0805
2854	4822 126 14585	100nF 10% 50V
2856	3198 016 01510	150pF 10% 50V 0805
2856	5322 122 33538	150pF 2% 63V
2857	3198 016 31510	150pF 10% 50V 0603
2857	4822 122 33753	150pF 5% 50V
2861	3198 025 51090	10µF 20% 50V
2861	4822 124 40248	10µF 20% 63V
2862	2238 586 59812	100nF 20-80% 50V 0603
2862	3198 023 41040	100nF 10% 100V 0603
2863	3198 025 52290	22µF 20% 50V
2863	4822 124 81151	22µF 50V
2864	3198 017 34730	47nF 16V 0603
2866	3198 017 34730	47nF 16V 0603
2867	3198 017 41050	1µF 10V 0603
2868	2238 586 59812	100nF 20-80% 50V 0603
2868	3198 023 41040	100nF 10% 100V 0603
2869	3198 025 31010	100µF 20% 25V
2869	4822 124 40207	100µF 20% 25V
2871	3198 017 41050	1µF 10V 0603
2872	3198 017 34730	47nF 16V 0603
2873	3198 017 34730	47nF 16V 0603
2874	3198 021 90030	Jumper 0603
2874	4822 051 30008	Jumper 0603
2876	3198 021 90030	Jumper 0603
2876	4822 051 30008	Jumper 0603
2877	3198 021 90030	Jumper 0603
2877	4822 051 30008	Jumper 0603
2878	3198 023 21040	100nF 10% 25V 0805
2878	4822 126 14585	100nF 10% 50V
2879	2238 586 59812	100nF 20-80% 50V 0603
2879	3198 023 41040	100nF 10% 100V 0603
2891	3198 017 01020	1nF 10% 50V 0805
2891	5322 122 31647	1nF 10% 63V
2892	3198 016 34790	47pF 10% 50V 0603
2892	4822 126 11785	47pF 5% 50V 0603
2893	3198 016 34790	47pF 10% 50V 0603
2893	4822 126 11785	47pF 5% 50V 0603
2894	3198 016 34790	47pF 10% 50V 0603
2894	4822 126 11785	47pF 5% 50V 0603
2895	3198 016 04790	47pf 10% 50V 0805
2895	4822 126 13692	47pF 1% 63V
2896	3198 016 04790	47pf 10% 50V 0805
2896	4822 126 13692	47pF 1% 63V
2897	3198 016 34790	47pF 10% 50V 0603
2897	4822 126 11785	47pF 5% 50V 0603
2898	3198 025 31010	100µF 20% 25V
2898	4822 124 40207	100µF 20% 25V
2899	3198 025 31010	100µF 20% 25V
2899	4822 124 40207	100µF 20% 25V

3263	4822 117 11449	2.2kΩ 5% 0.1W 0805
3264	4822 117 10833	10kΩ 1% 0.1W
3267	4822 051 20109	10Ω 5% 0.1W
3268	4822 051 20109	10Ω 5% 0.1W
3270	4822 051 20008	Jumper 0805
3301	4822 051 30102	1kΩ 5% 0.062W
3305	4822 117 12955	2.7kΩ 1% 0.1W 0805
3311	4822 051 20273	27kΩ 5% 0.1W
3312	4822 117 10833	10kΩ 1% 0.1W
3315	4822 117 12708	39kΩ1%0.1W0805RC12G
3316	4822 051 30681	680Ω 5% 0.062W
3318	4822 051 30101	100Ω 5% 0.062W
3321	4822 051 30103	10kΩ 5% 0.062W
3322	4822 117 12902	8.2kΩ 1% 0.063W 0603
3324	4822 051 20391	390Ω 5% 0.1W
3326	5322 117 12487	1k 1% 0.125W
3327	4822 051 30561	560Ω 5% 0.062W
3329	4822 117 11373	100Ω 1% 0805
3330	4822 117 11373	100Ω 1% 0805
3333	4822 051 30681	680Ω 5% 0.062W
3334	4822 051 30471	470Ω 5% 0.062W
3335	4822 051 20121	120Ω 5% 0,1W
3338	4822 051 20008	Jumper 0805
3339	4822 117 10833	10kΩ 1% 0.1W
3340	4822 051 30222	2.2kΩ 5% 0.062W
3341	4822 051 20479	47Ω 5% 0.1W
3344	4822 051 20479	47Ω 5% 0.1W
3346	4822 051 30561	560Ω 5% 0.062W
3348	4822 051 30008	Jumper 0603
3352	4822 051 30222	2.2kΩ 5% 0.062W
3353	4822 051 30682	6.8kΩ 5% 0.062W
3354	4822 051 30222	2.2kΩ 5% 0.062W
3355	4822 051 30273	27kΩ 5% 0.062W
3356	4822 051 30183	18kΩ 5% 0.062W
3370	4822 117 11373	100Ω 1% 0805
3371	4822 116 83933	15k 1% 0.1W
3372	4822 051 30008	Jumper 0603
3374	4822 051 30472	4.7kΩ 5% 0.062W
3381	4822 117 11373	100Ω 1% 0805
3382	4822 117 11373	100Ω 1% 0805
3383	4822 117 11373	100Ω 1% 0805
3384	4822 051 30103	10kΩ 5% 0.062W
3385	4822 051 30472	4.7kΩ 5% 0.062W
3386	4822 051 30103	10kΩ 5% 0.062W
3387	4822 051 30393	39kΩ 5% 0.062W
3388	4822 051 30103	10kΩ 5% 0.062W
3389	4822 051 30472	4.7kΩ 5% 0.062W
3390	4822 051 30471	470Ω 5% 0.062W
3401	4822 051 30101	100Ω 5% 0.062W
3402	4822 051 30101	100Ω 5% 0.062W
3403	4822 117 11373	100Ω 1% 0805
3404	4822 051 30101	100Ω 5% 0.062W
3405	4822 117 11373	100Ω 1% 0805
3411	4822 117 12925	47kΩ 1% 0.063W 0603
3412	4822 117 12925	47kΩ 1% 0.063W 0603
3413	4822 051 30102	1kΩ 5% 0.062W
3414	4822 117 12925	47kΩ 1% 0.063W 0603
3415	4822 117 12925	47kΩ 1% 0.063W 0603
3416	4822 051 30102	1kΩ 5% 0.062W
3417	4822 117 11373	100Ω 1% 0805
3418	4822 117 11373	100Ω 1% 0805
3423	4822 051 20561	560Ω 5% 0.1W
3424	4822 117 11448	180Ω 1% 0.1W
3431	4822 051 30101	100Ω 5% 0.062W
3432	4822 051 30101	100Ω 5% 0.062W
3437	4822 051 20472	4.7kΩ 5% 0.1W
3438	4822 051 30471	470Ω 5% 0.062W
3439	4822 051 20008	Jumper 0805
3453	4822 051 30472	4.7kΩ 5% 0.062W
3456	4822 051 30472	4.7kΩ 5% 0.062W
3457	4822 051 30472	4.7kΩ 5% 0.062W
3460	4822 051 30472	4.7kΩ 5% 0.062W
3461	4822 051 30472	4.7kΩ 5% 0.062W
3462	4822 052 10228	2Ω2 5% 0.33W
3801	3198 021 52210	220Ω 5% 0805
3801	4822 117 11503	220Ω 1% 0.1W
3802	3198 021 56810	680K 5% 0805
3802	4822 117 10361	680Ω 1% 0.1W
3803	3198 021 52210	220Ω 5% 0805
3803	4822 117 11503	220Ω 1% 0.1W
3804	3198 021 36810	680Ω 5% 0.062W
3804	4822 051 30681	680Ω 5% 0.062W
3805	3198 021 32210	220Ω 5% 0603
3805	4822 051 30221	220Ω 5% 0.062W
3806	3198 021 36810	680Ω 5% 0.062W
3806	4822 051 30681	680Ω 5% 0.062W
3807	3198 021 32210	220Ω 5% 0603
3807	4822 051 30221	220Ω 5% 0.062W
3808	3198 021 56810	680K 5% 0805
3808	4822 117 10361	680Ω 1% 0.1W
3809	3198 021 32210	220Ω 5% 0603
3809	4822 051 30221	220Ω 5% 0.062W
3810	3198 021 36810	680Ω 5% 0.062W
3810	4822 051 30681	680Ω 5% 0.062W
3811	3198 021 52210	220Ω 5% 0805
3811	4822 117 11503	220Ω 1% 0.1W
3812	3198 021 34790	47Ω 5% 0603
3812	4822 051 30479	47Ω 5% 0.062W
3813	3198 021 31510	150Ω 5% 0603
3813	4822 051 30151	150Ω 5% 0.062W
3814	3198 021 32230	22K 5% 0603
3814	4822 051 30223	22kΩ 5% 0.062W
3816	3198 021 34790	47Ω 5% 0603
3816	4822 051 30479	47Ω 5% 0.062W
3817	3198 021 31510	150Ω 5% 0603
3817	4822 051 30151	150Ω 5% 0.062W
3818	3198 021 34790	47Ω 5% 0603
3818	4822 051 30479	47Ω 5% 0.062W
3821	3198 021 31510	150Ω 5% 0603
3821	4822 051 30151	150Ω 5% 0.062W
3822	3198 021 34720	4.7kΩ 5% 0603
3822	4822 051 30472	4.7kΩ 5% 0.062W
3823	3198 021 56810	680K 5% 0805
3823	4822 117 10361	680Ω 1% 0.1W
3824	3198 021 90030	Jumper 0603
3824	4822 051 30008	Jumper 0603
3825	3198 021 32210	220Ω 5% 0603
3825	4822 051 30221	220Ω 5% 0.062W
3826	3198 021 33320	3.3kΩ 5% 0603
3826	4822 051 30332	3.3kΩ 5% 0.062W
3827	3198 021 31820	1.8kΩ 5% 0603
3827	4822 117 12903	1.8kΩ 1% 0.063W 0603
3828	3198 021 32210	220Ω 5% 0603
3828	4822 051 30221	220Ω 5% 0.062W
3829	3198 021 32210	220Ω 5% 0603
3829	4822 051 30221	220Ω 5% 0.062W
3831	3198 021 32210	220Ω 5% 0603
3831	4822 051 30221	220Ω 5% 0.062W

3832	3198 021 33930	39KΩ 5% 0605
3832	4822 051 30393	39kΩ 5% 0.062W
3833	3198 021 33320	3.3kΩ 5% 0603
3833	4822 051 30332	3.3kΩ 5% 0.062W
3834	3198 021 31820	1.8kΩ 5% 0603
3834	4822 117 12903	1.8kΩ 1% 0.063W 0603
3836	3198 021 33320	3.3kΩ 5% 0603
3836	4822 051 30332	3.3kΩ 5% 0.062W
3837	3198 021 31820	1.8kΩ 5% 0603
3837	4822 117 12903	1.8kΩ 1% 0.063W 0603
3838	3198 021 33930	39KΩ 5% 0605
3838	4822 051 30393	39kΩ 5% 0.062W
3839	3198 021 52210	220Ω 5% 0805
3839	4822 117 11503	220Ω 1% 0.1W
3846	3198 021 52210	220Ω 5% 0805
3846	4822 117 11503	220Ω 1% 0.1W
3854	3198 021 31010	100Ω 5% 0603
3854	4822 051 30101	100Ω 5% 0.062W
3856	3198 021 55620	5.6KΩ 5% 0805
3856	4822 051 20562	5.6kΩ 5% 0.1W 0805
3857	3198 021 51030	10K 5% 0805
3857	4822 117 10833	10kΩ 1% 0.1W
3858	3198 021 55620	5.6KΩ 5% 0805
3858	4822 051 20562	5.6kΩ 5% 0.1W 0805
3862	2306 204 03108	1R Fuse NFR25
3862	4822 052 10108	1Ω 5% 0.33W
3863	2306 204 03108	1R Fuse NFR25
3863	4822 052 10108	1Ω 5% 0.33W
3865	3198 021 33320	3.3kΩ 5% 0603
3865	4822 051 30332	3.3kΩ 5% 0.062W
3866	3198 021 31020	1kΩ 5% 0603
3866	4822 051 30102	1kΩ 5% 0.062W
3868	3198 021 31820	1.8kΩ 5% 0603
3868	4822 117 12903	1.8kΩ 1% 0.063W 0603
3869	3198 021 33320	3.3kΩ 5% 0603
3869	4822 051 30332	3.3kΩ 5% 0.062W
3871	3198 021 32220	2.2k 5% 0603
3871	4822 051 30222	2.2kΩ 5% 0.062W
3872	3198 021 34710	470Ω 5% 0603
3872	4822 051 30471	470Ω 5% 0.062W
3873	3198 021 31520	1.5KΩ 5% 0603
3873	4822 051 30152	1.5kΩ 5% 0.062W
3874	3198 021 31520	1.5KΩ 5% 0603
3874	4822 051 30152	1.5kΩ 5% 0.062W
3876	3198 021 54720	4.7K 5% 0805
3876	4822 051 20472	4.7kΩ 5% 0.1W
3878	3198 021 31020	1kΩ 5% 0603
3878	4822 051 30102	1kΩ 5% 0.062W
3879	3198 021 32210	220Ω 5% 0603
3879	4822 051 30221	220Ω 5% 0.062W
3881	3198 021 90030	Jumper 0603
3881	4822 051 30008	Jumper 0603
3884	3198 021 56810	680K 5% 0805
3884	4822 117 10361	680Ω 1% 0.1W
3886	3198 021 90030	Jumper 0603
3886	4822 051 30008	Jumper 0603
3887	3198 021 90030	Jumper 0603
3887	4822 051 30008	Jumper 0603
3888	3198 021 90030	Jumper 0603
3888	4822 051 30008	Jumper 0603
3889	3198 021 33390	33Ω 5% 0603
3889	4822 051 30339	33Ω 5% 0.062W
3890	3198 021 33390	33Ω 5% 0603
3890	4822 051 30339	33Ω 5% 0.062W
3891	3198 021 33390	33Ω 5% 0603
3891	4822 051 30339	33Ω 5% 0.062W
3892	3198 021 54720	4.7K 5% 0805
3892	4822 051 20472	4.7kΩ 5% 0.1W
3893	3198 021 31520	1.5KΩ 5% 0603
3893	4822 051 30152	1.5kΩ 5% 0.062W
3894	3198 021 32220	2.2k 5% 0603
3894	4822 051 30222	2.2kΩ 5% 0.062W
3895	3198 021 34710	470Ω 5% 0603
3895	4822 051 30471	470Ω 5% 0.062W
3896	3198 021 31520	1.5KΩ 5% 0603
3896	4822 051 30152	1.5kΩ 5% 0.062W
3897	3198 021 32210	220Ω 5% 0603
3897	4822 051 30221	220Ω 5% 0.062W
3898	3198 021 31020	1kΩ 5% 0603
3898	4822 051 30102	1kΩ 5% 0.062W
4304	4822 051 30008	Jumper 0603
4309	4822 051 30008	Jumper 0603
4310	4822 051 30008	Jumper 0603
4311	4822 051 30008	Jumper 0603
4312	4822 051 30008	Jumper 0603
4313	4822 051 20008	Jumper 0805
4314	4822 051 20008	Jumper 0805
4434	4822 051 20008	Jumper 0805
4437	4822 051 20008	Jumper 0805
4438	4822 051 20008	Jumper 0805
4827	3198 021 90030	Jumper 0603
4827	4822 051 30008	Jumper 0603
4828	3198 021 90030	Jumper 0603
4828	4822 051 30008	Jumper 0603
4831	3198 021 32210	220Ω 5% 0603
4831	4822 051 30221	220Ω 5% 0.062W

5261	4822 157 11299	10µH 5%
5309	4822 157 71334	0.68µH
5332	4822 157 71334	0.68µH
5333	4822 157 71334	0.68µH
5334	4822 157 71334	0.68µH
5349	4822 157 71694	0.82µH 10%
5350	3198 018 61590	15µH 5% 1008
5351	3198 018 61590	15µH 5% 1008
5352	4822 157 71334	0.68µH
5401	2422 535 94637	4.7µH 20% LHL08
5816	3198 018 90070	Bead 120Ω 100MHz
5816	4822 157 11506	Bead 120Ω at 100MHz
5818	3198 018 90070	Bead 120Ω 100MHz
5818	4822 157 11506	Bead 120Ω at 100MHz
5827	3198 018 90070	Bead 120Ω 100MHz
5827	4822 157 11506	Bead 120Ω at 100MHz
5834	3198 018 90070	Bead 120Ω 100MHz
5834	4822 157 11506	Bead 120Ω at 100MHz
5839	3198 018 90070	Bead 120Ω 100MHz
5839	4822 157 11506	Bead 120Ω at 100MHz
5848	3198 018 90070	Bead 120Ω 100MHz
5848	4822 157 11506	Bead 120Ω at 100MHz
5849	3198 018 90070	Bead 120Ω 100MHz
5849	4822 157 11506	Bead 120Ω at 100MHz
5851	3198 018 90070	Bead 120Ω 100MHz
5851	4822 157 11506	Bead 120Ω at 100MHz
5853	3198 018 90070	Bead 120Ω 100MHz
5853	4822 157 11506	Bead 120Ω at 100MHz

6301	4822 130 11525	1SS356
6412	4822 130 11397	BAS316
6415	4822 130 11397	BAS316
6801	3198 020 53980	BZX384-C2V9
6801	4822 130 11564	UDZ3.9B
6802	3198 020 53980	BZX384-C2V9
6802	4822 130 11564	UDZ3.9B
6803	3198 010 10630	BAS316
6803	4822 130 11397	BAS316

7201	2422 542 90104	TUNERTEDE9X217AALPS
7301	9352 638 73557	TDA8889H/N1
7305	3198 010 42310	BC847BW
7307	3198 010 42310	BC847BW
7331	3198 010 42320	BC857BW
7332	3198 010 42310	BC847BW
7385	3198 010 42310	BC847BW
7386	3198 010 42310	BC847BW
7401	5322 209 14481	HEF4053BT
7402	5322 209 14481	HEF4053BT
7403	4822 209 17345	M62320FP
7411	3198 010 42310	BC847BW
7412	3198 010 42310	BC847BW
7421	3198 010 42320	BC857BW
7438	3198 010 42310	BC847BW
7801	9352 639 83557	SAB9083H/N4
7802	9322 123 54687	LD1117V33
7803	4822 209 12776	TDA8601T/C1
7803	9351 538 90518	TDA8601T/C1
7804	9352 457 50115	74HC1G32GW
7805	3198 010 42310	BC847BW
7806	3198 010 42310	BC847BW
7807	3198 010 42310	BC847BW
7808	3198 010 42310	BC847BW
7809	3198 010 42310	BC847BW
7810	3198 010 42310	BC847BW
7824	3198 010 42310	BC847BW
7828	3198 010 42310	BC847BW
7832	3198 010 42310	BC847BW
7871	3198 010 42310	BC847BW
7874	3198 010 42310	BC847BW
7876	3198 010 42320	BC857BW
7891	3198 010 42310	BC847BW
7892	3198 010 42310	BC847BW
7893	3198 010 42310	BC847BW
7894	3198 010 42320	BC857BW
7895	3198 010 42310	BC847BW

Mainsswitch Panel [E]

Various

0040	3104 307 97621	Mainsknob FL11
0040	3139 177 55091	Knob Frost Silver
0046	3104 304 23471	Bracket mains unit FL11
0046	3139 124 32521	Front Interface
0151	4822 256 91766	LED holder
0160	4822 256 91766	LED holder
0170	4822 256 10562	Photo diode holder
0201	2422 025 16268	Connector 2p m
0202	2422 025 16268	Connector 2p m
0241	2422 025 06354	Connector 9p m
0248	4822 267 10567	Connector 4P
1031	2422 128 02972	Mains switch
1040	9322 155 82667	IR receiver TSOP2236
1050	9322 155 82667	IR receiver TSOP2236
1051	2422 128 02972	Mains switch
1060	3104 328 18291	MS assy PV2 mains
1060	3104 328 27321	MS Panel
8202	3104 311 02571	Cable 2p3/680/2p3
8202	4822 320 12513	Wiring VH 2P480VH
8946	3104 311 02911	Cable 9P/680/9P
8946	3104 311 04981	Cable 9p/820/9p

2040	4822 124 41584	100µF 20% 10V
2051	4822 124 41584	100µF 20% 10V
2060	4822 124 81151	22µF 50V
2070	3198 017 44740	470nF 10V 0603
2070	4822 126 13879	220nF 20% 16V
2071	4822 124 40248	10µF 20% 63V
2080	2238 586 59812	100nF 20-80% 50V 0603

3030	4822 053 21335	3M3 5% 0.5W
3037	4822 053 21335	3M3 5% 0.5W
3040	4822 051 30331	330Ω 5% 0.062W
3040	4822 117 13577	330Ω 1% 0805 1.25W
3041	4822 051 30103	10kΩ 5% 0.062W
3042	4822 051 30682	6.8kΩ 5% 0.062W
3043	4822 051 30101	100Ω 5% 0.062W
3043	4822 051 30471	470Ω 5% 0.062W
3050	4822 117 13577	330Ω 1% 0805 1.25W
3051	4822 051 30471	470Ω 5% 0.062W
3052	4822 051 30331	330Ω 5% 0.062W
3053	4822 051 30561	560Ω 5% 0.062W
3054	4822 051 20471	470Ω 5% 0.1W
3057	4822 053 21335	3M3 5% 0.5W
3060	4822 051 30103	10kΩ 5% 0.062W
3061	4822 117 13577	330Ω 1% 0805 1.25W
3062	4822 117 11373	100Ω 1% 0805
3063	4822 051 30103	10kΩ 5% 0.062W
3064	4822 117 11373	100Ω 1% 0805
3066	4822 053 21335	3M3 5% 0.5W
3070	4822 051 30155	1M50 5% 0,062W
3070	4822 051 30334	330kΩ 5% 0.062W
3070	4822 051 30475	4.7MΩ 5% 0,062W 0603
3071	4822 051 30155	1M50 5% 0,062W
3071	4822 051 30334	330kΩ 5% 0.062W
3071	4822 051 30475	4.7MΩ 5% 0,062W 0603
3072	4822 051 30102	1kΩ 5% 0.062W
3073	4822 051 30103	10kΩ 5% 0.062W
3073	4822 051 30332	3.3kΩ 5% 0.062W
3074	4822 051 30103	10kΩ 5% 0.062W
3074	4822 051 30472	4.7kΩ 5% 0.062W
3075	4822 051 30472	4.7kΩ 5% 0.062W
3076	4822 051 30682	6.8kΩ 5% 0.062W
3077	4822 051 30103	10kΩ 5% 0.062W
3078	4822 051 30102	1kΩ 5% 0.062W
3078	4822 051 30332	3.3kΩ 5% 0.062W
3079	4822 051 30332	3.3kΩ 5% 0.062W
3080	4822 051 30103	10kΩ 5% 0.062W
3081	4822 051 30222	2.2kΩ 5% 0.062W
3082	4822 051 30008	Jumper 0603
3998	4822 050 11002	1k 1% 0.4W
3998	4822 116 52213	180Ω 5% 0.5W
3999	4822 051 30222	2.2kΩ 5% 0.062W
4000	4822 051 30008	Jumper 0603
4002	4822 051 30008	Jumper 0603
4007	4822 051 30008	Jumper 0603
4008	4822 051 30008	Jumper 0603
4009	4822 051 30008	Jumper 0603
4010	4822 051 30008	Jumper 0603
4011	4822 051 30008	Jumper 0603
9000	4822 051 30008	Jumper 0603
9001	4822 051 20008	Jumper 0805
9004	4822 051 20008	Jumper 0805

9005	4822 051 20008	Jumper 0805
9005	4822 051 30008	Jumper 0603
9006	4822 051 20008	Jumper 0805
9006	4822 051 30008	Jumper 0603
9007	4822 051 20008	Jumper 0805
9007	4822 051 30008	Jumper 0603
9008	4822 051 20008	Jumper 0805
9041	4822 051 30008	Jumper 0603
9042	4822 051 30008	Jumper 0603
9050	4822 051 30008	Jumper 0603
9051	4822 051 30008	Jumper 0603
9052	4822 051 30008	Jumper 0603
9053	4822 051 30008	Jumper 0603
9055	4822 051 30008	Jumper 0603

6050	5322 130 83903	TLRC114
6051	4822 209 72895	TLUV5320
6060	9322 191 72682	VS LTL353UBJ
6061	4822 130 30621	1N4148
6070	4822 130 11595	BPW46

7060	5322 130 60159	BC846B
7061	5322 130 60159	BC846B
7070	4822 209 70672	LM358N SEL.
7070	5322 209 82941	LM358D
7080	4822 130 40981	BC337-25
7081	5322 130 60159	BC846B

CRT Panel [F]

Various

0032	4822 492 70788	IC clamp
0034	4822 492 70788	IC clamp
0036	4822 492 70788	IC clamp
1298	2422 500 80063	Connector CRT 10p f
1298	2422 500 80078	Socket CRT 11P f v
1424	2422 025 11244	Connector 7p m
1434	4822 267 10973	Connector 1P m
1483	2422 025 16382	Connector 3p m
1483	4822 267 10735	Connector 3p m
1940	2422 025 12485	Connector 11p m
8483	3104 311 03111	Cable 3P/340/3P ferrite

2300	2020 012 93596	22µF 20% 250V
2301	4822 124 40196	220µF 20% 16V
2302	4822 126 13956	68pF 5% 63V 0603
2304	4822 121 41856	22nF 5% 250V
2306	2238 586 59812	100nF 20-80% 50V 0603
2307	4822 121 41856	22nF 5% 250V
2309	3198 017 42230	22nF 50V
2312	4822 126 14585	100nF 10% 50V
2313	4822 124 11565	10?F 20% 250V
2313	4822 124 12373	47µF 20% 250V
2315	4822 126 13883	220pF 5% 50V
2316	4822 121 40518	100nF 10% 250V
2318	2238 916 15641	22nF 10% 25V 0603
2318	5322 122 32654	22nF 10% 63V
2319	4822 121 43693	10NF 100V
2319	4822 122 30043	10nF 80% 63V
2320	2238 586 59812	100nF 20-80% 50V 0603
2320	2252 648 08032	10nf 20% 500V
2324	4822 121 70581	1.5nF 5% 2kV
2324	4822 121 70594	1nF 5% 2kV
2324	5322 121 44356	4.7nF 5% 2kV
2325	2238 586 59812	100nF 20-80% 50V 0603
2330	4822 157 11499	BLM11P600SPT
2332	4822 126 14507	18pF 5% 50V 0603
2333	4822 126 14507	18pF 5% 50V 0603
2334	4822 126 14507	18pF 5% 50V 0603
2338	4822 121 40518	100nF 10% 250V
2339	4822 121 40518	100nF 10% 250V
2340	4822 121 40518	100nF 10% 250V
2341	2238 586 59812	100nF 20-80% 50V 0603
2342	4822 126 14241	330pF 50V 0603
2347	4822 124 80791	470µF 20% 16V
2348	5322 126 11583	10nF 10% 50V 0603
2358	4822 124 80791	470µF 20% 16V
2359	5322 126 11583	10nF 10% 50V 0603
2403	4822 124 41584	100µF 20% 10V
2404	4822 124 41584	100µF 20% 10V
2405	4822 122 31177	470pF 10% 500V
2408	4822 126 13883	220pF 5% 50V
2409	3198 017 44740	470nF 10V 0603
2410	2238 916 15641	22nF 10% 25V 0603
2410	3198 017 44740	470nF 10V 0603
2411	2238 916 15641	22nF 10% 25V 0603
2411	4822 126 14585	100nF 10% 50V
2412	2222 867 15339	33pF 5% 50V 0603
2420	2222 930 56627	2.2nF 10% 200V 0805
2420	3198 017 44740	470nF 10V 0603
2421	2322 702 60688	6R8 5% 0.062W RC21 0603
2422	4822 121 41856	22nF 5% 250V
2423	4822 121 41856	22nF 5% 250V
2424	2322 702 60688	6R8 5% 0.062W RC21 0603
2425	4822 126 13883	220pF 5% 50V
2428	3198 017 42230	22nF 50V
2435	2020 557 90734	22nF 10% 250V
2436	2020 012 93596	22µF 20% 250V
2437	5322 126 11578	1nF 10% 50V 0603
2438	2222 930 56627	2.2nF 10% 200V 0805
2439	2020 557 90734	22nF 10% 250V
2501	2238 586 59812	100nF 20-80% 50V 0603
2503	2238 586 59812	100nF 20-80% 50V 0603
2505	2238 586 59812	100nF 20-80% 50V 0603
2510	4822 126 14585	100nF 10% 50V
2511	4822 126 14585	100nF 10% 50V

3300	4822 052 10109	10Ω 5% 0.33W
3301	4822 053 12272	2.7kΩ 5% 3W
3301	4822 117 12517	5.6kΩ 5% 5W
3302	4822 051 30102	1kΩ 5% 0.062W
3303	4822 051 30153	15kΩ 5% 0.062W
3304	4822 052 10102	1k 5% 0.33W
3304	4822 117 11454	820Ω 1% 0,1W
3305	4822 052 10108	1Ω 5% 0.33W
3306	4822 117 13608	4,7R 5% 0603 0,0016W
3307	4822 051 30109	10Ω 5% 0.062W
3308	4822 117 10837	100kΩ 1% 0.1W
3310	4822 051 10102	1kΩ 2% 0.25W
3311	4822 051 30569	56R00 5% 0,062W
3312	4822 051 30222	2.2kΩ 5% 0.062W
3316	4822 117 10837	100kΩ 1% 0.1W
3318	4822 051 30008	Jumper 0603
3318	4822 051 30109	10Ω 5% 0.062W
3319	4822 117 12968	820Ω 5% 0.62W
3323	4822 050 24708	4Ω7 1% 0.6W
3329	4822 050 24708	4Ω7 1% 0.6W
3334	4822 050 11002	1k 1% 0.4W
3335	4822 051 30102	1kΩ 5% 0.062W
3335	4822 051 30471	470Ω 5% 0.062W
3335	4822 117 12968	820Ω 5% 0.62W
3336	4822 051 30102	1kΩ 5% 0.062W
3336	4822 051 30471	470Ω 5% 0.062W
3336	4822 117 12968	820Ω 5% 0.62W
3337	4822 051 30221	220Ω 5% 0.062W
3337	4822 117 12968	820Ω 5% 0.62W
3338	3198 013 01020	1k 2% 0.5W
3338	3198 013 04710	470Ω 20% 0.5W
3339	3198 013 01020	1k 2% 0.5W
3339	3198 013 04710	470Ω 20% 0.5W
3340	3198 013 01020	1k 2% 0.5W
3340	3198 013 04710	470Ω 20% 0.5W
3341	4822 052 10151	150Ω 5% 0.33W
3341	4822 052 11479	47Ω 5% 0.5W
3342	4822 116 83883	470Ω 5% 0.5W
3345	4822 116 52191	33Ω 5% 0.5W
3347	3198 013 01520	1k5 2% 0.5W
3348	4822 117 13016	VDR 1mA/50V
3349	3198 013 01020	1k 2% 0.5W
3350	4822 116 52175	100Ω 5% 0.5W
3350	4822 116 83883	470Ω 5% 0.5W
3351	4822 116 52175	100Ω 5% 0.5W
3351	4822 116 83883	470Ω 5% 0.5W
3352	4822 116 52175	100Ω 5% 0.5W
3352	4822 116 83883	470Ω 5% 0.5W
3354	4822 051 30222	2.2kΩ 5% 0.062W
3355	4822 117 13608	4,7R 5% 0603 0,0016W
3356	4822 051 10102	1kΩ 2% 0.25W
3357	4822 117 13608	4,7R 5% 0603 0,0016W
3358	4822 051 30103	10kΩ 5% 0.062W
3359	4822 051 30103	10kΩ 5% 0.062W
3360	4822 051 30103	10kΩ 5% 0.062W
3370	4822 117 13016	VDR 1mA/50V
3401	4822 053 11101	100Ω 5% 2W
3401	4822 116 52175	100Ω 5% 0.5W
3402	4822 116 52176	10Ω 5% 0.5W
3403	4822 052 10108	1Ω 5% 0.33W
3403	4822 052 11108	1Ω 5% 0.5W
3404	4822 052 10108	1Ω 5% 0.33W
3405	4822 116 52193	39Ω 5% 0.5W
3410	4822 051 30471	470Ω 5% 0.062W
3410	4822 117 13632	100kΩ 1% 0603 0.62W
3411	4822 117 11148	56kΩ 1% 0.1W
3411	4822 117 13632	100kΩ 1% 0603 0.62W
3412	2322 750 61509	Fuse 15Ω 1206 5%
3412	4822 117 11148	56kΩ 1% 0.1W
3413	4822 051 30471	470Ω 5% 0.062W
3413	4822 051 30681	680Ω 5% 0.062W
3414	4822 051 30109	10Ω 5% 0.062W
3416	4822 051 20333	33kΩ 5% 0.1W
3416	4822 116 52193	39Ω 5% 0.5W
3417	4822 051 20333	33kΩ 5% 0.1W
3417	4822 051 30109	10Ω 5% 0.062W
3418	4822 051 30008	Jumper 0603
3419	4822 053 12272	2.7kΩ 5% 3W
3420	2322 702 60688	6R8 5% 0.062W RC21 0603
3420	4822 051 30109	10Ω 5% 0.062W
3421	4822 051 20333	33kΩ 5% 0.1W
3422	4822 051 30008	Jumper 0603
3422	4822 051 30152	1.5kΩ 5% 0.062W
3422	4822 051 30392	3.9kΩ 5% 0.063W 0603
3423	4822 051 20333	33kΩ 5% 0.1W
3424	4822 051 20333	33kΩ 5% 0.1W
3425	4822 051 30152	1.5kΩ 5% 0.062W
3425	4822 051 30392	3.9kΩ 5% 0.063W 0603
3426	4822 051 20333	33kΩ 5% 0.1W
3427	2322 702 60688	6R8 5% 0.062W RC21 0603
3427	4822 051 30109	10Ω 5% 0.062W
3448	4822 051 20333	33kΩ 5% 0.1W
3449	4822 117 11817	1.2kΩ 1% 1/16W
3451	4822 051 30102	1kΩ 5% 0.062W
3453	4822 051 30103	10kΩ 5% 0.062W
3454	4822 051 20333	33kΩ 5% 0.1W
3456	4822 051 30332	3.3kΩ 5% 0.062W
3458	4822 117 12139	22Ω 5% 0.062W
3459	4822 051 30101	100Ω 5% 0.062W
3460	4822 117 12139	22Ω 5% 0.062W
3465	4822 051 30008	Jumper 0603
3471	4822 117 11817	1.2kΩ 1% 1/16W
3473	4822 116 80176	1Ω 5% 0.5W
3474	4822 051 30103	10kΩ 5% 0.062W
3478	4822 116 80176	1Ω 5% 0.5W
3488	4822 051 30008	Jumper 0603
3489	4822 051 30109	10Ω 5% 0.062W
3492	4822 051 30008	Jumper 0603
3501	4822 051 20471	470Ω 5% 0.1W
3502	4822 051 30331	330Ω 5% 0.062W
3506	4822 051 30008	Jumper 0603
3508	4822 051 30008	Jumper 0603
3509	4822 051 30471	470Ω 5% 0.062W
3510	4822 116 52175	100Ω 5% 0.5W
3511	4822 051 20471	470Ω 5% 0.1W
3512	4822 051 30331	330Ω 5% 0.062W
3516	4822 117 13632	100kΩ 1% 0603 0.62W
3517	4822 051 30102	1kΩ 5% 0.062W
3518	4822 051 30008	Jumper 0603
3519	4822 051 30471	470Ω 5% 0.062W
3520	4822 116 52226	560Ω 5% 0.5W
3521	4822 051 20471	470Ω 5% 0.1W
3522	4822 051 30331	330Ω 5% 0.062W
3526	4822 051 30008	Jumper 0603
3528	4822 051 30008	Jumper 0603
3529	4822 051 30471	470Ω 5% 0.062W
3530	4822 116 52226	560Ω 5% 0.5W
3532	4822 051 30008	Jumper 0603
3534	4822 051 30008	Jumper 0603
3535	4822 051 20008	Jumper 0805
3536	4822 051 20008	Jumper 0805
3537	4822 051 20008	Jumper 0805
3539	4822 051 20471	470Ω 5% 0.1W
3541	4822 051 20471	470Ω 5% 0.1W
3543	4822 051 20471	470Ω 5% 0.1W
3544	4822 116 52285	470kΩ 5% 0.5W
3545	4822 051 30109	10Ω 5% 0.062W
3546	4822 051 30109	10Ω 5% 0.062W
3547	4822 051 30109	10Ω 5% 0.062W
3999	4822 051 30392	3.9kΩ 5% 0.063W 0603
3999	4822 051 30472	4.7kΩ 5% 0.062W
3999	4822 051 30562	5.6kΩ 5% 0.063W 0603
3999	4822 051 30682	6.8kΩ 5% 0.062W
3999	4822 117 12902	8.2kΩ 1% 0.063W 0603
9301	4822 051 30008	Jumper 0603
9303	4822 051 30008	Jumper 0603
9305	4822 051 30008	Jumper 0603
9306	4822 051 30008	Jumper 0603
9308	4822 051 30008	Jumper 0603
9314	4822 051 30008	Jumper 0603
9402	2238 930 11523	10pF 5% 200V 0805
9402	4822 051 30008	Jumper 0603
9403	2238 930 11523	10pF 5% 200V 0805
9403	4822 051 30008	Jumper 0603
9404	4822 051 30008	Jumper 0603
9406	4822 051 20008	Jumper 0805
9408	4822 051 30008	Jumper 0603
9409	4822 051 30008	Jumper 0603
9413	4822 051 20008	Jumper 0805
9428	4822 051 30008	Jumper 0603
9432	4822 051 30008	Jumper 0603

9437	4822 051 30008	Jumper 0603
9450	4822 051 20008	Jumper 0805
9452	4822 051 20008	Jumper 0805
9453	4822 051 20008	Jumper 0805
9501	4822 051 30008	Jumper 0603
9502	4822 051 30008	Jumper 0603
9503	4822 051 30008	Jumper 0603

5300⚠	3104 308 20571	Transformer S13974-03 34'
5304	4822 526 10704	Bead 45Ω at 50MHz
5305	2422 549 42896	Bead 120Ω at 100MHz
5308	4822 157 11867	5.6µH 5%
5309	4822 157 11867	5.6µH 5%
5310	4822 157 50964	100µH 20%
5400	4822 157 11869	33µH 10% LHL08
5400	4822 157 71467	39µH 10%
5500	2722 122 00337	Del. Line 70NS SDL-5135
5501	2722 122 00337	Del. Line 70NS SDL-5135
5502	2722 122 00337	Del. Line 70NS SDL-5135

6300	4822 130 83757	BAS216
6301	4822 051 20479	47Ω 5% 0.1W
6301	9340 553 52115	BAS321
6302	9340 553 52115	BAS321
6303	9340 553 52115	BAS321
6305	9340 553 52115	BAS321
6306	9340 553 52115	BAS321
6307	9340 553 52115	BAS321
6310	4822 130 11397	BAS316
6401	3139 120 52021	BYV29X-500
6401	4822 130 11397	BAS316
6402	4822 130 11397	BAS316
6403	4822 130 11397	BAS316
6404	4822 130 11397	BAS316
6405	3139 120 52021	BYV29X-500
6407	4822 130 11397	BAS316
6420	5322 130 34337	BAV99
6421	5322 130 34337	BAV99
6422	5322 130 34337	BAV99
6426	4822 130 30613	BAW62
6427	4822 130 30613	BAW62
6428	4822 130 30613	BAW62
6430	9340 548 61115	PDZ12B
6431	4822 130 11397	BAS316
6432	9340 553 52115	BAS321
6500	4822 130 11397	BAS316
6501	4822 130 11397	BAS316
6502	4822 130 11397	BAS316

7300	5322 130 42718	BFS20
7301	5322 130 42718	BFS20
7302	5322 130 62804	BCP53
7303	5322 130 63033	BCP56
7304	4822 130 60383	BF824
7307	9352 561 40112	TDA6108
7308	5322 130 42718	BFS20
7309	5322 130 62804	BCP53
7310	5322 130 63033	BCP56
7330	9352 694 46112	TDA6118JF/N1
7340	9352 694 46112	TDA6118JF/N1
7350	9352 694 46112	TDA6118JF/N1
7414	5322 130 62804	BCP53
7415	5322 130 63033	BCP56
7422	5322 130 42718	BFS20
7427	5322 130 60159	BC846B
7428	4822 130 60373	BC856B
7429	5322 130 63033	BCP56
7430	5322 130 62804	BCP53
7500	5322 130 42718	BFS20
7502	4822 130 60373	BC856B
7503	5322 130 42718	BFS20
7505	4822 130 60373	BC856B
7506	5322 130 42718	BFS20
7508	4822 130 60373	BC856B

DC Shift Panel [G]

Various

0317	4822 265 20723	Connector 2p m
0318	4822 265 20723	Connector 2p m
1430	2422 086 10581	Fuse 400mA 65V
8317	3104 311 01421	Cable 2p3/220/2p3

2430	4822 122 31177	470pF 10% 500V
2431	4822 122 31177	470pF 10% 500V

5430	3128 138 38911	DC-shift coil CU15

6432	9340 317 00133	BYD33V
6433	9340 317 00133	BYD33V

I/O 3rd SCART Panel [H]

Various

0043	3104 304 21311	Coverplate SCART
1201	2422 025 12493	Connector 10P m h 2.50
1272	2422 025 16601	3p male
1339	4822 265 10838	Socket phono 1P f v 3.5mm
1402	4822 267 10596	Connector 5P
1680	4822 265 31067	Connector 7p m
1937	2422 025 12493	Connector 10P m h 2.50
1952	4822 267 10748	Connector 3p m
1992	2422 025 16725	Connector SCART f m Bk
8201	3104 301 09841	Cable 10P/340/10P Wh
8272	3104 311 03101	Cable 3P/560/3P Bk
8340	3104 311 03101	Cable 3P/560/3P Bk

2500	2020 552 95344	680nF 20-80% 16V 0805
2502	4822 126 14585	100nF 10% 50V
2503	3198 016 31020	1nF 25V 0603
2504	2020 552 94427	100pF 5% 50v 0603
2508	2020 552 95344	680nF 20-80% 16V 0805
2509	2020 552 94427	100pF 5% 50v 0603
2510	3198 017 41050	1µF 10V 0603
2511	2238 586 59812	100nF 20-80% 50V 0603
2513	4822 126 13883	220pF 5% 50V
2514	4822 126 14585	100nF 10% 50V
2516	2238 586 59812	100nF 20-80% 50V 0603

3500	4822 117 13574	1.5Ω 5% 1206
3501	4822 051 30102	1kΩ 5% 0.062W
3502	4822 051 30008	Jumper 0603
3507	4822 051 30102	1kΩ 5% 0.062W
3508	4822 051 30008	Jumper 0603
3512	4822 051 30008	Jumper 0603
3512	4822 051 30101	100Ω 5% 0.062W
3517	4822 051 30151	150Ω 5% 0.062W
3518	4822 051 30151	150Ω 5% 0.062W
3520	4822 051 30101	100Ω 5% 0.062W
3521	4822 051 30101	100Ω 5% 0.062W
3526	4822 051 30101	100Ω 5% 0.062W
3529	4822 051 30333	33kΩ 5% 0.062W
3530	4822 051 30102	1kΩ 5% 0.062W
3531	4822 051 30471	470Ω 5% 0.062W
3532	4822 051 30102	1kΩ 5% 0.062W
3532	4822 051 30479	47Ω 5% 0.062W
3533	4822 051 30759	75Ω 5% 0.062W
3534	4822 117 12864	82kΩ 5% 0.6W
3535	4822 051 30102	1kΩ 5% 0.062W
3535	4822 051 30471	470Ω 5% 0.062W
3538	4822 051 30008	Jumper 0603
3540	4822 051 30008	Jumper 0603
3542	4822 051 30008	Jumper 0603
3544	4822 051 30008	Jumper 0603
3546	4822 051 30102	1kΩ 5% 0.062W
3999	4822 051 30222	2.2kΩ 5% 0.062W
3999	4822 051 30272	2.7kΩ 5% 0.062W
9503	4822 051 30008	Jumper 0603
9505	4822 051 20008	Jumper 0805
9507	4822 051 30008	Jumper 0603
9508	4822 051 30008	Jumper 0603
9509	4822 051 30008	Jumper 0603
9510	4822 051 30008	Jumper 0603
9514	4822 051 30008	Jumper 0603
9515	4822 051 30008	Jumper 0603
9516	4822 051 30008	Jumper 0603
9519	4822 051 30008	Jumper 0603
9520	4822 051 30008	Jumper 0603
9521	4822 051 30008	Jumper 0603
9523	4822 051 30008	Jumper 0603
9525	4822 051 30008	Jumper 0603
9526	4822 051 30008	Jumper 0603
9527	4822 051 30008	Jumper 0603
9528	4822 051 30008	Jumper 0603
9529	4822 051 30008	Jumper 0603
9537	4822 051 20008	Jumper 0805
9540	4822 051 30008	Jumper 0603

6500	4822 130 11416	PDZ6.8B
6501	4822 130 11416	PDZ6.8B
6502	4822 130 11416	PDZ6.8B
6503	4822 130 11416	PDZ6.8B
6504	4822 130 11416	PDZ6.8B
6505	4822 130 11416	PDZ6.8B
6506	4822 130 11416	PDZ6.8B
6507	9340 548 61115	PDZ12B
6509	4822 130 11416	PDZ6.8B
6510	4822 130 11416	PDZ6.8B
6511	4822 130 11416	PDZ6.8B
6512	4822 130 11416	PDZ6.8B

7501	5322 209 11578	PCF8574T
7508	5322 130 60159	BC846B
7509	4822 130 60373	BC856B
7515	9351 869 40118	74HC4053PW

Horizontal DAF Panel [I]

Various

0034	3104 304 23041	DAF bracket EMGS
1417	4822 265 20723	Connector 2p m
1418	2422 025 16374	Connector 2p m
1419	4822 265 20723	Connector 2p m
1491	3104 311 02452	Cable 1P/340/1P
1492	4822 267 10735	Connector 3p m
1497	4822 267 10973	Connector 1P m
1693	4822 267 10676	Connector 1P
8418	3104 311 01951	CableH 2P3/560mm/2P4

2800	2222 375 90188	390pF 5% 2kV
2800	2222 375 90498	470pF 5% 2kV
2809	4822 124 40207	100µF 20% 25V
2812	4822 121 70435	10nF 5% 2kV
2813	4822 124 40248	10µF 20% 63V
2814	4822 121 70594	1nF 5% 2kV
2821	2222 479 90166	68nF 5% 400V
2822	4822 121 43856	4.7nF 5% 250V
2824	4822 124 40248	10µF 20% 63V
2825	4822 121 51319	1µF 10% 63V
2890	2222 375 90188	390pF 5% 2kV
2890	2222 375 90276	220pF 5% 2kV

3807	4822 052 10159	15Ω 5% 0.33W
3808	4822 052 10159	15Ω 5% 0.33W
3809	4822 052 10109	10Ω 5% 0.33W
3810	4822 053 21474	470k 5% 0.5W
3811	4822 053 20475	4M7 5% 0.25W
3812	4822 116 52264	27kΩ 5% 0.5W
3813	4822 116 52285	470kΩ 5% 0.5W
3814	4822 050 21004	100kΩ 1% 0.6W
3815	4822 050 11002	1k 1% 0.4W
3816	4822 116 52256	2k2 5% 0.5W
3818	4822 051 20333	33kΩ 5% 0.1W
3820	4822 051 20008	Jumper 0805
3821	4822 051 20008	Jumper 0805
3822	4822 051 20008	Jumper 0805
3823	4822 117 11139	1.5kΩ 1% 0.1W
3824	4822 051 20333	33kΩ 5% 0.1W
3826	4822 051 20332	3.3kΩ 5% 0.1W
3827	4822 051 20562	5.6kΩ 5% 0.1W 0805
3828	4822 117 10837	100kΩ 1% 0.1W
3830	4822 117 10834	47kΩ 1% 0.1W
3831	4822 051 20472	4.7kΩ 5% 0.1W
3832	4822 051 20182	1.8kΩ 5% 0.1W
3833	4822 051 20472	4.7kΩ 5% 0.1W
3898	4822 116 21211	VDR 420V
3898	4822 116 21239	VDR 1mA/612V
3899	4822 116 21211	VDR 420V
3899	4822 116 21239	VDR 1mA/612V
3998	4822 050 11002	1k 1% 0.4W
3998	4822 116 52207	1k2 5% 0.5W

5800	2422 531 02437	Transformer S21975-03
5801	2422 531 02435	Transformer C948-02
5801	8228 001 34391	Driver Transformer CU15
5810	3128 138 40041	Transformer CU15B

6810	9340 317 00133	BYD33V
6812	4822 130 34441	BZX79-B22

7810	9322 136 03687	STP3NB80FP
7818	5322 130 60159	BC846B
7822	5322 130 60159	BC846B
7823	4822 130 60373	BC856B

Side I/O Panel [O]

Various

0077	3104 304 23481	Bracket side I/O FL11
0240	2422 025 12485	Connector 11p m
0306	3139 124 31651	Side I/O Bracket PV2
1016	3104 328 17361	SIDE I/O EMGS FL11 HD
1254	4822 267 31014	Socket headphone
1255	4822 265 11606	3p
1256	2422 026 04926	Socket 4P
1326	4822 267 10975	Connector 3p
1327	4822 267 31014	Socket headphone
1328	2422 026 05133	Connector SVHS 4p f
1936	2422 025 12485	Connector 11p m
8936	3104 311 05271	Cable 11P/820/11P UL

2286	4822 122 33642	150pF 5% 50V
2288	4822 122 33642	150pF 5% 50V
2292	5322 122 32311	470pF 10% 100V
2294	5322 122 32311	470pF 10% 100V
2296	4822 122 31125	4.7nF 20% 63V
2297	4822 122 31125	4.7nF 20% 63V
2803	5322 126 10733	680pF 5% 50V
2804	5322 122 32531	100pF 5% 50V
2805	5322 122 32531	100pF 5% 50V
2806	5322 126 10733	680pF 5% 50V
2807	4822 126 14076	220nF 25V. 20%
2813	4822 124 22652	2.2µF 20% 50V
2832	4822 122 33177	10nF 20% 50V
2832	5322 122 31863	330pF 5% 63V
2834	4822 122 33177	10nF 20% 50V
2834	5322 122 31863	330pF 5% 63V
2840	4822 122 33177	10nF 20% 50V
2840	5322 126 10733	680pF 5% 50V
2841	4822 122 33177	10nF 20% 50V
2841	5322 126 10733	680pF 5% 50V

3285	4822 116 52201	75Ω 5% 0.5W
3286	4822 116 52176	10Ω 5% 0.5W
3287	4822 116 52201	75Ω 5% 0.5W
3288	4822 116 52176	10Ω 5% 0.5W
3291	4822 050 11002	1k 1% 0.4W
3292	4822 117 10834	47kΩ 1% 0.1W
3293	4822 050 11002	1k 1% 0.4W
3294	4822 117 10834	47kΩ 1% 0.1W
3295	4822 116 52175	100Ω 5% 0.5W
3296	4822 117 10833	10kΩ 1% 0.1W
3297	4822 117 10833	10kΩ 1% 0.1W
3801	4822 117 11927	75Ω 1% 0.1W
3802	4822 116 52201	75Ω 5% 0.5W
3803	4822 050 11002	1k 1% 0.4W
3804	4822 050 11002	1k 1% 0.4W
3808	4822 051 20008	Jumper 0805
3809	4822 051 20008	Jumper 0805
3814	4822 117 10833	10kΩ 1% 0.1W
3816	4822 051 20008	Jumper 0805
3826	4822 116 52199	68Ω 5% 0.5W
3826	4822 116 52206	120Ω 5% 0.5W
3827	4822 116 52199	68Ω 5% 0.5W
3827	4822 116 52206	120Ω 5% 0.5W
3828	4822 116 52199	68Ω 5% 0.5W
3828	4822 116 52206	120Ω 5% 0.5W
3829	4822 116 52199	68Ω 5% 0.5W
3829	4822 116 52206	120Ω 5% 0.5W
3830	4822 050 21003	10kΩ 1% 0.6W
3835	4822 116 52175	100Ω 5% 0.5W
3842	4822 050 21003	10kΩ 1% 0.6W
4201	4822 051 20008	Jumper 0805
4241	4822 051 20008	Jumper 0805
4243	4822 051 20008	Jumper 0805
4800	4822 051 20008	Jumper 0805
4801	4822 051 20008	Jumper 0805
4802	4822 051 20008	Jumper 0805
4803	4822 051 20008	Jumper 0805

6291	9340 548 61115	PDZ12B
6292	9340 548 61115	PDZ12B
6293	9340 548 61115	PDZ12B
6294	9340 548 61115	PDZ12B
6296	9340 548 61115	PDZ12B
6297	9340 548 61115	PDZ12B
6801	9322 129 38685	BZM55-C6V8
6802	9322 129 38685	BZM55-C6V8
6803	9322 129 40685	BZM55-C10
6804	9322 129 40685	BZM55-C10
6805	9322 129 40685	BZM55-C10
6806	9322 129 40685	BZM55-C10
6807	9322 129 38685	BZM55-C6V8
6808	9322 129 38685	BZM55-C6V8

Top Control Panel [P]

Various

0055	3104 307 98241	Top control keypad FL11
0056	3104 307 97611	Top control FL11
0057	3104 304 23431	Topcontrol bottom FL11
0135	3104 311 01401	Cable 3p/1500/3p
0215	4822 267 10748	Connector 3p m
0342	3139 124 39172	Top control bracket
0346	4822 267 10748	Connector 3p m
1091	4822 276 13775	Switch
1092	4822 276 13775	Switch
1093	4822 276 13775	Switch
1094	4822 276 13775	Switch
1095	4822 276 13775	Switch
1701	2422 128 02778	Tact switch
1702	2422 128 02778	Tact switch
1703	2422 128 02778	Tact switch
1704	2422 128 02778	Tact switch
1705	2422 128 02778	Tact switch
8346	3104 301 07771	Cable 3P 1200mm white
8346	3104 311 01401	Cable 3p/1500/3p

2010	4822 122 33177	10nF 20% 50V

3001	4822 051 20391	390Ω 5% 0.1W
3003	4822 117 13528	200Ω 1% 0.125W 0805
3005	4822 117 11951	2kΩ 1% 0.1W
3009	4822 117 11534	1.1kΩ 1% 0.1W
3011	4822 117 10845	620Ω 1% 0.1W
3088	4822 117 11951	2kΩ 1% 0.1W
3089	4822 117 11534	1.1kΩ 1% 0.1W
3090	4822 117 10845	620Ω 1% 0.1W
3091	4822 051 30008	Jumper 0603
3092	4822 051 30008	Jumper 0603
3093	4822 051 30008	Jumper 0603
3094	4822 051 30008	Jumper 0603
3095	4822 051 30391	390Ω 5% 0.062W
3096	4822 117 13528	200Ω 1% 0.125W 0805
3999	4822 051 20471	470Ω 5% 0.1W
4001	4822 051 20008	Jumper 0805
4003	4822 051 20008	Jumper 0805
4005	4822 051 20008	Jumper 0805
4006	4822 051 20008	Jumper 0805

Auto Scavem [SC]

Various

1440	2422 025 12485	Connector 11p m
1940	2422 025 12485	Connector 11p m
1955	4822 267 10735	Connector 3p m
8440	3104 311 05882	Cable 11P/400/11P ferr.

2000	4822 126 14223	2.2pF +-0.25pF 50V 0603
2002	4822 126 13887	4.7pF 50V
2003	4822 126 13887	4.7pF 50V
2004	3198 016 31080	1pF 25% 50V 0603
2006	2238 586 59812	100nF 20-80% 50V 0603
2008	2238 916 15641	22nF 10% 25V 0603
2010	2238 586 59812	100nF 20-80% 50V 0603
2012	2238 916 15641	22nF 10% 25V 0603
2014	2238 916 15641	22nF 10% 25V 0603
2016	4822 122 33741	10pF 10% 50V
2020	2238 916 15641	22nF 10% 25V 0603
2038	2238 916 15641	22nF 10% 25V 0603
2040	4822 126 14225	56pF 5% 50V 0603
2041	5322 122 32163	5,6PF0,25PF 100V
2208	4822 124 41584	100µF 20% 10V
2600	4822 124 80791	470µF 20% 16V
2602	5322 122 32654	22nF 10% 63V
2605	3198 017 41050	1µF 10V 0603
2607	5322 122 32654	22nF 10% 63V

3000	4822 051 30101	100Ω 5% 0.062W
3002	4822 051 30101	100Ω 5% 0.062W
3004	4822 051 30101	100Ω 5% 0.062W
3006	4822 051 30102	1kΩ 5% 0.062W
3008	4822 051 30102	1kΩ 5% 0.062W
3010	4822 051 30102	1kΩ 5% 0.062W
3012	4822 051 30332	3.3kΩ 5% 0.062W
3014	4822 117 12903	1.8kΩ 1% 0.063W 0603
3016	4822 117 12902	8.2kΩ 1% 0.063W 0603
3018	4822 051 30681	680Ω 5% 0.062W
3020	4822 051 30471	470Ω 5% 0.062W
3022	4822 051 30393	39kΩ 5% 0.062W
3024	4822 051 30273	27kΩ 5% 0.062W
3028	4822 051 30223	22kΩ 5% 0.062W
3030	4822 051 30683	68kΩ 5% 0.062W
3032	4822 117 12903	1.8kΩ 1% 0.063W 0603
3034	4822 051 30222	2.2kΩ 5% 0.062W
3036	4822 051 30332	3.3kΩ 5% 0.062W
3038	4822 051 30561	560Ω 5% 0.062W
3040	4822 117 12925	47kΩ 1% 0.063W 0603
3042	4822 051 30682	6.8kΩ 5% 0.062W
3044	4822 051 30102	1kΩ 5% 0.062W
3046	4822 051 30102	1kΩ 5% 0.062W
3048	4822 051 30102	1kΩ 5% 0.062W
3050	4822 051 30561	560Ω 5% 0.062W
3052	4822 051 30561	560Ω 5% 0.062W
3054	4822 051 30102	1kΩ 5% 0.062W
3056	4822 051 30102	1kΩ 5% 0.062W
3058	4822 051 30471	470Ω 5% 0.062W
3060	4822 051 30471	470Ω 5% 0.062W
3062	4822 051 30222	2.2kΩ 5% 0.062W
3064	4822 117 12971	15Ω 5% 0.62W 0603
3066	4822 117 12902	8.2kΩ 1% 0.063W 0603
3068	4822 051 30681	680Ω 5% 0.062W
3070	4822 117 12902	8.2kΩ 1% 0.063W 0603
3072	4822 051 30152	1.5kΩ 5% 0.062W
3074	4822 051 30101	100Ω 5% 0.062W
3076	4822 117 11817	1.2kΩ 1% 1/16W
3078	4822 051 30102	1kΩ 5% 0.062W
3093	4822 051 30152	1.5kΩ 5% 0.062W
3106	4822 051 30472	4.7kΩ 5% 0.062W
3108	4822 051 30273	27kΩ 5% 0.062W
3110	4822 051 30392	3.9kΩ 5% 0.063W 0603
3112	4822 051 30222	2.2kΩ 5% 0.062W
3114	4822 051 30101	100Ω 5% 0.062W
3116	4822 051 30102	1kΩ 5% 0.062W
3118	4822 051 30103	10kΩ 5% 0.062W
3120	4822 051 30103	10kΩ 5% 0.062W
3500	4822 051 30101	100Ω 5% 0.062W
3502	4822 051 30101	100Ω 5% 0.062W
3600	4822 117 13574	1.5Ω 5% 1206
3999	4822 051 30102	1kΩ 5% 0.062W
9000	4822 051 30008	Jumper 0603
9002	4822 051 30008	Jumper 0603
9010	4822 051 30008	Jumper 0603
9020	4822 051 30008	Jumper 0603
9033	4822 116 52175	100Ω 5% 0.5W
9045	4822 051 30008	Jumper 0603
9046	4822 051 30008	Jumper 0603
9047	4822 051 30008	Jumper 0603

5600	4822 157 11867	5.6µH 5%
5601	4822 157 11867	5.6µH 5%

6000	5322 130 80119	BBY40

7000	4822 130 60373	BC856B
7002	4822 130 60373	BC856B
7004	4822 130 60373	BC856B
7006	5322 130 42718	BFS20
7008	4822 130 60373	BC856B
7010	5322 130 42718	BFS20
7012	5322 130 42718	BFS20
7014	4822 130 60383	BF824
7016	5322 130 42718	BFS20
7018	5322 130 42718	BFS20
7020	4822 130 60383	BF824
7022	5322 130 42718	BFS20
7024	5322 130 42718	BFS20
7026	5322 130 42718	BFS20
7040	5322 130 42718	BFS20
7042	4822 130 60383	BF824
7500	5322 209 90559	TDA8444T/N4

11. Revision List

First release